

SANDIA REPORT

SAND2016-~~X~~345
Unlimited Release
Printed May 2016

GADRAS-DRF 18.6 User's Manual

Steve M. Horne, Greg G. Thoreson, Lisa A. Theisen, Dean J. Mitchell, Lee Harding, and Wendy A. Amai

Prepared by
Sandia National Laboratories
Albuquerque, New Mexico 87185 and Livermore, California 94550

Sandia National Laboratories is a multi-program laboratory managed and operated by Sandia Corporation, a wholly owned subsidiary of Lockheed Martin Corporation, for the U.S. Department of Energy's National Nuclear Security Administration under contract DE-AC04-94AL85000.

Approved for public release; further dissemination unlimited.



Sandia National Laboratories

Issued by Sandia National Laboratories, operated for the United States Department of Energy by Sandia Corporation.

NOTICE: This report was prepared as an account of work sponsored by an agency of the United States Government. Neither the United States Government, nor any agency thereof, nor any of their employees, nor any of their contractors, subcontractors, or their employees, make any warranty, express or implied, or assume any legal liability or responsibility for the accuracy, completeness, or usefulness of any information, apparatus, product, or process disclosed, or represent that its use would not infringe privately owned rights. Reference herein to any specific commercial product, process, or service by trade name, trademark, manufacturer, or otherwise, does not necessarily constitute or imply its endorsement, recommendation, or favoring by the United States Government, any agency thereof, or any of their contractors or subcontractors. The views and opinions expressed herein do not necessarily state or reflect those of the United States Government, any agency thereof, or any of their contractors.

Printed in the United States of America. This report has been reproduced directly from the best available copy.

Available to DOE and DOE contractors from

U.S. Department of Energy
Office of Scientific and Technical Information
P.O. Box 62
Oak Ridge, TN 37831

Telephone: (865) 576-8401
Facsimile: (865) 576-5728
E-Mail: reports@osti.gov
Online ordering: <http://www.osti.gov/scitech>

Available to the public from

U.S. Department of Commerce
National Technical Information Service
5301 Shawnee Rd
Alexandria, VA 22312

Telephone: (800) 553-6847
Facsimile: (703) 605-6900
E-Mail: orders@ntis.gov
Online order: <http://www.ntis.gov/search>



SAND2016-4345
Unlimited Release
Printed May 2016

GADRAS-DRF 18.6 User's Manual

Steve M. Horne, Greg G. Thoreson, Lisa A. Theisen, Dean J. Mitchell, and Lee Harding
Nuclear Threat Science, MS0782

Wendy A. Amai
Robotic Security Systems, MS1125

Sandia National Laboratories
P.O. Box 5800
Albuquerque, New Mexico 87185

Abstract

The Gamma Detector Response and Analysis Software–Detector Response Function (GADRAS-DRF) application computes the response of gamma-ray and neutron detectors to incoming radiation. This manual provides step-by-step procedures to acquaint new users with the use of the application. The capabilities include characterization of detector response parameters, plotting and viewing measured and computed spectra, analyzing spectra to identify isotopes, and estimating source energy distributions from measured spectra. GADRAS-DRF can compute and provide detector responses quickly and accurately, giving users the ability to obtain usable results in a timely manner (a matter of seconds or minutes).

ACKNOWLEDGMENTS

This project was funded by the U.S. Department of Energy's Office of Proliferation Detection, the U.S. Department of Homeland Security's Domestic Nuclear Detection Office, and the U.S. Department of Defense's Defense Threat Reduction Agency.

CONTENTS

Acknowledgments	4
1 Introduction	13
1.1 GADRAS-DRF Overview	13
1.2 Directory Structure	15
2 Detector Response Function.....	17
2.1 Creating New Detectors.....	17
2.1.1 Using the Create New Detector Screen: Clone or Create Options.....	17
2.1.2 Copying an Existing Detector Response Function (Detector.dat).....	19
2.2 Detector Parameters in Detector.dat Files	20
2.2.1 Detector Dimensions	21
2.2.2 Peak Shape	22
2.2.3 Lower Level Discriminator.....	23
2.2.4 Miscellaneous	23
2.2.5 Default Energy Calibration	24
2.2.6 Inner Attenuator	25
2.2.7 Outer Attenuator	25
2.2.8 Timing.....	25
2.2.9 Shield / Collimator	26
2.2.10 Fluorescence X-rays	26
2.2.11 Coincidence / Imaging.....	26
2.2.12 Photon Scatter	27
2.2.13 Air Pressure	27
2.2.14 Neutron Scatter.....	28
2.2.15 Computation Options.....	28
2.2.16 Calibration Options	28
2.3 Detector Tab Menu Items.....	29
2.3.1 File Menu	29
2.3.2 Restore Points	29

2.4	Detector Tab Calibrate Response	30
3	PCF Spectral File.....	33
3.1	PCF File Description	33
3.2	Editing PCF Files	35
3.3	PCF Viewer Menu Items.....	36
3.3.1	File Menu	36
3.3.2	Edit Menu.....	36
3.3.3	Options Menu	37
3.3.4	Calibrate Menu	37
4	Plotting/Viewing Spectra	41
4.1	Measured Spectra	41
4.2	Plotted Spectrum Window.....	44
4.2.1	File Menu	46
4.2.2	Tools Menu	47
4.2.3	View Menu	47
4.3	Source Wizard and Computed Spectra	48
4.3.1	Source Wizard	48
4.3.2	Simulated or Calibration Source	49
4.3.3	Viewing Spectra	50
5	Coupling GADRAS-DRF To External Radiation Transport Codes	53
5.1	MCNP Methodology.....	54
5.2	Automatic Conversion from MCNP Output to GADRAS-DRF Input	57
6	Spectrum Energy Calibration	59
6.1	Helpful Tools for Energy Calibration and Peak Analysis	59
6.1.1	Photopeak List.....	59
6.1.2	Isotope List.....	61
6.2	Graphical Energy Calibration	63
6.3	Deviation Pairs Energy Calibration.....	66
7	Time History	73
7.1	Plotting Time History Spectra	74

7.2	Saving Time History Spectra.....	80
7.3	Computed Time History	82
8	Analyzing Spectra.....	87
8.1	Graphical Analysis Using Plot Overlays from Library	87
8.2	Numerical Spectral Analysis.....	87
8.2.1	Source Libraries.....	89
8.2.2	Introduction to Linear Regression Analysis.....	91
8.2.3	Compute Flux	97
9	Neutron Detectors	99
9.1	Creating a New Neutron Detector	99
9.2	Neutron Detector Characterization	100
9.3	Neutron Response	103
10	Inject Calculations.....	105
10.1	Creating Inject Data	105
10.1.1	General Settings.....	105
10.1.2	Neutrons	106
10.1.3	Gamma Detector.....	106
10.1.4	Background Settings	107
10.2	Batch Inject	108
11	GADRAS-DRF Tools	109
11.1	GADRAS-DRF Editors and Libraries	109
11.1.1	(Calibrated) Source Database (DB)	109
11.1.2	Spectrum File Tools.....	111
11.2	Calculators.....	112
11.2.1	Dose Calculation.....	112
11.2.2	Distance Calculator	113
11.3	Other Tools.....	114
11.3.1	Rebin Tool	114
11.3.2	Batch Peak Search.....	116
12	GADRAS-DRF Settings	119

13	References.....	121
-----------	------------------------	------------

Figures

Figure 1. Overview of Main Window	14
Figure 2. Overview of GADRAS-DRF Directory Structure.....	15
Figure 3. File Drop-down Menu (<i>top</i>) for Create New Detector Dialog (<i>bottom</i>)	18
Figure 4. Example Detector Response Function Parameters for a NaI Detector.....	20
Figure 5. Detector Cross-section Profiles for Several Shape Factors.....	22
Figure 6. Restore Points Menu Item	30
Figure 7. Detector Response Function Calibration Spectra	31
Figure 8. Creating a New PCF File From the Plot Tab Within the File Menu	33
Figure 9. Newly Created PCF Shown in the PCF Viewer	34
Figure 10. PCF Viewer with Spectrum Records Added	35
Figure 11. Edit Energy Calibration for All Records Editor	36
Figure 12. The Peak Search and Manual Calibration Screen is Blank When First Opened (<i>left</i>) and Populated When a Spectrum is Loaded (<i>right</i>).....	37
Figure 13. Users Select the Energy of the Peak From the Popup Window, or may Manually Enter the Known Energy	38
Figure 14. Energy Calibration Screen Showing the Selected Peaks and the Highlighted (<i>cyan</i>) Parameters that will be Adjusted (<i>center</i>).....	39
Figure 15. Plot Tab with Entries to be Plotted From the “Cal.pcf” File.....	41
Figure 16. Plot of Background Subtracted ²²⁸ Th Spectrum.....	42
Figure 17. Plot Tab Example with Three Background-Subtracted Spectral Pairs	43
Figure 18. Plot of the Three Background-Subtracted Spectral Pairs: ²²⁸ Th (<i>black</i>), and ⁸⁸ Y (<i>blue</i>), and ¹³⁷ Cs (<i>purple</i>).....	44

Figure 19. Zooming-in on a Plotted Spectrum	45
Figure 20. Spectral Features from View Menu	48
Figure 21. Source Wizard Screen	49
Figure 22. The Plot Tab Displaying Selections for a Foreground, Background, and Computed Spectrum.	51
Figure 23. Plot of a Measured ^{88}Y Spectrum (background subtracted) and the Computed Spectrum from ^{88}Y Calibration Source	52
Figure 24. Set all Scatter Parameters to 0 When Using Multi-faceted GAM Files.....	54
Figure 25. A Simple MCNP Input Deck	55
Figure 26. Pseudo-code for Scaling MCNP Surface Current Outputs to Units Suitable for use with GADRAS-DRF	55
Figure 27. Multi-faceted GAM File Example	56
Figure 28. PhotoPeak List Library with ^{88}Y Highlighted and Both Overlay Options Boxes Checked	60
Figure 29. Graph Displays the Measured ^{88}Y Spectrum (black) with Both Overlay Options	61
Figure 30. Isotope Database Form	62
Figure 31. Graphical Energy Calibration Example.....	64
Figure 32. Graphical Energy Calibration Confirmation Window.....	64
Figure 33. Successful Graphical Energy Calibration	65
Figure 34. Deviation Pairs Editor.....	67
Figure 35. Deviation Pairs Editor with Deviations Erased	68
Figure 36. ^{228}Th Spectrum without Deviation Pairs	69
Figure 37. ^{228}Th Plotted with Deviation Pair Anchor Points Applied	70
Figure 38. ^{228}Th Spectrum, Zoomed into 583 keV Peak, Adding Deviation Pair	71
Figure 39. ^{228}Th Spectrum After Deviation Pair Added to 583 keV.....	71
Figure 40. Time History Page	74
Figure 41. Time History Display (top) and Sum Spectrum (bottom).....	75

Figure 42. Selecting a Foreground to Sum Over	76
Figure 43. Time History Sum over Selected Time Interval.....	77
Figure 44. Selecting a Background to Subtract from the Specified Foreground	78
Figure 45. Background-Subtracted Spectrum.....	79
Figure 46. Foreground and Background Time Periods Are Updated on the Main Display.....	80
Figure 47. Save Sum Spectrum Form	82
Figure 48. Time History Page with Computed Spectrum Options	83
Figure 49. Computed Spectrum before Fit (top) and after Fit (bottom)	84
Figure 50. Graph of Measured Spectrum with Overlay (<i>left</i>); Photopeak List with Displayed Isotope Highlighted (<i>right</i>)	87
Figure 51. The Analyze Tab on the Main Form	88
Figure 52. Compute Spectrum Analysis on Time History File	89
Figure 53. Isotope Library Window.....	90
Figure 54. Single Regression Analysis Tab.....	92
Figure 55. Single Regression Analysis Results of Unshielded 88Y Spectrum	93
Figure 56. Single Regression Analysis Summary Page	93
Figure 57. Multiple Regression Analysis Tab.....	95
Figure 58. Multiple Regression Analysis Results of 88Y Spectrum and Background	96
Figure 59. Multiple Regression Analysis Summary Page	96
Figure 60. ComputeFlux Analysis Tab	97
Figure 61. Graph of ComputeFlux Showing the Peaks and Continuum From the Flux Calculation.....	98
Figure 62. Neutron Tab without Selected Neutron Detector	99
Figure 63. Create New Neutron Detector Form	100
Figure 64. Neutron Background Form	102
Figure 65. Neutron Response Tab.....	104

Figure 66. Inject Page.....	105
Figure 67. Batch Inject Form	108
Figure 68. Tools Tab	109
Figure 69. Source DB Tool with a ¹⁰⁹ Cd Source Highlighted.....	110
Figure 70. Spectrum Tools Form	111
Figure 71. Dose Calculation Tool.....	113
Figure 72. Distance Calculator Tool	113
Figure 73. Rebin Tool	114
Figure 74. Photon.lis File.....	115
Figure 75. Rebin Data Tool with Data Generated	116
Figure 76. Batch Peak Search Tool	117

1 INTRODUCTION

1.1 GADRAS-DRF Overview


Gamma Detector Response and Analysis Software – Detector Response Function (GADRAS-DRF) contains a suite of capabilities related to radiation detection. Its primary function is the simulation of gamma-ray and neutron detector signals to radiation sources. It also contains limited analysis functionality. GADRAS-DRF is the public version of the full version of GADRAS [1] with capabilities such as radiation transport [2] [3] and advanced analyses [4] removed.

Features in a gamma-ray detector spectrum; such as photopeaks and the Compton continuum, are derived from first-principles calculations based on interaction cross sections. Neutron detector response is computed by interpolating on a pre-computed database of thermal (^3He) detector responses [5] [6]. For both gamma-ray and neutron detectors, the response to radiation that scatters into the detector from the surrounding environment is determined by a combination of first-principles calculations and empirical modeling [7]. For new detectors, known detector parameters such as size and resolution are all that is necessary to compute an initial response function. This response function may be refined by measuring calibration sources and fitting the detector's parameters to match the data.

Figure 1 is a screen-capture of the GADRAS-DRF main window. The program contains eight main tabs that run across the top of the window (**Detector**, **Plot**, **TimeHistory**, **Analyze**, **Neutron**, **Inject**, **Tools**, and **Setup**). Each tab represents a primary function of GADRAS-DRF; these are referred to as tabs in this document (e.g. **Plot** tab). Most tab pages have a primary function initiated by clicking a large button in the bottom right corner of the screen. The title of the main window displays the current version and currently selected gamma-ray detector. GADRAS-DRF must always have a current gamma-ray detector selected, even if the current operation does not require a detector response function (e.g. plotting a measured spectrum). Neutron detectors are optional; the current detector name will also appear on the main window title if selected.

Version and
Current Detector

Tab Pages

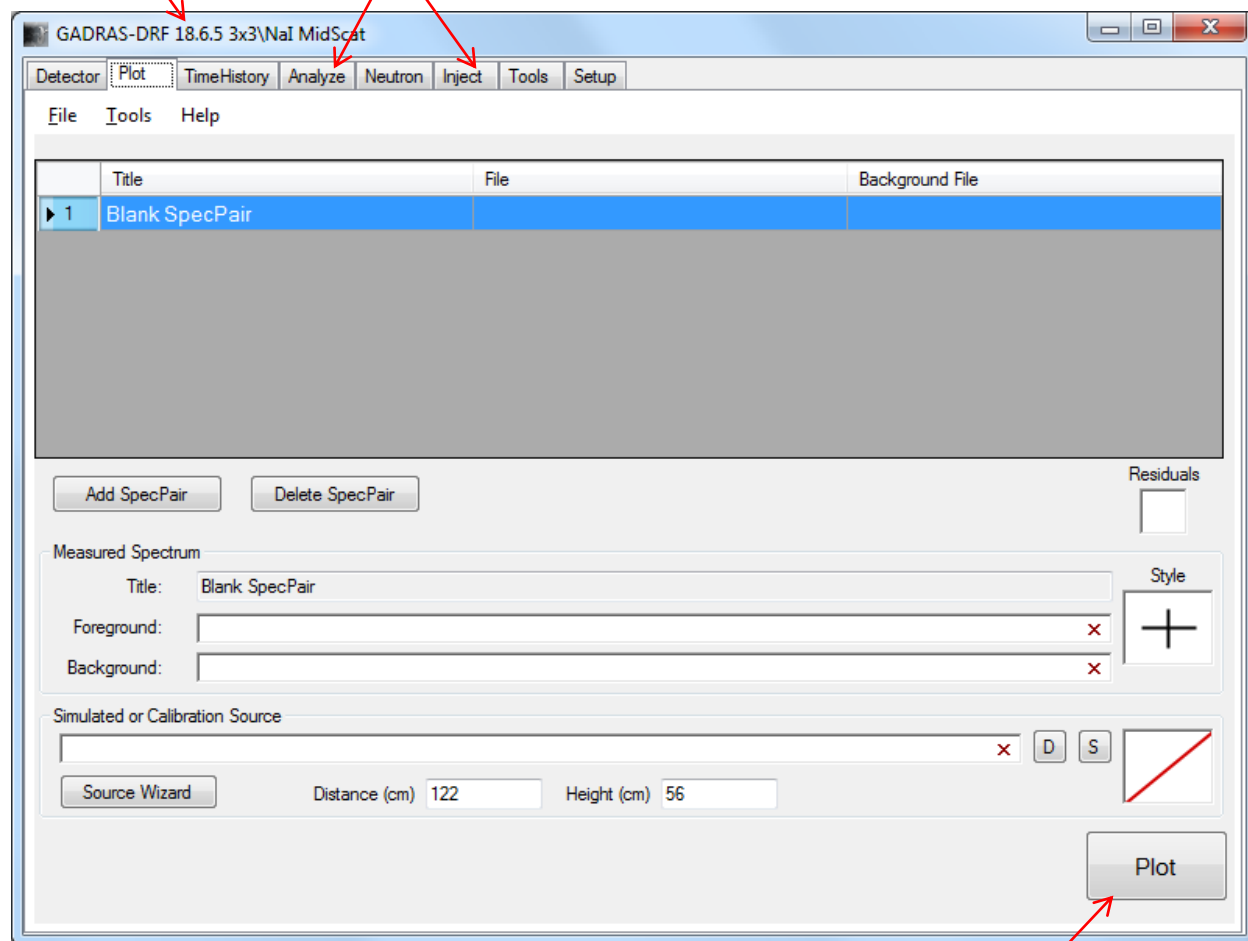

"Action" Button
for Current Tab

Figure 1. Overview of Main Window

1.2 Directory Structure

Within the root GADRAS-DRF directory (default is C:\GADRAS-DRF), there are four primary directories: (1) **Detector**, (2) **Source**, (3) **Temp**, and (4) **Program** (Figure 2).

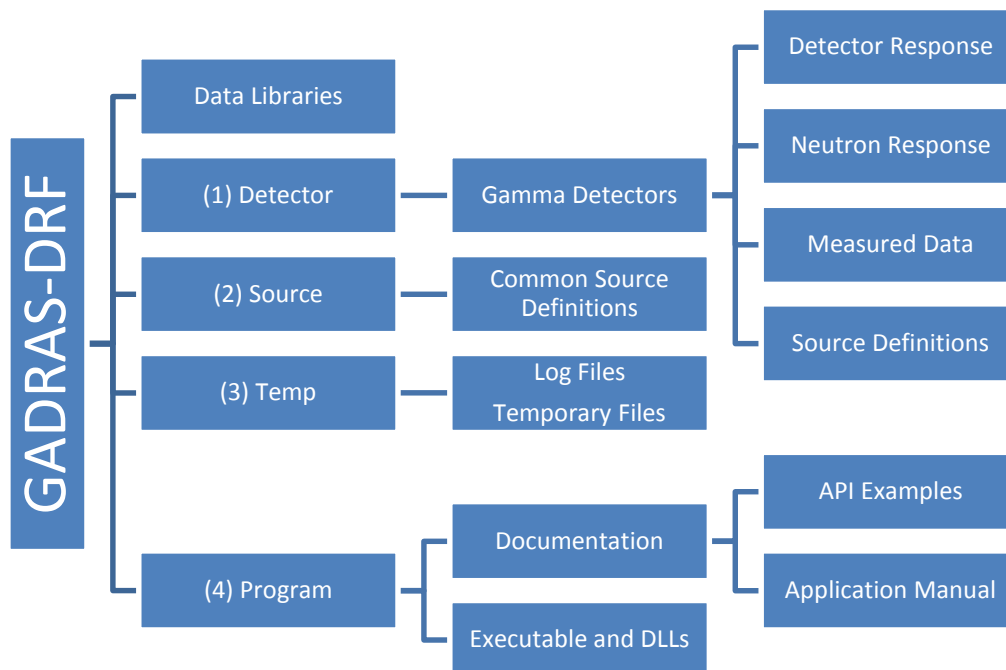


Figure 2. Overview of GADRAS-DRF Directory Structure

The **Detector** directory contains subdirectories, each for a different gamma-ray detector. The name of the subdirectory indicates the name of the detector; thus, each gamma-ray detector requires its own directory. However, multiple neutron detectors can be added to a single gamma-ray detector directory. A common practice is to use a gamma-ray detector directory as a scenario or experiment repository containing documents and measured spectra. Therefore, detector directory names are also based on experiments (e.g. "GADRAS-DRF\Detector\BeRPBall").

Common source files shared among multiple detectors are stored in the **Source** directory. Source files may be stored in individual detector directories as well.

The **Temp** directory is cleaned with each new instance of GADRAS-DRF. It contains temporary files which facilitate faster operation of the program as well as log files which record debugging information. Most users will not need to explore this directory.

The main executable is located in the **Program** directory at “GADRAS-DRF\Program\GADRAS-DRF.exe” along with associated shared libraries. This also contains a **Documentation** directory which contains this user’s manual as well as example codes that utilize the GADRAS-DRF API.

2 DETECTOR RESPONSE FUNCTION

2.1 Creating New Detectors

Each detector directory contains a file named **Detector.dat**, which contains the response function parameters. Response function parameters do not normally require adjustment after initial characterization. Specific situations where parameter adjustments are necessary include:

- change in source-to-detector distance or height from the floor;
- adjustments needed due to mechanical damage, chemical deterioration, high voltage bias change, shielding, etc. that have caused the detector to change its characteristics substantially; and
- drastic changes in the measurement environment from which the detector was characterized.

2.1.1 Using the **Create New Detector** Screen: Clone or Create Options

A new detector setup within GADRAS-DRF can be created from the **Detector** tab on the main window. To create a new detector, the user selects **Create New Detector** from the drop-down menu as shown in Figure 3 (*top*). This action opens the **Create New Detector** form shown in Figure 3 (*bottom*), which allows users to clone an existing detector or create a new detector.

The following entries are mandatory for creating new detector setups:

- 1) **Detector name:** Users should create a unique name for the detector.
- 2) **Parent directory:** The parent directory for the detector. By default, this is the main detector directory "GADRAS-DRF\Detector". Any subdirectory of the main detector directory may be used (including existing detector directories) to be the new detector's parent directory.
- 3) **Source-to-detector distance:** This is the distance between the detector and calibration sources. A value must be entered upon detector creation, but this value can be modified at any time if needed. The value is given in centimeters, but other units may be used (see Section 2.2).

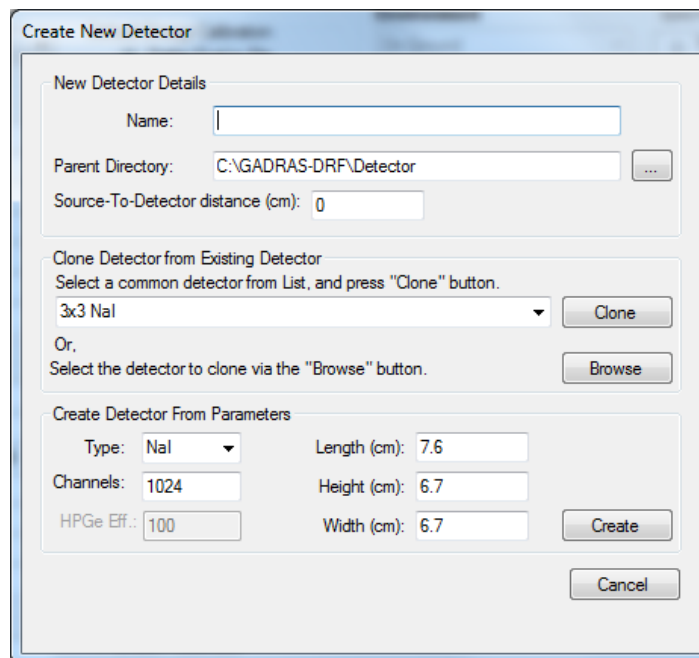
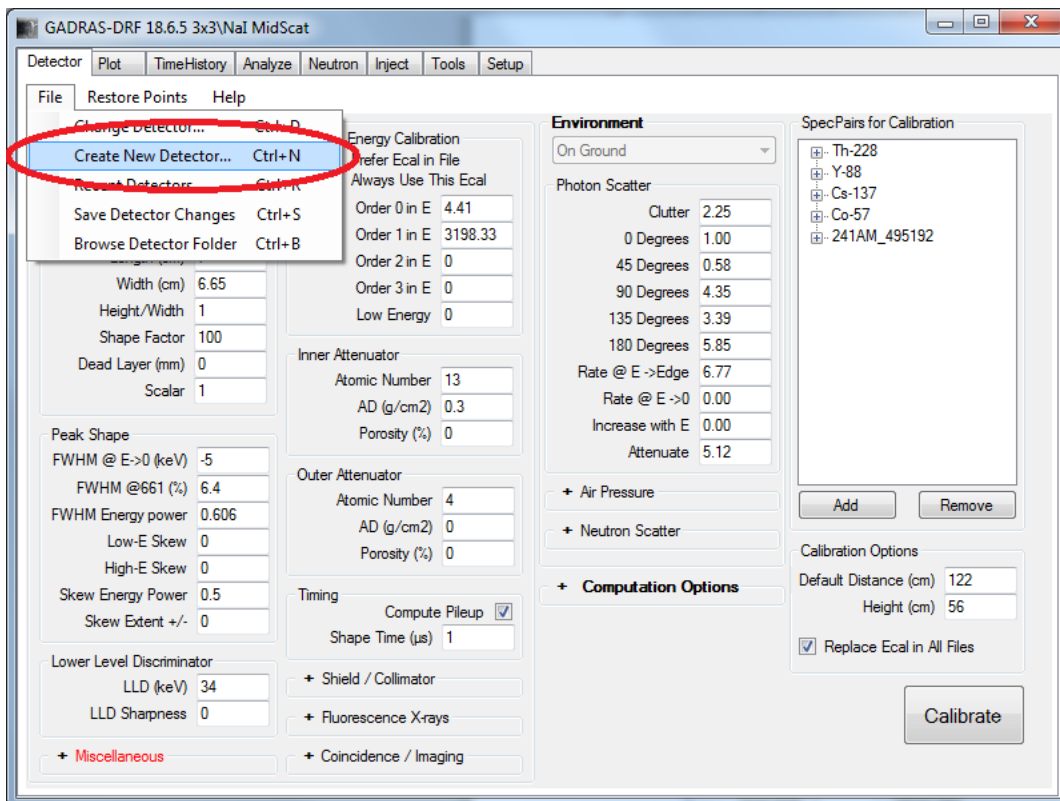


Figure 3. File Drop-down Menu (top) for Create New Detector Dialog (bottom)

New detectors may be created by clicking the **Clone** button located in the middle of the window or the **Create** button located at the bottom of the window.

- 1) **Clone:** An existing detector is copied using either the provided dropdown list or the **Browse** button. After choosing the appropriate detector, clicking the **Clone** button will create the new directory with the appropriate **Detector.dat** file.
- 2) **Create:** This option generates a new **Detector.dat** file. Select the detector type (e.g. NaI, HPGe, etc.) from the dropdown list. The number of channels and the detector efficiency or detector dimensions should be entered. (Note: The **Length** dimension is along the line defined by the two points: (1) the center of the source and (2) the center of the front face of the detector. This is also referred to as depth. The height and width define the front face dimensions.) The user can then click the **Create** button to create the new directory with the appropriate **Detector.dat** file.

GADRAS-DRF assumes a rectangular prism for the detector shape. If the detector's front face is circular, enter the diameter in the width and height fields. With the cursor still in the fields, press the "d" key to convert each to a side length that preserves surface area.

When creating an HPGe detector, the user can enter the relative efficiency of the detector compared to a standard 3"x3" NaI detector at 1332.5 keV with a source-to-detector distance of 25 cm. GADRAS-DRF will subsequently assign typical physical dimensions.

Selecting **None** for the detector type will simulate a perfect radiation detector. Computed source spectra will be composed of the leakage current from the source and the solid angle of the detector. No peak broadening or any other physics associated with a real detector are applied.

2.1.2 Copying an Existing Detector Response Function (*Detector.dat*)

Detector.dat files for characterized detectors are contained in subdirectories under the primary detector directory "GADRAS-DRF\Detector". Detectors may be copied using a Windows Explorer window. An existing **Detector.dat** file can be copied and pasted manually to a new directory to create a new detector parameter file that GADRAS-DRF will recognize as a valid detector.

Note: It is advisable to always work with copies of distributed **Detector.dat** files as opposed to modifying the original. Working on original files may compromise them. Furthermore, each release and install of GADRAS-DRF will overwrite any changes to the original files.

GADRAS-DRF expects spectral data files and the response function file (i.e. **Detector.dat**) to reside together in the same subdirectories of "GADRAS-DRF\Detector". The main criterion for GADRAS-DRF to recognize a detector directory is the existence of a **Detector.dat** file. The application will not recognize multiple **Detector.dat** files in the same directory.

2.2 Detector Parameters in Detector.dat Files

From the **Detector** tab, the detector response function parameters (as found in the **Detector.dat** file) can be accessed and edited. For example, these parameters are displayed in Figure 4 for a NaI detector. For other detector types, similar screens are displayed with some detector-specific variations. Response function parameters are grouped on the page and will be discussed using these headings.

Dimensions and distances can be entered in the following units: centimeters, meters, feet, or inches. GADRAS-DRF will convert the user input to centimeters. The convention for entering alternative dimensions is to type an identifying letter after the numerical entry. The identifiers for meters, feet, and inches are “m”, “f”, and “i”, respectively. For example, to enter 12 inches as the distance, you would type “12i” into the distance entry box; unit conversion is performed automatically so that distance is displayed in centimeters after typing the character “i”.

The following sections briefly describe the function of each field on the **Detector** tab. For more information, see reference [8].

The screenshot shows the GADRAS-DRF 18.6.5 3x3\NaI MidScat window. The **Detector** tab is active, displaying the following parameters:

- Detector Properties:**
 - Type: NaI
 - Efficiency (%): 94.1
 - Dimensions: Setback (cm) 0.3, Length (cm) 7, Width (cm) 6.65, Height/Width 1, Shape Factor 100, Dead Layer (mm) 0, Scalar 1
 - Peak Shape: FWHM @ E->0 (keV) -5, FWHM @661 (%) 6.4, FWHM Energy power 0.606, Low-E Skew 0, High-E Skew 0, Skew Energy Power 0.5, Skew Extent +/- 0
 - Lower Level Discriminator: LLD (keV) 34, LLD Sharpness 0
 - Miscellaneous: + Miscellaneous
- Default Energy Calibration:**
 - Prefer Ecal in File (selected)
 - Always Use This Ecal
 - Order 0 in E 4.41, Order 1 in E 3198.33, Order 2 in E 0, Order 3 in E 0, Low Energy 0
 - Inner Attenuator: Atomic Number 13, AD (g/cm2) 0.3, Porosity (%) 0
 - Outer Attenuator: Atomic Number 4, AD (g/cm2) 0, Porosity (%) 0
 - Timing: Compute Pileup (checked), Shape Time (μs) 1
 - Shield / Collimator, Fluorescence X-rays, Coincidence / Imaging
- Environment:**
 - On Ground
 - Photon Scatter: Clutter 2.25, 0 Degrees 1.00, 45 Degrees 0.58, 90 Degrees 4.35, 135 Degrees 3.39, 180 Degrees 5.85, Rate @ E -> Edge 6.77, Rate @ E -> 0 0.00, Increase with E 0.00, Attenuate 5.12
 - Air Pressure, Neutron Scatter, Computation Options
- SpecPairs for Calibration:**
 - Th-228, Y-88, Cs-137, Co-57, 241AM_495192
 - Add, Remove buttons
 - Calibration Options: Default Distance (cm) 122, Height (cm) 56, Replace Ecal in All Files (checked)
 - Calibrate button

Figure 4. Example Detector Response Function Parameters for a NaI Detector

2.2.1 Detector Dimensions

The following parameters describe the detector dimensions:

- **Setback** is the distance in cm from the physical surface of the detector face to the active sensor element (crystal).
- **Length** is the detector length in cm measured perpendicular to the detector face and is also referred to as depth.
- **Width** is the detector width in cm measured perpendicular to the incident photon flux and parallel to the floor.
- **Height/Width** is the ratio of the two dimensions perpendicular to **Length**.

*Note: if describing a detector system with an array of detectors, these dimensions describe the size of one of the detectors. Use the **Scalar** parameter described below to add multiple detectors to a system.*

Although these parameters describe a rectangular detector, other geometries can be approximated using these dimensions. For example, a cylindrical detector oriented so that the axis is pointed toward the radiation source can be approximated by a square with the same surface area as the circle (i.e., height \times width = πr^2). The conversion between diameter and width can be performed by typing “d” after specifying the numerical value for the diameter.

- **Shape and Shape factor (S)** are parameters that describe the distribution of path lengths through which incident radiation travels as it traverses the detector. The shape factor describes a continuous function that varies from about 3 for circular cross sections (e.g. radiation enters predominantly through side of a cylindrical detector) to about 100 for flat detector profiles (e.g. radiation enters through top or bottom of cylindrical detector). Figure 5 shows detector profiles for several values of S. Note that the detector shape can vary depending on the orientation of the radiation source with respect to the detector. In the case of a cylindrical detector oriented so that the radiation source is located on the axis of the detector, the value of S is about 100, which describes a flat profile. Alternatively, from the shape entry, the user can select one of three shapes (flat, circular, or custom) and the shape factor value will automatically be adjusted.

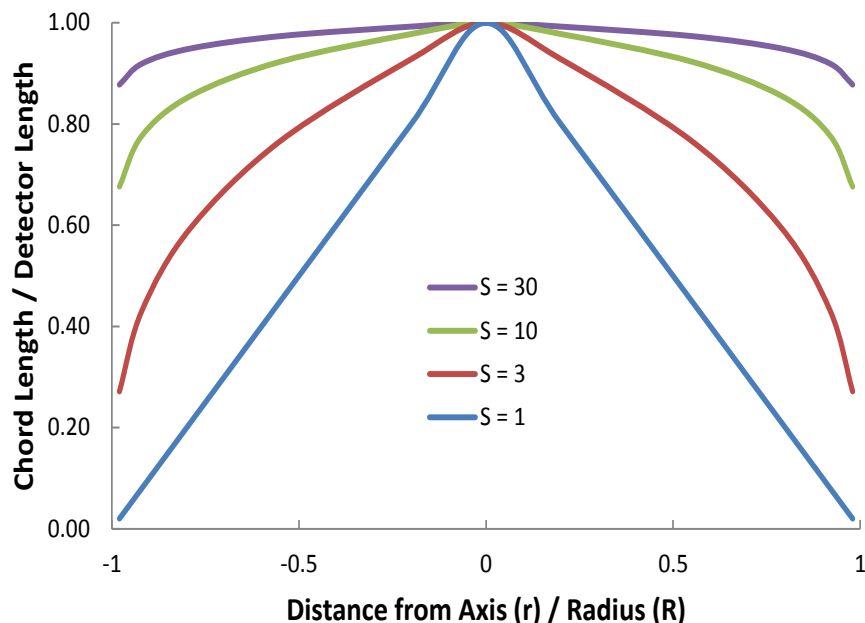


Figure 5. Detector Cross-section Profiles for Several Shape Factors

- **Dead Layer (mm)** describes the depth of the inactive region between the contacts and the semiconductor in a solid-state detector. Typical values are a less than a few millimeters, depending on the manufacturing technique employed. This primarily affects low-energy intensities such as x-rays.
- **Scalar** scales the total efficiency of the detector. This is typically used for detector system arrays. The other dimensions describe the size of one detector, and this field can be the number of detectors in the system.

2.2.2 Peak Shape

The full-width-at-half-maximum (FWHM) for photopeaks describes the width or resolution of the detector. If detector energy resolution followed Poisson statistics exactly, the width of the peaks would increase as the square-root of energy. However, the resolution of scintillators is often dominated by effects associated with intrinsic nonlinearities. For semiconductor detectors, the resolution at the zero-energy asymptote is limited by dark current. GADRAS-DRF uses an empirical form of the FWHM that uses as few parameters as possible to describe a wide variety of detectors:

$$FWHM(E) = \begin{cases} 6.61r \left(\frac{E}{661} \right)^p & E > 661 \\ \sqrt{\left[r_0 \left(\frac{661-E}{661} \right) \right]^2 + \left[6.61r \left(\frac{E}{661} \right)^p \right]^2} & E \leq 661, r_0 \geq 0 \\ 6.61r \left(\frac{\max(20, E)}{661} \right)^{p(\log(1-r_0))^{-1}} & E \leq 661, r_0 < 0 \end{cases} \quad (4)$$

where E is the photopeak energy in keV, r is the percent resolution at 661 keV, p is the FWHM energy power (unitless), and r_0 is zero-energy asymptote in keV.

The following parameters on the **Detector** tab are used to calculate peak shape and resolution:

- **keV @ E->0** zero-energy asymptote of the FWHM in keV (can be negative)
- **FWHM @661 (%) (or keV @ 1332)** is the percent FWHM of the photopeak at 661 keV (or for HPGe detectors, it is displayed as the width of the photopeak at 1332 in keV)
- **FWHM Energy power** describes the rate at which the FWHM increases as a function of energy
- **Low-E Skew** describes the magnitude of photopeaks' low energy tails
- **High-E Skew** describes the magnitude of photopeaks' high energy tails
- **Skew Energy Power** describes the rate at which the low-energy tail decreases
- **Skew Extent +/-** describes additional skew range relative to the nominal range

2.2.3 Lower Level Discriminator

- **LLD (keV):** The lower-level discriminator of the detector (low-energy cutoff) in keV is represented by this setting.
- **LLD Sharpness:** The simulated LLD is not a step-function; the slope of the simulated spectrum at the LLD is determined by this parameter.

2.2.4 Miscellaneous

- **Ext. Annih. Magnitude** describes the magnitude of annihilation photons (511 keV) produced in the vicinity of the detector. Annihilation inside the active detector area is modeled explicitly. However, if high-atomic-number materials are used in the detector housing, additional annihilation photons can be modeled with this parameter.
- **Ext. Beta Magnitude** provides the ability to estimate the continuum produced by bremsstrahlung emission. A good first estimate for this parameter is 20. *Note: Except for limited cases, a correction of this bremsstrahlung parameter is neither necessary nor advised. If a more accurate representation is required, a radiation transport calculation should be performed.*
- **% Holes Trapped** is used as an empirical term related to hole trapping by detectors such as CdTe. This parameter does not have quantitative significance.

- **Frisch grid %:** Frisch grids are used in conjunction with some CZT detectors. The percent of events that are recorded between Frisch grid electrodes is described by this parameter. Events recorded in this region can produce up to twice the apparent full energy because both electrons and holes are counted; whereas holes are excluded for interactions within the bulk material.

2.2.5 Default Energy Calibration

These define the default energy calibration to use when not available in a spectral file. Routine energy calibration is usually performed elsewhere in GADRAS-DRF. Adjusting the energy calibration is discussed in Section 6.

These parameters are typically only used when simultaneously varying the energy calibration with other detector response parameters during a characterization for plastic scintillators with no photopeak definitions.

The most common energy calibration convention is to use polynomial coefficients. These coefficients convert channel number into energy at the lower edge of the channel according to the following equation:

$$E_i = c_0 + c_1 i + c_2 i^2 + c_3 i^3 + c_4 i^4 \quad (1)$$

where i is the channel number (starting at 0), and c_n is the n^{th} polynomial coefficient. GADRAS-DRF uses the convention defined as the *FullRangeFraction* in ANSI N42.42-2006, which represents energy calibration as follows:

$$E_i = a_0 + a_1 x + a_2 x^2 + a_3 x^3 + \frac{a_4}{1 + 60x} \quad (2)$$

where a_n is the n^{th} polynomial term which corresponds to c_n in Eq. (1), and x is the fractional energy of the spectral range. x ranges from 0 at the lower edge of the first channel and ends at 1 at the upper edge of the last channel. If the spectrum has uniform energy groups, $x = i/n$, where n is the total number of channels. The offset terms are identical in these definitions (i.e., $a_0 = c_0$), and the higher order parameters are related as follows:

$$a_j = n^j c_j \quad (3)$$

The final term in Eq. (2), which addresses nonlinearity in the low-energy region, does not have an equivalent term in Eq. (1). However, neither a_4 nor c_4 is often applied, so this incompatibility is rarely important.

There are a few general remarks about what values might be reasonable for the calibration of a detector.

- **Order 0 in Energy (offset):** should be a small number (<100) either positive or negative
- **Order 1 in Energy (gain):** should be a number close to the maximum energy scale of the detector in keV
- **Order 2 in Energy (quadratic):** should be zero unless the detector is non-linear
- **Order 3 in Energy (cubic):** should be zero unless the detector is highly non-linear
- **Low Energy:** non-linear parameter for the low-energy region (usually zero)

In general, it is advised to initially have values only for the gain and offset. For more information on how to calibrate spectral data, see Sections 3.3.4, and 6.

2.2.6 Inner Attenuator

This reduces the intensity of all incident radiation, *including room scatter*, before it passes into the active detector volume. This is useful in describing detector housing.

- **Atomic Number** is the effective atomic number (AN) of the inner attenuator. This can be an average of multiple materials.
- **AD (g/cm²)** is the areal density (in g/cm²) (density multiplied by thickness) is the thickness of the attenuator
- **Porosity (%)** allows for an attenuator with incomplete coverage around the detector

2.2.7 Outer Attenuator

This reduces the intensity of all direct radiation, *not including room scatter*. This is useful for describing attenuation by a detection system placed in a large truck. The truck walls can be described by the outer attenuator.

- **Atomic Number** is the effective atomic number (AN) of the outer attenuator.
- **AD (g/cm²)** is the areal density (in g/cm²) of the outer attenuator
- **Porosity (%)** allows for an attenuator with incomplete coverage around the detector

2.2.8 Timing

- **Compute Pileup** with this box checked, GADRAS-DRF will simulate pile-up effects from random coincidences in high-count rate simulations
- **Shape Time (us)** is an empirical parameter to describe the shaping time of the amplifier. Since the amplifier shape time constant is generally only approximate, it is often necessary to characterize this parameter from calibration spectra. If the detector has a pileup rejecter, as most modern systems do, this field should be entered as a negative value, with a magnitude approximately equal to the shape time constant in microseconds. The value should be approximately -5 for typical HPGe detectors equipped with pileup rejection circuitry.

2.2.9 Shield / Collimator

These parameters describe shielding on the sides and back of the detector in addition to the attenuators. This can also be used to add a collimator to the detector.

Shielding materials are specified by specifying a % **side shield** parameter and a % **back shield** parameter. The % **side shield** is defined as the percent of the side of the detector that is surrounded by the shield. This will be set to 100 if the shield completely covers the sides but does not extend in front of the face of the detector. The length of the shield is described as a percent of the detector length, so collimators can be described by entering a value that is greater than 100%. For example, a value of 230 indicates that the length of the shield measured from the back of the detector to the front of the shield is 230% of the detector length (i.e., the shield extends 1.3 times the detector length in front of the detector). Similarly, % **back shield** is defined as the percent of the back of the detector that is surrounded by the shield. For collimators with an aperture less than the diameter of the active detector element, the **Alt Collimator Diam** field allows specification of the aperture size.

2.2.10 Fluorescence X-rays

Some detectors are constructed with high-atomic-number materials in the vicinity of the active volume which produce fluorescent x-rays in response to external radiation. This can also be used to describe the magnitude of the x-rays from a shield or collimator.

GADRAS-DRF allows for two fluorescing **Materials** with respective **Magnitudes**. An approximate energy dependence is applied for these x-rays

2.2.11 Coincidence / Imaging

In some detector systems, the primary detector is surrounded by another detector, called an anticoincidence (AC) shield. This reduces background by rejecting events recorded simultaneously in both detectors. AC shields reduce the Compton continuum by excluding interactions where a photon scatters between the primary detector and the AC shield. The default setting is no AC shield. The effects of AC shields can be treated by defining the parameters under the **Anti-Coincidence Shield** section:

- **Type:** The type of AC shield detector material (e.g. NaI)
- **Solid Angle:** Solid angle subtended by the AC shield from the primary detector
- **Thickness:** Thickness in cm of the AC shield
- **Dead Layer Z:** Average atomic number (AN) of the dead layer on the AC shield
- **Dead Layer AD:** Areal density of the AC dead layer in g/cm²
- **Shield LLD:** Lower-level discriminator of the AC shield

Note: these set of parameters will be used to describe imaging systems in future versions of GADRAS-DRF.

2.2.12 Photon Scatter

GADRAS-DRF includes a library of scattering kernels which are used to calculate scattering contributions from any surfaces present in the environment surrounding the source and the detector. The source-to-detector distance and height determine the position of the source in a nominal room. The scattering magnitude is sensitive to height, so it is important that this parameter is accurate. The **Clutter** parameter determines the average distance from the detector to the walls in the room. The following guidelines can be used when determining initial scatter parameters:

- **Outdoors/Large Room** should have a small **Clutter** term (less than 3).
- **Average Room** should have a **Clutter** term equal to 3 (indicates an average distance of 3 meters to the surrounding walls in the room).
- **Small Room** should have a **Clutter** term that is computed using the equation $900/\{\text{average distance to the walls in cm}\}$.

The scatter parameters labeled **0 Degrees**, **45 Degrees**, **90 Degrees**, **135 Degrees**, and **180 Degrees** adjust the magnitude of the scattered radiation. The **0 Degrees** parameter corresponds to low-angle scattering within the environment, which manifests itself as continuum just below the photopeak energy. The **180 Degree** parameter corresponds to a photon which has backscattered in the environment and manifests itself in the backscatter peak. A value of 3 in these fields describes indicates that the observed scattering continuum in the detector is consistent with the external environment. Values may exceed 3 if additional scattering occurs within the detector housing. Setting the scatter terms to zero disables the computation of scattered radiation.

- **Rate @ E->Edge** adds or subtracts continuum just below the Compton edge (less than 3 reduces, greater than 3 adds)
- **Rate @ E->0** adds or subtracts continuum as the spectrum approaches zero energy (less than 3 reduces, greater than 3 adds)
- **Increase with E** adds or subtracts additional scatter with increasing photon energy (less than 3 reduces, greater than 3 adds)
- **Attenuate** further reduces low-energy continuum

For special environments (e.g., source and detector are not at the same height, or placed in a corner), a user can define an **Environment.dat** file in the detector directory. An example **Environment.dat** file is located in "GADRAS-DRF\Detector\3x3\NaI AboveSource".

2.2.13 Air Pressure

The air pressure defines the density of intervening air and is only significant when the source-detector distance is greater than about ten meters. Air attenuation is determined by the atmospheric pressure (**Air Pressure**) or the **Elevation** fields.

2.2.14 Neutron Scatter

Most gamma detectors are sensitive to neutron radiation. These parameters define the intensity of neutrons on the gamma detector:

- **Environment Drop-Down Box** describes the reflection of neutrons in the surrounding environment, also called the room return. Options are “No reflected neutrons”, “Outside or large bay”, “Indoors above suspended floor”, and “Indoors above concrete on ground”. The neutron reflection is dependent on the distance and height parameters as well.
- **Thermal Stopped %** is the percent of thermal neutrons that are stopped by exterior shielding around the detector sensor
- **Reflection Scalar** directly scales the rate of neutrons reflected by the surrounding environment uniformly across all energies

2.2.15 Computation Options

These control options that aren’t necessarily part of the detector response, but may differ between detectors.

The **Weight Range** area has two fields: **Lower Limit** and **Upper Limit**. During any analysis or fitting, GADRAS-DRF will attempt to fit only the region of the spectrum defined by these limits. Grayed-out regions in the plot indicate ignored portions of the spectrum and are not used in any analysis or fitting routine.

- **Default # Channels**: When generating synthetic spectra, this defines the number of channels in the spectra.
- **Template Error (%)** defines the assumed error with the simulated spectrum. This is used in the chi-square estimate.
- **Assume MCA Bins from Inbin**: this checkbox toggles the usage of the **Inbin.dat** file. **Inbin.dat** defines relative channel widths and is useful for detectors with non-uniform channel widths. This checkbox is only enabled if **Inbin.dat** is present in the current detector directory.
- **Collapse Spectra to Rebin**: this checkbox toggles the use of the **Rebin.dat** file. **Rebin.dat** contains a list of energy groups, usually less than the detector’s total channel count, to reduce computation time for certain analyses. This checkbox is only enabled if **Rebin.dat** is present in the current detector directory (users can use Rebin tool to generate Rebin.dat).

2.2.16 Calibration Options

The default detector configuration with respect to the measured source is described by the following parameters:

- **Distance** is the source-to-detector distance in cm measured from the **center of the source** to the **center of the detector face**.
- **Height** is distance in cm above the ground. For most applications it is assumed that the detector and source are at the same height.
- **Replace Ecal in All Files**: when the **Default Energy Calibration** parameters are varied in a detector response characterization, this box allows GADRAS-DRF to overwrite the energy calibration parameters in the files used with the default parameters.

2.3 Detector Tab Menu Items

2.3.1 File Menu

As seen at the top of Figure 3, the File menu allows users to save the current detector parameters or to browse the detector directory. Clicking on **Save Detector Changes** or pressing Ctrl+S will save the current detector parameters to the **Detector.dat** file. If changes are made and the user attempts to navigate away from the Detector tab or attempts to close GADRAS-DRF without saving the parameters, GADRAS-DRF will prompt the user to save the detector parameters. Users may click **Browse Detector Folder** or press Ctrl+B (on any tab) to open a new Windows Explorer window for the current detector directory. Users may click **Recent Detectors** or press Ctrl+R (on any tab) to open a form listing recently used detectors. Users may select a detector from this form to quickly change detectors.

2.3.2 Restore Points

Restore points allow users to save the current detector response parameters. If users are trying to improve an existing detector response function but do not want to lose the original parameters, they may create a Restore Point. This is done by selecting **Create New** under the **Restore Points** menu item (Figure 6). If the detector parameters are adjusted incorrectly, they can be reverted to a set of previous parameters by clicking the appropriate Restore Point.

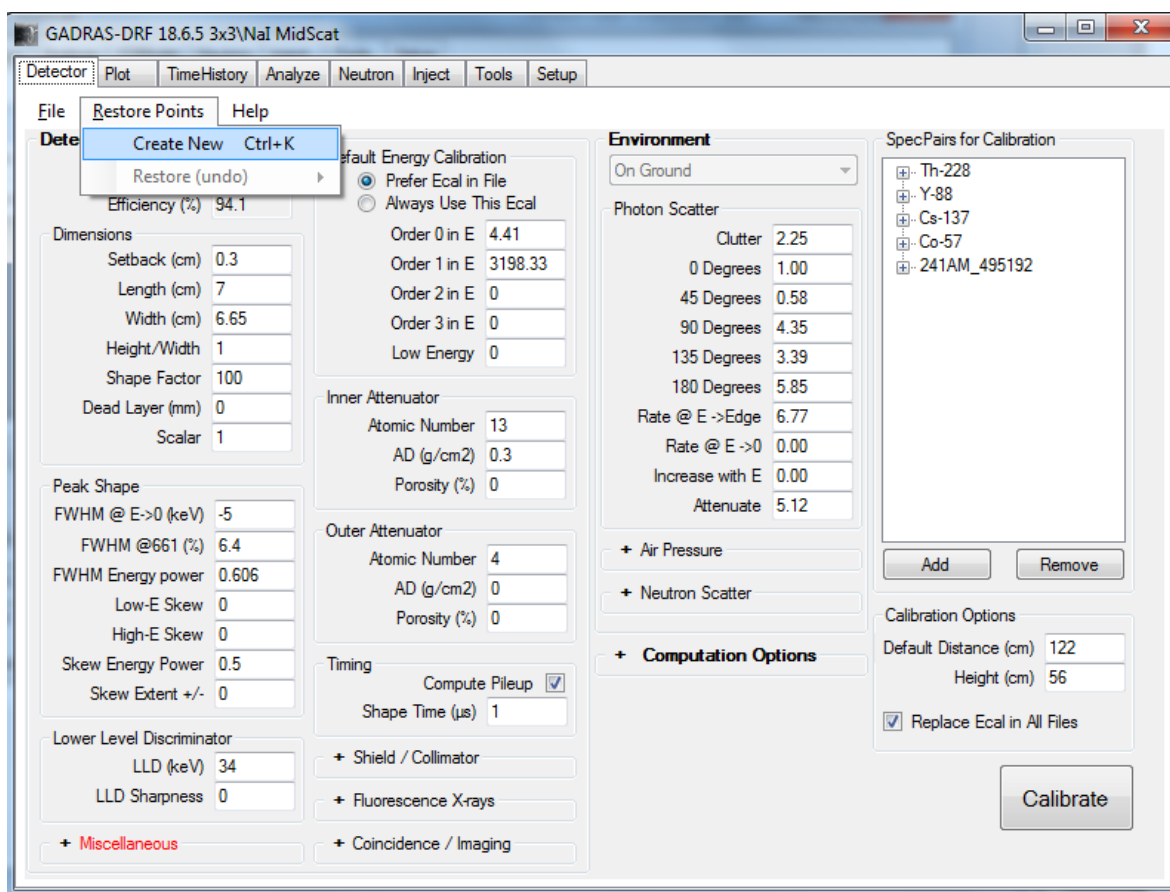


Figure 6. Restore Points Menu Item

2.4 Detector Tab Calibrate Response

To optimize the detector parameters click the **Calibrate** button at the bottom right of the detector page. This adjusts the parameters that the user has selected in order to match measured calibration spectra to computed spectra. To select a parameter for adjustment, users should click on the label of the parameter. Parameters that are highlighted in cyan have been chosen for adjustment.

Calibration spectra are added to the SpecPair tree on the detector page (Figure 7) by dragging and dropping records from the **PCF Viewer** form (Section 3) into the tree. Users can add up to six SpecPairs to use in the calibration. Users should specify a Foreground and Background as well as a Source for Computed Spectrum. GADRAS-DRF will subtract the Background from the Foreground (using count rates in each energy bin) and compare the measured spectrum to the computed spectrum for the specified source. It will do this comparison for each SpecPair specified in the Calibration form. GADRAS-DRF will then vary the adjustable parameters and find the best parameter fit through non-linear regression iterations.

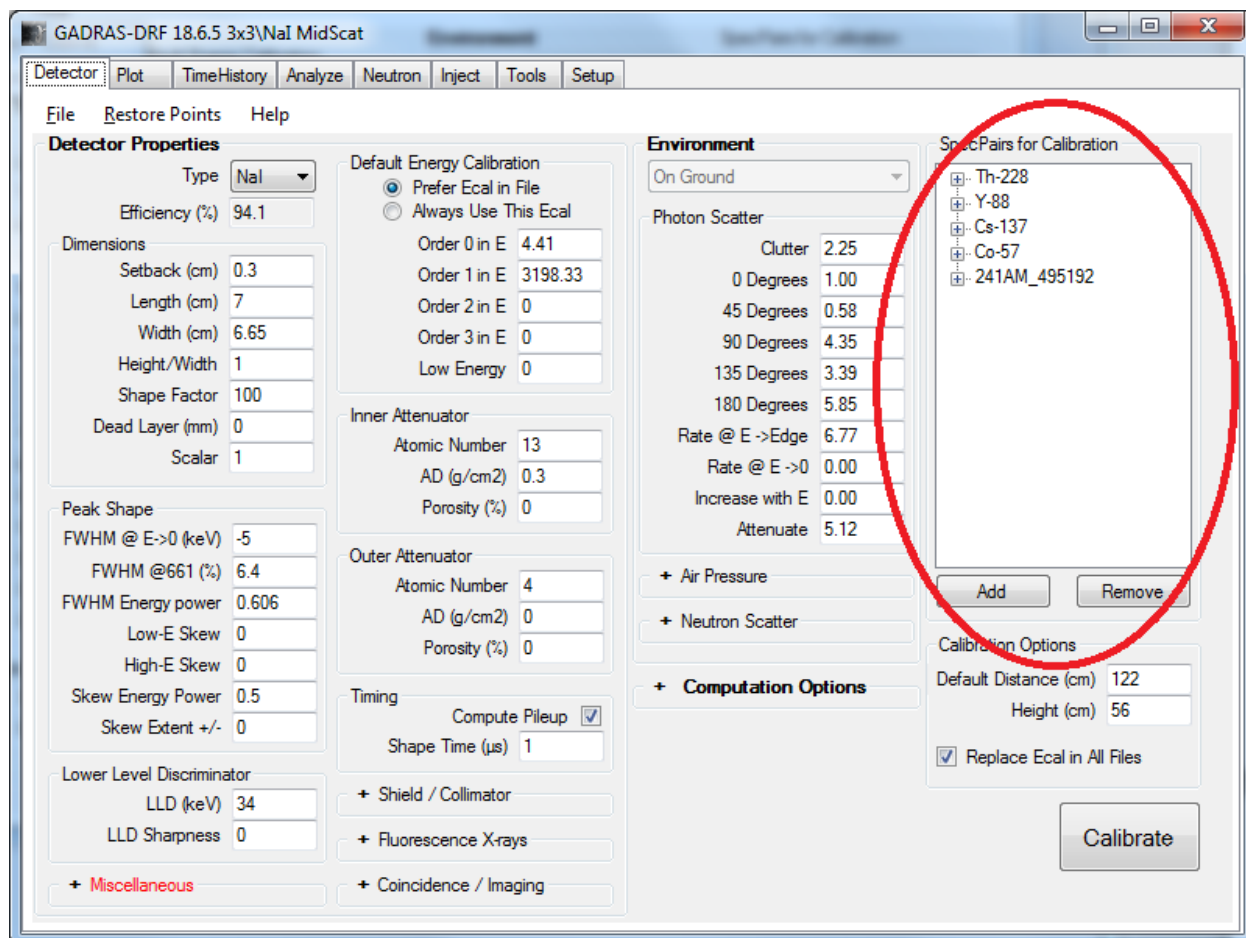


Figure 7. Detector Response Function Calibration Spectra

To effectively calibrate a new detector to measured spectra, it is highly advised to determine the energy calibration and resolution before varying other parameters in the Detector tab. Users should also not attempt to vary all the parameters at once, as this may lead to degenerate solutions that do not reflect the best detector response parameters for a given setup. Users instead should vary energy and resolution parameters first, then attenuators and scattering parameters. Some parameters may be known prior to performing the Response Function Calibration (such as Shape Time or Shield Attenuator properties). In this case, users should put in the parameters before attempting any detector response function calibrations.

3 PCF SPECTRAL FILE

3.1 PCF File Description

The main file format intrinsic to GADRAS-DRF is a binary, direct access file with a **PCF** extension. GADRAS-DRF can read many other spectral file formats (e.g., Ortec **CHN**, IAEA **SPE**, **ASC**, **PCC**, **N42**, etc.) from many vendors and convert them to the GADRAS-DRF preferred **PCF** file format. GADRAS-DRF writes energy calibration coefficients and other supplemental information directly into **PCF** files.

GADRAS-DRF generates and stores **PCF** files in the same file location as the **Detector.dat** file. This is typically a user-chosen subdirectory in “GADRAS-DRF\Detector”. The **Detector.dat** file must be defined prior to evaluating spectral data. Selection or creation of the detector (**Detector.dat** file) is discussed in Section 2.1. A PCF data file can be generated or created from the **Plot** tab on the main screen. To do this, the user can select **New** from the File drop-down menu, as shown in Figure 8. This action opens a Windows Explorer window with “eventList.pcf” as the default file name for the PCF. This file name can be modified by the user if desired. The default location is the current detector directory. Once the file name is chosen, the **PCF Viewer** will display a blank PCF file as shown in Figure 9.

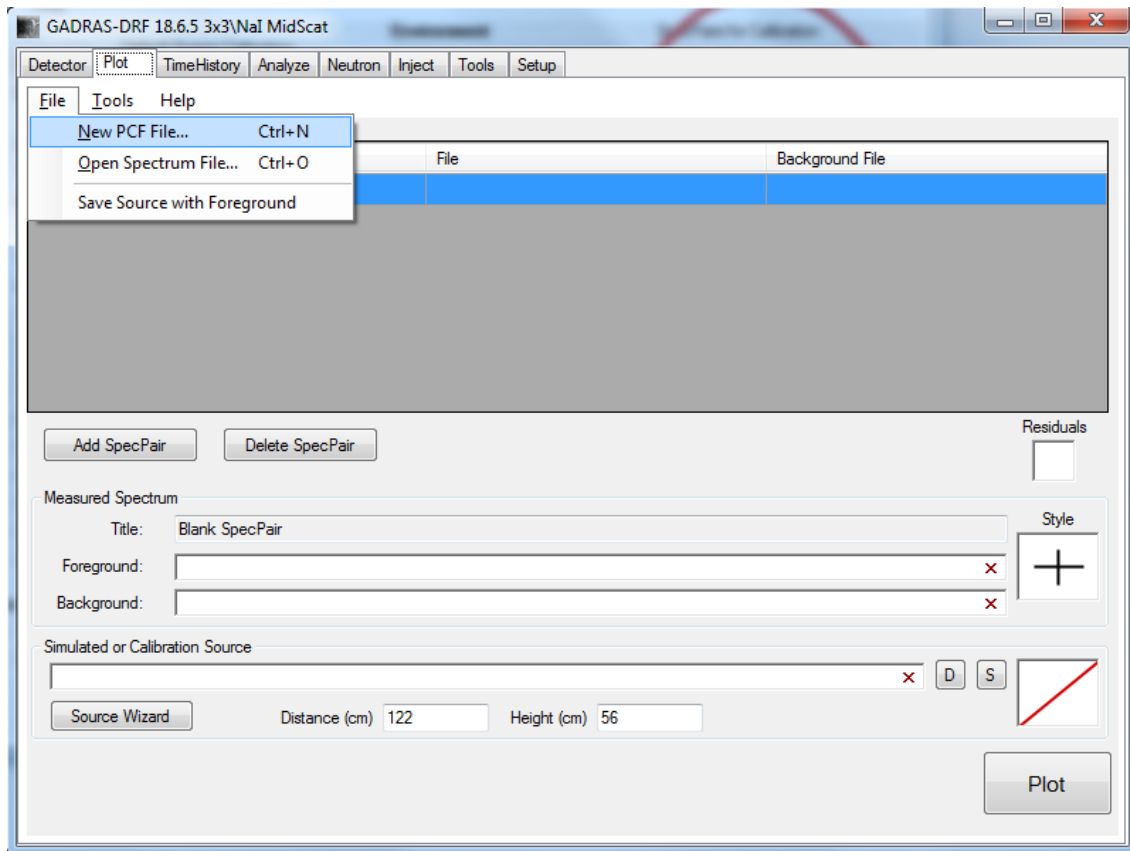


Figure 8. Creating a New PCF File From the Plot Tab Within the File Menu

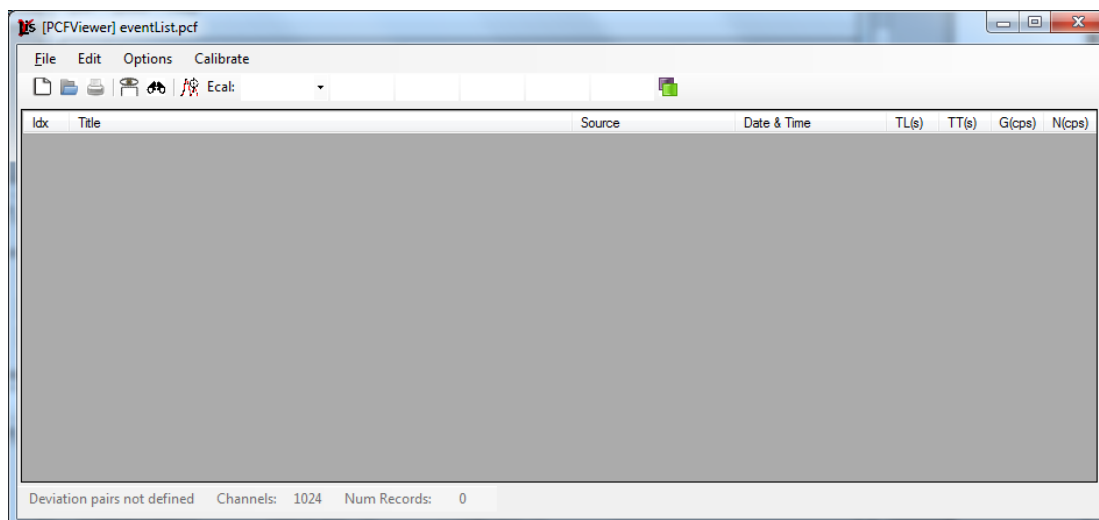


Figure 9. Newly Created PCF Shown in the PCF Viewer

Spectral files of almost any format can be added to the blank PCF by dragging and dropping the desired data file to the gray area in the **PCF Viewer**. Figure 10 shows the file list form after populating the PCF file with eight spectral entries (five calibration source spectra and three background spectra).

GADRAS-DRF can process spectral data taken at different source-to-detector distances and heights. Processing the spectral data is facilitated by entering the source-to-detector distance for each spectrum in the file title field so that these values are entered as defaults when computed spectra are compared with measurements. The source-to-detector distance must be contained between the character “@” and the string “cm” or “m,” indicating distances in centimeters or meters, respectively. The interpretation of the string defining distance is not case sensitive. If the detector height is also entered, the height must be contained between the string “H=” and the string “cm” or “m.” Similarly, the strings are not case sensitive. For example, a spectrum taken at a height of 20 cm and a source-to-detector distance of 50 cm can have the following string in the Title “@ 50 cm H=20 cm”. Figure 10 shows the **PCF Viewer** with the “Th-228 @ 122 cm” entry highlighted in blue and a spectral preview on the right in red.

The screenshot shows the PCFViewer application window titled "[PCFViewer] Cal.pcf". The window has a menu bar with "File", "Edit", "Options", and "Calibrate". Below the menu bar is a toolbar with icons for file operations and a status bar showing "Ecal: Aa1", a dropdown menu, and numerical values: "4.41", "3198.33", "0.00", "0.00", "0.00". The main area contains a table with 8 columns: "Idx", "Title", "Source", "Date & Time", "TL(s)", "TT(s)", "G(cps)", and "N(cps)". The table has 8 rows of data. Below the table, there is a status bar showing "Deviation pairs in file", "Channels: 512", and "Num Records: 8".








Idx	Title	Source	Date & Time	TL(s)	TT(s)	G(cps)	N(cps)
1	Background		14-NOV-1995 12:04:20.07	1033	1036	446	0
2	Th-228 @ 122 cm, H=56 cm	228TH_495172	14-NOV-1995 12:17:41.43	702	706	623	0
3	Y-88 @ 122 cm, H=56 cm	88Y_495182	14-NOV-1995 12:27:24.19	535	537	549	0
4	Cs-137 @ 122 cm, H=56 cm	137CS_495171	14-NOV-1995 12:37:32.49	585	587	554	0
5	Co-57 @ 122 cm, H=56 cm	57CO_495181	14-NOV-1995 12:49:16.96	680	684	616	0
6	Am-241 @ 122 cm, H=56 cm	241AM_495192	14-NOV-1995 13:00:47.60	648	650	494	0
7	Background		14-NOV-1995 13:09:09.89	479	481	450	0
8	Background		14-NOV-1995 12:04:20.07	553	555	442	0

Figure 10. PCF Viewer with Spectrum Records Added

3.2 Editing PCF Files

The **PCF Viewer** edits the contents of a PCF file. Each entry or row in the **PCF Viewer** is a spectrum (record) stored in the PCF file. Editing cells in this table immediately edits and saves the contents of the PCF file. Editable fields include **Tag**, **Title**, **Source**, **Date & Time**, **TL** (live time), **TT** (total time), **N** (neutron count rate), **Offset**, **Gain**, **Order 2**, and **Order 3**. Not all fields are visible by default. Users can modify which columns are visible using the **Select Columns to Display** under the **Options** menu.

The top of the **PCF Viewer** form contains shortcuts and fields with various functionality. From left to right they are:

-  Create a new PCF file
-  Open a spectrum file
-  Print record header information
-  Choose which columns are visible
-  Display spectrum preview thumbnail
-  Peak search energy calibration
- **Ecal:** This displays the energy calibration for all records in the top menu bar, if the energy calibration is the same for each detector (by default there is only one detector). If the energy calibration for one record changes, this editor will disappear.
-  Display/hide energy calibration columns

3.3 PCF Viewer Menu Items

3.3.1 File Menu

Under the **File** menu, the **Open** option loads an existing PCF file; the **New** option creates a new one; the **Import File** has the same effect as dragging and dropping spectral files into the viewer to add them; the **Print** command sends the contents of the **PCF Viewer** window to a printer.

3.3.2 Edit Menu

Each record in the file has its own energy calibration parameters (except for Deviation Pairs). The **Energy Calibration for All Records** (Figure 11) option allows users to modify all records simultaneously.

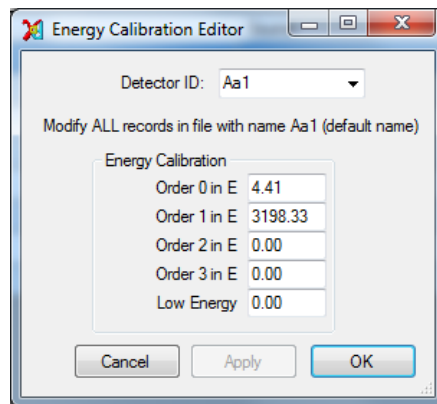


Figure 11. Edit Energy Calibration for All Records Editor

The **Deviation Pairs** menu option brings up the **Deviation Pair Editor** form, which is discussed in Section 6.3.

Reformat All Titles allows users to normalize their title formats for large files quickly. It searches for Distance, Height, and Detector Name information and reformats them to a standard.

Update with .lis file imports a file formatted in the .LIS format (normally exported header information from a PCF into the GADRAS-DRF Temp folder), and overwrites the current file's header information with information from the .LIS file.

If users inadvertently change a field in the PCF file, they can choose **Restore to Last Backup** in the **PCF Viewer's Edit** menu.

3.3.3 Options Menu

Users can modify which columns are visible using the **Select Columns to Display** under the **Options** menu. The **Options** menu also has an option to toggle the spectrum preview window on the right side of the **PCF Viewer**.

3.3.4 Calibrate Menu

3.3.4.1 Peak Search Calibration All Records

By selecting this option, the Peak Search and Manual Energy Calibration form appears (shown in Figure 12, *left*). A user can then drag and drop a record (row) from the PCF table into the blank portion of the **Peak Search** window. The zooming functionality on this plot is similar to the mechanism for normal plots. Users can click-and-drag right over regions of interest to zoom in. To zoom out, click-and-drag left. To include a peak in the fitting routine, the user should click a visible peak in the displayed spectrum. Peaks recognizable by GADRAS-DRF for this procedure are shown in *green* above a *red* continuum with the default 5 sigma peak threshold, as shown in Figure 12 (*right*).

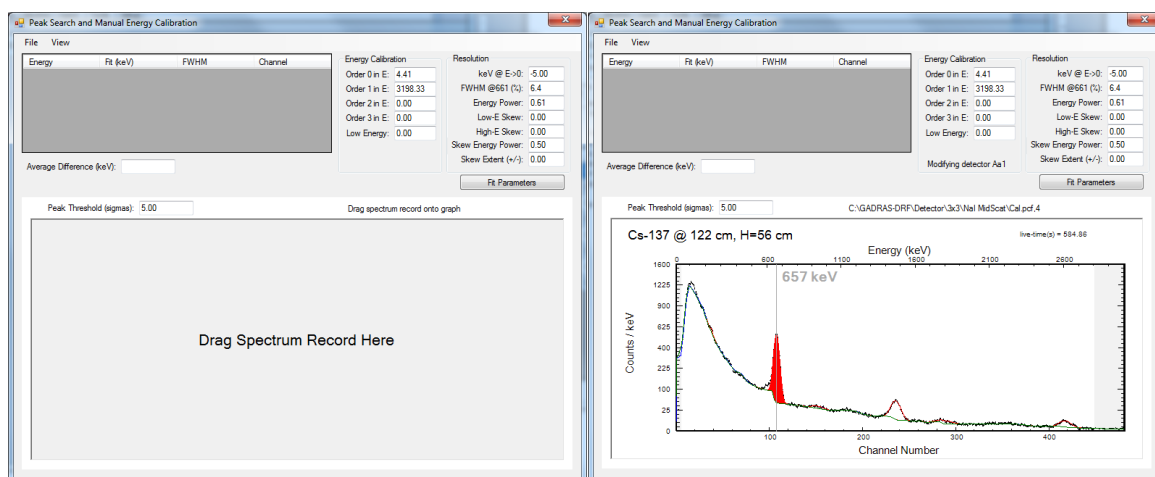


Figure 12. The Peak Search and Manual Calibration Screen is Blank When First Opened (*left*) and Populated When a Spectrum is Loaded (*right*)

The **Peak Threshold (sigmas)** option can either be lowered to recognize additional peaks or raised to recognize fewer peaks. For the new peak threshold value to take effect, it may be necessary to reload the spectrum by dragging the file to the window. Clicking a recognized peak will open a window to specify the energy of the peak as shown in Figure 13. If the centroid energy is close to a known peak for an isotope included in the GADRAS-DRF library, the isotope will be displayed along with the determined gamma-ray energy. Other peaks and energies around the determined value are also listed. The initial peak energies are based on the current energy calibration parameters existing for the detector. Users may select the appropriate isotope and energy in the provided list, or they may manually enter the appropriate energy for the isotope. Clicking **OK** assigns the Actual Energy selected to the channel

number in the spectrum. This process can be repeated for any number of available peaks in the measured spectrum as needed to complete the channel/energy table.

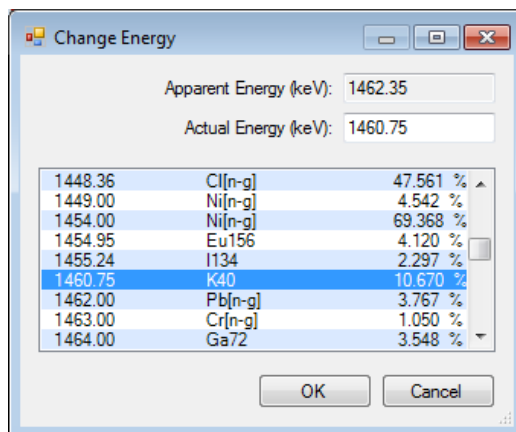


Figure 13. Users Select the Energy of the Peak From the Popup Window, or may Manually Enter the Known Energy

For high-precision spectra (e.g., HPGe spectra), a region of interest (ROI) of the graph can be selected by dragging to the right over the ROI. Dragging left will zoom out the display. Individual peaks may be easier to identify and select in the new ROI.

After entering an appropriate number of peaks in the channel/energy table, the energy parameter adjustment can be performed. The upper-left portion of Figure 14 displays the two energy peaks that were selected for energy calibration (channel/energy table) and the upper-right portion displays the **Adjust Parameters** tab. The highlighted (cyan) parameters will be adjusted. After the peak selection process is complete and the appropriate parameters are adjusted, the user should click the **Fit Parameters** button below the parameter group boxes to initiate the least-squares fit to the data.

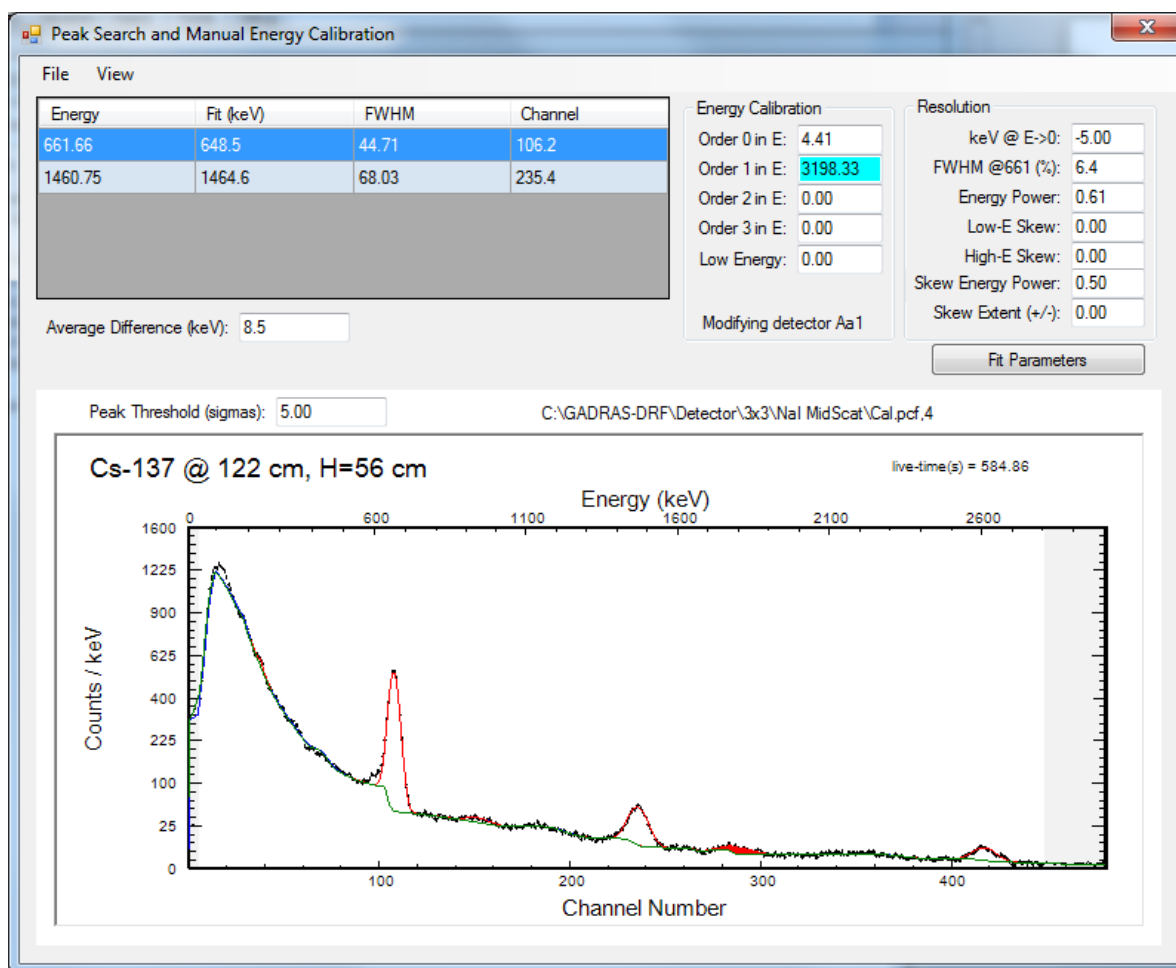


Figure 14. Energy Calibration Screen Showing the Selected Peaks and the Highlighted (cyan) Parameters that will be Adjusted (center)

To ensure a proper energy calibration, a small subset of well-known peaks should be selected. GADRAS-DRF will then properly assign energies for subsequent peak selection.

It is usually advisable to use **Order 0** and **Order 1** for an initial energy calibration, and then to include higher orders if the fits are not acceptable. The **Order 1** energy parameter should be approximately equal to the full scale energy value of spectrum in keV (e.g., 1500, 3000, 11000) depending on the detector. In general, small values are common for **Order 0**, **2**, and **3** energy parameters. Once the energy offset and gain (**Order 0** and **Order 1**) parameters are adjusted correctly, the energy resolution parameters (low/high-E skew) should be adjusted.

3.3.4.2 Linearize All Records

This option uses the energy calibration from each record, along with any deviation pairs defined, to determine the energy bounds of each channel of each record. It then rebins all records into a linear

channel-group structure, such that the calibration is defined only with a gain term (zero offset). The deviation pairs in the file are erased.

3.3.4.3 Calibrate and Linearize All Records

This option, in addition to the linearize option, attempts to automatically calibrate each spectrum. This can be done for each record based on the 2614 keV peak, 1460 keV peak, or based on each records' **Tag** character. The following **Tag** characters are acceptable in this context:

- T only adjust gain based on 2614 keV peak
- t adjust gain and offset based on 2614 keV peak and 239 keV peak (use 583 keV peak if available)
- K only adjust gain based on 1460 keV peak

3.3.4.4 Automatic Energy Calibration

This tool searches the entire spectrum for common background peaks, and fits the energy calibration parameters, resolution parameters, and skew parameters automatically. It gives users the option to write the fitted parameters to all records in the file, or just the one that was used to search for background peaks.

4 PLOTTING/VIEWING SPECTRA

4.1 Measured Spectra

Users can plot one or more gamma-ray spectra in a PCF file using the **Plot** button located on the bottom-right corner of the Plot tab (Figure 15).

A record of interest from a PCF file can be plotted by dragging and dropping an entry from the **PCF Viewer** to the **Foreground** text box or to the plot table that lists current Spectral Pairs. The plot table consists of three columns. The first column is the Title of the SpecPair, which is the title of the Foreground spectrum if present. If the Foreground is absent, the **Title** will be the Computed Spectrum name. If this is absent, the **Title** will be “Unknown” and will not be included in the plot display. The second column is the **File** associated with the SpecPair. This will be the foreground spectrum file name and record, or the computed source file name if the foreground textbox is blank. The third column specifies the background associated with the SpecPair. A spectrum specified in the **Background** textbox is time-normalized to the current foreground spectrum and is subtracted from the foreground before being displayed on the **Plot** tab. Clicking the **Plot** button will display the desired background-subtracted spectra. Figure 16 shows a plot of a ^{228}Th spectrum.

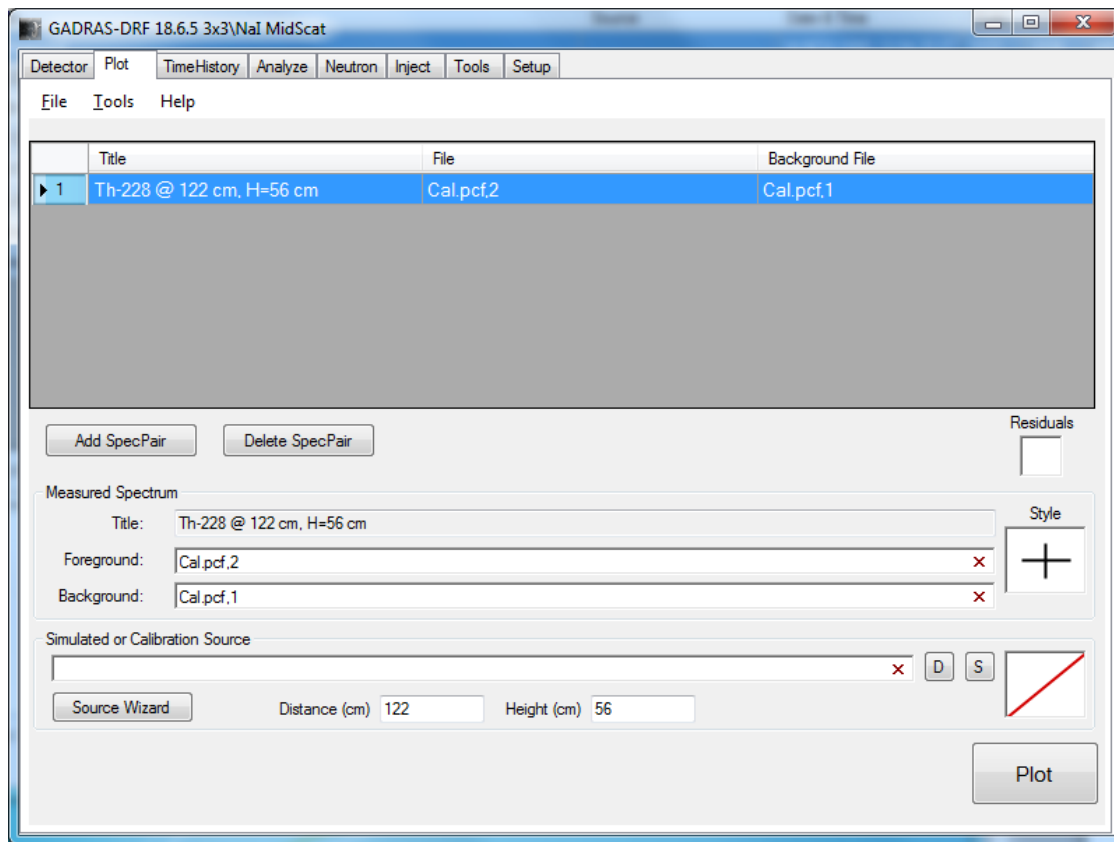


Figure 15. Plot Tab with Entries to be Plotted From the “Cal.pcf” File

The **Add SpecPair** and **Delete SpecPair** buttons in the middle of the screen are used to add or remove spectra from the drawn plot. When the **Add SpecPair** button is clicked, GADRAS-DRF adds the subsequent record from the current PCF file to the **Foreground** spectrum. The previous **Background** record is maintained by default. If the previous **Foreground** record was the last record in the PCF file, the same foreground is added to the table again.

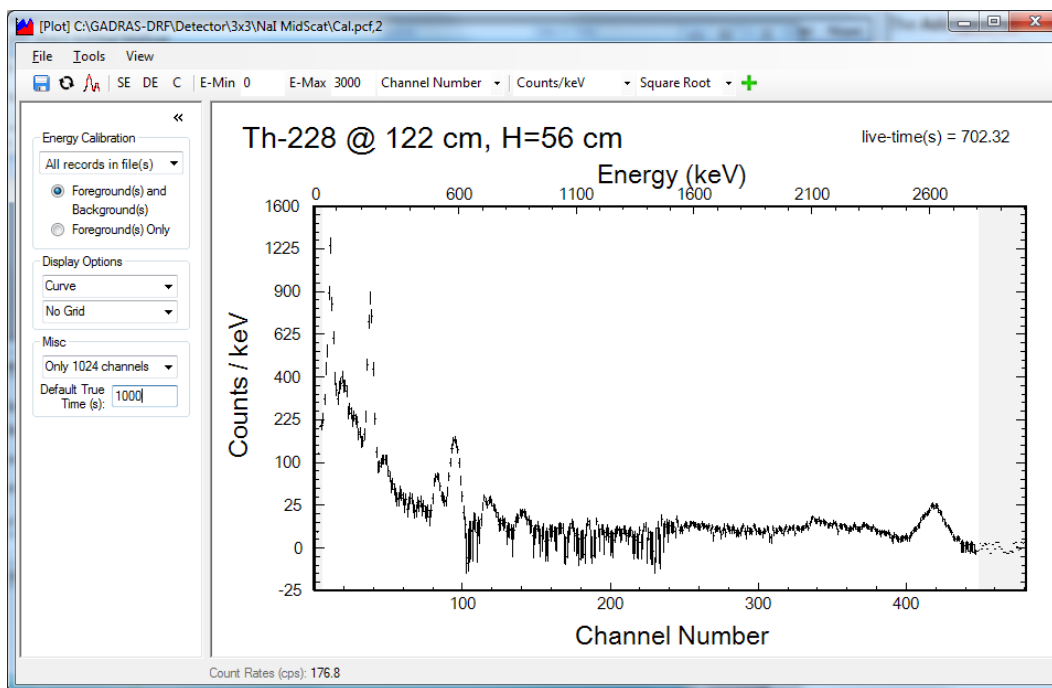


Figure 16. Plot of Background Subtracted ^{228}Th Spectrum

Figure 17 shows a plot with three spectral pairs selected for graphing. These pairs are displayed in the central white area of the **Plot** tab. Up to six spectra can be selected and displayed in a single graph.

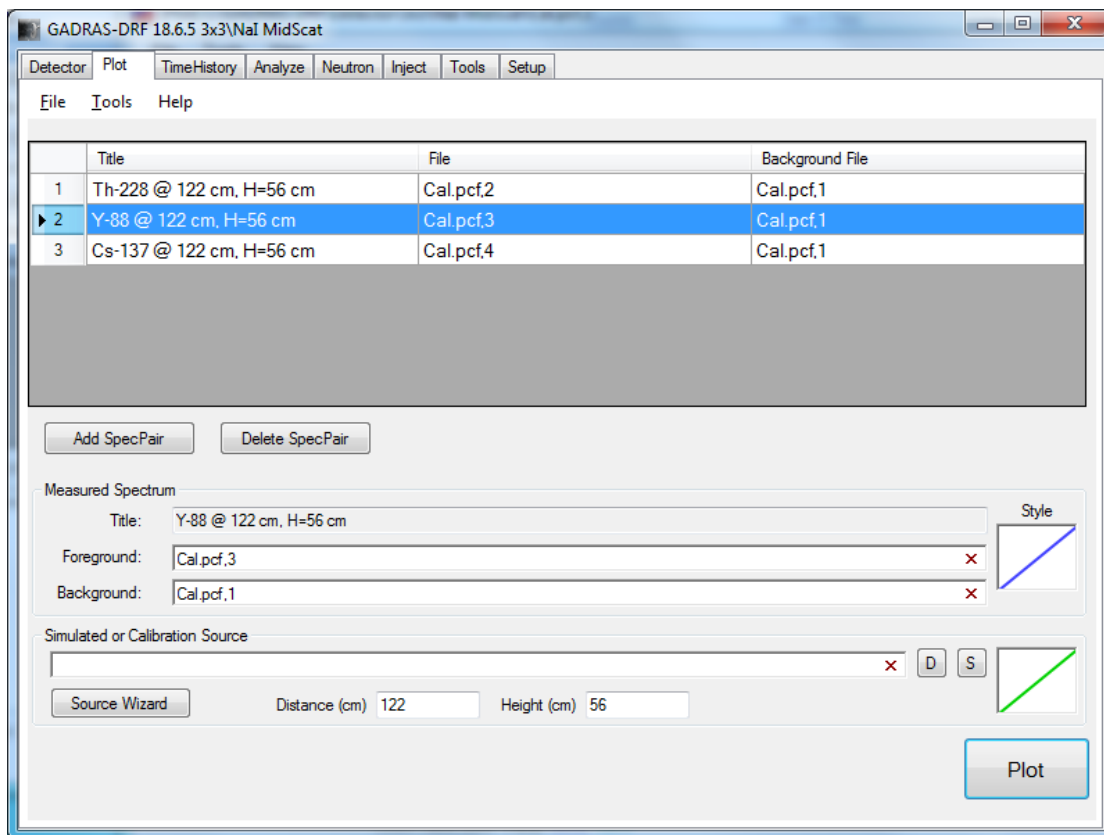


Figure 17. Plot Tab Example with Three Background-Subtracted Spectral Pairs

Figure 18 shows the graph of the three spectral pairs identified in Figure 17. The graphs are identified for each spectrum by the color selected in the style box in the **Plot** tab. The ^{88}Y is displayed in a dark blue line as shown in the style box in Figure 17.

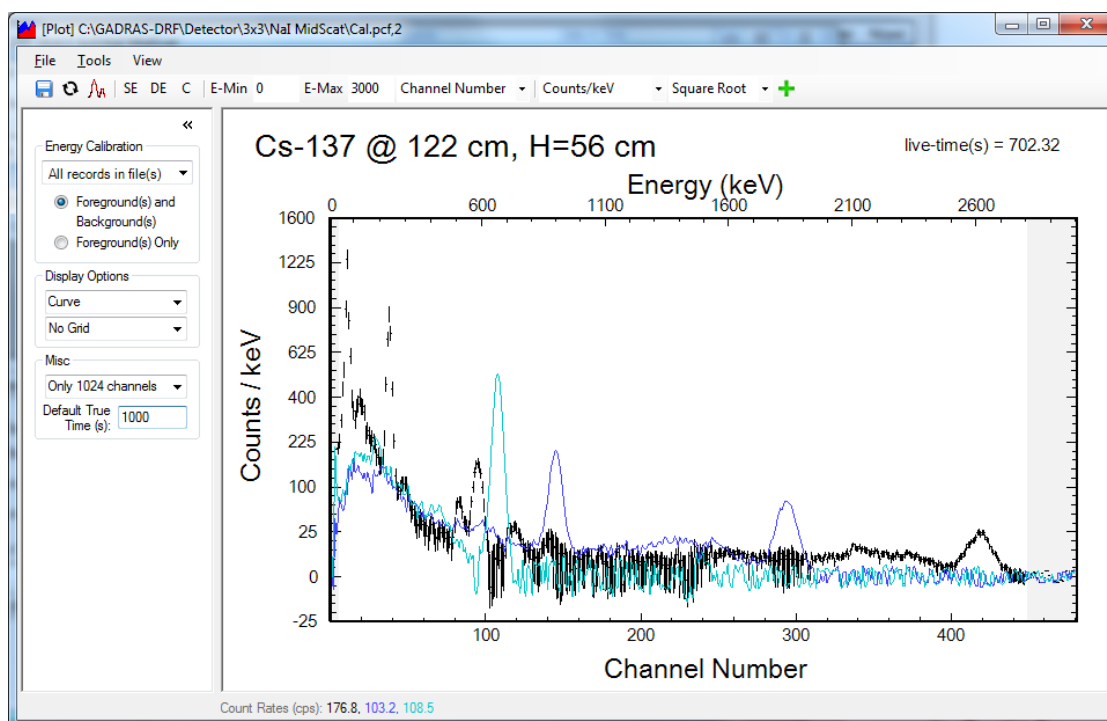


Figure 18. Plot of the Three Background-Subtracted Spectral Pairs: ^{228}Th (*black*), and ^{88}Y (*blue*), and ^{137}Cs (*cyan*).

4.2 Plotted Spectrum Window

After the plot is displayed, navigation can be done with the mouse. Drag from left to right to zoom-in on a region of interest as shown in Figure 19. Drag from right to left a small amount to partially zoom out. Drag from the right to left a larger amount to completely zoom out. Use the mouse wheel if available to change the number of log cycles displayed, or to switch between linear and logarithmic scales. Other graph navigation options can be set from the **Setup** tab.

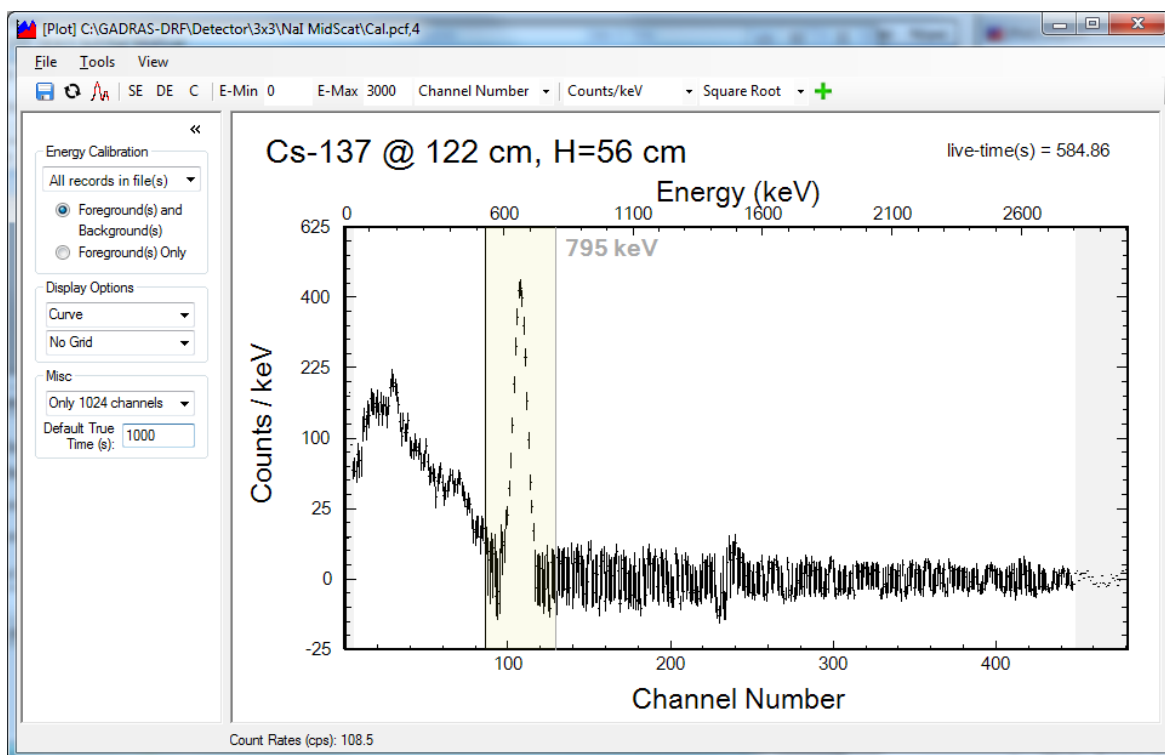





Figure 19. Zooming-in on a Plotted Spectrum

The top of the plot window shown in Figure 19 contains shortcut buttons and additional options. Starting from left-to-right, they are:

-  Save the computed spectrum to file
-  Reset the zoom (zoom out completely)
-  Enable/disable peak search mode
- **SE** Show the single-escape line (see Figure 20)
- **DE** Show the double-escape line (see Figure 20)
- **C** Show the location of the Compton edge (see Figure 20)
- **E-Min / E-Max:** These are default limits of the plot in keV.
- **Channel Number or Energy (keV):** This drop-down box allows users to view both channel number and energy, or just energy units on the x-axis
- **Counts/keV or Counts/Channel:** This drop-down box changes the normalization factor for the channel bins (normalize by energy, or normalize by channel).
- **Log Cycles or Square Root or Linear:** This drop-down changes the scale of the y-axis. This scale can also be modified with the mouse-wheel.

On the left-hand side of the plot window is a collapsible panel containing additional plot options. From top-to-bottom, they are:

- **Energy Calibration:** These options modify the behavior of graphical energy calibration (see Section 6.2 for more detail on graphical energy calibration). The drop-down box specifies which spectra are to be modified (each record in a spectra file has its own coefficients). By default, all records from all files plotted are modified. Users can choose to only modify all the spectra that are plotted, or an individual spectrum plotted. The ability to modify the energy calibration of a single spectrum from a file is useful if there is gain or offset drift between measurements.

Under the drop-down box there is also two button to select whether the energy calibration coefficients for the foreground and subtracted background are to be modified (default), or just the foreground.

- **Display Options:** The first drop-down box has three choices to display how spectra are plotted (note this only has an effect on line-style plotted spectra, not on “error-bar” style plotted spectra). The options are Curve (Default), Histogram, and Bar Chart.

The second drop-down box controls the grid on the chart. By default, only the x-axis and y-axis at zero are plotted (Zero Crossings). Users can turn off all grid lines (No Grid), or shown them throughout the chart (Dotted Grid).

- **Misc:** The first drop-down box contains smoothing options. The default is to display at most 1024 channels. However, if a user zooms in to a region that has less than 1024 channels, no rebinning is done and all channels are displayed. Other options include 512 channels, Smooth Magic, Smooth by FWHM, No Smoothing (display all channels), and a variety of smoothing options by percent of energy. These only affect how the spectrum is viewed, not any analysis or computations.

The default true-time is only used when only a computed source or calibration source is plotted without a foreground (from which the true-time is extracted).

4.2.1 File Menu

The **File** menu consists of the following options:

- **Copy to Clipboard** copies the plot screen to the clipboard as an image and can be pasted into another application
- **Write Computed Spectrum to File** saves the computed spectrum to a pcf file for future plotting
- **Save to Metafile** saves the plot screen to an image file (.emf)
- **Print:** allows users to print the displayed graph

4.2.2 Tools Menu

The Tools menu provides options for graph properties, peak lists, and count rates:

- **Zoom to Extents:** zoom the graph out to the full energy limits
- **Count Rates:** provides the count rate for each of the graphed spectra at the currently displayed energy limits
- **Peak Search Mode:** provides energy and count rates for peaks in the spectrum in graphical and list form
- **Edit Deviation Pairs:** allows the user to view and edit the deviation pairs associated with the current spectrum
- **Show Peak List:** displays a list of peaks that can be overlaid on the spectrum; by selecting an entry, all peaks from the specified source and threshold will be displayed (this option is discussed in more detail in Section 6.1.1).
- **Show Isotope DB:** displays the Isotope Database for use in analyzing displayed spectra (discussed in Section 6.1.2)

4.2.3 View Menu

The **View** menu allows users to display common features of a plot using the cursor. When users select any of Single Escape, Double Escape, or Compton Edge, the cursor location on the spectrum is used as a starting point and energies of the specific features are calculated and displayed on the screen (Figure 20).

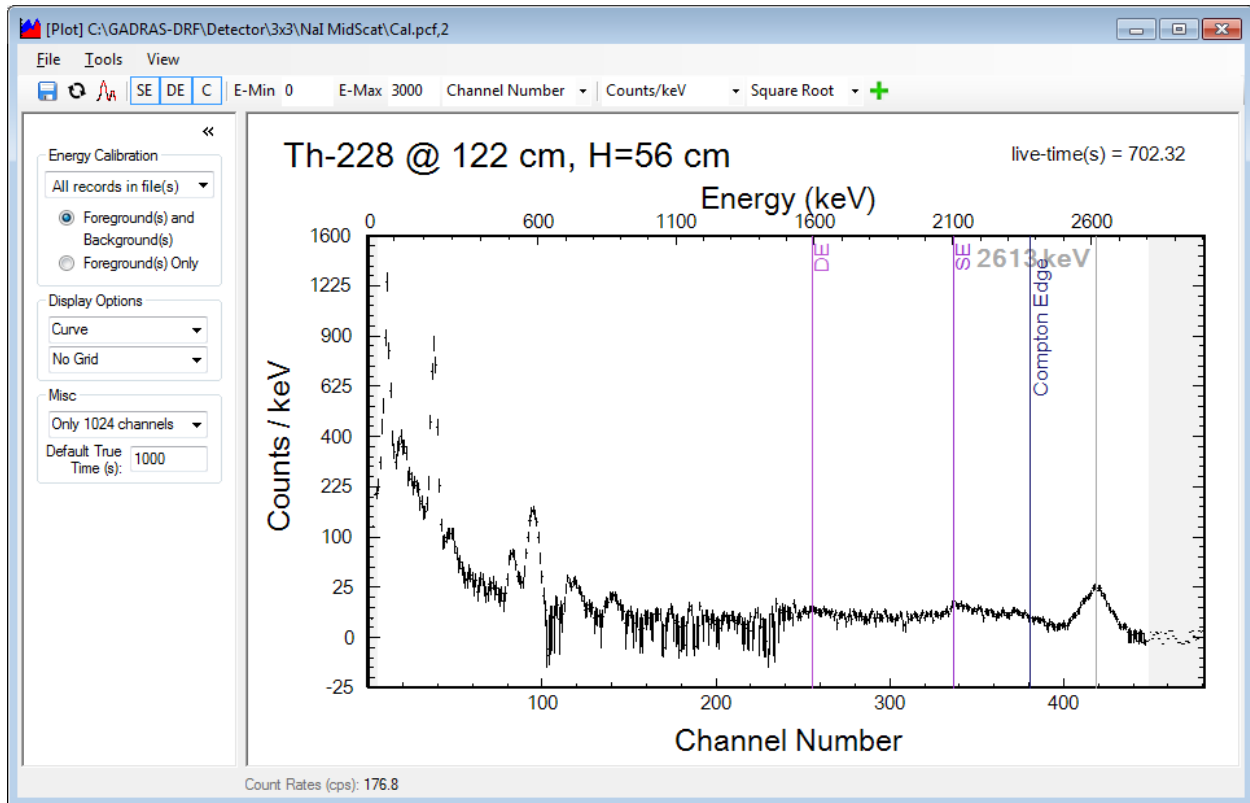


Figure 20. Spectral Features from View Menu

4.3 Source Wizard and Computed Spectra

Besides displaying measured spectra, GADRAS-DRF can also display computed spectra or isotope source spectra. Sources for computed spectra are entered on the **Source for Computed Spectrum** entry at the bottom of the **Plot** tab or by using the **Source Wizard** button.

4.3.1 Source Wizard

The **Source Wizard** button shown in Figure 17 is located just below the **Simulated or Calibration Source** entry. The **Source Wizard** form is shown in Figure 21.

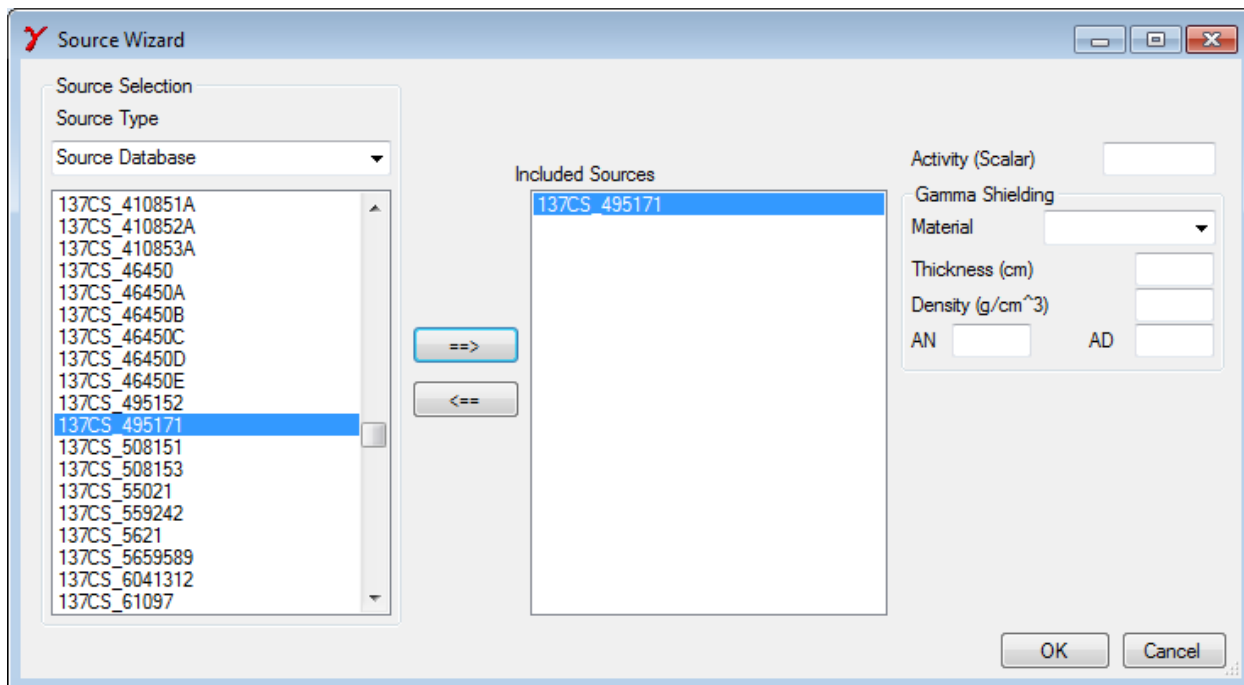


Figure 21. Source Wizard Screen

The drop-down menu in the source wizard allows users to select various types of sources, such as radionuclides and distributed GAM files. Users can use the arrows in the center of the window to add or remove sources from the current list of Included Sources. The third column on the far right of the Source Wizard allows users to edit the GADRAS-DRF shorthand notation for shielding. After clicking **OK**, the Source Wizard will automatically generate the GADRAS-DRF shorthand string in the Computed Spectrum text box.

4.3.2 Simulated or Calibration Source

In lieu of using the source wizard button, the user can enter source information on the computed source line.

Sources may include:

- the name/serial number of a calibration source in the source library/database,
- distributed GAM files, and
- an isotopic designation and source strength (e.g., **232U, 1.5uC**).

Activity units for the computed spectrum are always given in Curies (shortened to “C” instead of the standard “Ci”). This unit may be prepended with the following SI prefixes (*Note: these are not case sensitive*):

- pC: picoCuries
- nC: nanoCuries
- uC: microCuries
- mC: milliCuries
- kC: kiloCuries

Alternatively, Becquerel units can be input using the following SI prefixes (also not case sensitive):

- kBq: kiloBecquerel
- MBq: megaBecquerel
- GBq: gigaBecquerel

Mass or activity of a source can be specified and used for plotting. The mass is converted to the proper activity prior to plotting (e.g., **239Pu, 50g** is converted to **239Pu, 3.1C**).

When **GAM** files are used, the activity level specified in Curies determines the scaling factor for the source. Thus, an activity of “1C” indicates that the source should not be scaled, and an activity of “2C” indicates that the source strength should be doubled.

The simulated/computed spectrum can be a mixture or sum of several spectra. The individual spectra can be summed by placing a plus (+) sign between the successive sources (e.g., 232U, 1uC+40K, 25mC). Gamma-rays emitted by the specified isotopes are folded through the detector response function to compute the spectrum that would be recorded if the detector were exposed to the given sources. If one spectral pair is plotted, the reduced χ^2 fit residuals between the measured and computed spectra are calculated and displayed.

4.3.3 Viewing Spectra

Figure 22 shows the **Plot** tab with a ⁸⁸Y spectrum (cal.pcf, 3) on the foreground line and a background spectrum (cal.pcf, 1) on the background line. The **Source for Computed Spectrum** line shows that the measured spectrum is to be compared with the computed spectrum for the ⁸⁸Y source with serial number **495182** entered as 88Y_495182.

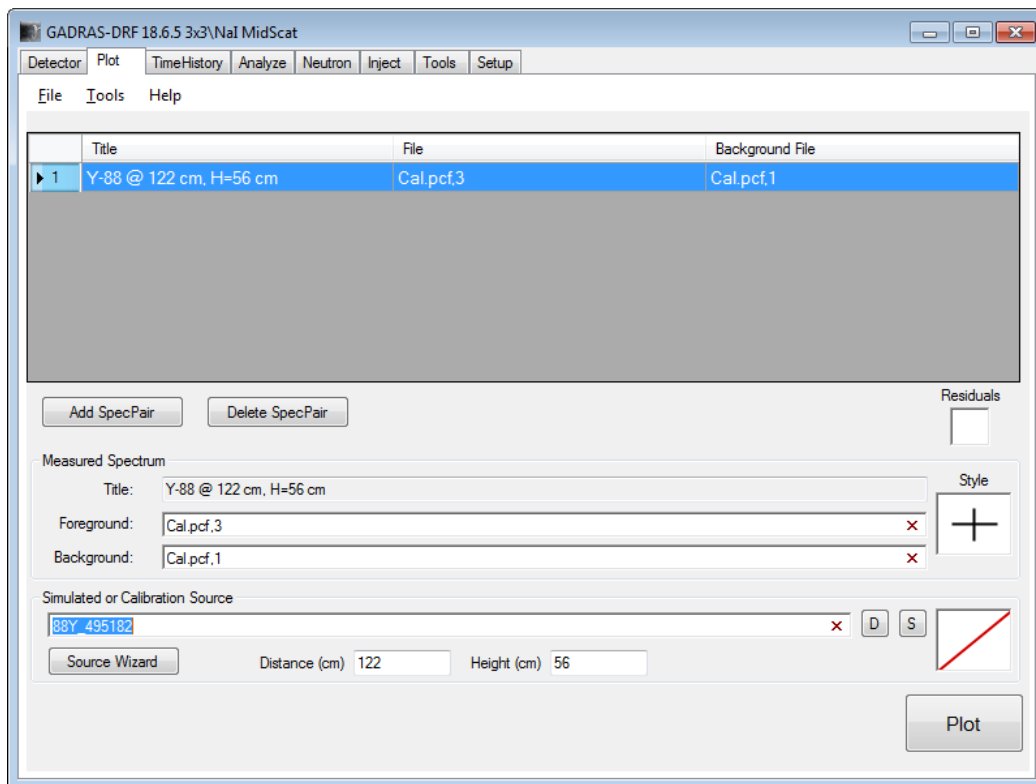


Figure 22. The Plot Tab Displaying Selections for a Foreground, Background, and Computed Spectrum

Figure 23 is generated after the **Plot** button is clicked. The measured ^{88}Y spectrum (background subtracted) is displayed in *black*, while the computed spectrum for the ^{88}Y source (ID number: 495182) from the source library is displayed in *red*. The count rate is displayed at the bottom left of the graph for all graphed spectra for the displayed energy region. The count rates are color coded to match the color of the corresponding spectrum.

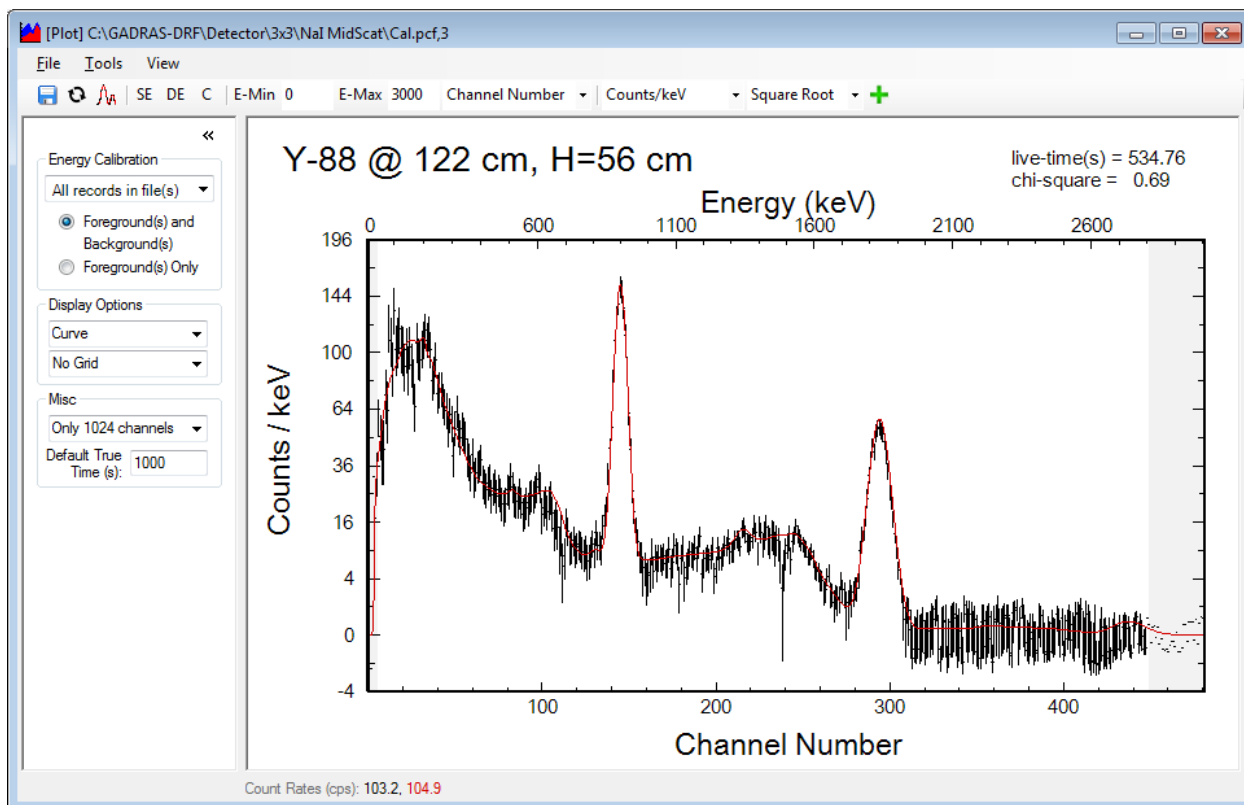


Figure 23. Plot of a Measured ^{88}Y Spectrum (background subtracted) and the Computed Spectrum from ^{88}Y Calibration Source

Computed sources may be plotted by themselves by using the **Source for Computed Spectrum** line without a measured spectrum on the foreground or background lines. If desired, effects of shielding materials can be estimated by specifying the material on the **Source for Computed Spectrum** line. The atomic number and areal density of the absorbing material can also be entered on the input line using the following convention:

$^{232}\text{U}, 10\text{uCi} \{26, 10\} + ^{137}\text{Cs}, 3.2\text{mCi} \{13, 5\}$

In this example, 10uCi of ^{232}U is propagated through 10 g/cm^2 of iron ($Z=26$), and 3.2mCi of ^{137}Cs is propagated through 5 g/cm^2 of aluminum ($Z=13$). This functionality is also accessible from the Source Wizard form, described in Section 0.

5 COUPLING GADRAS-DRF TO EXTERNAL RADIATION TRANSPORT CODES

To accurately model non-point sources or sources in complex scattering environments using GADRAS-DRF, an external code must be used to perform the radiation transport calculations. Radiation transport codes such as the Monte Carlo N-Particle (MCNP) code, developed by Los Alamos National Laboratory, can be used to model sources and scattering environments. The output from these codes can be used with the detector response function in GADRAS-DRF to model 3-dimensional sources or complex scattering environments. This section describes how users should set up the radiation transport codes (specifically MCNP) to use with GADRAS-DRF. Users may also elect to use other codes such as GEANT, PARTISN, DENOVO, or custom user codes.

GADRAS-DRF calculates the detector response for radiation directly incident on the detector as well as for radiation that has scattered in the environment before interacting with the detector. To calculate the scattered radiation, GADRAS-DRF has several scatter parameters which simulate a general scattering environment. If the scattering environment is complex, external transport codes can be used to calculate the incident radiation instead of GADRAS-DRF. To do this, MCNP should be used to model the radiation current separately on multiple facets of the detector. Using the MCNP results, GADRAS-DRF can compute gamma-ray spectra and neutron count rates for a given scenario. These results may have a higher degree of fidelity than can be obtained by applying the default scatter parameters. If a source cannot be approximated with a point source, MCNP can be used to calculate the radiation transport from the source to the detector with a higher degree of fidelity than GADRAS-DRF alone.

The MCNP scenario should be designed to simulate the external scattering environment and tally the energy-dependent current on each surface of the modeled detector. The output files should then be converted into files that are compatible with GADRAS-DRF. These input files are called “multi-faceted GAM files.” GADRAS-DRF processes these multi-faceted GAM files by calculating the detector response from the radiation that scatters within the detector housing, and assuming that MCNP has accounted for the external radiation scattering.

To correctly process multi-faceted data generated by MCNP, users need to suppress GADRAS-DRF’s external scatter radiation calculations by setting all of the scatter parameters to zero (Figure 24). The radiation transport code must tally photons and neutrons that scatter into the detector from the floor, walls, ceiling and any other object in the detector’s vicinity; GADRAS-DRF will account for radiation scatter within the detector.

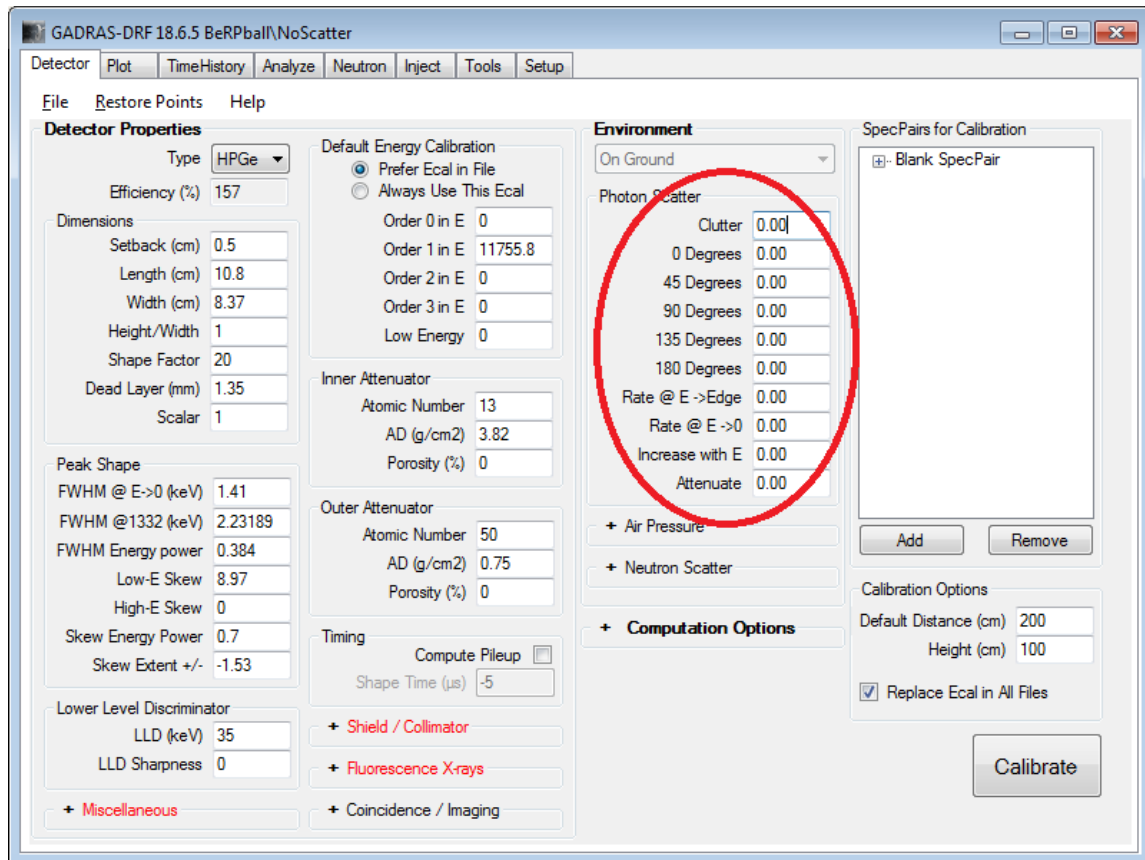


Figure 24. Set all Scatter Parameters to 0 When Using Multi-faceted GAM Files

5.1 MCNP Methodology

To compute the detector surface currents for a given scenario, the MCNP model should contain a cylindrical volume representing the detector. The cylinder should be positioned at the detector location with dimensions similar to those of the detector. The current tally (F1) should be used to tally the photons and neutrons that cross each individual surface (front, back, sides). The pulse-height tally (F8) is not appropriate for use with GADRAS-DRF, as this tally represents the detector response function generated by MCNP and cannot be readily converted to a format that is usable by GADRAS-DRF. The current tally should be generated with the energy bin structure provided with the GADRAS-DRF distribution in the "MCNPbins.dat" file, (energies in this file must be converted from keV to MeV for usage in MCNP). Figure 25 below shows a simple example of a ^{127}Cs source 1 meter away in air. A photon importance of zero in the detector cell ensures that the tally does not double-count particles that pass through the detector volume.

```

Simple Example Input Deck
1 0 -1 imp:p=0 $ detector volume
2 1 -0.0012 -2 1 imp:p=1 $ surrounding air
3 0 2 imp:p=0

1 rcc 100 0 0 10 0 0 10 $ detector surfaces
2 so 1000 $ universe sphere

mode p
sdef par=p pos=0 0 0 erg=0.6617
m1 7014 -75 $ air
    8016 -25
f1:p 1.1 $ side of cylinder, side of detector
f11:p 1.2 $ bottom of cylinder, front face of detector
f21:p 1.3 $ top of cylinder, back face of detector
e0 {insert values from MCNPbins.dat}

```

Figure 25. A Simple MCNP Input Deck

The MCNP output file needs to be converted into a format usable by GADRAS-DRF. The tally from MCNP should be converted into surface current density (particles/m²s) for each energy bin. To do this, the source activity, particles per decay, and detector facet surface areas must be known. Figure 26 below shows an example of the necessary unit conversion for a 1 uCi ¹³⁷Cs source counted with a cylindrical detector (r=10cm, l=10cm). Once converted to the appropriate units (particles/m²s), the current densities can be incorporated into the GADRAS-DRF multi-faceted GAM file.

$$\begin{aligned}
 \{\text{front current density}\} &= \left\{ \frac{\text{front current}}{\text{source particle}} \right\} * \frac{(1 \times 10^{-6} \text{ Ci}) \left(3.7 \times 10^{10} \frac{\text{Bq}}{\text{Ci}} \right) \left(1 \frac{1/\text{s}}{\text{Bq}} \right)}{\pi (10 \text{ cm})^2 \left(\frac{1 \text{ m}}{100 \text{ cm}} \right)^2} \\
 \{\text{side current density}\} &= \left\{ \frac{\text{side current}}{\text{source particle}} \right\} * \frac{(1 \times 10^{-6} \text{ Ci}) \left(3.7 \times 10^{10} \frac{\text{Bq}}{\text{Ci}} \right) \left(1 \frac{1/\text{s}}{\text{Bq}} \right)}{2\pi (10 \text{ cm}) (10 \text{ cm}) \left(\frac{1 \text{ m}}{100 \text{ cm}} \right)^2} \\
 \{\text{back current density}\} &= \left\{ \frac{\text{back current}}{\text{source particle}} \right\} * \frac{(1 \times 10^{-6} \text{ Ci}) \left(3.7 \times 10^{10} \frac{\text{Bq}}{\text{Ci}} \right) \left(1 \frac{1/\text{s}}{\text{Bq}} \right)}{\pi (10 \text{ cm})^2 \left(\frac{1 \text{ m}}{100 \text{ cm}} \right)^2}
 \end{aligned}$$

Figure 26. Pseudo-code for Scaling MCNP Surface Current Outputs to Units Suitable for use with GADRAS-DRF

Figure 27 below shows an example of a multi-faceted GAM file with current densities for the three facets of a detector. GADRAS-DRF represents detectors as if they are symmetric normal to the detector axis, so there is no distinction between the top, bottom, left, and right sides. The average current over all the lateral sides of the detector should be specified as the third parameter on each line.

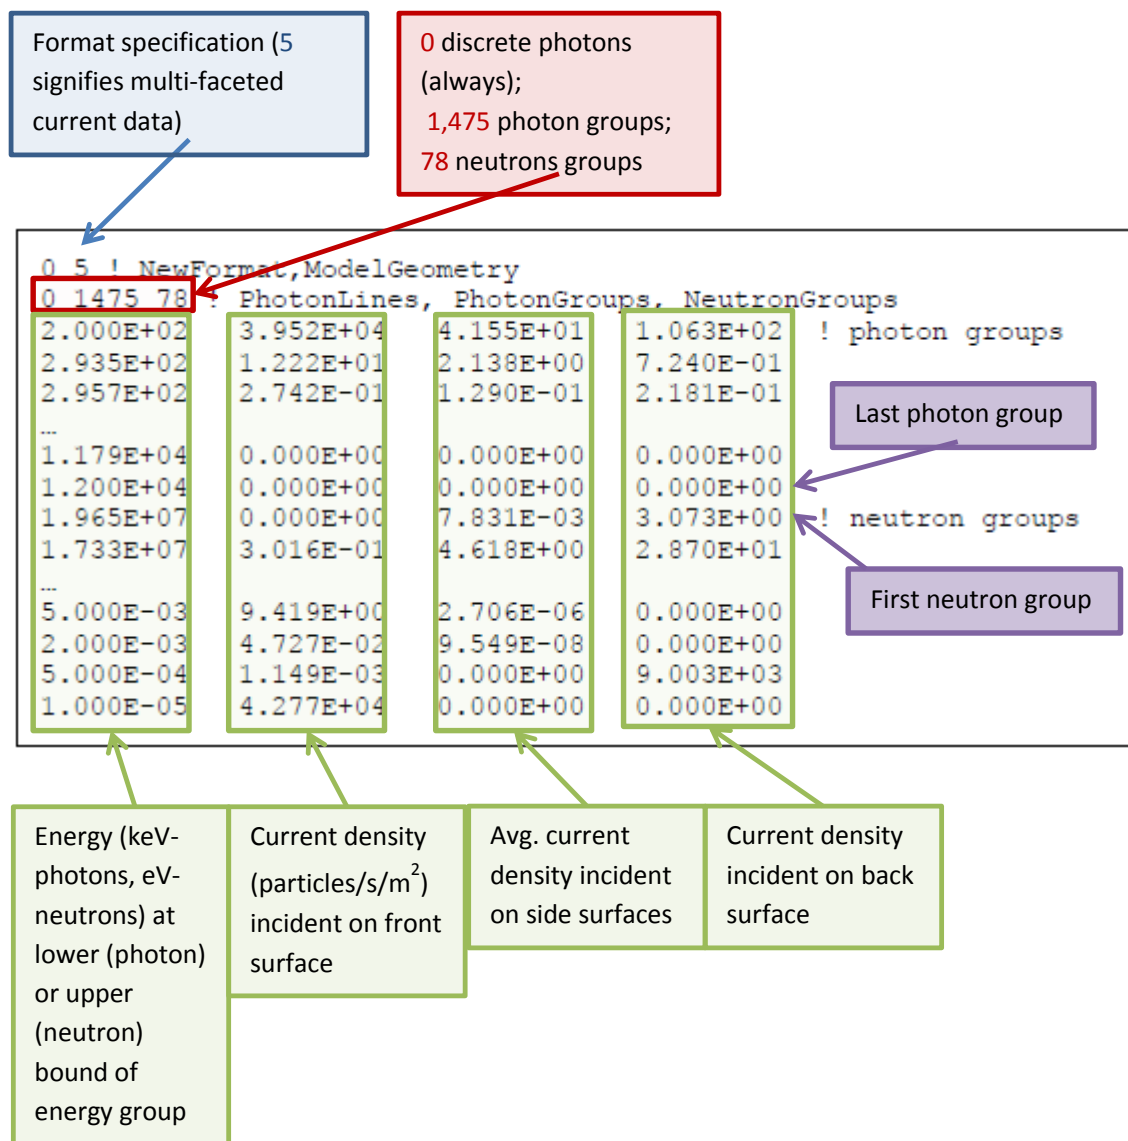


Figure 27. Multi-faceted GAM File Example

In Figure 27 above there are NG + 1 lines for the photon groups and NN + 1 lines for the neutron groups where NG and NN are the number of photon and neutron groups respectively. For multi-faceted GAM files, there are always 0 discrete photons specified. The leakage values are specified in units of inbound current density (particles/m²s, current divided by surface area) on each detector surface. GADRAS-DRF accounts for the surface area of each detector facet when the response function is computed for a given detector. As a result, the same GAM file may be used to compute a response function for a different detector if it is situated at the same height and distance to a radiation source.

The multi-faceted GAM file should be saved as <filename>.GAM, where <filename> is the user's chosen file name. This file can then be included on the computed source line for plotting.

5.2 Automatic Conversion from MCNP Output to GADRAS-DRF Input

GADRAS-DRF is distributed with python scripts that will convert MCNP output files into GADRAS-DRF input files. These scripts are located in the GADRAS-DRF data folder (usually **C:\GADRAS-DRF**), and are called “mfgf.py” and “mcnpfunc.py”. Users can view and modify “mcnp_example.py” to use these scripts properly. Currently only photons are included in the mcnp_example.py file.

To use these scripts, the MCNP model must be configured to create a MCTAL file as part of its output. To do this, the line “PRDMP J J -1” must be included in the data card of the MCNP file. The python scripts need several inputs to properly generate a multi-faceted GAM file for use with GADRAS-DRF. Users must supply:

- MCNP MCTAL file
- Source activity (in Bq)
- Source yield (particles per decay)
- Area of face of detector in MCNP model (in m²)
- Area of side of detector in MCNP model (in m²)

Users must also install python on their computer and make sure the numpy library is present. To run the script, users should type “python mcnp_example.py” into the command prompt.

6 SPECTRUM ENERGY CALIBRATION

There is a variety of methods in GADRAS for energy-calibration. Section 3.3.4 covers how to calibrate from the **PCF Viewer** by automatic methods as well as peak-search methods. The most common method to quickly calibrate a spectrum is through the **Plot** window.

6.1 Helpful Tools for Energy Calibration and Peak Analysis

6.1.1 Photopeak List

To aid in performing an energy calibration or in determining a peak's energy in a spectrum, the **PhotoPeak List** library can be used. This list can be accessed:

- From the **Tools** tab
- Using the mouse (shift+left mouse click (*holding down the shift key while clicking the **left mouse button***)) on a peak of interest in a displayed spectrum
- From the **Plot** window under the **Tools** menu, **Show Peak List**

The **PhotoPeak List** library is shown in Figure 28. The blue highlighted entry corresponds to the gamma-ray automatically selected by GADRAS-DRF based on its proximity to the selected energy location on the current plot (*shift-left click* location). The selection also takes into account the relative importance of the gamma-ray to the observable spectral features.

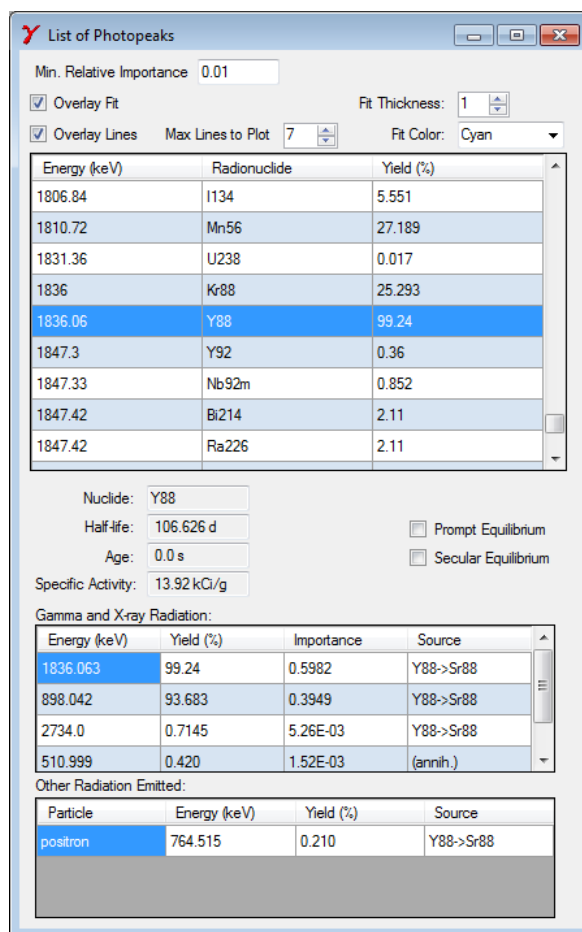


Figure 28. PhotoPeak List Library with ⁸⁸Y Highlighted and Both Overlay Options Boxes Checked

At the top left of the **PhotoPeak List** library screen are two check boxes for overlay options. The overlay fit check box when selected will generate a spectral overlay fit for the selected isotope (a single regression fit using one isotope). The spectral overlay displays the source activity and shielding configuration estimated to provide the best fit to the measured spectrum. The overlay lines check box overlays vertical lines at the appropriate energy locations for the selected isotope on the measured spectrum utilizing the **Max Lines to Plot** selection. The displayed overlay can be changed to display another isotope simply by selecting and highlighting another gamma-ray line in the **PhotoPeak List**, allowing for rapid examination of many isotopes in the library. The color and line thickness of the overlaid spectrum can be changed using the options at the top of the library window. The selections displayed in the **PhotoPeak List** in Figure 28 are shown in the displayed graph in Figure 29.

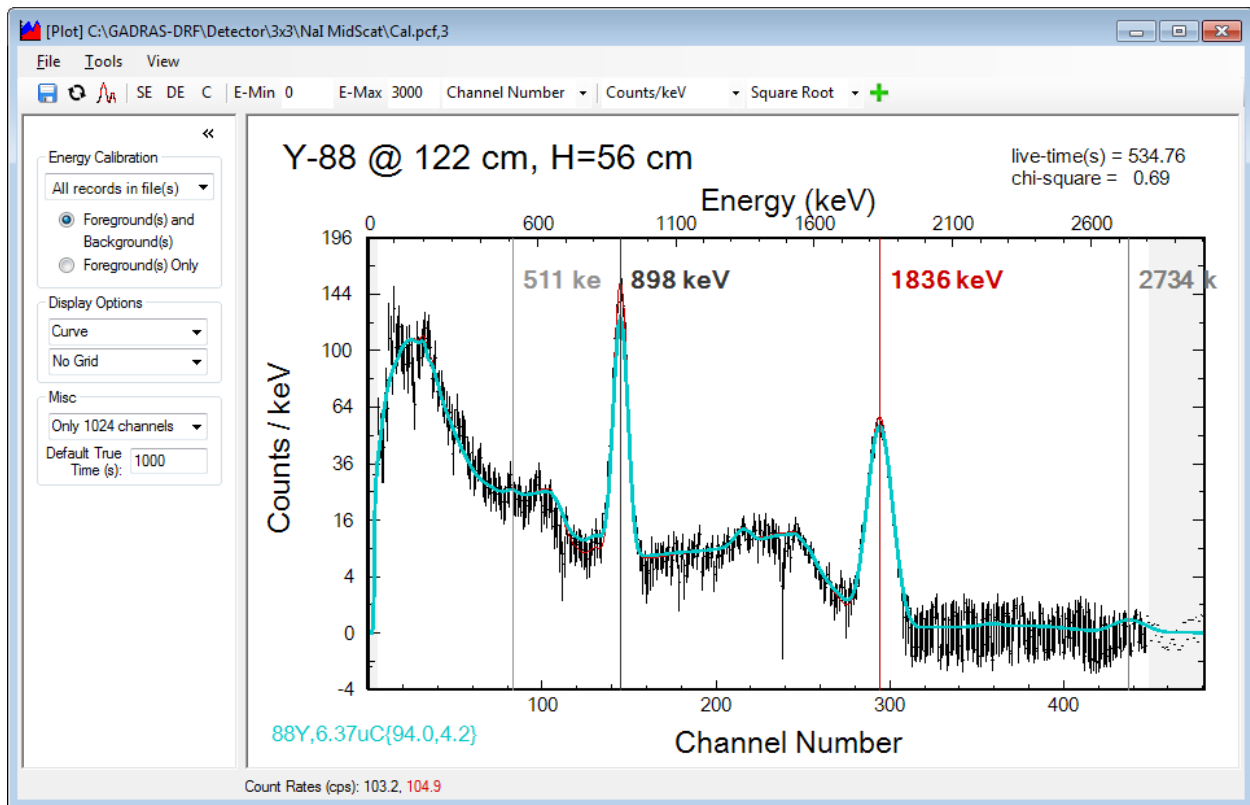


Figure 29. Graph Displays the Measured ^{88}Y Spectrum (black) with Both Overlay Options

The graph in Figure 29 displays the measured ^{88}Y spectrum (black) along with both overlay options. The overlay fit option generates a spectrum which is cyan in color and has a thickness value of three. The overlay lines option displays the lines and their energies.

6.1.2 Isotope List

Another useful tool when graphically calibrating is the **Isotope Database** tool (shown in Figure 30). Instead of selecting a peak from a plot, the drop-down menu at the top of this tool allows users to choose a radionuclide from the list, and overlay lines and a fit to the current plot window. This can also be used as a reference for emitted radiation from common radionuclides.

The graph in the center of the form shows the locations of the main photopeaks for the selected isotope. The center of the window displays properties for the selected isotope such as isotope designation, half-life, age, and specific activity. It also specifies if the nuclide is assumed to be in prompt or secular equilibrium with its daughters. The bottom of the window displays characteristic gamma-ray energies sorted by intensity multiplied by the square-root of the energy.

If a spectrum has been plotted, users can display overlays of the nuclide on a current plot using the two **Overlay** checkboxes located at the top of the **Isotope DB** form. The first checkbox overlays a graphical fit

of the selected isotope by automatically calculating the activity and shielding to best match the measured spectrum. The overlaid spectrum is generated using the detector response function parameters found in the **Detector.dat** file. The user may also change the color and line thickness of the overlaid fit. The second checkbox overlays vertical lines on the plotted spectrum, which correspond to the major energy lines of the selected isotope. The number of lines to display can be changed by the user.

GADRAS-DRF developers commonly list gamma-ray emissions from daughter radionuclides in the gamma-ray emission list for the parent radionuclide. This generally occurs if the daughter radionuclide is traditionally observed to be in equilibrium with the parent. For example, gamma-ray emissions arising from the decay of ^{208}Tl are also listed under ^{232}Th . The origin of a gamma-ray can be observed in the **Source** column of the table.

Isotope Database

88Y

☐ Overlay Fit Fit Thickness: 3

☒ Overlay Lines Max Lines to Plot: 7 Fit Color: Cyan

Nuclide: Y88

Half-life: 106.626 d ☐ Prompt Equilibrium

Age: 0.0 s ☐ Secular Equilibrium

Specific Activity: 13.92 kCi/g

Gamma and X-ray Radiation:

Energy (keV)	Yield (%)	Importance	Source
1836.063	99.24	0.5968	Y88->Sr88
898.042	93.683	0.394	Y88->Sr88
2734.0	0.7145	5.24E-03	Y88->Sr88
510.999	0.420	1.52E-03	(annih.)
14.165	34.3	1.1E-03	Y88->Sr (xray)

Other Radiation Emitted:

Particle	Energy (keV)	Yield (%)	Source
positron	764.515	0.210	Y88->Sr88

Close


Figure 30. Isotope Database Form

6.2 Graphical Energy Calibration

A graphical calibration method is an alternative to using the Peak Search and Manual Energy Calibration process. This can be used for the adjustment of the gain and offset (**Order 0** and **Order 1**) of the spectrum. The calibration will occur using a graph of the measured spectrum and the appropriate overlaid spectrum from the **PhotoPeak list** or **Isotope Database** library. Figure 31 (top) shows a measured ^{137}Cs spectrum (*black*) and a library ^{137}Cs spectrum (*red*). This plot is zoomed in to the region around the primary ^{137}Cs peak at 661 keV. The measured spectrum (*black*) does not coincide with the energy of the library peak (*red*). This implies that an energy calibration of the data (measured spectrum) is needed.

To calibrate the measured spectrum correctly, the centroid of the measured peak (*black*) should be adjusted to match the centroid of the computed spectrum (*red*). To make this adjustment, the user should right-click on the peak in the measured spectrum and drag the peak to the correct energy (the centroid of the peak in the computed spectrum). After right-clicking the plot window will be outlined in red as shown in Figure 31 to indicate energy calibration mode. Figure 31 (bottom) shows what the plot looks like after dragging the measured spectrum to the left (while still holding down the right-mouse-button).

Release the right-mouse-button to complete the action (or press escape to cancel it). Once this action has been performed, the energy calibration window shown in Figure 32 will appear for the selection of the appropriate calibration parameter (offset or gain). The user will need to confirm the adjustment before the energy calibration parameter will be changed.

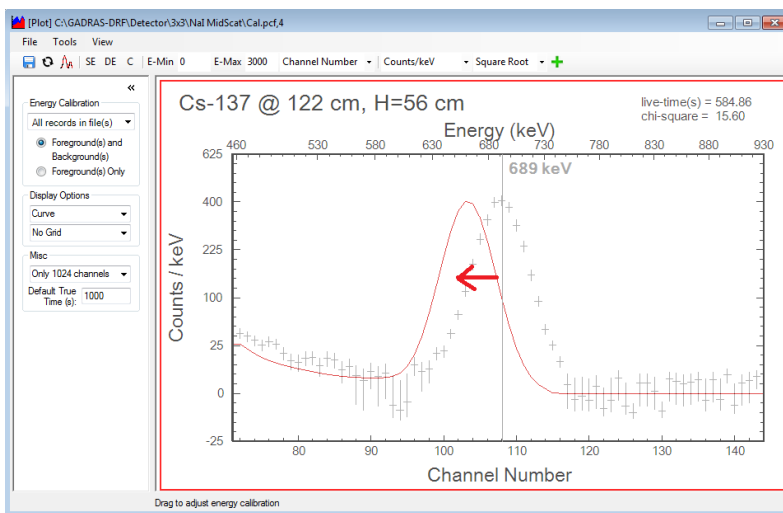

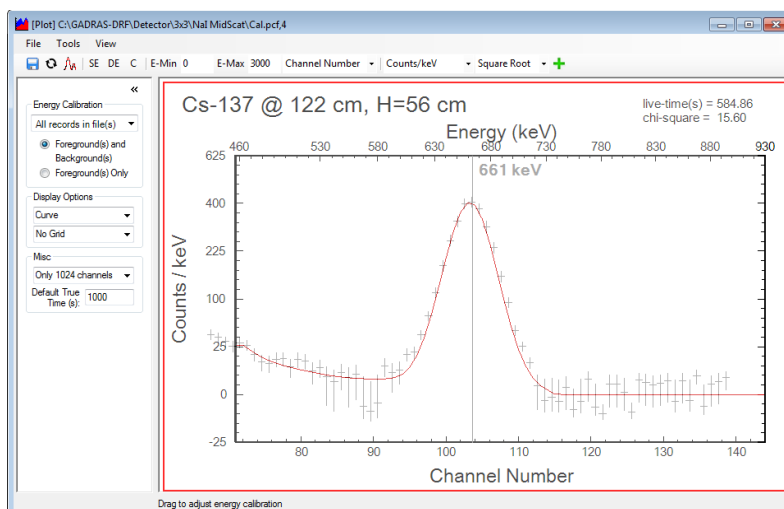


Figure 31. Graphical Energy Calibration Example

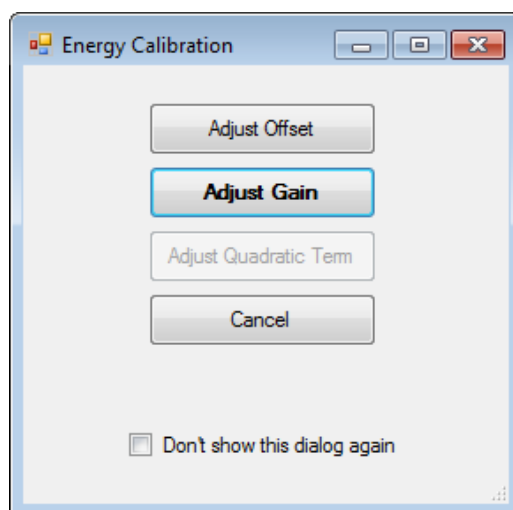


Figure 32. Graphical Energy Calibration Confirmation Window

Due to the potential for inadvertent changes to calibration parameters, GADRAS-DRF requests confirmation for the parameters to be adjusted when the dragging operation is used. If a gain adjustment is made within thirty seconds of an offset adjustment, GADRAS will use both changes simultaneously to fit the gain and offset. The quadratic option is only available once the following criteria have been met:

1. Successful gain adjustment within 30 seconds
2. Successful offset adjustment within 30 seconds

3. The third adjustment energy is greater than 400 keV
4. The adjustment energy is greater than 0.4 times the full-energy-range away from the energy used to adjust the offset
5. The adjustment energy is greater than 0.4 times the full-energy-range away from the energy used to adjust the gain

For example, if calibrating off of a background spectrum, and the 239 keV peak (Th chain), 1460 keV peak (K-40), and 2614 keV peak (Th chain) are visible, the user could drag the measured spectrum at 239 keV to adjust the offset, the 2614 keV to adjust the gain, and then the 1460 keV to adjust the quadratic term. However, if the user tries to use the 583 keV peak (Th chain) to adjust the quadratic term, GADRAS-DRF will not allow a quadratic adjustment because it is too close to the 239 keV peak.

If all the criteria are met, GADRAS-DRF will utilize all three energy adjustments to determine the offset, gain, and quadratic terms.

Figure 33. Successful Graphical Energy Calibration displays the successful completion of the graphical energy calibration for the measured ^{137}Cs spectrum to the computed spectrum.

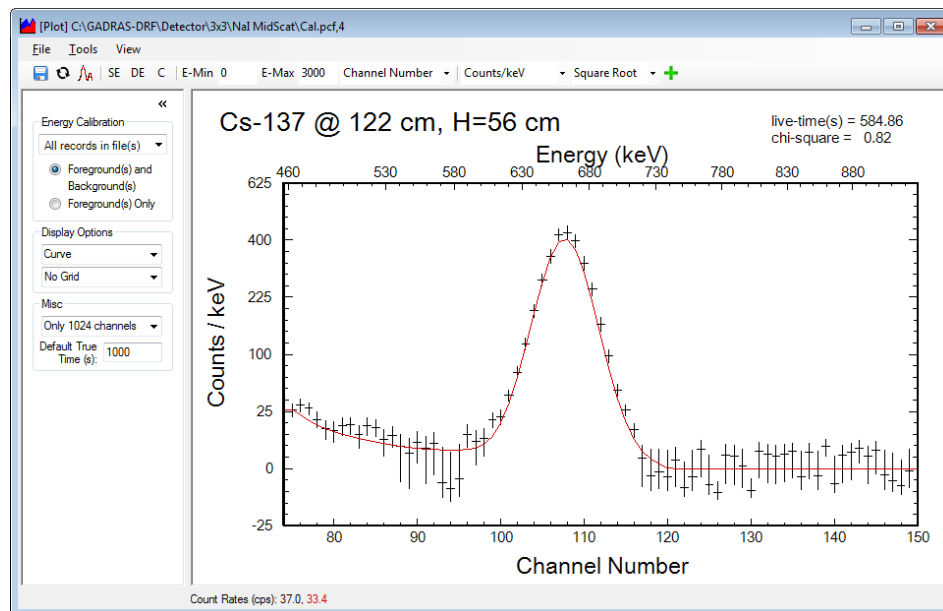


Figure 33. Successful Graphical Energy Calibration

6.3 Deviation Pairs Energy Calibration

Scintillator detectors often require at least a quadratic polynomial to describe the relationship between the channels and energy. Some even require fourth-order polynomials and still have substantial error in the energy calibration. Deviation pairs are a method to describe highly non-linear detectors, or to describe the energy calibration exactly for detailed analyses.

Deviation pairs can be thought of as a supplement to a linear energy calibration. An ideal detector would follow this linear calibration across all energies of interest. Deviation pairs can describe the deviation from linearity as a set of energies paired with the amount of deviation (in energy). GADRAS-DRF fits a cubic spline to the deviation pairs to determine a continuous function of deviation across the entire energy range.

Note: Deviation pairs can also be applied to quadratic, or higher-order polynomial fits, but is not recommended

The primary benefit of deviation pairs is the level of accuracy that can be obtained without the artifacts introduced by large coefficients in higher-order polynomials. In addition, the deviation pairs for a given detector appear to be *constant*. Thus, even with gain and offset drifting, as long as the gain and offset can be established with occasional calibration (or automatic calibration), the same deviation pairs can be applied (without modification) to achieve a high degree of accuracy in energy-calibration. A further explanation of deviation pairs can be found in Reference [8].

Deviation pairs are stored in a PCF file (but can also be written to the detector folder to **Deviation.dat** for reuse). The current deviation pairs can be accessed in multiple ways. From the **PCF Viewer** window under **Edit->Deviation Pairs**, from the **Tools** tab, and from the **Plot** window under **Tools->Edit Deviation Pairs**. The only requirement is that there is a spectrum file currently open and editable.

Note: the presence of deviation pairs is indicated in the bottom status bar of the PCF Viewer window

For this example, we will use the **3x3\NaI MidScat** detector's Cal.pcf, which has deviation pairs defined. After opening the Cal.pcf file in the **PCF Viewer**, the **Edit->Deviation Pairs** option brings up the **Deviation Pairs Editor** window as shown in Figure 34. The deviation pairs in a PCF file can be different for multiple detectors in a single system (for more information on multiple detectors and naming convention, see Section 7). The editor allows the user to choose which **Detector ID** to view/edit. For this file, there is only one detector (Aa1). The deviation pairs are listed in two columns in the text box. The first column is the deviation point (usually a photopeak energy) in keV. Those are paired with the second column, which is the amount of deviation from linearity in keV.

Deviation pairs should be reasonably spaced in energy. Placing deviation pairs close together can cause erratic behavior. They should also be smoothly decreasing or increasing across the deviation points. Oscillating deviations is an indicating of improper use.

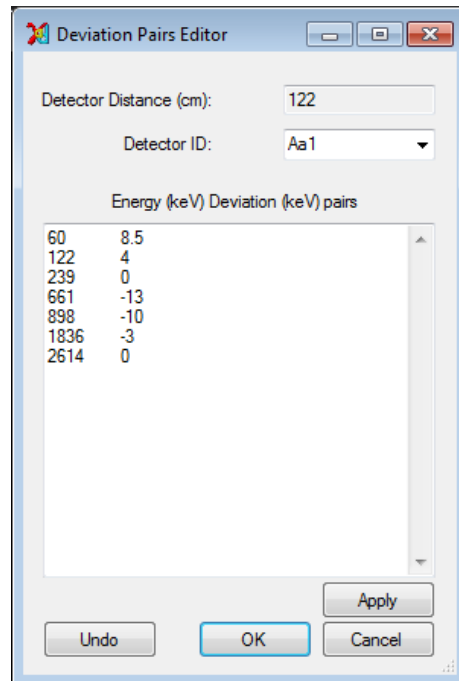


Figure 34. Deviation Pairs Editor

For this example, the deviation pairs are erased from the file by highlighting all the text in the window, and pressing backspace or delete. Then clicking apply. The result should appear as in Figure 35. Click OK to close the window.

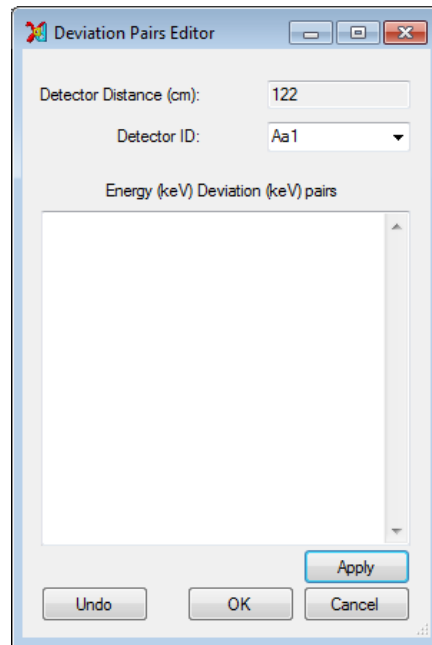


Figure 35. Deviation Pairs Editor with Deviations Erased

Plotting the ^{228}Th spectrum (background subtracted) along with the default calibration source yields a plot shown in Figure 36. Notice that the gain looks approximately correct, but mid-range photopeaks are not matched well. This is a typical starting point for a new detector without any deviation pairs defined. The recommended procedure is:

1. Erase all deviation pairs in the deviation pairs editor and close the editor.
2. Ensure that there is no quadratic or higher-order terms in the PCF file by asserting zeros in the **PCF Viewer** energy calibration coefficients at the top of the window.
3. Plot a source or source(s) which can provide a good high-energy peak and low-energy peak to establish the gain and offset, respectively. This can be done using the graphical energy calibration discussed in Section 6.2.
4. The two peaks used for gain and offset should be exactly correct in energy. These are our “anchor points”. Insert the anchor point energies in the **Deviation Pairs Editor** window with zero deviation. Click apply.
5. Plot spectra and add deviation pairs as needed.

Steps 1-3 are left as an exercise to the reader. This tutorial begins on step 4.

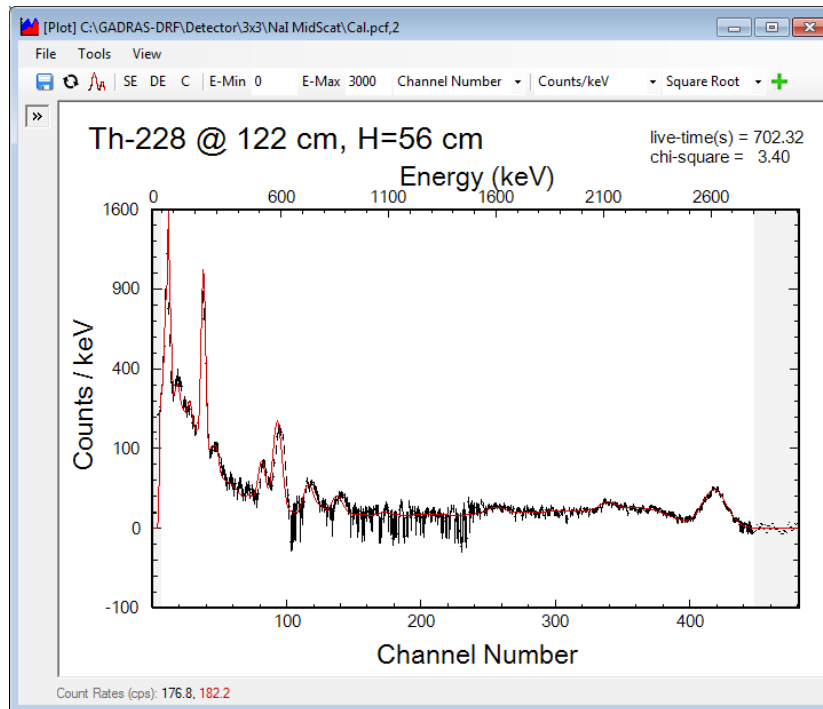


Figure 36. ^{228}Th Spectrum without Deviation Pairs

After the anchor points are determined (239 keV and 2614 keV from ^{228}Th are convenient), open the **Deviation Pairs Editor**, set their deviations to zero, and click apply (see Figure 37). Note that the plot window has displayed horizontal blue dashed lines to indicate the location of deviation points. Because these are anchor points, and their deviations are zero, we have not affected the energy calibration from linear.

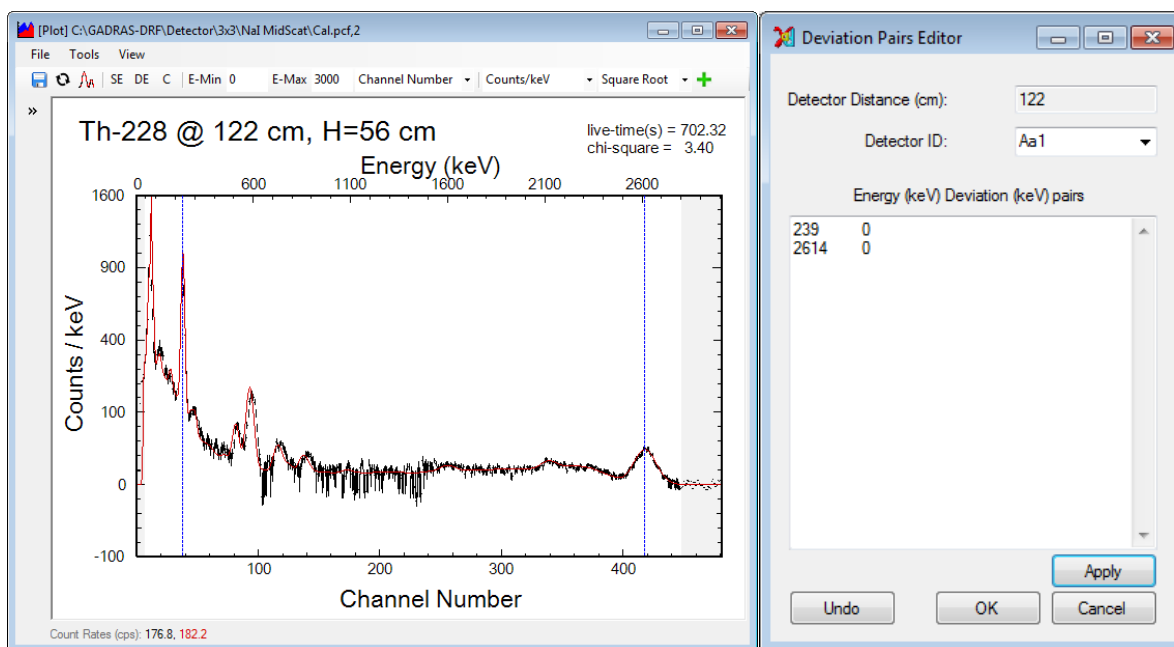


Figure 37. ^{228}Th Plotted with Deviation Pair Anchor Points Applied

Zoom in on the 583 keV peak in the same spectrum. Right-click and hold on the measured 583 keV photopeak. The plot window should appear as in Figure 38. Notice that the plot window is outlined in purple indicating we are adding a deviation pair. Drag the measured photopeak to the simulated photopeak in red. Release the right mouse button to complete the action. The spectrum will recompute with the new deviation pair, and the deviation will be added to the deviation editor. The resulting plot and deviation pair editor should appear as in Figure 39. This process can be repeated by plotting multiple calibration sources, and adding deviation pairs as needed. Users can manually edit the numbers to tweak the deviation pairs after adding them graphically, or just add them manually entirely. Ensure that the deviation pair editor window is closed after finishing.

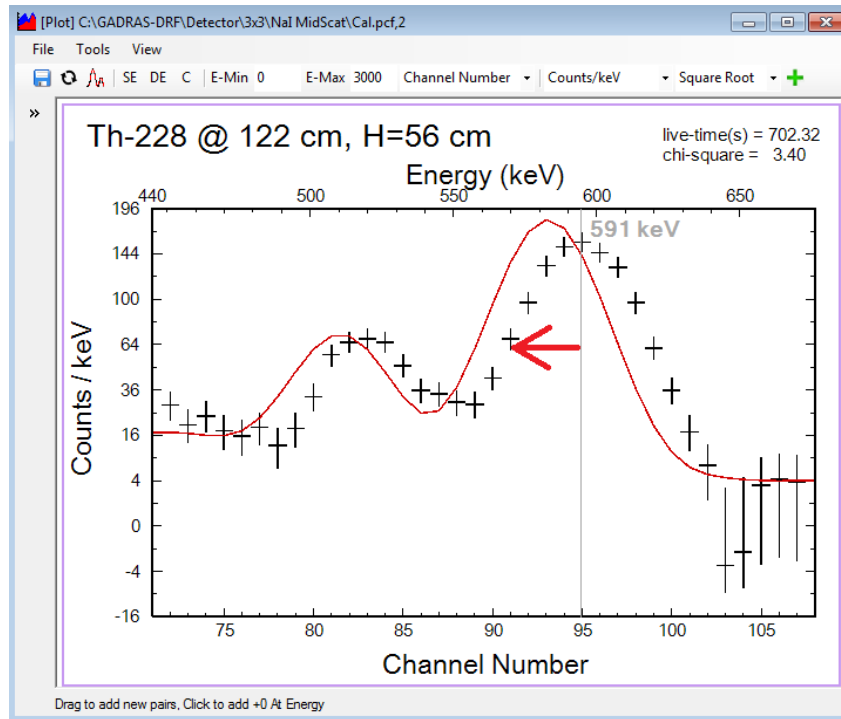


Figure 38. ^{228}Th Spectrum, Zoomed into 583 keV Peak, Adding Deviation Pair

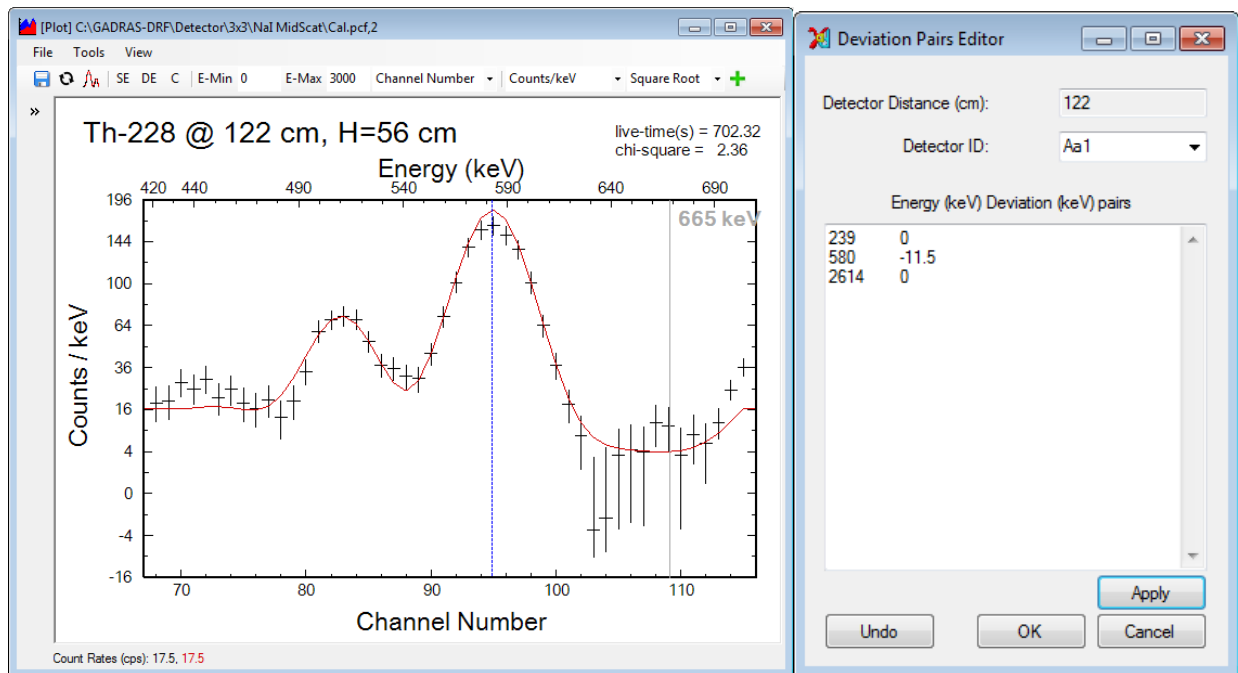


Figure 39. ^{228}Th Spectrum After Deviation Pair Added to 583 keV

7 TIME HISTORY

Some detector systems have the capability of taking multiple spectra over a period of time in order to create a time-segmented series of spectra. By summing spectra over a specified time period, users can gain insight into a time-dependent scenario that would not otherwise be attainable with conventional spectra. The **TimeHistory** tab allows users to plot and manipulate these types of spectral records. Upon opening the **TimeHistory** tab, users are presented with a screen involving several input fields as shown in Figure 40. Users may specify the following:

- **File:** The spectra file containing the time history spectra
- **Time Start** (optional): Time in seconds to start summing (default: 0 s)
- **Time End** (optional): Time in seconds to end summing (default: end of file)
- **Photons/Neutrons/Both:** The particle(s) of interest to display (default: Photons)
- **Detectors:** If there are multiple detectors specified in the file, this panel box specifies which detectors to display the data from (default: all detectors)
- **Include Background:** Whether a background should be specified to subtract from the specified foreground (default: not checked)
- **Include Computed Spectrum:** Whether a computed spectrum should be displayed on the Time History graph display

Although no time history spectra are distributed with GADRAS-DRF, a detector and spectrum have been displayed here for the sake of example. As shown in Figure 40, the inputted filename is “SearchData.n42”. N42 is a common search-file format. GADRAS-DRF internally converts the N42 to PCF file format. Users can either type the name of the file in (must be in current detector folder); or, open a search file using the **PCF Viewer**, and dragging one of the records into the **File** field on the **TimeHistory** tab.

Once the file is specified, GADRAS searches for all detector names in the file and displays them on the right side of **TimeHistory** tab as shown in Figure 40. The convention for naming detectors follows the convention for naming portal detectors:

[A-H][a-d][1-8][N (optional)]

the first field [A-H] is the “panel”, [a-d] is the “column” within the “panel”, [1-8] is the multi-channel analyzer (MCA) within the “column”, and [N] is an optional character indicating it is a neutron detector. This allows complex detection system with many detectors to share the same spectral file, as their energy calibration coefficients may be different. The simplest example is a detection system with one detector, the name is “Aa1”. The example file shown in Figure 40 has many detectors. They are arranged graphically that is typical of portals. Panels A, B, C, D are on either side of the inspected vehicle or cargo, panel E is below the vehicle, and panel F is above.

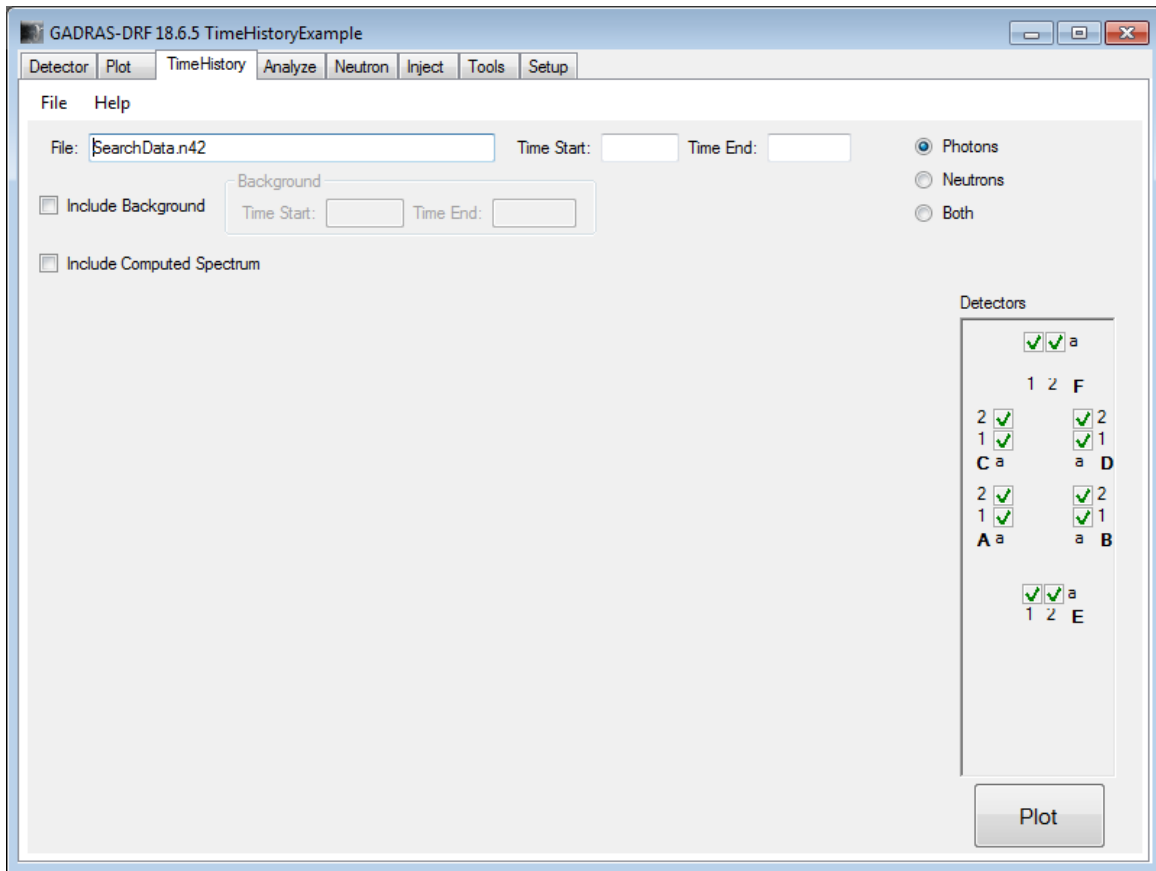


Figure 40. Time History Page

7.1 Plotting Time History Spectra

By default, GADRAS-DRF will use all detectors in the Time History plot. Users can check or uncheck detectors from the **TimeHistory** tab. After specifying a file and any desired options, the user may click **Plot** to display the time history spectrum graph. GADRAS-DRF generates two graphical displays as shown in Figure 41. The first display shows the time history data where the x-axis is the time in seconds since the data collection started and the y-axis is the total count rate per detector. The second display is the sum of all spectra contained in the specified time period. By default, the second display shows the summed spectrum across the entire collection time (in this case, 12 detectors multiplied by 429 seconds each, equals 5148 total time). The right side of the Time History display gives the user several options to manipulate the displays. By default, **Zoom** is selected, which allows users to zoom in and out of the Time History graph without affecting the sum display. This action is performed by dragging across the display, similar to normal graph displays.

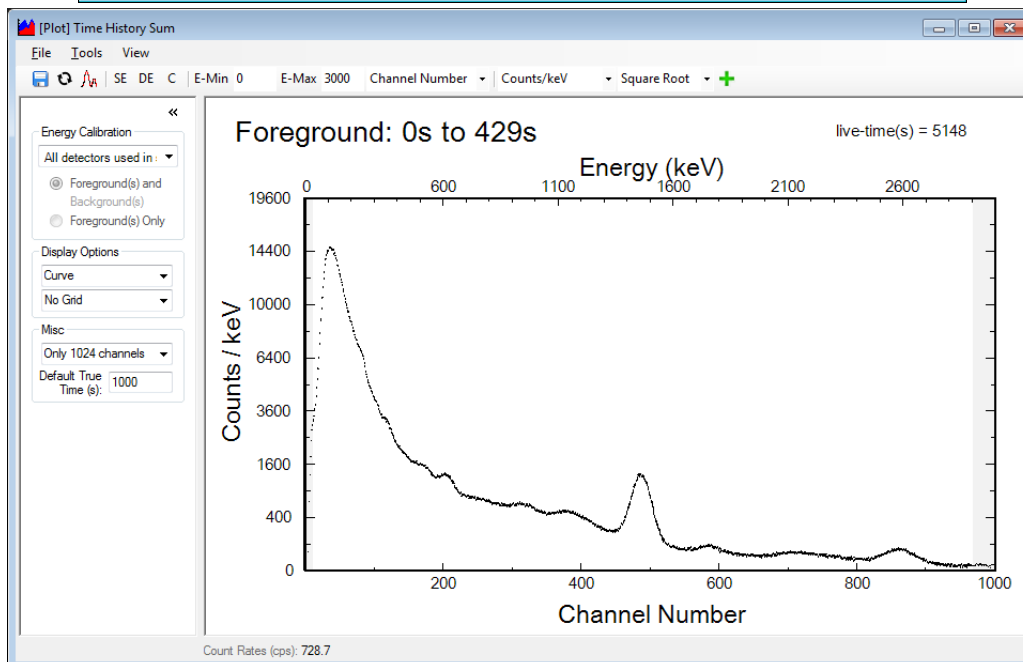
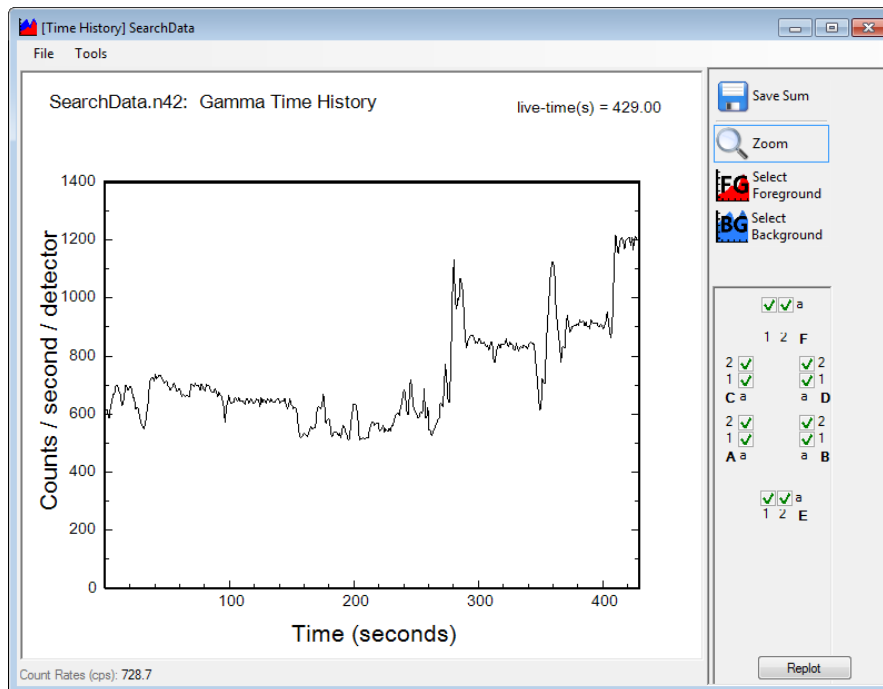


Figure 41. Time History Display (top) and Sum Spectrum (bottom)

Select Foreground allows users to select a portion of the Time History display to sum across. When this option is selected, dragging will generate a red rectangle which indicates the portion of the spectrum that is being summed (Figure 42).

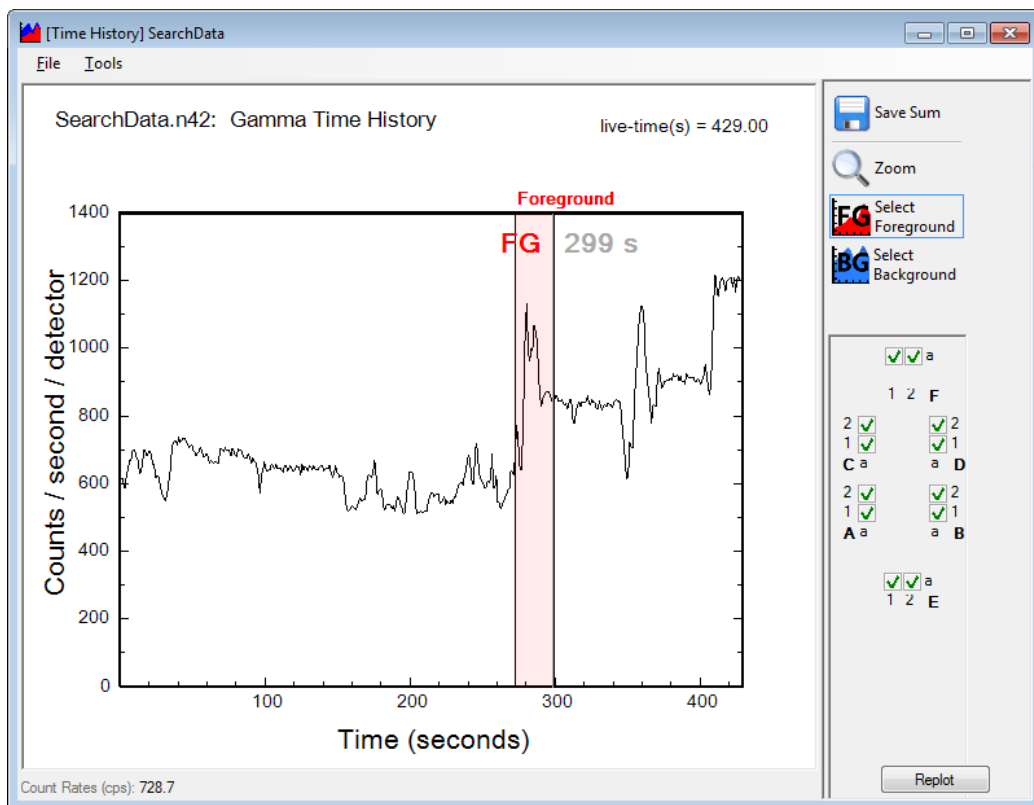


Figure 42. Selecting a Foreground to Sum Over

Upon selection of a foreground, the Time History Sum display updates automatically to display the sum over the selected time region (Figure 43). As shown, the title of the spectrum reflects the specified time interval ("Foreground: 273s to 299s").

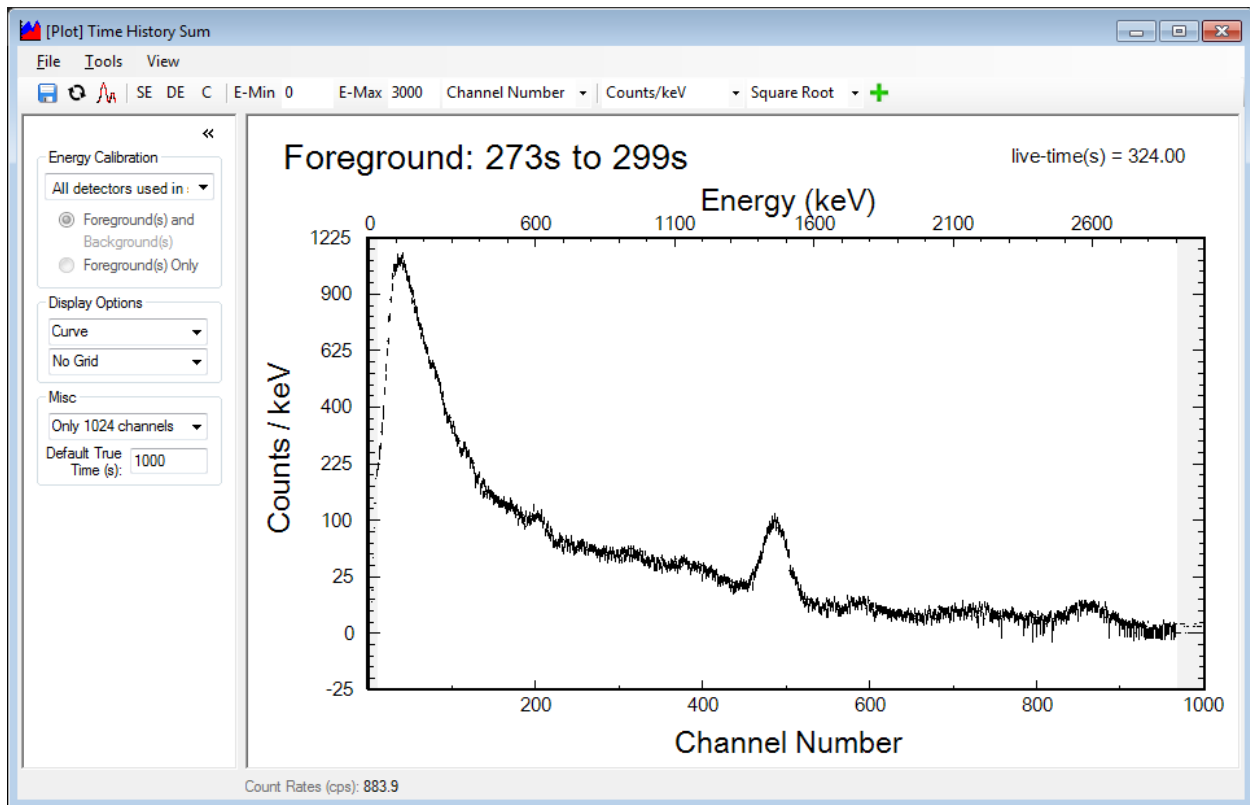


Figure 43. Time History Sum over Selected Time Interval

Users may elect to display a background-subtracted spectrum. To do this, the user should click **Select Background** and select the portion of the Time History display corresponding to the background. Dragging will generate a blue rectangle, which indicates the portion of the spectrum to sum over and use as the background as shown in Figure 44. Note that the summed foreground and background spectra will be normalized by time and thus display the background-subtracted count rate for the selected regions. The resulting background subtracted spectrum is shown in Figure 45.

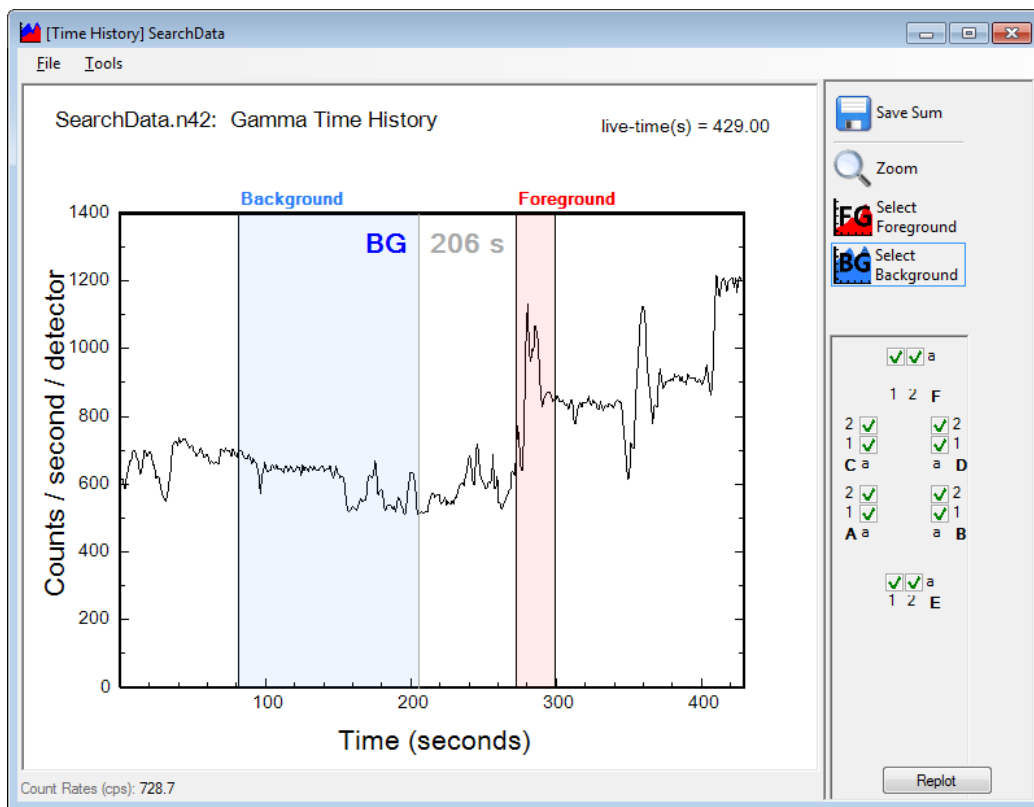


Figure 44. Selecting a Background to Subtract from the Specified Foreground

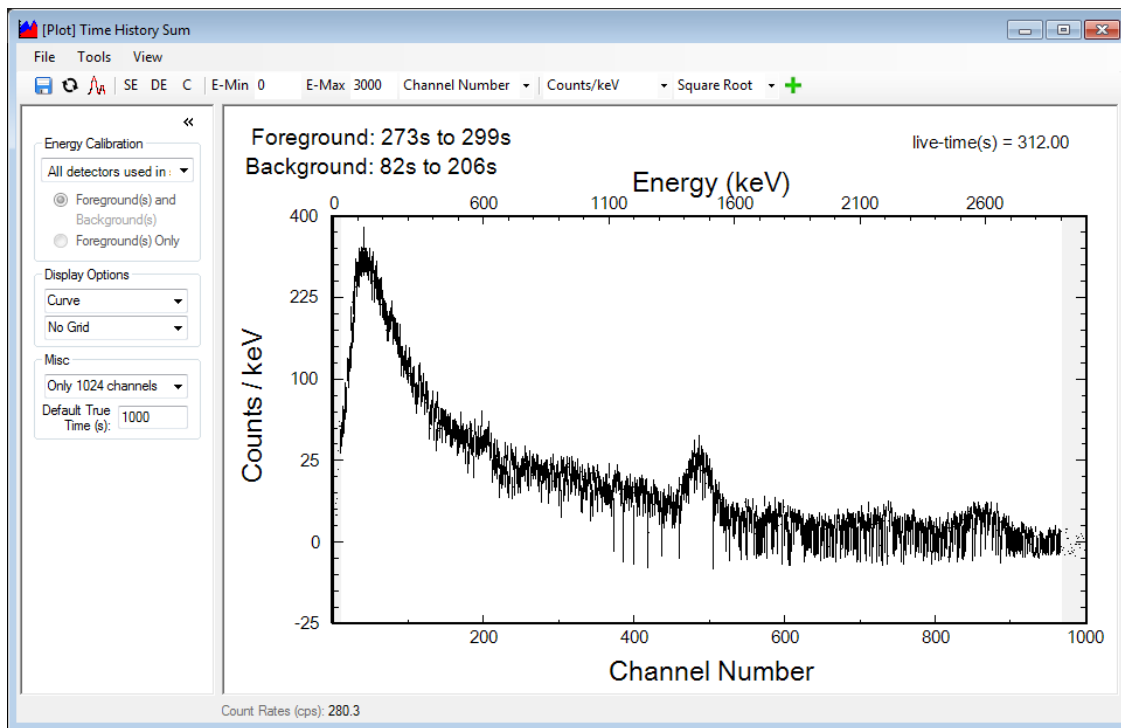


Figure 45. Background-Subtracted Spectrum

When the user specifies a foreground or background on the Time History graph display, the main page is being updated with this information, as shown in Figure 46. The user may specify the foreground or background on this page and click **Plot** to update the graph display forms appropriately.

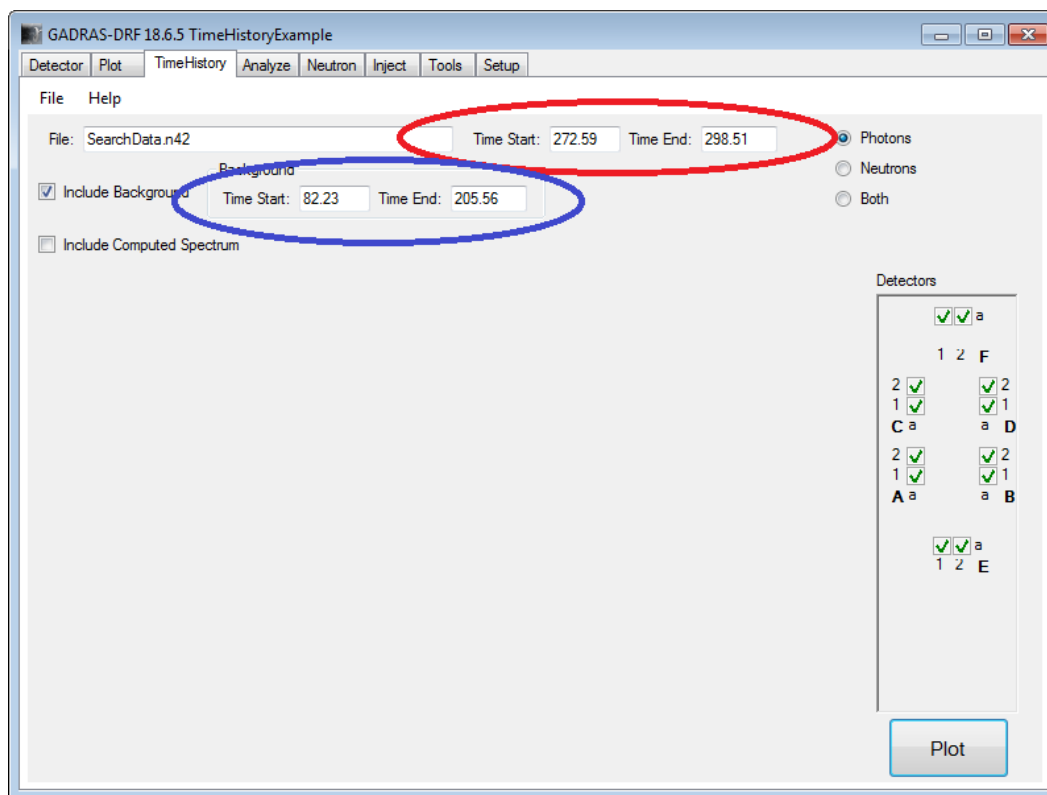


Figure 46. Foreground and Background Time Periods Are Updated on the Main Display

In addition to dragging across the spectrum or manually specifying the times on the main form, there are several ways to specify the foreground and background time segments. If the segments are already displayed on the time history display form, users can drag the edge of the rectangle to move the boundary to a different time position. The time sum spectrum will automatically update when the boundary position is selected. The user may also right-click inside the rectangle and choose to delete the selection or manually specify the boundaries for the selection. The final way to change the time selection is to right-click drag the time selections. Doing this preserves the time duration, but changes its start/end time.

7.2 Saving Time History Spectra

Users may save time history selections for future plotting or analysis routines by clicking **Save Sum** in the top-right corner of the Time History display form. Doing so will initiate the Save Sum Spectrum form as shown in Figure 47. For most situations, the default values will suffice for the user, but there may be some special scenarios in which the user may want to deviate from the defaults. Users can specify the following fields:

- **File:** The name of the file to save the summed spectrum to
- **Start Record:** This field generally increments as users save spectra to the file; users may change this to overwrite previous records or start saving future records
- **Foreground Title:** The title of the foreground record; default is “Foreground <start time> to <end time>”
- **Include background in output file:** If a background is selected in the Time History display form, the background selection will be saved when this is selected; it will be saved as a separate record from the foreground
- **User defined background:** If the user has defined a background, this selection will be saved
- **Background from file (if present):** If the file has a background record associated, this record will be saved as the background in the new file
- **Calibrate and Rebin Spectra:** During the summation, GADRAS-DRF will attempt to shift the gains for each detector individually as a function of time to match common background peaks, and then rebin the spectra into a linear energy structure defined by the **Offset** and **Full-scale energy**
- **Rebin Spectra:** GADRAS-DRF will rebin the spectra into a linear energy structure defined by the **Offset** and **Full-scale energy**
- **Offset (keV):** The 0th order parameter of the new energy calibration used for rebinning
- **Full-scale energy (keV):** The 1st order parameter of the new energy calibration used for rebinning
- **Combine spectra or keep the separate?:** This group box will be enabled if there are multiple detectors displayed in the Time History display form
- **Output only sum spectrum for all detectors** (default): Sums spectra for all detectors and combines them into one record
- **Write separate sum spectrum for each detector:** Writes the sum spectrum for each detector as its own record (foreground and background)

Figure 47. Save Sum Spectrum Form

7.3 Computed Time History

GADRAS-DRF also offers the ability to compute a time history spectrum and either display it individually or overlay it on a measured time history spectrum. When a user checks the **Include Computed Spectrum** checkbox, the computed spectrum parameters appear along with several options near the bottom of the page (Figure 48). Users may choose to specify parameters for photons or neutrons, indicated by the selected tab at the top of the computed spectrum parameters. The computed spectrum calculations assume that the source (or sources if there are multiple) is passing by the detector at a constant speed. If there are multiple sources, the calculations assume that all sources pass by the detector at the same speed. The parameters are defined as follows:

- **Rel. speed (m/s):** The speed at which the source(s) pass by the detector face
- **Min. distance (m):** The minimum distance from the detector that the source(s) are relative to the detector face
- **Bkg. count rate:** The background count rate across the entire time history spectrum; assumed to be constant across the entire contents of the file
- **Time to sou. 1(s):** The time in seconds until the first source is in front of the detector
- **Peak cps 1:** The maximum count rate the detector sees for the first source
- **Length sou 1 (m):** The length of the first source in meters
- **Separation n (m):** Separations 2-10 indicate the distance between the current source and the previous source

- **Peak cps n**: The peak count rate for source n
- **Length sou n (m)**: The length of source n
- **Cos power #1, Cos power #2, Fraction #2 power**: Parameters for manipulating the shape of the peaks (defined further below)
- **% Template error**: Chi-square is calculated based on statistics in spectrum plus an overall factor defined by this parameter (generally ~10%)
- **Chi-square for fit**: Statistical parameter defining how well the fit adheres to the measured spectrum
- **Average error (%)**: The average amount the fitted spectrum is off of the measured spectrum
- **Peak / average**: Factor defining how far the peaks are above the overall average spectrum count rate

The screenshot shows the 'TimeHistory' tab in the GADRAS-DRF 18.6.5 software. The window has a menu bar (File, Help) and a toolbar (Detector, Plot, TimeHistory, Analyze, Neutron, Inject, Tools, Setup). The main area is divided into several sections:

- File:** SearchData.n42, Time Start: 0, Time End: 429.
- Background:** Time Start: , Time End: .
- Include Background:** ☐
- Include Computed Spectrum:** ☒
- Photon / Neutron:** A tabbed interface with 'Photon' selected.
- Photon Parameters:**
 - Rel. speed (m/s): 1.00
 - Time to sou. 1 (s): 285.00
 - Separation 2 (m): 75.00
 - Separation 3 (m): 60.00
 - Separation 4 (m): 0.00
 - Separation 5 (m): 0.00
 - Separation 6 (m): 0.00
 - Separation 7 (m): 0.00
 - Separation 8 (m): 0.00
 - Separation 9 (m): 0.00
 - Separation 10 (m): 0.00
 - Min. distance (m): 3.00
 - Peak cps 1: 200 (highlighted)
 - Peak cps 2: 200 (highlighted)
 - Peak cps 3: 200 (highlighted)
 - Peak cps 4: 0.00
 - Peak cps 5: 0.00
 - Peak cps 6: 0.00
 - Peak cps 7: 0.00
 - Peak cps 8: 0.00
 - Peak cps 9: 0.00
 - Peak cps 10: 0.00
 - Bkg. count rate: 600.00
 - Length sou 1 (m): 0.10
 - Length sou 2 (m): 0.10
 - Length sou 3 (m): 20.00
 - Length sou 4 (m): 0.00
 - Length sou 5 (m): 0.00
 - Length sou 6 (m): 0.00
 - Length sou 7 (m): 0.00
 - Length sou 8 (m): 0.00
 - Length sou 9 (m): 0.00
 - Length sou 10 (m): 0.00
 - Cos power #1: 0.00
 - Cos power #2: 0.00
 - Fraction #2 power: 0.00
 - % Template error: 0.00
 - (Not Used): 0.00
 - (Not Used): 0.00
 - Chi-square for fit: 233.69
 - Average error (%): 16.31
 - Peak / average: 33.38
- Detectors:** A grid of checkboxes for various detectors (a, b, c, d, e, f, g, h, i, j, k, l, m, n, o, p, q, r, s, t, u, v, w, x, y, z) with some checked.
- Buttons:** Save To File, Load From File, Fit Data, Plot.

Figure 48. Time History Page with Computed Spectrum Options

By clicking **Save To File**, the specified parameters will be saved to a file for future use. Photon parameters are saved to a file with extension **PAS**, and neutron parameters are saved to a file with extension **NAS**. Similarly, **Load From File** loads previously saved parameters from a file and populates the appropriate fields. GADRAS-DRF also has the capability of fitting a computed spectrum to a measured time history file. Users can select any property to vary by clicking the label of the parameter. Clicking the label of a parameter will highlight the parameter's text box, as shown in Figure 48. Any parameters that are highlighted will vary when the user clicks **Fit Data**. The computed spectrum before and after fitting the peak count rates is shown in Figure 49.

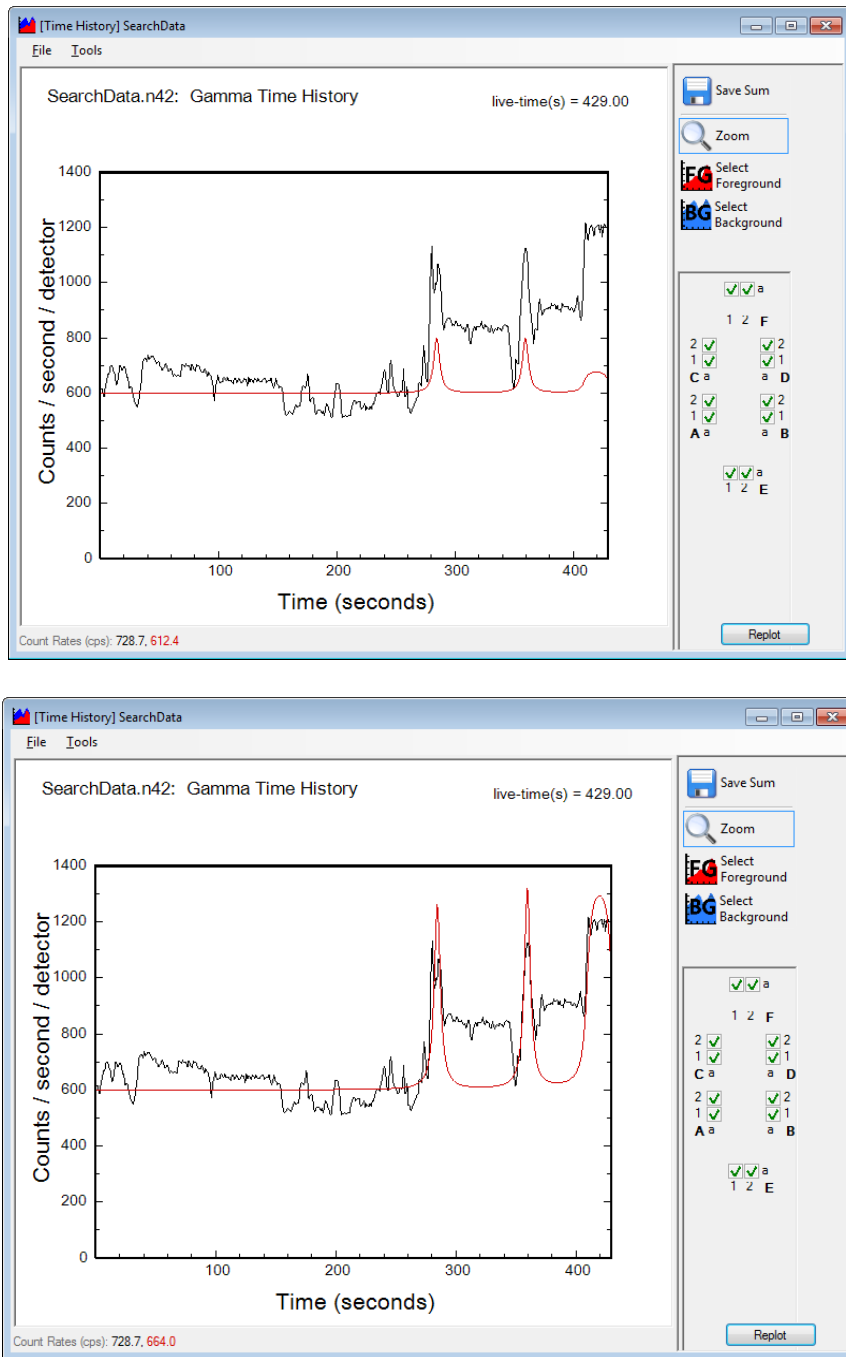


Figure 49. Computed Spectrum before Fit (top) and after Fit (bottom)

The parameters Cos power #1, Cos power #2, and Fraction #2 power determine the shape of the peaks for the source objects. If a bare spherical source passes by a bare detector, the source will have the same shape at all points in time, and thus the Cos power #1, Cos power #2, and Fraction #2 power will all be 0. However, if the detector or source is shielded on the sides, the source will appear differently at different positions. The equation for the rate at different locations take the form

$$R = R_0[(1 - \text{Frac})\cos^{P1} \theta + (\text{Frac})\cos^{P2} \theta]$$

where θ is the horizontal angle from the source to the detector, R is the count rate at angle θ , R_0 is the count rate of the source when the source is directly in front of the detector ($\theta=90$ degrees), and Frac , $P1$, and $P2$ are empirical parameters to be fit to the measurement. In the above equation, $P1$ corresponds to Cos power #1, $P2$ corresponds to Cos power #2, and Frac corresponds to Fraction #2 power.

8 ANALYZING SPECTRA

8.1 Graphical Analysis Using Plot Overlays from Library

The GADRAS-DRF plotting menu allows for some preliminary spectral analysis. This graphical capability facilitates the comparison of selected peaks and energies in a measured spectrum with library spectra from the **Isotope Database** or the **PhotoPeak List**.

The left side of Figure 50 shows an example where the **PhotoPeak List** form is used to overlay a computed spectrum for ^{88}Y (cyan) with the measured spectrum. This display is presented after shift+clicking on the 898 keV peak. The activity of ^{88}Y in this sample is estimated to be 5.13 uCi with no shielding. The PhotoPeak list is shown on the right side of Figure 50. If the overlay does not match, another peak may be chosen for comparison with the measured spectrum.

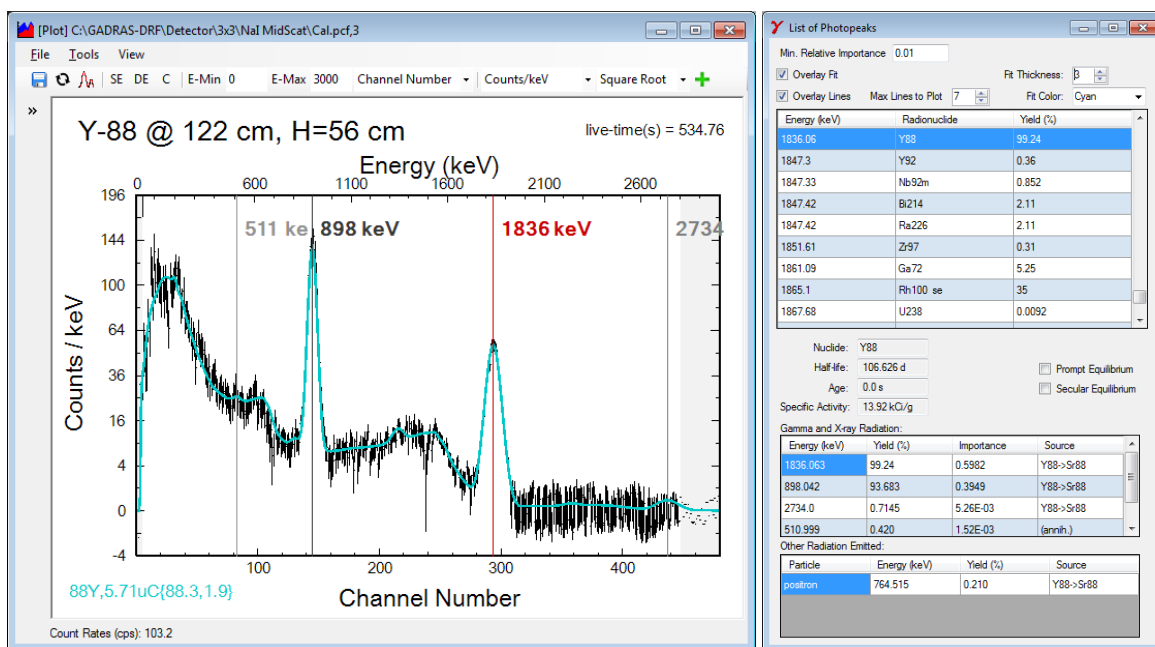


Figure 50. Graph of Measured Spectrum with Overlay (*left*); Photopeak List with Displayed Isotope Highlighted (*right*)

8.2 Numerical Spectral Analysis

GADRAS-DRF is specifically designed to perform robust full-spectrum analysis. Once a detector calibration has been performed, various analysis techniques can be used to identify peaks and perform an analysis. The **Analyze** tab on the main window provides options for numerical analysis options. The analysis options available are:

- Single Regression

- Multiple Regression
- ComputeFlux


The Analyze tab shown in Figure 51 contains text boxes that accept input for foreground and background spectra similar to the **Plot** tab. Display options for the analysis output are located on the right side of the **Analysis** tab. The ensuing plot will only subtract the background if the **Strip background** option is selected.

For the analysis algorithms to function properly, the distance from the front face of the detector to the center of the source must be known or assumed to correctly calculate the intensity of the source. Sometimes two dose rates at two distances are provided. The **1/r²** button is a shortcut to the **Distance Tool** (see Section 11.2.2).

There is also an option to perform an analysis routine on a time history file by clicking the **Analyze as Time History** button. This will perform the analysis on the time-summed spectrum. If the user updates the foreground or background time segments, the analysis routine will automatically perform a new analysis, unless the analysis takes long (such as with ComputeFlux). In this case, after the user selects the foreground and background segments, they may click **Analyze** on the Time History display form.

The screenshot shows the 'Analyze' tab of the GADRAS-DRF 18.6.5 3x3 NaI MidScat software. The interface includes a menu bar at the top with options: File, Help, Detector, Plot, TimeHistory, Analyze, Neutron, Inject, Tools, and Setup. The 'Analyze' tab is currently selected. Below the menu bar, there are several input sections. The 'Measured Spectrum' section has a 'Title' field containing 'Y-88 @ 122 cm, H=56 cm', and 'Foreground' and 'Background' fields both containing 'Cal.pcf.3' and 'Cal.pcf.1' respectively. To the right of these fields is a 'Style' button with a plus sign. The 'Source Location for Analysis' section has a 'Distance (cm)' field set to '122', a '1/r²' button, and a 'Height (cm)' field set to '56'. To the right of this section are 'Plot Options' with two checked checkboxes: 'Strip background' and 'Fill Templates'. Below these are two tabs: 'Single Regression' and 'Multiple Regression', with 'Multiple Regression' being the active tab. Under 'Multiple Regression', there is a 'Shielding and Gain' section with 'AN' set to '13', 'AD' set to '0', 'Gain Shift (%)' set to '0', and 'Background Sigma (%)' set to an empty field. At the bottom left is a 'Source Libraries' list containing: Isotope, Xray, Benchmark, CaptureGammas, Continuum, Neutron, SNM, and DetectorFolder. At the bottom right are two buttons: 'Analyze as Time History' and 'Analyze'.

Figure 51. The Analyze Tab on the Main Form

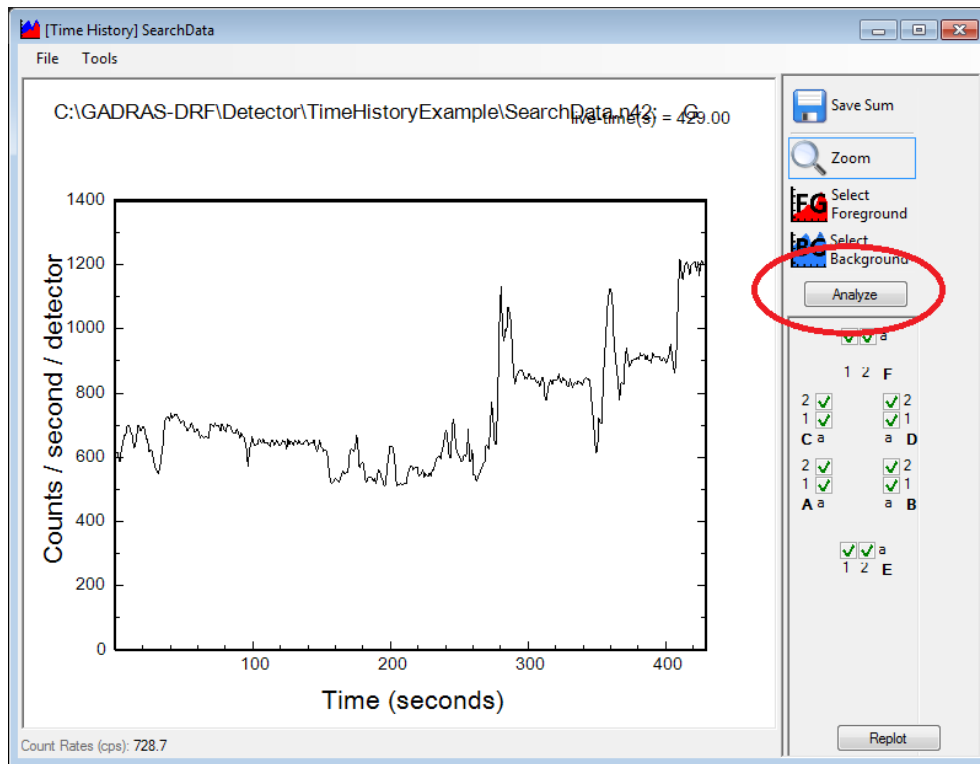

8.2.1 Source Libraries

Several source libraries are generally available for inclusion in any numerical analysis, as shown above in the large box labeled Source Libraries (Figure 51).

The available source libraries:

- Isotope
- Xray
- Benchmark
- CaptureGammas
- Continuum
- Neutron
- SNM

- DetectorFolder

Other libraries can be created and included by individual users. This is done by creating new directories under **GADRAS-DRF\Source**. Each library/directory contains a series of files that defines emission rates of gamma-rays or neutrons.

Within each library are lists of sources that can be selected for use in the current analysis by clicking on the individual source designator. The selected sources are then available for analysis. Multiple Regression analysis allows for multiple libraries to be utilized.

The most commonly used library in a typical analysis is the Isotope library. Figure 53 shows the Isotope library window with several of the isotopic sources selected and highlighted (*blue*). Users may select various groups of isotopes in the Group Selection Options portion of the window. The group selection of isotopes carries no guarantee of accuracy or completeness; it is provided only to save time in selecting such isotopic groups. These groups include:

- **Fission** – fission daughter products
- **Natural** –naturally occurring isotopes
- **Medical** –typical isotopes used as radiopharmaceuticals and sources for imaging and therapeutic use
- **Calibration** – isotopes often used as laboratory calibration sources
- **SNM** – isotopes typical of uranium and plutonium
- **Automatic** – automatically chooses potential isotopes from the library based on a simple peak identification algorithm

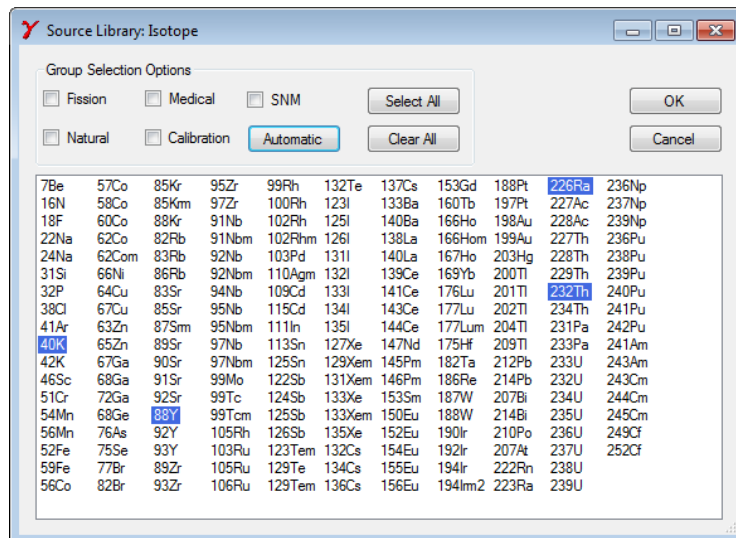


Figure 53. Isotope Library Window

Fitting the continuum caused by the presence of a neutron source cannot be done by selecting a neutron emitter (e.g., ^{252}Cf) out of the gamma-ray **Isotope** library. Instead, it must be done with an appropriate selection from the **Neutron** library.

8.2.2 Introduction to Linear Regression Analysis

GADRAS-DRF contains two routines used to analyze gamma-ray spectra by linear regression. The two programs, located on the **Analysis** screen have the same user interface and analysis approach, but are used for different purposes.

- **Multiple Regression** performs a similarity (chi-square, χ^2) analysis with the assumption that several gamma-ray sources are contributing to a measurement. For example, in the case of a radioactive fallout measurement, several radionuclides will be present and should be included in the analysis.
- **Single Regression** performs a similarity (chi-square, χ^2) analysis to rank individual gamma-ray sources to a radiation measurement. This option should be used when it is anticipated that only one source heavily dominates the spectrum.

Both analysis routines report a χ^2 , which indicates the deviation between the measured data and the fit (relative to estimated uncertainties in the two sets). If the data is of good quality and is energy-calibrated well, and the detector-response function is good, the value of χ^2 should be near unity if the fit matches the data.

The spectrum to be analyzed is selected by dragging and dropping a foreground and background spectrum from the **PCF Viewer** into the foreground and background text boxes (or by entering it manually). **Multiple** and **Single Regression** analyses attempt to fit the measured spectrum with selected source(s). Shielding parameters can be estimated to characterize effects associated with intervening materials. The shielding parameters describe intervening materials by an effective atomic number (**AN**) and areal density (**AD**). Selected isotopes are ranked for consistency with the measurements when **Single Regression** is performed and more than one isotope is selected. **Multiple Regression** finds the combination of selected isotopes and associated activities that gives the best fit to the spectrum. Parameters associated with intervening materials can be adjusted by clicking on the **AN** and **AD** labels (clicking these labels highlights the adjacent boxes, turning them cyan). There is also a check box for the option of allowing independent shielding for each radioactive source in the measured spectrum.

8.2.2.1 Single Regression Analysis

The **Single Regression** option ranks individual gamma-ray sources for their similarity (χ^2) to a radiation measurement. It is used when it is anticipated that one source heavily dominates the spectrum. Any

combination of sources can be selected by the user from the available source libraries (see Section 0), Source Libraries, for description). Figure 54 shows the **Single Regression** tab with the selected sources from the available source libraries. To perform the analysis, click the **Analyze** button at the bottom right corner of the page.

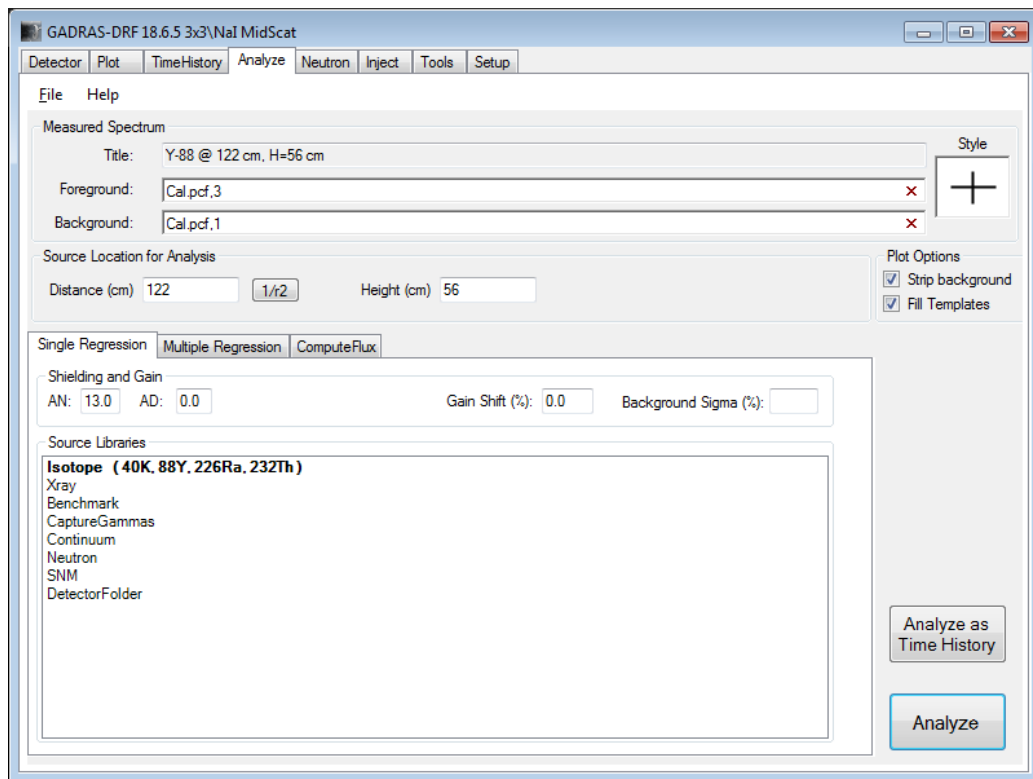


Figure 54. Single Regression Analysis Tab

Single Regression analysis generates a single graph of the best fit data and a summary page. The best fit is plotted as shown in Figure 55, and the summary page (

Figure 56. Single Regression Analysis Summary Page

) ranks the selected isotopes based on similarity to the measurement using the reduced chi-square (χ^2).

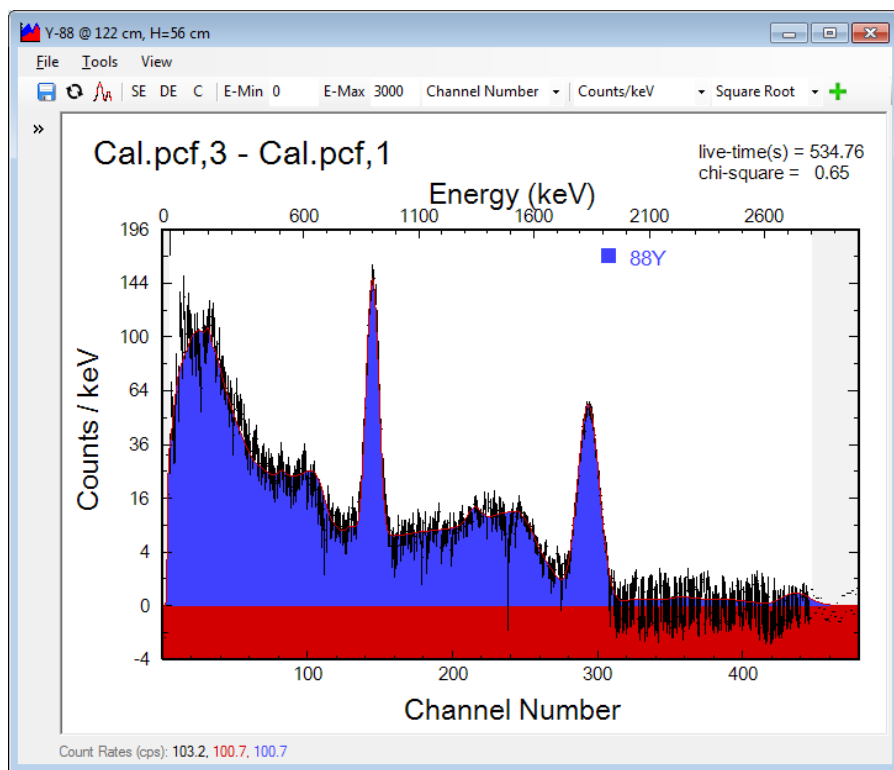


Figure 55. Single Regression Analysis Results of Unshielded 88Y Spectrum

Analysis Results

File Display

***** SOURCE RANKING BY SINGLE REGRESSION *****

detector name : 3x3\NaI MidScat
distance (cm) : 122
foreground spectrum: Cal.pcf,3
background spectrum: Cal.pcf,1
collect date/time : 14-NOV-1995 12:27:24.19

Source	Chisqr	Activity	Units	AN	AD	Gain(%)
88Y	0.65	5.4 +/- 0.1	uCi	13.0	0.0	0.0
226RA	14.51	2.2 +/- 0.0	uCi	13.0	0.0	0.0
232TH	15.28	1.6 +/- 0.0	uCi	13.0	0.0	0.0
40K	17.41	28.7 +/- 0.7	uCi	13.0	0.0	0.0

88Y, 5.43uCi

Figure 56. Single Regression Analysis Summary Page

8.2.2.2 Multiple Regression Analysis

The **Multiple Regression** analysis algorithm finds the combination of sources that gives the best fit to the measured spectrum. A reverse regression technique is used in which a combination of all spectral templates is utilized. Subsequent iterations gradually remove sources that do not contribute to the fit.

When performing this procedure, users have the option to allow an intervening, adjustable absorber/shield to obtain the best fit. This is done by activating the boxes labeled **AN** and **AD**. Calculations can take several minutes if a large number of sources are selected, especially if the shielding is allowed to vary.

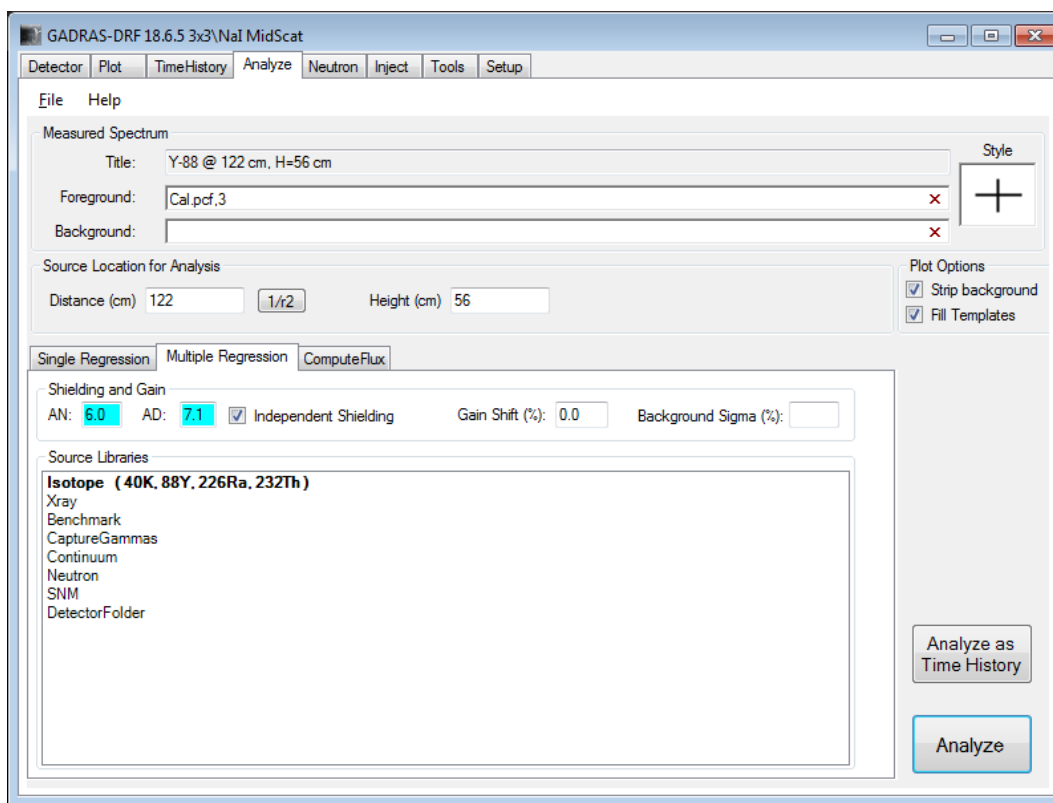


Figure 57. Multiple Regression Analysis Tab

shows the Multiple Regression tab with the same ⁸⁸Y spectrum as the foreground, except we have now also removed the background to allow the multiple regression to fit the background components. We have also allowed the shielding AN/AD to vary, as well as allow independent shielding for each radionuclide.

The **Multiple Regression** analysis generates a single graph of the best fit data and a summary page. The graph will indicate the relative effects of each isotope in the overall fit if the **Fill Templates** option has been selected. The graph shown in Figure 58 displays each selected source's contribution. The summary of the multiple regression analysis results shown in

Figure 59. Multiple Regression Analysis Summary Page

displays the analysis results in text form (isotope list, activities, weights, and shielding information). The text string found at the bottom of the summary page can be copied and pasted to the source line (Source for Computed Spectrum) on the **Plot** tab for plotting as an overlay for comparison with measured data.

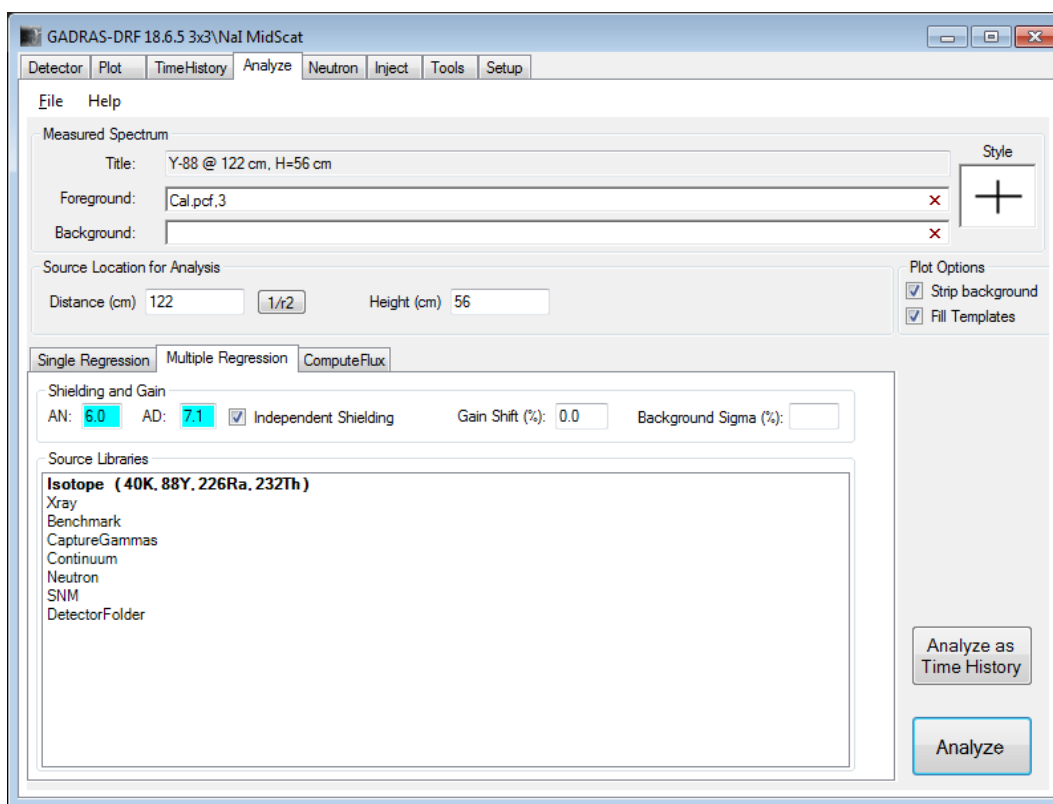


Figure 57. Multiple Regression Analysis Tab

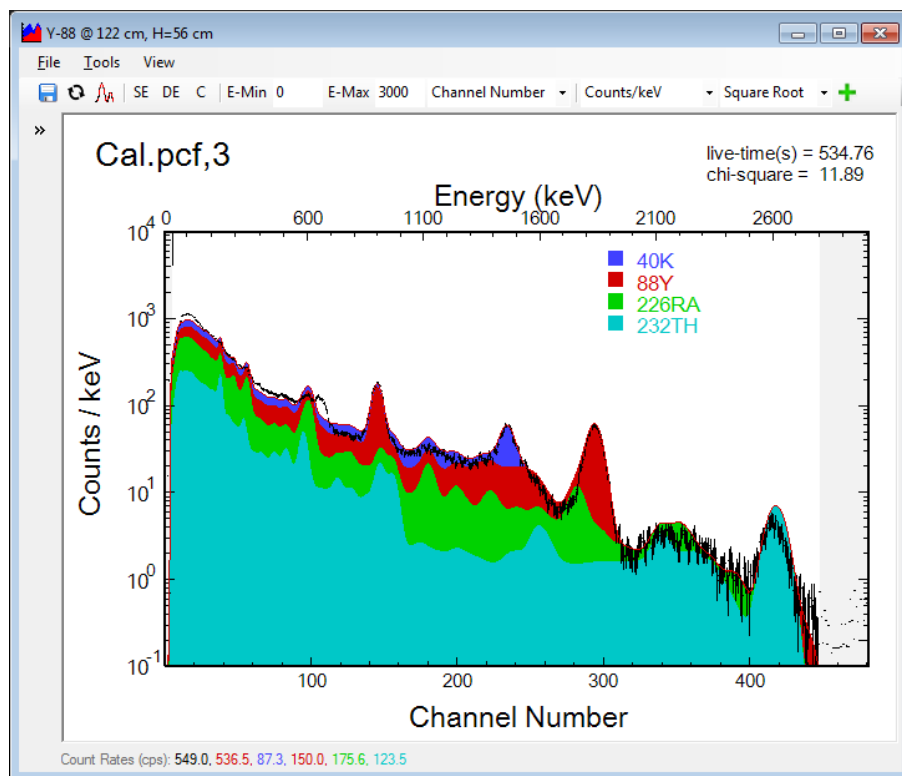


Figure 58. Multiple Regression Analysis Results of 88Y Spectrum and Background

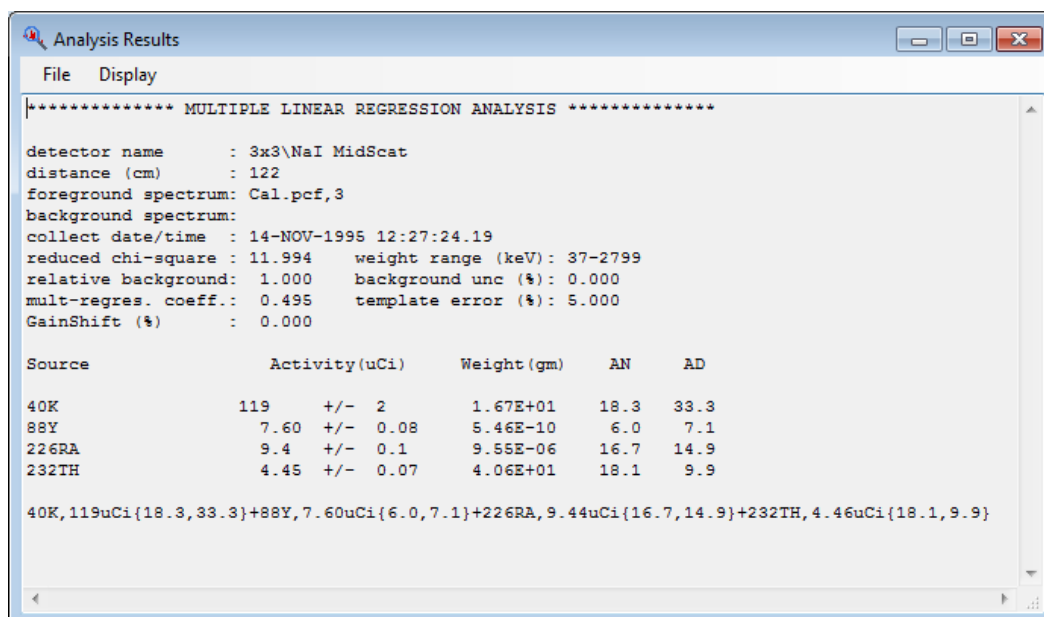


Figure 59. Multiple Regression Analysis Summary Page

8.2.3 Compute Flux

The **ComputeFlux** algorithm can be selected as shown in Figure 60

Figure 60. ComputeFlux Analysis Tab

. The **ComputeFlux** tool estimates the incident flux from the measured spectrum by performing nonlinear regression analysis. Prior to analysis, the user should select the appropriate spectral files for the foreground and background. A graphic plot of the results displays peak and continuum terms as shown in Figure 61. The flux profile is also saved in a file with a **GAM** extension.

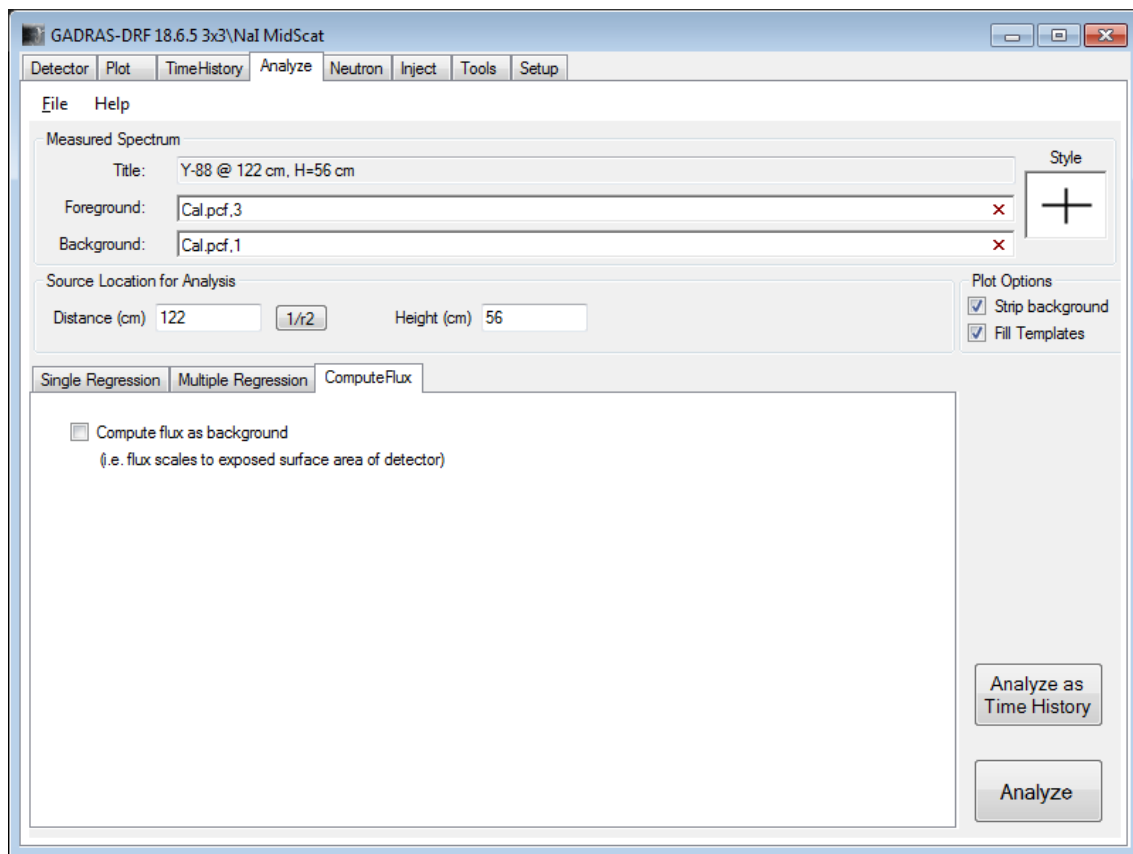


Figure 60. ComputeFlux Analysis Tab

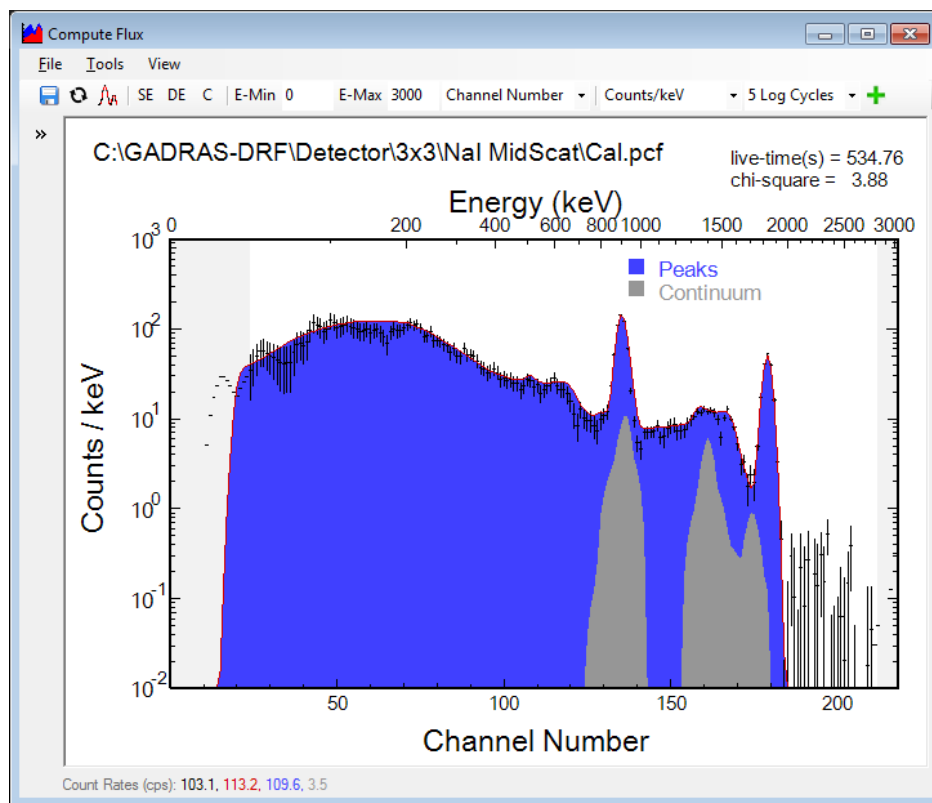


Figure 61. Graph of ComputeFlux Showing the Peaks and Continuum from the Flux Calculation

9 NEUTRON DETECTORS

The **Neutron** tab allows users to model neutron detectors. Neutron detector response information is stored in files named **Neutron\$XX.gadras**, where “XX” is the name of the neutron detector. Neutron detector files must be stored in a gamma detector directory and thus be associated with a gamma detector. If a scenario arises in which no gamma detector was used, users must create a “dummy” gamma detector before they can access the **Neutron** tab. Doing this will not affect the neutron detector results. If no neutron detector is associated with the current gamma detector setup, the **Neutron** tab will look similar to Figure 62.

Figure 62. Neutron Tab without Selected Neutron Detector

9.1 Creating a New Neutron Detector

Users can create a new neutron detector by clicking on the **File** menu, then **Create New Neutron Detector**. A new form will appear prompting the user to input parameters to create a new neutron detector (Figure 63). Users must enter a name for the detector, the source-to-detector distance in cm, and the height of the detector in cm. Users may then either choose to clone a common detector, clone an existing detector, or create a new detector from known parameters.

Figure 63. Create New Neutron Detector Form

To clone a common detector, users can select a detector from the drop-down list and click **Clone**. To copy an existing detector, users can click **Browse** and navigate to the existing detector file (**Neutron\$.gadras**). This detector file can be in another directory. This is useful when the same neutron detector is used with multiple gamma detectors.

To create a detector from existing parameters, fill out the bottom portion of the form (Figure 63). The required parameters are:

- **Moderator Area (cm²):** the surface area of the moderator surrounding the detector as seen by the source
- **Front PE Thickness (cm):** the thickness of polyethylene in front of the detector as seen by the source
- **Back PE Thickness (cm):** the thickness of polyethylene behind the detector as seen by the source
- **Eff. Enhancement:** used to resolve differences between observed and computed efficiencies
- **Cadmium Cover:** checked if the detector is surrounded by cadmium

After specifying the parameters, click the **Create** button to create a new neutron detector.

9.2 Neutron Detector Characterization

After creating a neutron detector, the parameters on the **Neutron** tab are activated and the initial settings are filled in. Users can then fill in more information about the neutron detector:

- **Moderator Height (cm):** the vertical height of the moderator
- **Moderator Width (cm):** the horizontal width of the moderator
- **Setback (cm):** the distance from the front face of the detector to the moderator face
- **Thermal Cutoff Back and Sides or % Covered by Cadmium:** the energy at which neutron are killed if they enter from the back or sides of the detector housing, or the percent of the detector covered by cadmium
- **Detector Neutron Lifetime (μ s):** the average lifetime of the neutron in the detector in microseconds

After the initial detector parameters are input, the **Calibration Measurements** section can be completed. The first drop-down menu describes the overall scattering environment for the calibration measurements. The following options are available:

- **No reflected neutrons:** the environment does not scatter any neutrons into the detector
- **Outside or large bay:** the environment scatters neutrons only from the floor
- **Inside above suspended floor:** neutrons are scattered from the walls and floor; the floor is assumed to be above ground and fairly thin
- **Inside above concrete on ground:** neutrons are scattered from the walls and floor; the floor is assumed to be infinitely thick

The following parameters should be filled in before attempting to characterize the detector:

- **Distance (cm):** The distance from the center of the source to the detector face
- **Height Above Floor (cm):** the height of the detector above the floor

Once the parameters are filled in, characterization measurements using ^{252}Cf should be recorded. The calibration source should be in the source database (see Section 11.1.1). The name of the source is 252CF_*serialNumber* where *serialNumber* is the identifying serial number of the ^{252}Cf source. The date of the measurements should be recorded. Once this information is present, GADRAS_DRF will calculate the activity of the source during the measurements and display the information in the corresponding textbox. Alternatively, users can input a known activity of ^{252}Cf (e.g. "252CF,100uC") into the name field; however, this is not recommended.

A range of moderated ^{252}Cf sources is required for GADRAS-DRF to determine the proper energy-dependent response function of the neutron detector. Measurement information for each moderated sources is recorded in the table on the bottom of the form. The source configuration can be selected from the following:

- **Background:** measurement taken with no source
- **Cf252-Bare:** measurement taken with bare ^{252}Cf source (no shielding or moderator on source)
- **Cf252-XXcm-PE:** measurement taken with XX cm of polyethylene surrounding the source

- **Cf252-XXcm-BPE**: measurement taken with XX cm of borated polyethylene surrounding the source

For each measurement, the **Live Time** and the total number of counts should be recorded in the table. The net count rate will be computed automatically. The computed count rate will be computed based on the parameters entered in the form. The **Neutron Background** button will bring up the Neutron Background form (Figure 64). This form determines the cosmic flux that can be expected during the count. Users can select a pre-defined location from the dropdown list, or they can input the latitude, longitude, and elevation themselves. Users should specify whether the experiment was taken in a building below multiple floors, or they can specify the areal density themselves. The reference date can be changed to match when the measurement was taken. As a reference, the cosmic neutron rate relative to the average rate New York City is given.

Figure 64. Neutron Background Form

The **Adjustable Parameters** box holds parameters that can be optimized to improve the neutron detector model. By clicking the label of the adjustable parameter, users can specify whether they want the parameter to be adjusted. By clicking the **Fit** button, GADRAS-DRF will optimize the cyan colored parameters using an iterative non-linear regression algorithm. The computed count rate in the measurement table will be updated with the optimized parameters. Clicking the **Clear** button will reset all of the parameters on the form.

9.3 Neutron Response

The response function of the neutron detector to any measurement scenario (different from the calibration measurement scenario) can be analyzed in the **Response** tab. Users can see the efficiency of the detector plotted in red. Users can specify the measurement environment, the distance, and the height for the measurement.

Once a source GAM file (or ^{252}Cf activity) is specified in the **GAM/3DM File** field, the leakage from the source will be plotted in blue (note: this does not work for SNM radionuclides like ^{240}Pu , users must have a GAM file for SNM). The units for neutron leakage is changed in the **Plot Options** box. The choices are:

1. **Diff. Neutron Leakage (n/eV/s)**: this is the neutron group leakage into 4π , with each group divided by the group-width in eV
2. **Neutron Leakage (energy * diff. leakage (n/s))**: this is the differential leakage as described above, multiplied by the average energy of each group (default)

In addition to the plot, the leakage from the source, estimated multiplication, detector count rate, intrinsic efficiency and absolute efficiency fields are populated. Here, intrinsic efficiency is defined as the percentage of neutrons that are detected, given they strike the neutron detector. The absolute efficiency is defined as the percentage of neutrons that are detected, given they leak from the source.

There is also a **Quick Source Activity Estimate** box which allows users to input a recorded count-rate from a detector. GADRAS-DRF will estimate the equivalent bare and moderated ^{252}Cf activity at the specified distance/height/measurement environment.

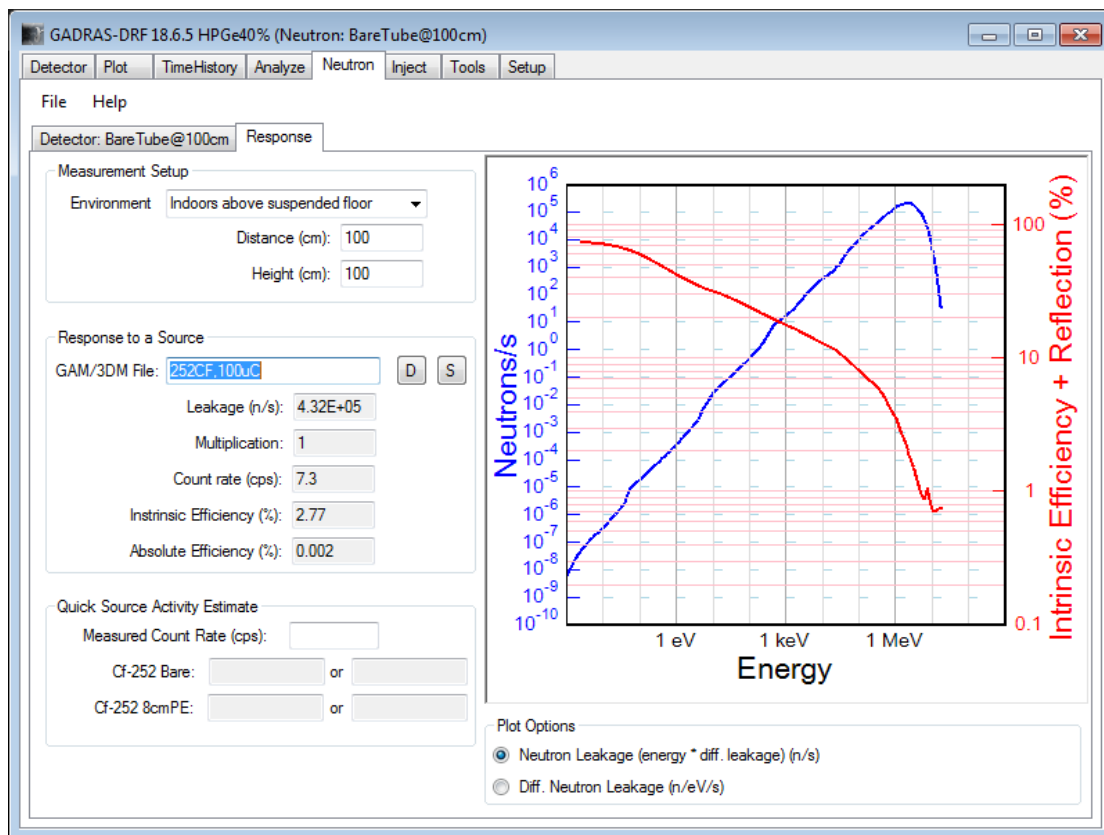


Figure 65. Neutron Response Tab

10 INJECT CALCULATIONS

10.1 Creating Inject Data

GADRAS-DRF has the capability of synthesizing spectra for training or demonstration purposes. The results of these computations are called inject spectra. There are three main sections that should be discussed when creating inject data. They are the general settings, detector settings, and background settings. The inject page may be seen in Figure 66.

The screenshot shows the 'Inject' page of the GADRAS-DRF software. The window title is 'GADRAS-DRF 18.6.5 3x3\NaI MidScat'. The 'Inject' tab is selected. The 'General Settings' section includes fields for Date/Time (29-Apr-2016 13:16:55), Output File (inject.pdf), Record (1), Title, Source, Distance (cm) (122), Height (cm) (56), Time (s) (3600), and Live/Real radio buttons. The 'Neutrons' section includes Attached Detector and Reflection Environment (Outside or large bay). The 'Gamma Detector' section includes Dead time per pulse (us) (10), True Energy Calibration, Recorded Energy Cal., and Resolution. The 'Background' section includes Location (Albuquerque, NM (airport)), Latitude (deg N) (35), Longitude (deg E) (253.4), Elevation (meters) (1620), Floors Above (0), or g/cm² (0), Terrestrial Background (checked), and Estimate NORM for Location. The bottom right has Batch and Compute buttons.

Figure 66. Inject Page

10.1.1 General Settings

Users may specify a variety of properties when creating inject data. The general settings include:

- 4) **Date/time:** The timestamp that should be assigned to the spectrum; users may type in a date and time or select one from the calendar icon
- 5) **Output File:** The name of the output file for the inject data
- 6) **Record:** The record number for this inject run
- 7) **Title:** The title of the run

- 8) **Source** (optional): The source information to include in the inject data; this field is similar to that on the **Plot** page (Section 0)
- 9) **Distance (cm)**: The distance between the source and the detector face
- 10) **Height (cm)**: The height of the detector above the floor for this scenario
- 11) **Time (s)**: The amount of time that should be simulated for the run; users may also specify whether this is Live time or Real time
- 12) **Apply Poisson Statistics**: When this box is checked, the inject data will have a Poisson distribution which simulates real measurement data; when unchecked, the data will be perfectly conformed to theoretical calculations
- 13) **Internal.pcf**: If the detector has internal radioactive components (e.g. LaBr) or calibration sources attached to the detector, there may be a file called *Internal.pcf* in the detector folder, which contains the spectrum associated with the internal source; this checkbox allows this spectrum to be included in the inject data file

10.1.2 Neutrons

Some detectors have neutron detectors attached to them. This section allows a user to also compute the count-rate from the neutron detector and embed that information into the spectrum file. For a neutron detector to be available, the neutron detector file must be present in the current detector folder.

The **Reflection Environment** is also important for gamma detectors measuring neutron sources, as it will change the rate of incident neutrons on the gamma detector, and thus the observable neutron interactions in the gamma detector. This is described in more detail in Section 9.2

10.1.3 Gamma Detector

Users may desire to change the detector settings from the default settings (imported from the current **Detector.dat** file).

The **Dead time per pulse** affects the recorded live-time of the simulation. Typical values are between 10 and 20 microseconds.

The **True Energy Calibration** is the energy calibration parameters used to determine the channel group structure for the simulated spectrum. This can also be used to change the full-energy-range of the detector by changing the **Order 1** to the full energy in keV.

The **Recorded Energy Cal** is what is recorded in the spectrum file. This may be different than the true calibration to simulate uncalibrated or poorly calibrated spectra.

The **Resolution** parameters allow users to simulate subtle differences between different detectors of the same type, which have different resolution, or may have resolution changes with time or temperature.

Clicking the **Defaults** button will adjust the energy calibration and resolution parameters back to the default parameters assigned to the detector.

10.1.4 Background Settings

Background radiation primarily comes from two sources: cosmic and terrestrial. Cosmic radiation contribution to the spectrum is mainly a factor of elevation and material above the detector. This material may include shielding or building material. Terrestrial background is mostly composed of ^{40}K , the uranium decay chain, and the thorium decay chain. The following settings can be specified regarding background:

- 14) **Location** (dropdown menu): The latitude, longitude, and elevation for many cities across the world are stored in GADRAS-DRF; selecting an option from this dropdown menu will automatically fill these fields in the location info
- 15) **Latitude (deg N)**: Latitude of the simulated measurement
- 16) **Longitude (deg E)**: Longitude of the simulated measurement
- 17) **Elevation (meters)**: The elevation of the simulated measurement
- 18) **Floors Above or g/cm²**: Users may specify the aerial density of the material above the detector if it is known; otherwise, users may specify the *Floors Above* parameter and the aerial density will be estimated; this is used to generate the cosmic background attributed for the simulated spectrum
- 19) **Include** (terrestrial background checkbox): Specifies whether terrestrial background calculations should be included in the simulated spectrum
- 20) **K%**: The weight percentage of potassium in the soil; for reference, 1% corresponds to 7.8 g of ^{40}K (54.47 μCi) in a 1 meter radius sphere
- 21) **U ppm**: Amount of uranium in soil in parts per million; for reference, 1 ppm corresponds to 2.236 μCi ^{238}U , 2.236 μCi ^{226}Ra , and 104.2 nCi ^{235}U
- 22) **Th ppm**: Amount of thorium in soil in parts per million; for reference, 1 ppm corresponds to 6.7 g ^{232}Th (732.3 nCi) in a 1 meter radius sphere
- 23) **Attenuation**: Amount of attenuation the terrestrial background goes through before encountering the detector
- 24) **Low-E Continuum**: Amount of low-energy continuum the terrestrial background will contribute; this can be based on materials between the soil and the detector or how much soil is present near the detector
- 25) **High-E Continuum**: Amount of high-energy continuum the terrestrial background will contribute
- 26) **Include Cosmic**: Specifies whether cosmic background calculations should be included in the simulated spectrum, this is the primary source of neutron background for the calculations

Users may click the **Estimate NORM for location** button to estimate the naturally occurring radioactive material (K, U, and Th) for the location specified in the *Location* dropdown menu.

Note: this only works for cities in the U.S.

Once all the settings have been specified, clicking the **Compute** button will generate the output. The **PCF Viewer** window will open and be populated with the file specified in the **Output File** text box. The graph display will also appear and display the simulated inject data. The settings will all be saved in a .inj file, which has a default file name format of <outputFileName>-<RecordNumber>.inj. Users may choose to save the settings without running the inject using the **Save As inject file...** option in the **File** menu. The auto-save feature can be disabled from the **Options** menu. Users may also populate the settings from an inject file by selecting **Open inject file...** from the **File** menu.

10.2 Batch Inject

Users may need to generate a large amount of inject data. This can become a tedious process if done in the traditional way. GADRAS-DRF allows users to perform batch inject calculations using a series of .inj files. Users may create these text-based files themselves, as long as they follow the correct format. To perform a batch inject calculation, users should click the **Batch** button on the inject page. This will bring up the batch inject form as shown in Figure 67.

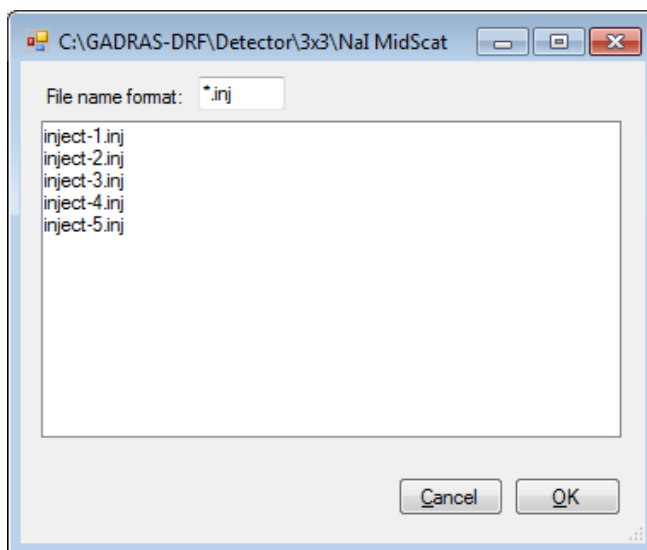


Figure 67. Batch Inject Form

To perform a batch inject calculation, select the desired files to perform the inject calculations with. If none of the files are highlighted, all of the displayed inject files will be included in the batch calculation. The *File name format* text box can be used to populate the form with different files. Note: files do not need the .inj extension to be used in batch calculations.

11 GADRAS-DRF TOOLS

11.1 GADRAS-DRF Editors and Libraries

Editors for various libraries and properties can be found under the **Tools** menu option on the main window, as shown in Figure 68. Editor options include:

- **Deviation Pairs** (discussed in Section 6.3)
- **Isotope DB** (discussed in Section 6.1.2)
- **PhotoPeak List** (discussed in Section 6.1.1)
- **Source DB** (Source database)

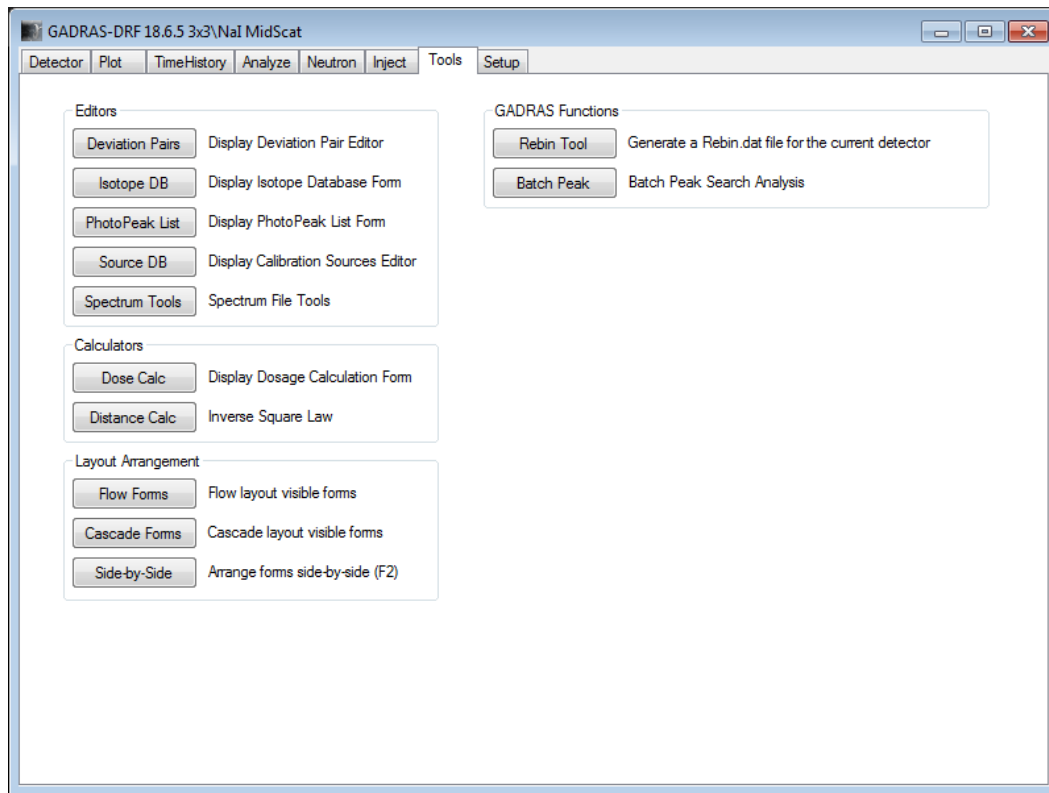


Figure 68. Tools Tab

11.1.1 (Calibrated) Source Database (DB)

27) Users can access the **Source DB** form from the **Tools** tab on the main window. This form displays a database of known calibration sources with various properties. The source list is located in the **Source.lib** file in the root GADRAS-DRF directory. When GADRAS-DRF is updated to a new version,


user-added sources are automatically retained. Sources are added and identified according to their unique **Source ID**.

Source DB includes the following information for each calibration source:

- **Source ID** —Naming convention: atomic weight followed by the elemental symbol (e.g., 109Cd) + underscore + alphanumeric information (i.e., serial number or other identifying information).
- **Original Calibrated Activity**
- **Original Calibration Date**
- **Location**

Calibration sources are grouped by radionuclide on the **Source DB** form. Clicking the tree-expand button (the **+** to the left of each isotope name) allows the user to view all calibration sources for that radionuclide. Users may edit or delete existing sources or add new sources using this form.

When computed spectra are compared with measurements, activities for stored calibration sources are decay-corrected based on the **Calibration Date**, the **Calibrated Activity**, and the measurement date of the plotted spectrum. An activity calculator is provided at the bottom of the window for users to obtain decay-corrected activities for each source. Figure 69 illustrates a listing of calibration sources for ^{109}Cd and the activity calculator.

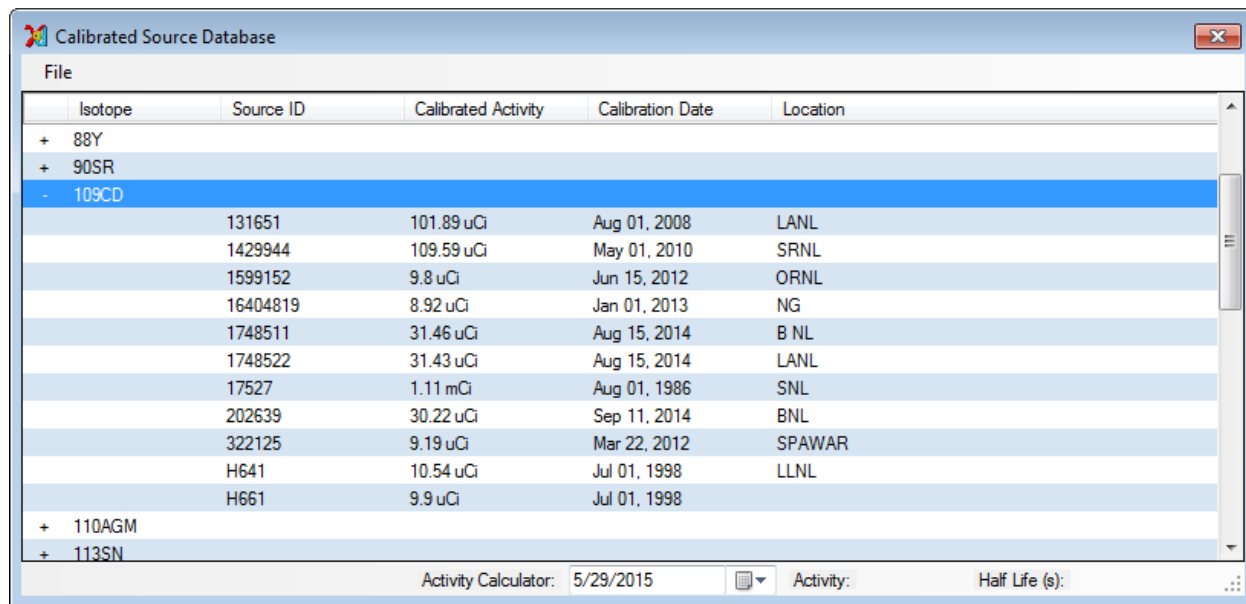

Isotope	Source ID	Calibrated Activity	Calibration Date	Location
+ 88Y				
+ 90SR				
- 109CD				
	131651	101.89 uCi	Aug 01, 2008	LANL
	1429944	109.59 uCi	May 01, 2010	SRNL
	1599152	9.8 uCi	Jun 15, 2012	ORNL
	16404819	8.92 uCi	Jan 01, 2013	NG
	1748511	31.46 uCi	Aug 15, 2014	B NL
	1748522	31.43 uCi	Aug 15, 2014	LANL
	17527	1.11 mCi	Aug 01, 1986	SNL
	202639	30.22 uCi	Sep 11, 2014	BNL
	322125	9.19 uCi	Mar 22, 2012	SPAWAR
	H641	10.54 uCi	Jul 01, 1998	LLNL
	H661	9.9 uCi	Jul 01, 1998	
+ 110AGM				
+ 113SN				

Activity Calculator: 5/29/2015 Activity: Half Life (s):

Figure 69. Source DB Tool with a ^{109}Cd Source Highlighted

11.1.2 Spectrum File Tools

GADRAS-DRF has the capability of manipulating spectra to perform desired tasks or calculations. This may include adding or subtracting spectra, scaling a spectrum, applying Poisson statistics to a record, or other calculations. The Spectrum Tools form is shown in Figure 70.

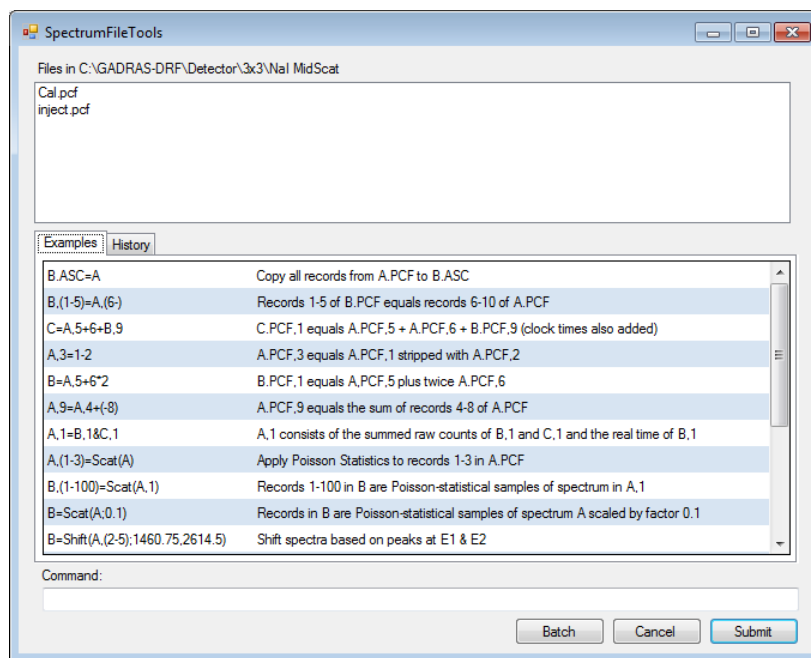


Figure 70. Spectrum Tools Form

The Examples tab demonstrates the available functions in the spectrum tools form. To type a file name at the current cursor location, the user may click the filename from the list box or manually type the file. If a file name includes special characters such as spaces or operators (e.g. +, -, /, *), the file name should be put in quotes (e.g. "my+spectrum.pcf"). This ensures the file name is not misinterpreted as an operation. Clicking **Submit** sends the command to GADRAS-DRF. If it is a valid command, it will appear in the History tab, otherwise, GADRAS-DRF will warn the user that the command is invalid. Users can repeat a command by clicking on the command in the History tab. To clear the History, the user may click **Clear**. Users may perform batch operations by writing multiple commands on separate lines in a text file. When the user clicks **Batch**, they should select the file with the commands. GADRAS-DRF will perform the commands sequentially. If one of the commands is invalid, GADRAS-DRF will inform the user which of the commands was invalid and which commands were executed successfully. GADRAS-DRF will also inform the user if all the commands were executed successfully.

11.2 Calculators

11.2.1 Dose Calculation


The expected dose (exposure) rate from almost any source can be calculated using GADRAS-DRF. **Note:** this calculation is independent of detector characteristics and any internal or external shielding. However, GADRAS-DRF does compensate for attenuation and scattering by intervening air. Based on methods specified in ANSI/ANS-6.1.1-1991, "Neutron and Gamma-Ray Fluence-to-Dose Factors," effective dose equivalent rates for an anthropomorphic representation of the human body can be calculated.

The **Dose Calc** button is located under the **Tools** tab on the main form. The radionuclide source strength can be provided as activity (Curies) or mass (grams). Information needed for a dose calculation includes the following:

- **Preferred dose units:** Select output units via drop-down menu (Rem or Sievert)
- **Source (radionuclide and source strength):** Radioactive source information (e.g., "¹³⁷Cs, 100uCi"; a known source from **Source DB**; or a model file name)
- **Distance:** source-to-detector distance (cm)
- **Gamma Energy Threshold (optional):** any gamma emissions below the specified threshold energy (keV) are excluded when the gross leakage is tallied (Note: this only affects the gross leakage, not the computed dose).

The following calculated rates are shown in Figure 71:

- Gamma Dose
- Neutron Dose
- Total Dose
- Gross Leakage (gamma)
- Gross Leakage (neutron)

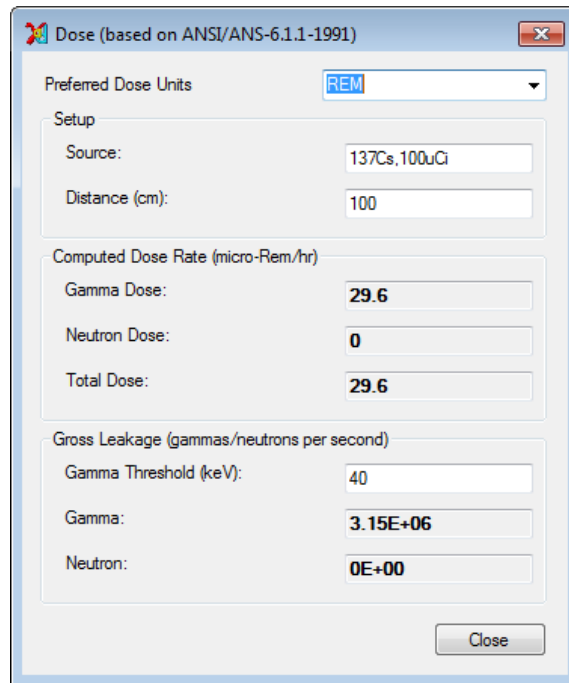

Dose (based on ANSI/ANS-6.1.1-1991)

Preferred Dose Units: **REM**

Setup

Source: **137Cs, 100uCi**

Distance (cm): **100**

Computed Dose Rate (micro-Rem/hr)

Gamma Dose: **29.6**

Neutron Dose: **0**

Total Dose: **29.6**

Gross Leakage (gammas/neutrons per second)

Gamma Threshold (keV): **40**

Gamma: **3.15E+06**


Neutron: **0E+00**

Close

Figure 71. Dose Calculation Tool

11.2.2 Distance Calculator

The distance calculator uses dose rates taken at two different positions to estimate the distance to the source. This can be useful if the source is inside a large container and the exact position is unknown. This form uses ratios of dose rates and distances, so units are arbitrary as long as they are consistent. An example of the form can be seen in Figure 72.

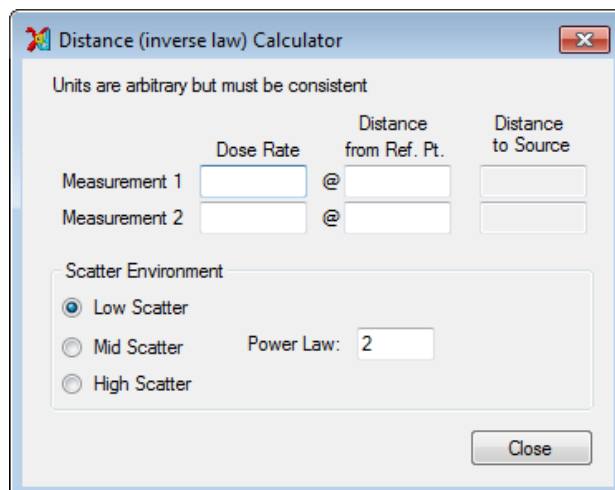

Distance (inverse law) Calculator

Units are arbitrary but must be consistent

	Dose Rate	@	Distance from Ref. Pt.	Distance to Source
Measurement 1	<input type="text"/>	@	<input type="text"/>	<input type="text"/>
Measurement 2	<input type="text"/>	@	<input type="text"/>	<input type="text"/>

Scatter Environment

☒ Low Scatter

☐ Mid Scatter

☐ High Scatter

Power Law: **2**

Close

Figure 72. Distance Calculator Tool

The **Distance from Ref. Pt.** should be entered as a distance from a consistent position that is in line with the source (i.e. the source and the two measurements should form a line and the distances should be entered from an arbitrary point on the line). One caveat is that if the source is not in line with the two measurement points, the resulting position may not be accurate.

The scatter environment can impact the dose rate measurements. Because of this, the distance calculator gives users the option to estimate the scatter environment. Most of the time, users should use the **Mid Scatter** option (Power Law: 1.85). **Low Scatter** (Power Law: 2.0) should be used when the floor is very thin or non-existent and there are no walls nearby. **High Scatter** (Power Law: 1.65) should be used when the measurement is taken in a compact area, such as a vehicle. Users also have the option of specifying their own **Power Law** if this value is known.

11.3 Other Tools

11.3.1 Rebin Tool

The rebin tool creates a file called Rebin.dat for a particular detector. This tool should be used when users want to rebin a spectrum into a specific energy bin structure. The form can be seen in Figure 73.

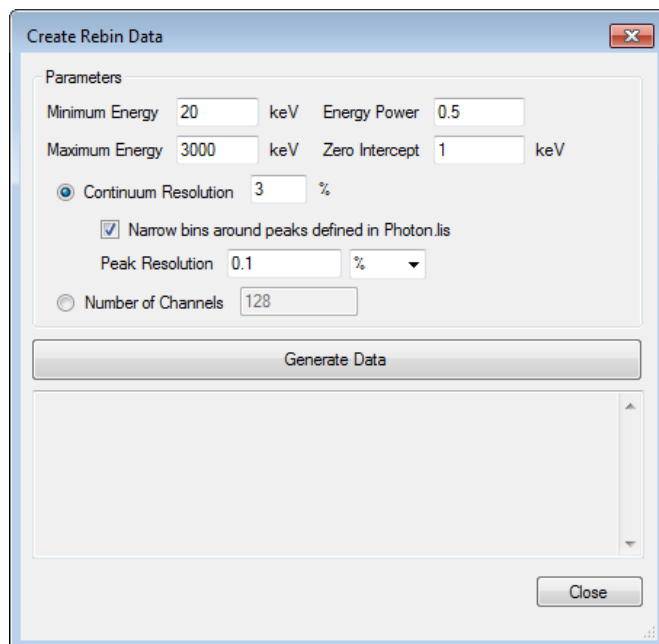


Figure 73. Rebin Tool


The **Minimum Energy** should be the energy of the low edge of channel 0. **Maximum Energy** should be the energy of the upper edge of the maximum channel. The **Energy Power** and **Zero Intercept** fields are used to determine the bin width as a function of energy. To have uniform bins in the continuum, the **Energy Power** should be 0. The bin width will be determined by the minimum and maximum energies,

as well as the number of channels. In Figure 73, the bin width will increase as the square root of the energy, and the channel corresponding to 0 keV will have a bin width of 1 keV.

Users may define the number of channels in two ways. By selecting the **Number of Channels** option, users can define the total number of channels to use. The continuum and peaks will have the same binning structure. If **Continuum Resolution** is selected, users can specify separate bin widths for the continuum and the peaks. The **Continuum Resolution** textbox defines the bin width as a percentage of energy at 661 keV. The bin width ΔE (keV) for the continuum is determined using

$$\Delta E = C^{1-p} E^p + E_0,$$

where E is the bin lower energy bound in keV, C is the **Continuum Resolution** (at 661 keV) in keV, p is the **Energy Power**, E_0 is the **Zero Intercept** in keV. For example, in Figure 73, the **Zero Intercept** is 1 keV, the **Energy Power** is 0.5, and the **Continuum Resolution** is 3%. Therefore, at 1000 keV, the bin width is 25.4 keV. By default, the continuum resolution is also used for energy bins containing peaks. If the “Narrow bins around peaks defined in Photon.lis” checkbox is checked, users can define a different bin structure around peaks. **Photon.lis** is stored in the root **GADRAS-DRF** data directory (default is C:\GADRAS-DRF) and is universal for all detectors. Users can modify this file to include peaks they wish to have more bins in or remove peaks they wish to ignore. An example of the **Photon.lis** file can be seen in Figure 74.

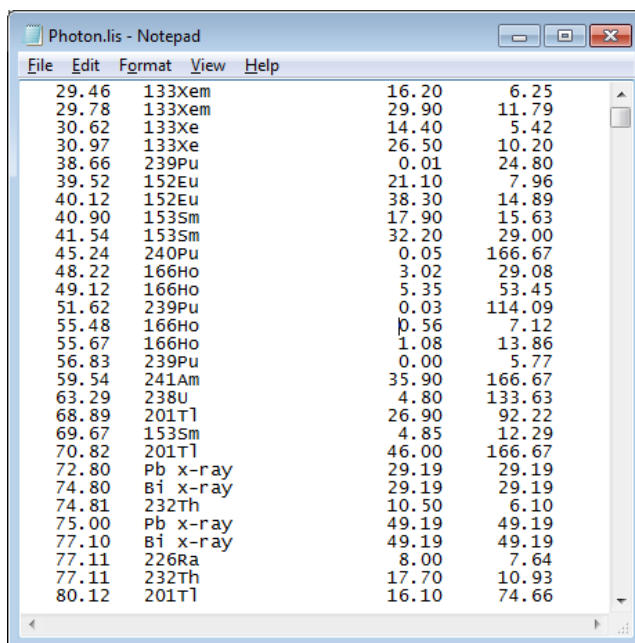

Energy (keV)	Nuclide	Absolute Yield (%)	Detectability
29.46	133Xem	16.20	6.25
29.78	133Xem	29.90	11.79
30.62	133Xe	14.40	5.42
30.97	133Xe	26.50	10.20
38.66	239Pu	0.01	24.80
39.52	152Eu	21.10	7.96
40.12	152Eu	38.30	14.89
40.90	153Sm	17.90	15.63
41.54	153Sm	32.20	29.00
45.24	240Pu	0.05	166.67
48.22	166Ho	3.02	29.08
49.12	166Ho	5.35	53.45
51.62	239Pu	0.03	114.09
55.48	166Ho	0.56	7.12
55.67	166Ho	1.08	13.86
56.83	239Pu	0.00	5.77
59.54	241Am	35.90	166.67
63.29	238U	4.80	133.63
68.89	201Tl	26.90	92.22
69.67	153Sm	4.85	12.29
70.82	201Tl	46.00	166.67
72.80	Pb x-ray	29.19	29.19
74.80	Bi x-ray	29.19	29.19
74.81	232Th	10.50	6.10
75.00	Pb x-ray	49.19	49.19
77.10	Bi x-ray	49.19	49.19
77.11	226Ra	8.00	7.64
77.11	232Th	17.70	10.93
80.12	201Tl	16.10	74.66

Figure 74. Photon.lis File

To modify this file, users can input the energy in the first column, the nuclide name in the second column, the absolute yield (%) in the third column, and the detectability (based on energy and yield) in

the fourth column. The **Rebin** tool only reads the first column; the rest of the columns are ignored. Only peaks within the specified energy range will be used. The default file is sorted by energy, but users may input peaks in any order. Users may select a constant bin width for peaks, or may use the percent of the peak's energy as the bin width basis. The **Rebin** tool will assign one bin to the peak with a width corresponding to the specified energy or percentage of peak energy. If the annihilation peak at 511 keV is specified, the bin width is extended by 3 keV due to Doppler broadening of the peak.

Once the parameters are filled in, users can click the **Generate Data** button to create the **Rebin.dat** file. The information textbox will be populated (Figure 75). The number of channels will be displayed first, followed by the energy bins. This information is recorded in **Rebin.dat**. When the **Rebin.dat** file is present in the detector directory, the **Rebin** checkbox on the **Detector** tab will be enabled. Users can choose whether they want the plotted spectrum to be rebinned according to the **Rebin.dat** file by checking this box.

Create Rebin Data

Parameters

Minimum Energy: 20 keV Energy Power: 0.5

Maximum Energy: 3000 keV Zero Intercept: 1 keV

☒ Continuum Resolution: 3 %

☒ Narrow bins around peaks defined in Photon.lis

Peak Resolution: 0.1 %

☐ Number of Channels: 128

Generate Data

1435

20.00	29.39	29.53	29.71	29.85	30.55	30.69
30.90	31.04	34.81	38.58	38.74	39.44	39.60
40.04	40.20	40.82	40.98	41.46	41.62	45.15
45.33	48.13	48.31	49.03	49.21	51.53	51.71
55.38	55.57	55.77	56.73	56.93	59.44	59.64
63.19	63.39	68.78	69.00	69.56	69.78	70.71
70.93	72.69	72.91	74.69	74.81	74.90	75.11

Close

Figure 75. Rebin Data Tool with Data Generated

11.3.2 Batch Peak Search

Users can perform a peak search on multiple files by using the **Batch Peak Search** tool (Figure 76). Users can select which files they want to analyze using the **Filter** textbox. In Figure 76, all files in the current detector directory ending in .pcf will be analyzed. The **Threshold (Sigmas)** textbox defines how far above the continuum a peak must be to be included in the results. After the files are chosen and the threshold is specified, clicking OK will start the analysis.

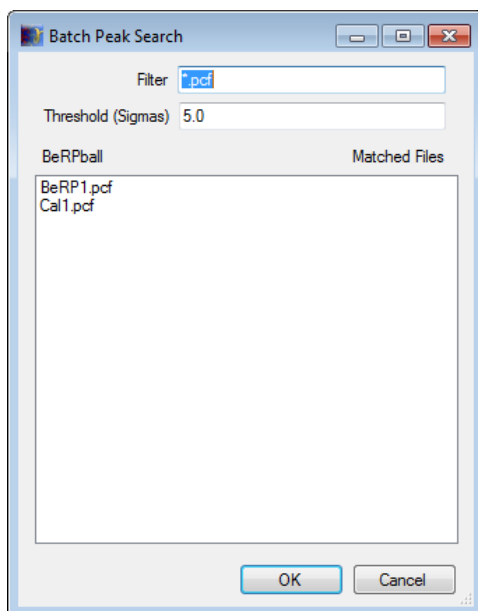


Figure 76. Batch Peak Search Tool

The tool will sequentially analyze all spectra in each of the files specified by the filter. The results will be stored in .csv files which are located in the **Temp** directory (default is C:\GADRAS-DRF\Temp). These files can be opened in Excel. The following data is stored in the csv file:

- Energy (keV)
- Energy uncertainty (sigma)
- Count Rate (counts per second)
- Count Rate uncertainty (sigma)
- Full-Width at Half Max (keV)
- FWHM uncertainty (sigma)
- Leakage (photons per second)

12 GADRAS-DRF SETTINGS

GADRAS-DRF has some settings that users can modify to customize the user interface. These options consist of:

- Change plot options on detector change (default on): GADRAS-DRF will change the plot style of the first spectrum depending on if the detector is high resolution (e.g. HPGe) or low resolution (e.g. NaI)
- Automatically update plot when fields change (default off): with this turned on, users can update the spectrum viewer automatically when they change any field on the Plot tab (Foreground, Background, Compute Source term)
- Don't show energy calibration dialog (default off): when doing the graphical energy calibration (Section 6.2), this option determines whether GADRAS-DRF will automatically ask which calibration parameter to adjust
- Adjust plot scale with mouse wheel (default on): if selected, the mouse wheel will adjust the y-axis scale on the spectrum viewer; if not selected, the mouse wheel will zoom in
- Animate zoom (default on): if selected, the spectrum viewer will zoom in with an animation
- Open ROI in new window (default off): if selected, zooming in will open a new spectrum viewer with the zoomed spectrum; otherwise, the zoom will remain on the same window
- Reset Dialogs button: when pressed, this reset the GUI to show all dialog boxes until user checks the option to not show the dialog again
- Save DLL Log button: if GADRAS-DRF functions incorrectly, this button can be used to save the error to a file
- Exit splash screen upon load (default off): checking this will exit the initial GADRAS-DRF splash screen as soon as GADRAS-DRF is ready for user interaction, otherwise it will stay visible for a full three seconds
- Turn off autocomplete (default off): the Computed Source line on the **Plot** tab has an autocomplete feature; if desired, this functionality can be turned off
- Rebin spectra when inserting to files (default off): if checked, spectra will be rebinned according to the Rebin.dat file structure (Section 11.3.1) whenever they are added to a PCF file via the **PCF Viewer**

13 REFERENCES

- [1] D. J. Mitchell, "Gamma Detector Response and Analysis Software (GADRAS)," *Sandia National Laboratories, SAND88-2519*, 1988.
- [2] C. Rhykerd, D. J. Mitchell and J. K. Mattingly, "Benchmarks for GADRAS Performance Validation," *Sandia National Laboratories, SAND2009-6550*, 2009.
- [3] J. K. Mattingly and E. S. Varley, "Development and Preliminary Testing of Feynman-Y Synthesis in GADRAS," *Sandia National Laboratories, SAND2007-5427*, 2007.
- [4] J. K. Mattingly, D. J. Mitchell, L. T. Harding, E. S. Varley and N. R. Hilton, "FY2008 Report on GADRAS Radiation Transport Methods," *Sandia National Laboratories, SAND2008-7084*, 2008.
- [5] L. T. Harding, J. K. Mattingly and D. J. Mitchell, "Modernized Neutron Efficiency Calculations for GADRAS," *Sandia National Laboratories, SAND2008-6073*, 2008.
- [6] D. J. Mitchell, L. T. Harding, J. K. Mattingly and J. L. Barnett, "Neutron Count Rate Calculation in GADRAS Version 15.3," *Sandia National Laboratories, SAND2009-4321P*, 2009.
- [7] G. G. Thoreson, D. J. Mitchell, L. A. Theisen and L. T. Harding, "Environment Scattering in GADRAS," *Sandia National Laboratories, SAND2013-8673*, 2013.
- [8] D. J. Mitchell, "GADRAS Detector Response Function," *Sandia National Laboratories, SAND2014-XXXX*, 2014.

DISTRIBUTION

1	MS0899	Technical Library	9536 (electronic copy)
---	--------	-------------------	------------------------

