
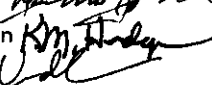

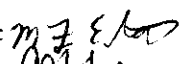
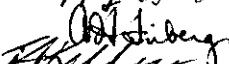
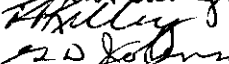




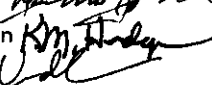

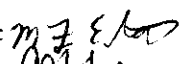
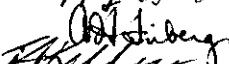
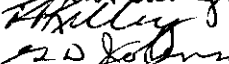




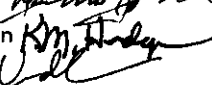

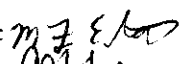
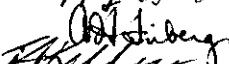
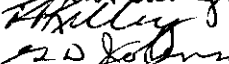





ENGINEERING CHANGE NOTICE

Page 1 of 21. ECN **655005**Proj.
ECN

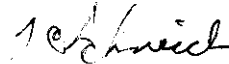2. ECN Category (mark one) Supplemental <input type="checkbox"/> Direct Revision <input checked="" type="checkbox"/> Change ECN <input type="checkbox"/> Temporary <input type="checkbox"/> Standby <input type="checkbox"/> Supersedure <input type="checkbox"/> Cancel/Void <input type="checkbox"/>	3. Originator's Name, Organization, MSIN, and Telephone No. Dennis J. McCain, Models and Inventory, R2-12, 373-1023		4. USQ Required? <input type="checkbox"/> Yes <input checked="" type="checkbox"/> No	5. Date 10/25/99
	6. Project Title/No./Work Order No. Standard Hydrogen Monitoring System		7. Bldg./Sys./Fac. No. N/A	8. Approval Designator Q
12a. Modification Work <input type="checkbox"/> Yes (fill out Blk. 12b) <input checked="" type="checkbox"/> No (NA Blks. 12b, 12c, 12d)	12b. Work Package No. N/A	12c. Modification Work Complete N/A _____ Design Authority/Cog. Engineer Signature & Date	12d. Restored to Original Condition (Temp. or Standby ECN only) N/A _____ Design Authority/Cog. Engineer Signature & Date	
13a. Description of Change This ECN is being generated in order to update the previous plan with Fiscal Year 2000 information and changes.				
14a. Justification (mark one) Criteria Change <input checked="" type="checkbox"/> Design Improvement <input type="checkbox"/> Environmental <input type="checkbox"/> Facility Deactivation <input type="checkbox"/> As-Found <input type="checkbox"/> Facilitate Const <input type="checkbox"/> Const. Error/Omission <input type="checkbox"/> Design Error/Omission <input type="checkbox"/>				
14b. Justification Details To maintain currency in maintenance and system requirements.				
15. Distribution (include name, MSIN, and no. of copies) See attached distribution.			RELEASE STAMP DATE: <u>NOV 11 1999</u> STA: <u>4</u> HANFORD RELEASE NO: <u>2</u>	

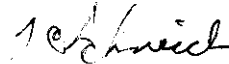ENGINEERING CHANGE NOTICE				Page 2 of 2	1. ECN (use no. from pg. 1) ECN-656005																																																																														
16. Design Verification Required <input type="checkbox"/> Yes <input checked="" type="checkbox"/> No	17. Cost Impact <table style="width: 100%; border-collapse: collapse;"> <tr> <th colspan="2" style="text-align: center; border-bottom: 1px solid black;">ENGINEERING</th> <th colspan="2" style="text-align: center; border-bottom: 1px solid black;">CONSTRUCTION</th> </tr> <tr> <td style="width: 30%;">Additional</td> <td style="width: 10%; text-align: center;"><input type="checkbox"/></td> <td style="width: 10%;">\$</td> <td style="width: 50%;">Additional</td> </tr> <tr> <td>Savings</td> <td style="text-align: center;"><input type="checkbox"/></td> <td>\$</td> <td>Savings</td> </tr> </table>			ENGINEERING		CONSTRUCTION		Additional	<input type="checkbox"/>	\$	Additional	Savings	<input type="checkbox"/>	\$	Savings	18. Schedule Impact (days) Improvement <input type="checkbox"/> Delay <input type="checkbox"/>																																																																			
ENGINEERING		CONSTRUCTION																																																																																	
Additional	<input type="checkbox"/>	\$	Additional																																																																																
Savings	<input type="checkbox"/>	\$	Savings																																																																																
19. Change Impact Review: Indicate the related documents (other than the engineering documents identified on Side 1) that will be affected by the change described in Block 13. Enter the affected document number in Block 20.																																																																																			
	<input type="checkbox"/>	Seismic/Stress Analysis	<input type="checkbox"/>	Tank Calibration Manual	<input type="checkbox"/>																																																																														
Functional Design Criteria	<input type="checkbox"/>	Stress/Design Report	<input type="checkbox"/>	Health Physics Procedure	<input type="checkbox"/>																																																																														
Operating Specification	<input type="checkbox"/>	Interface Control Drawing	<input type="checkbox"/>	Spares Multiple Unit Listing	<input type="checkbox"/>																																																																														
Criticality Specification	<input type="checkbox"/>	Calibration Procedure	<input type="checkbox"/>	Test Procedures/Specification	<input type="checkbox"/>																																																																														
Conceptual Design Report	<input type="checkbox"/>	Installation Procedure	<input type="checkbox"/>	Component Index	<input type="checkbox"/>																																																																														
Equipment Spec.	<input type="checkbox"/>	Maintenance Procedure	<input type="checkbox"/>	ASME Coded Item	<input type="checkbox"/>																																																																														
Const. Spec.	<input type="checkbox"/>	Engineering Procedure	<input type="checkbox"/>	Human Factor Consideration	<input type="checkbox"/>																																																																														
Procurement Spec.	<input type="checkbox"/>	Operating Instruction	<input type="checkbox"/>	Computer Software	<input type="checkbox"/>																																																																														
Vendor Information	<input type="checkbox"/>	Operating Procedure	<input type="checkbox"/>	Electric Circuit Schedule	<input type="checkbox"/>																																																																														
OM Manual	<input type="checkbox"/>	Operational Safety Requirement	<input type="checkbox"/>	ICRS Procedure	<input type="checkbox"/>																																																																														
FSAR/SAR	<input type="checkbox"/>	IEFD Drawing	<input type="checkbox"/>	Process Control Manual/Plan	<input type="checkbox"/>																																																																														
Safety Equipment List	<input type="checkbox"/>	Cell Arrangement Drawing	<input type="checkbox"/>	Process Flow Chart	<input type="checkbox"/>																																																																														
Radiation Work Permit	<input type="checkbox"/>	Essential Material Specification	<input type="checkbox"/>	Purchase Requisition	<input type="checkbox"/>																																																																														
Environmental Impact Statement	<input type="checkbox"/>	Fac. Proc. Samp. Schedule	<input type="checkbox"/>	Tickler File	<input type="checkbox"/>																																																																														
Environmental Report	<input type="checkbox"/>	Inspection Plan	<input type="checkbox"/>		<input type="checkbox"/>																																																																														
Environmental Permit	<input type="checkbox"/>	Inventory Adjustment Request	<input type="checkbox"/>		<input type="checkbox"/>																																																																														
20. Other Affected Documents: (NOTE: Documents listed below will not be revised by this ECN.) Signatures below indicate that the signing organization has been notified of other affected documents listed below.																																																																																			
Document Number/Revision		Document Number/Revision		Document Number/Revision																																																																															
N/A																																																																																			
21. Approvals <table style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 40%;"></th> <th style="width: 10%; text-align: center;">Signature</th> <th style="width: 10%; text-align: center;">Date</th> <th style="width: 40%;"></th> <th style="width: 10%; text-align: center;">Signature</th> <th style="width: 10%; text-align: center;">Date</th> </tr> </thead> <tbody> <tr> <td>Design Authority</td> <td></td> <td></td> <td>Design Agent</td> <td></td> <td></td> </tr> <tr> <td>Cog. Eng. D.J. McCain</td> <td></td> <td style="text-align: center;">11/4/99</td> <td>PE</td> <td></td> <td></td> </tr> <tr> <td>Cog. Mgr. K.M. Hodgson</td> <td></td> <td style="text-align: center;">11/4/99</td> <td>QA</td> <td></td> <td></td> </tr> <tr> <td>QA J.J. Verderber</td> <td></td> <td style="text-align: center;">11/5/99</td> <td>Safety</td> <td></td> <td></td> </tr> <tr> <td>Safety</td> <td></td> <td></td> <td>Design</td> <td></td> <td></td> </tr> <tr> <td>Environ.</td> <td></td> <td></td> <td>Environ.</td> <td></td> <td></td> </tr> <tr> <td>Other M.F. Erhart</td> <td></td> <td style="text-align: center;">11-10-99</td> <td>Other</td> <td></td> <td></td> </tr> <tr> <td>A.H. Friberg</td> <td></td> <td style="text-align: center;">11-10-99</td> <td></td> <td></td> <td></td> </tr> <tr> <td>T.J. Kelley</td> <td></td> <td style="text-align: center;">11/8/99</td> <td></td> <td></td> <td></td> </tr> <tr> <td>G.D. Johnson</td> <td></td> <td style="text-align: center;">11-4-99</td> <td></td> <td></td> <td></td> </tr> <tr> <td>R.L. Legg</td> <td></td> <td style="text-align: center;">11-10-99</td> <td></td> <td></td> <td></td> </tr> <tr> <td>T.C. Schneider</td> <td></td> <td style="text-align: center;">11/9/99</td> <td></td> <td></td> <td></td> </tr> </tbody> </table>							Signature	Date		Signature	Date	Design Authority			Design Agent			Cog. Eng. D.J. McCain		11/4/99	PE			Cog. Mgr. K.M. Hodgson		11/4/99	QA			QA J.J. Verderber		11/5/99	Safety			Safety			Design			Environ.			Environ.			Other M.F. Erhart		11-10-99	Other			A.H. Friberg		11-10-99				T.J. Kelley		11/8/99				G.D. Johnson		11-4-99				R.L. Legg		11-10-99				T.C. Schneider		11/9/99			
	Signature	Date		Signature	Date																																																																														
Design Authority			Design Agent																																																																																
Cog. Eng. D.J. McCain		11/4/99	PE																																																																																
Cog. Mgr. K.M. Hodgson		11/4/99	QA																																																																																
QA J.J. Verderber		11/5/99	Safety																																																																																
Safety			Design																																																																																
Environ.			Environ.																																																																																
Other M.F. Erhart		11-10-99	Other																																																																																
A.H. Friberg		11-10-99																																																																																	
T.J. Kelley		11/8/99																																																																																	
G.D. Johnson		11-4-99																																																																																	
R.L. Legg		11-10-99																																																																																	
T.C. Schneider		11/9/99																																																																																	
DEPARTMENT OF ENERGY Signature or a Control Number that tracks the Approval Signature																																																																																			
ADDITIONAL																																																																																			

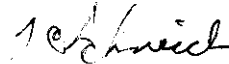Engineering Task Plan for Standard Hydrogen Monitoring System Operation

Dennis J. McCain

Lockheed Martin Hanford Corp., Richland, WA 99352
U.S. Department of Energy Contract DE-AC06-96RL13200


EDT/ECN: ECN-656005 UC: 2070
Org Code: 74B40 CACN/COA: 101899/BA10
B&R Code: EW 3120074 Total Pages: 21


Key Words: Engineering Task Plan, Standard Hydrogen Monitoring System, Hydrogen, Data Days, SHMS, Flammable Gas, Ammonia, Vapor

Abstract: N/A

TRADEMARK DISCLAIMER. Reference herein to any specific commercial product, process, or service by trade name, trademark, manufacturer, or otherwise, does not necessarily constitute or imply its endorsement, recommendation, or favoring by the United States Government or any agency thereof or its contractors or subcontractors.

Printed in the United States of America. To obtain copies of this document, contact: Document Control Services, P.O. Box 950, Mailstop H6-08, Richland WA 99352, Phone (509) 372-2420; Fax (509) 376-4989.

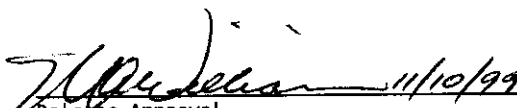 11/10/99
Release Approval Date

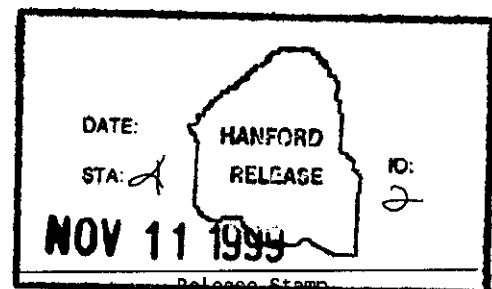

Approved for Public Release

TABLE OF CONTENTS

1.0 INTRODUCTION.....	1
2.0 SCOPE.....	1
3.0 PHYSICAL DESCRIPTION.....	1
4.0 OPERATION AND MAINTENANCE	4
4.1 SHMS.....	4
4.2 ANALYTICAL INSTRUMENTS	4
5.0 INSTRUMENT CALIBRATION AND VERIFICATION.....	5
5.1 CALIBRATION AND VERIFICATION OF WHITTAKER™ CELLS	5
5.2 CALIBRATION OF ANALYTICAL INSTRUMENTS	5
5.2.1 Terminology	6
5.2.2 Gas Chromatograph Verification	7
5.2.3 Gas Chromatograph Multi-Point Certification	7
5.2.4 System Loop Verifications.....	7
5.2.5 Process Instrumentation	8
6.0 DATA COLLECTION	8
6.1 DETERMINATION OF VALID DATA DAYS	9
6.1.1 Calibration Requirements for Valid Data Days.....	9
6.1.2 Air Flow Requirements for Valid Data Days	10
7.0 DIVISION OF RESPONSIBILITIES	10
7.1 FUNDING BOUNDARIES	14
7.2 MAINTENANCE OPERATIONS.....	14
7.3 TANK ISOLATION (SAFETY ISSUE).....	14
7.4 NOTIFICATIONS AND APPROVALS	15
8.0 QUALITY ASSURANCE	15
9.0 SAFETY	15
10.0 REFERENCES.....	16

3-1 Tanks Equipped with SHMS Instrumentation.....	2
5-1 Calibration Description and Frequency.....	5
5-2 Process Instrumentation Calibration Schedule.....	8

LIST OF FIGURES

7-1 SHMS-E with Analytical Module.....	13
---	-----------

1.0 INTRODUCTION

Tanks that are known or suspected to retain and occasionally release flammable gases are equipped with Standard Hydrogen Monitoring System (SHMS) cabinets. These cabinets contain Whittaker™ electrochemical cells and may also have a gas chromatograph (GC) and/or a Bruel and Kjaer infrared photo-acoustic multi-gas monitor (B&K). The GC and B&K will be referred to collectively as "analytical instruments" in this document. Using these instruments, a tank can be monitored for hydrogen, helium, ammonia, methane, and nitrous oxide. Air from the tank vent header (for actively ventilated tanks) or dome space (for passively ventilated tanks) is drawn continuously through the monitoring instruments via a sample pump. This monitoring is performed to track the gas release behavior of selected waste storage tanks and to help identify any potentially serious gas release behavior. Vapor grab samples may be obtained from the SHMS as well and analyzed with a mass spectrometer to obtain concentration data about hydrogen and other gases.

2.0 SCOPE

This document describes the requirements for the operation, maintenance, calibration, and data collection for the Standard Hydrogen Monitoring System. Additionally, this document defines who is responsible for the various tasks.

3.0 PHYSICAL DESCRIPTION

A SHMS consists of hydrogen specific monitors (Whittaker™ cells), a grab sampler, and a gas sampling system (tubing, valves, vacuum pumps, etc.). The grab sampler allows vapor samples to be isolated and transported to a laboratory for measurement of hydrogen and other gases. The first SHMS was developed to continuously monitor hydrogen concentrations on waste tank 241-SY-101. See WHC-SD-WM-SDD-001 (Atencio 1992) for the system design description.

Based on the success of the original SHMS, the system was upgraded to automatically obtain a grab sample on high hydrogen readings of 6,250 ppm or greater. Also, the Whittaker™ cells were configured so that one covers a high range (0 - 10% by volume) and one covers a low range (0 - 1% by volume). This modified version is called the SHMS-B. See WHC-SD-WM-SDD-055 (Schneider 1996a) for the system design description.

As specific needs have arisen, the SHMS-B has been modified to provide the needed capabilities. This has resulted in several variations that include models C, D, E, and E+.

The SHMS-C is a SHMS-B unit that is modified to accommodate a dual column gas chromatograph with thermal conductivity detectors (GC-TCD). The SHMS-C is designed to accurately record baseline hydrogen concentrations that are well below the range of the Whittaker™ cells. The system design description is found in WHC-SD-WM-SDD-058 (Schneider 1996b).

The SHMS-D is a SHMS-B unit that is modified to accommodate a B&K monitor, which measures ammonia. The SHMS-D was developed to monitor ammonia concentrations in the ventilation exhaust of double-shell tanks (DSTs). The system design description is found in WHC-SD-WM-SDD-059 (Schneider 1996c).

The SHMS-E accommodates a GC-TCD and a B&K monitor (but they are not installed). The SHMS-E is intended for the same applications as SHMS-B. The SHMS-E can be easily upgraded to an E+. The SHMS-E+ is a SHMS-E with the GC and the B&K monitor installed. The GC measures hydrogen, helium, nitrous oxide, and methane, and the B&K monitor detects ammonia. The system design description is found in HNF-SD-WM-SDD-077 (Schneider 1997).

For SHMS on tanks with a history of high moisture and on all new systems, Sample Gas Conditioners (SGCs) have been or are being installed. These systems consist of a condenser coil that separates moisture from the sample stream. These systems are intended to prevent moisture clogging of the SHMS sample lines.

Drawing tree H-14-100834 (MCE Engineering 1997a) has the system drawing list for the SHMS cabinets. The Certified Vendor Information (CVI) file for the SHMS is VI-22192.

Table 3-1 lists the tanks and types of SHMS currently installed.

Table 3-1. Tanks Equipped with SHMS Instrumentation

Tank	SHMS Type	Date Installed
SY-101	SHMS (3 units)	March 1992
SY-103	SHMS-B	May 1992
AW-101	SHMS-B	September 1994
AW Farm exhaust vent	SHMS-D	June 1996
AN-101	SHMS-E+	May 1997
AN-103	SHMS-B	September 1994
AN-104	SHMS-C	September 1994
AN-105	SHMS-B	September 1994
AN-107	SHMS-B (from A-101)	May 1997
AN Farm exhaust vent	SHMS-D	June 1996
AY-102	SHMS-C	March 1997
BY-103	SHMS-B	July 1995

Table 3-1. Tanks Equipped with SHMS Instrumentation

BY-105	SHMS-E+	May 1997
BY-106	SHMS-D	July 1995
BY-109	SHMS-D	July 1995
A-101	SHMS-E+	May 1997 (replaces a SHMS-B installed March 1995)
AX-101	SHMS-B	March 1995
AX-103	SHMS-B	March 1995
AZ-101	SHMS-E	May 1997
AZ-102	SHMS-E	May 1997
C-106	SHMS-C	March 1997
S-101	SHMS-E	September 1997
S-102	SHMS-B	March 1995
S-106	SHMS-E+	September 1997
S-107	SHMS-B (from SX-103)	September 1997
S-109	SHMS-E+	September 1997
S-111	SHMS-B	March 1995
S-112	SHMS-B	March 1995
SY-102	SHMS-E+	September 1997
SX-101	SHMS-B	March 1995
SX-102	SHMS-B	March 1995
SX-103	SHMS-E+	March 1998
SX-104	SHMS-B	March 1995
SX-105	SHMS-B	March 1995
SX-106	SHMS-B	March 1995
SX-109	SHMS-B	March 1995
T-110	SHMS-B	March 1995
U-102	SHMS-B (from U-105)	May 1998
U-103	SHMS-B	March 1995

Table 3-1. Tanks Equipped with SHMS Instrumentation

U-105	SHMS-E+	May 1998
U-107	SHMS-B	March 1995
U-108	SHMS-B	March 1995
U-109	SHMS-B	March 1995
B-111	SHMS-E+	To be installed FY2000

4.0 OPERATION AND MAINTENANCE

4.1 SHMS

Routine operations for the SHMS cabinets consist of checking the alarm panel for any illuminated alarm lamps, testing the alarm panel, recording hydrogen concentrations from the display panel for the Whittaker cells, recording inlet filter differential pressure and flow, and checking the strip chart recorder for paper. These operations are performed daily.

Vapor grab samples may be taken from tanks with SHMS cabinets for the purpose of determining gas concentration by mass spectrometry on the captured gas sample. The captured sample is isolated and transported to a laboratory capable of performing vapor phase analyses. For fiscal year 2000, several systems will be vapor-grab sampled; however, the only tank that is to be vapor sampled per direction of this task plan is 241-AX-103. Continued sample line clogging within the SHMS on 241-AX-103 has resulted in a total lack of gas characterization data for several years. It is anticipated that vapor grab sampling from the dome space independent of the SHMS instrument in-gas tube will provide data requested.

The procedure for these operations is in TO-040-040 (LMHC 1997b) for SHMS, SHMS-B, and SHMS-C. The procedure for SHMS-D, SHMS-E and SHMS-E+ is TO-040-041 (LMHC 1997c). Operation of the Sample Gas Conditioning Cabinets is listed in TO-040-043 (LMHC 1997d).

4.2 ANALYTICAL INSTRUMENTS

Routine operations for the analytical instruments; i.e., gas chromatographs and B&K infrared photo-acoustic multi-gas monitors, are system checks that verify proper flow and temperature properties, calibration gas pressure, carrier gas pressure, and instrument functionality. Data files are archived and system clocks are synchronized. Routine system checks are performed at least once per week.

5.0 INSTRUMENT CALIBRATION AND VERIFICATION

5.1 CALIBRATION AND VERIFICATION OF WHITTAKER™ CELLS

The Whittaker™ cells are calibrated quarterly. The calibration procedure for SHMS, SHMS-B, and SHMS-C is 6-GENI-408 (LMHC 1997h). The calibration procedure for SHMS-D, SHMS-E, and SHMS-E+ is 6-GENI-440 (LMHC 1997i).

In most SHMS, the Whittaker™ cell data output is transmitted to the Tank Monitoring and Control System (TMACS). TMACS converts the 4-20 mA output signal to 0 - 10,000 counts. These counts are converted to percentages depending on whether the signal is transmitted from the low range or high range cell. The calibration procedures listed above include a maintenance check to verify the output signals from the Whittaker™ cells correctly correlate to the values recorded on TMACS.

5.2 CALIBRATION OF ANALYTICAL INSTRUMENTS

Calibrations of the B&K monitor will be conducted in the 306-E Gas Laboratory by instrument technicians. The B&K monitors are calibrated semi-annually. The calibration procedure is 6-GM-143 (LMHC 1997a). Other general maintenance procedures are 6-RECD-175 (LMHC 1997g), 6-RECD-258 (LMHC 1997j), and 6-PCD-259 (LMHC 1997f). The following section describes calibration terms, methodologies, frequencies, and documentation requirements. Table 5-1 summarizes the information presented in sections 5.2.1 through 5.2.5.

Table 5-1. Calibration Description and Frequency.

Description	Frequency	Documentation
Gas Chromatograph Verification	Biweekly	Verification log to file
Gas Chromatograph Calibration	As Needed	Verification and method report to log and file
GC Multi-Point Certification	Annually	Certification log to file
B&K Calibration	Semi-annually	Calibration Data Sheets to PMS files

Table 5-1. Calibration Description and Frequency.

Description	Frequency	Documentation
Gas Chromatograph Verification	Biweekly	Verification log to file
Gas Chromatograph Calibration	As Needed	Verification and method report to log and file
GC Multi-Point Certification	Annually	Certification log to file
B&K Calibration	Semi-annually	Calibration Data Sheets to PMS files

5.2.1 Terminology

Chromatogram	Raw data acquired by a gas chromatograph. Consist of binary or ASCII representation of detector signal versus acquisition time. The injection of sample or calibration standard results in peaks in the chromatogram. Areas under the peaks are proportional to concentration.
Response Factor	Linear proportionality constant relating area under a chromatogram's peak to gas concentration. Response factor or RF is defined as Area/Concentration.
Verification	Verification refers to process of injecting standard calibration gases into analytical systems and comparing the instrument response to these standards. Verification also refers to the process of insuring the integration is not including area from an adjacent peak and that the delay column is functioning normally.
Validation	Process of updating the linearization curve (response factor), or the integration method used to convert peak areas to concentration.
Purge	The process of heating (baking out) the delay column to remove impurities which may reduce the accuracy or sensitivity of the detectors.
Multi-point	The GCs will be tested annually, using at least two Certification calibration gas concentrations, to assure that the response of the GC is linear and accurate (i.e., 100 ppm and 1000 ppm).

SHMS-E+ The addition of the "+" to the SHMS-E designation, is an abbreviated form of saying that a specific SHMS has the gas chromatograph and B&K monitor installed.

5.2.2 Gas Chromatograph Verification

The gas chromatograph instruments shall be verified a minimum of once every two weeks. This verification shall consist of injecting a hydrogen standard of known concentration into the GC. The indicated concentration is compared to the certified concentration of the standard. If the deviation between these two values is greater than $\pm 10\%$, a response factor change, method reconstruction, or further diagnostics is required.

Results of the biweekly gas chromatograph verifications shall be archived with the data obtained. Each gas chromatograph has a logbook, which is kept in the cabinet. Remote Automation Instrumentation Laboratory (RAIL) and Facility Maintenance personnel may make log entries. A description of the problem and/or changes made shall be provided to the data customer and electronically included in the meta-data supplement of the Data Archive.

5.2.3 Gas Chromatograph Multi-Point Certification

The gas chromatograph instruments shall be verified for accuracy and linearity a minimum of annually or more frequently as required by biweekly instrument checks. Verification shall consist of injection of at least two different concentrations of standard calibration gases. The Response Factor of the instrument shall be calculated and updated as required.

Results of the annual gas chromatograph certification shall be recorded on a gas chromatograph log report. A copy of the calibration report shall be maintained in the SHMS project file maintained by RAIL personnel. The Multi-point test shall be noted in the SHMS Log Book along with any changes made. This information shall also be included in the meta-data supplement of the Data Archive.

5.2.4 System Loop Verifications

All SHMS analytical instrumentation data communication is digital via Ethernet or RS-232 communications. No analog conditioning or loop losses are introduced into the system.

At least annually, a random check shall be performed comparing at least 15 data points from each instrument's host computer file and associated master data file.

Results of the annual loop verifications shall be recorded on a SHMS System Loop Verification Log Sheet and maintained on file in the RAIL instrument calibration file.

5.2.5 Process Instrumentation

SHMS also houses process instrumentation for monitoring system pressures, flow, and temperatures. These instruments are not analytical tools; but the data generated is useful for information purposes only. The process instrumentation is initially calibrated by FDH Standards Laboratory. Recalibration of these instruments is performed according to the following schedule:

Table 5-2. Process Instrumentation Calibration Schedule

Instrument	Calibration Schedule
Electronic or chart recorder	Biannually
Newport voltmeter monitoring the Whittaker™ cell voltages	Quarterly with Whittaker™ cells
Input sample pressure gauge	Every 3 years
Differential pressure gauge across filters	Every 3 years
Rosemount flow/pressure gauges (selectable - differential pressure across gas chromatograph and various selectable lines to atmosphere)	Every 3 years
Rotometers – flow	No calibration
Low flow alarm	No calibration but functional test at shutdown
Cabinet thermocouple and temperature controller	No calibration
Calibration gas temperature controller	No calibration
Sample line temperature controller and thermocouple	No calibration

6.0 DATA COLLECTION

SHMS hydrogen data are recorded electronically and on a strip chart recorder. Tanks in AN, S, SX, SY, T, and U farms have SHMS, which are connected to the Tank Monitoring and Control System (TMACS). TMACS checks the hydrogen reading once per minute and records a datum point if the difference between this point and the previously recorded datum point is over 50 ppm (for the low range cell) or 150 ppm (for the high range cell). Data are examined on a weekly basis by Process Engineering.

Data from SHMS not connected to TMACS are recorded on strip charts. The SHMS are checked during daily rounds by Tank Farm Operations, and the hydrogen concentrations displayed by the digital readout are recorded on round sheets. The shift office sends these sheets once per week to Process Engineering, and the readings are typed into computer spreadsheets. If a rise in

hydrogen concentration is detected, the strip chart may be collected and delivered to Process Engineering if requested. Data during any hydrogen activity are transcribed from the strip chart into computer spreadsheets. These spreadsheets are kept on the Fileserver AP012\BARO. The Technical Data Service Center permanently stores the strip charts.

Tanks 241-AY-102, 241-AZ-101, 241-AZ-102, 241-C-106 and 241-S-101, are equipped with "paperless strip charts", computerized recorders which copy data to floppy disks. Paperless strip charts will be installed on tanks that have a SHMS-E. The floppy disks are collected once per month, and a copy of the data will be sent to Process Engineering.

A high hydrogen alarm on the SHMS is activated if the hydrogen concentration exceeds 6250 ppm. If the alarm is activated, all work in or near the tank is stopped. Hydrogen readings above 2500 ppm require notification of DOE-ORP within 24 hours. The 24-hour period begins with the discovery of the high hydrogen reading and ends on the next business day. Notification is made through Process Engineering and Safety Analysis.

If the high hydrogen alarm is activated, a vapor grab sample will be taken automatically at the SHMS. The valves on either side of the sample cylinder must be manually closed within two hours after the initiation of the high hydrogen alarm. If the alarm continues for a longer period than two hours, the valves must be closed immediately after the alarm has stopped. If the valves are not tightened, vapor may leak from the cylinder, compromising the sample integrity.

6.1 DETERMINATION OF VALID DATA DAYS

Performance improvement often requires measurable goals. A unit of performance measurement that can be associated with the SHMS is a 24-hour day (midnight to midnight) during which at least one reliable hydrogen gas concentration measurement has been taken from a tank or stack monitor with a SHMS installed. A reliable measurement is a reading taken from any of several possible hydrogen monitoring systems present on the tank, including gas chromatographs, provided the instrument is within calibration requirements and there is proper air flow through the instrument. Vapor grab sample measurements, using mass spectrometry, may also provide valid data days for those days on which the measurements were taken. The number of data days can be used to assess current performance and assist in assigning priority to problem areas. There is currently no performance agreement in place stipulating required data days. However, they will be compiled as an internal improvement tool.

6.1.1 Calibration Requirements for Valid Data Days

The SHMS cognizant engineer, from Equipment Engineering, shall monitor all calibration activity for the SHMS monitoring equipment. All data recorded during periods when the instrument is found to be out of calibration (per Section 5.0), or taken in a period during which a prescribed calibration date has expired, will be considered suspect. The cognizant engineer will review the operation of the instrument and the data recorded over the period when the data were suspect and notify Process Engineering of the anomaly. Together, the cognizant engineer and a

SHMS process engineer shall determine which data are not reliable.

6.2.2 Air Flow Requirements for Valid Data Days

Each tank with a SHMS monitor also has an airflow monitor. A "Flow Value" for each tank has been determined and is routinely posted on or near the airflow monitor. Operations takes monitor readings every day for each SHMS cabinet and records the flow value on a "rounds" sheet. If the airflow recorded varies by more than 0.4 inches of water (2.5 inches is roughly equivalent to 0.5 cubic feet per minute) from the posted airflow, operations is to so note on the round sheets and notify appropriate Maintenance personnel of the anomaly for correction. Process Engineering reviews the round sheets weekly and places all data recorded during any period where the airflow drops below a 0.4 inches reading as suspect. Process Engineering then reviews the data coincidental to the anomaly and determines if reliability for the hydrogen concentration has been lost. All data recorded for that day, if determined unreliable, will lead to elimination of the valid data day, unless a vapor grab sample was taken. Documentation of this decision must be kept in Process Engineering letter books.

7.0 DIVISION OF RESPONSIBILITIES

River Protection Project (RPP) Tank Waste Operations (TWO) is ultimately responsible for the activities covered in this plan. Routine operation, maintenance, and calibration of the SHMS are defined by the procedures listed in Sections 4.1, 5.1, and 5.2. The maintenance of spare parts and consumables is also a key responsibility. With the procurement of carrier gas and calibration gas comes the requirement to obtain vendor certifications on the calibration gases. Each calibration gas certification sheet shall be stored for record. Validation of the data requires a vendor certified reference gas standard (auditable).

Physical items of equipment and documentation included in this set are:

- ◆ SHMS Cabinet with Whittaker™ cells, controllers, and filters
- ◆ Exterior gas bottle rack(s)
- ◆ Bottles, regulators, and sample lines
- ◆ Sample pump
- ◆ Gas Sample Conditioner
- ◆ Gas Sample Probe
- ◆ Power supply (breaker, cables, and transformer)
- ◆ Environmental control system
- ◆ TMACS communication interface
- ◆ Data recorder (where present)

SHMS documentation must be maintained in an auditable manner. The following list contains specific documents to be maintained:

- ◆ Gas certification sheets, from the bottled gas vendor, for each calibration gas bottle. Operations is to note on each certification, the SHMS unit served by the gas, and the date connected to the manifold.
- ◆ Standard Hydrogen Monitoring System, System Design Description, "WHC-SD-WM-SDD-001, Rev. 0."
- ◆ Standard-B Hydrogen Monitoring System, System Design Description, "WHC-SD-WM-SDD-055, Rev. 1."
- ◆ Standard-C Hydrogen Monitoring System, System Design Description, "WHC-SD-WM-SDD-058, Rev. 0."
- ◆ Standard-D Hydrogen Monitoring System, System Design Description, "WHC-SD-WM-SDD-059, Rev. 0."
- ◆ Standard-E Hydrogen Monitoring System, System Design Description, "HNF-SD-WM-SDD-077, Rev. 0."
- ◆ Standard Hydrogen Monitoring System-A Operations and Maintenance Manual, "WHC-SD-WM-OMM-005, Rev. 0."
- ◆ Standard Hydrogen Monitoring System-B Operations and Maintenance Manual, "HNF-SD-WM-OMM-015, Rev. 1."
- ◆ Standard Hydrogen Monitoring System-C Operations and Maintenance Manual, "HNF-SD-WM-OMM-018, Rev. 0."
- ◆ Standard Hydrogen Monitoring System-D Operations and Maintenance Manual, "HNF-SD-WM-OMM-028, Rev. 0."
- ◆ Standard Hydrogen Monitoring System-E Operations and Maintenance Manual, "HNF-SD-WM-OMM-029, Rev. 0."
- ◆ Operating Procedures: TO-040-040, TO-040-041, and TO-040-043
- ◆ Maintenance Procedures: 6-GM-143, 6-RECD-175, 6-RECD-258, 6-PCD-259, 6-GENI-408, 6-GENI-440, and 6-TF-509

This task plan covers the SHMS, sample pump, bottle rack, sample lines, and power supply, but does not extend to the temporary analytical equipment added to some SHMS units. Oversight for all aspects of the functional SHMS is a Tank Waste Operations responsibility. Any modification by RAIL personnel of the analytical equipment will be coordinated with Operations, including the SHMS Cognizant Engineer and the Shift Manager.

The Field Sampling Group from Characterization Project Operations is responsible for obtaining

vapor grab samples from the SHMS. Process Engineering will develop a work schedule before sampling. RPP Tank Waste Operations is responsible for manually tightening the sample cylinder valves if a vapor grab sample is automatically taken, as discussed in section 6.0. Truck drivers ship the samples to the appropriate analytical laboratory for analysis. Process Engineering will be responsible for specifying analyses and methodology on the vapor samples.

Instrument technicians shall perform maintenance of the strip chart recorders. Data analysis and electronic archival of the SHMS data recorded exclusively on strip charts are the responsibility of Process Engineering. Facility Maintenance technicians retrieve the data and provide them to RAIL personnel who archive data files downloaded from gas chromatographs and other analytical instruments on CD-ROM and on Fileserver AP005\gas.

Operators or their managers will notify the on-call Process Engineer of flammable gas concentrations above notification limits per HNF-IP-0842, Volume II, Section 5.10. Process Engineering will then notify Safety Analysis and DOE-ORP within one business day following the notification. .

Special analytical and temporary equipment installed in some SHMS units. will be owned, supported and later removed by RAIL.

Equipment and administrative criteria included in this set (see Figure 7-1) are defined by drawings H-14-100846, sheets 1-3 (MCE Engineering 1997c), H-14-100847, sheets 1-4 (MCE Engineering 1997b), and the following list:

- ◆ MTI Gas Chromatograph (SHM-GC-060)
- ◆ GC Computer (SHM-PC-060)
- ◆ B&K Photo Acoustic Monitor (SHM-NIT-052)
- ◆ National Instruments Data Acquisition Module (SHM-MUX-070)
- ◆ National Instruments Analog to digital converters, signal conditioners, and I/O switches (SHM-YY-070, SHM-YY-071, TB3, Cab-1)
- ◆ Host Data Acquisition Computer (SHM-PC-070)
- ◆ SHMS Analytical Subsystem Software
- ◆ HLAN Interface (in 2 forms: twisted pair and radio modem)


Figure 7-1. SHMS-E with Analytical Module.

Analytical Modules

SHMS-E Cabinet



SHMS-E I/O Tray/Drawer Assembly

- *-SHM-PC-070 ---->
- *-SHM-MUX-070 ---->
- *-SHM-YY-070 ---->
- *-SHM-YY-071 ---->
- TB3 ---->

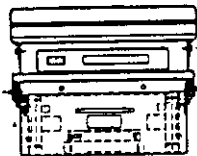

SHMS-E Multi-Gas Analyzer Stand

- *-SHM-PC-060 ---->
- *-SHM-GC-060 ---->
- *-SHM-NIT-052 ---->

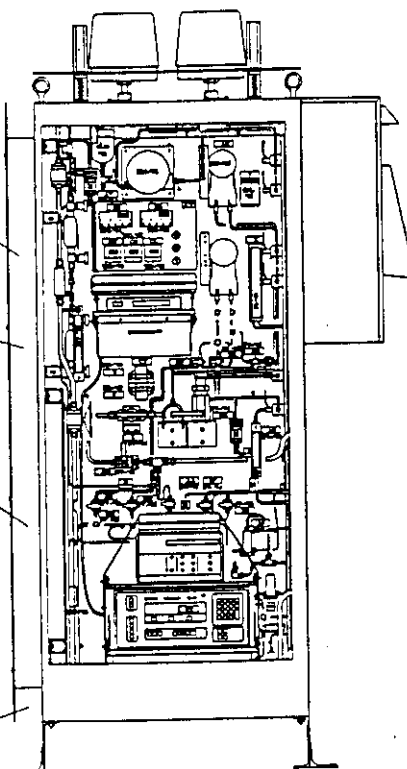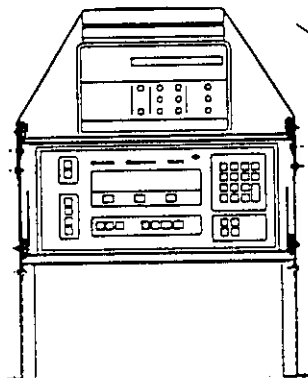

Responsibility for maintenance of some SHMS Documentation will be retained by RAIL. Specific documents to be maintained by RAIL are:

- ◆ Electronic copy of data from the analytical subsystems, including calculated data, chromatogram files, and meta-data defining errors, also showing system outages or gaps in the data.
- ◆ Computer Systems and Software Description for Standard-E+ Hydrogen Monitoring System (SHMS-E+), "HNF-SD-WM-CSWD-084, Rev. 0."
- ◆ Functional Design Criteria for Standard-E Hydrogen Monitoring System, Portable Platform, "HNF-SD-WM-FDC-055, Rev. 0."

Validation of the Gas Chromatograph system and data as well as verification of the integration method will be accomplished by the RAIL team as described in Sections 5.2.2, 5.2.3, and 5.2.4.

7.1 FUNDING BOUNDARIES

Funding for maintenance, modification, or operational activities, and training will be Tank Safety Issue Resolution Project budget responsibility. The cost of installing, supporting, repairing, modifying, and removing the analytical package, in a "C", "D", or "E" SHMS configuration will be funded by those programs which are responsible for monitoring and evaluating the flammable gas safety issue.

7.2 MAINTENANCE OPERATIONS

Tank Farms Facility Maintenance personnel using work packages and the Job Control System (JCS) will conduct maintenance activities initiated by RAIL personnel. Of course, maintenance activities can also include routine preventive maintenance as well as work packages initiated by Maintenance personnel themselves, as a need is determined. Work package resolutions will be drafted by the SHMS cognizant system engineer and conducted by Tank Farms Crafts in conjunction with RAIL personnel and Operations as appropriate. The appropriate Tank Farm Cognizant Engineer maintains final signature approval for JCS work packages that modify his/her facility. Prior to field maintenance on a SHMS system, training of Maintenance and Operations personnel shall be conducted as required on the off-line SHMS mock-up system located in the 306E building. The cognizant SHMS engineer may elect to witness any field maintenance.

7.3 TANK ISOLATION (SAFETY ISSUE)

The tank vapor space gases will be isolated from the maintenance activity prior to opening the line for maintenance.

7.4 NOTIFICATIONS AND APPROVALS

Communication of changes, outages, and reduced capability are an important factor in optimum system performance. Shift Operations will, therefore, notify the SHMS Cognizant Engineer and RAIL personnel of outages or activities that may impact the SHMS system (power outage, sample line valved out, exhauster outage, or access change). Likewise RAIL personnel will notify the SHMS Cognizant Engineer and the appropriate Area Shift Manager in advance of any planned SHMS analytical equipment outage.

Change authorization for the SHMS analytical equipment, including its hardware or software, shall include RAIL personnel and the RPP Equipment Engineering - SHMS Cognizant Engineer. RPP Equipment Engineering will supply the Cognizant Engineer and the Cognizant Engineer Manager for the SHMS.

8.0 QUALITY ASSURANCE

All work is conducted in accordance with the relevant quality requirements of HNF-IP-0842, *Lockheed Martin Hanford Corporation Quality Assurance Program Plan* (Byers 1998).

9.0 SAFETY.

HNF-SD-WM-SAR-067, *Tank Waste Remediation System Final Safety Analysis Report* (Goetz 1999), describes two levels of classification for equipment, the Safety-Class level, and the Safety-Significant level. No SHMS are mentioned in this report. However, the SHMS for tank 241-SY-101 is listed as a Safety-Class level system in HNF-3737, *Tank 241-SY-101 Safety Basis for Remediation Activities and Operations Before Closure of the Unreviewed Safety Question on Waste Surface Change* (Ryan 1999). The former document defers classification of the 241-SY-101 SHMS to the latter document. By default, all other hydrogen monitoring systems on single- and double-shell tanks are classified as General Services systems. All applicable requirements/criteria from these two documents shall be in effect for the SHMS.

10.0 REFERENCES

- Atencio, J. K., 1992, *Standard Hydrogen Monitoring System, System Design Description*, WHC-SD-WM-SDD-001, Rev. 0, Westinghouse Hanford Company, Richland, Washington.
- Byers, S. M., 1998, *Lockheed Martin Hanford Corporation Quality Assurance Program Plan*, HNF-IP-0842, Volume XI, Section 1.1, Rev. 2, Lockheed Martin Hanford Corporation, Richland, Washington.
- Erhart, M. F., 1998, *Computer Systems and Software Description for Standard-E+ Hydrogen Monitoring System (SHMS-E+)*, HNF-SD-WM-CSWD-084, Rev. 0, Lockheed Martin Hanford Corporation, Richland, Washington.
- Goetz, T. G., 1999, *Tank Waste Remediation System Final Safety Analysis Report*, HNF-SD-WM-SAR-067, Rev. 1, Lockheed Martin Hanford Corporation, Richland, Washington.
- LMHC, 1997a, *Brueel and Kjaer 1302 Ammonia Monitor Calibration*, 6-GM-143, Rev. B-2, Lockheed Martin Hanford Corporation, Richland, Washington.
- LMHC, 1997b, *Operate the Standard B or Standard C Hydrogen Monitoring Systems*, TO-040-040, Rev. C-10, Lockheed Martin Hanford Corporation, Richland, Washington.
- LMHC, 1997c, *Operate the Standard D and E Hydrogen Monitoring System*, TO-040-041, Rev. C-4, Lockheed Martin Hanford Corporation, Richland, Washington.
- LMHC, 1997d, *Operate Standard Hydrogen Monitoring System Gas Sample Conditioner*, TO-040-043, Rev. A-8, Lockheed Martin Hanford Corporation, Richland, Washington.
- LMHC, 1997f, *Rosemount Model 3051C Differential and Gauge Pressure Transmitter Using Model 268 Smart Family Interface Calibration*, 6-PCD-259, Rev. B-0, Lockheed Martin Hanford Corporation, Richland, Washington.
- LMHC, 1997g, *Westronic Smartview Data Recorder Used in SHMS Cabinet Calibration Procedure*, 6-RECD-175, Rev. 0-0, Lockheed Martin Hanford Corporation, Richland, Washington.

- LMHC, 1997h, *Whittaker Model 114D038-10 Hydrogen Cell with Newport Infinity Electronics, Calibration for Cabinets "A", "B", and "C"*, 6-GENI-408, Rev. B-0, Lockheed Martin Hanford Corporation, Richland, Washington.
- LMHC, 1997i, *Whittaker Model 114D038-10 Hydrogen Cell with Newport Infinity Electronics, Calibration for Cabinet D and E*, 6-GENI-440, Rev. B-0, Lockheed Martin Hanford Corporation, Richland, Washington.
- LMHC, 1997j, *Yokagawa (YEW) Micro R1000 Series Recorder Calibration Procedure (draft)*, 6-RECD-258, Rev. A-1, Lockheed Martin Hanford Corporation, Richland, Washington.
- MCE Engineering, 1997a, *Standard-E Hydrogen Monitoring System Drawing List/Tree*, Drawing H-14-100834, Rev. 0, Mid-Columbia Engineering, Richland, Washington.
- MCE Engineering, 1997b, *Standard-E Hydrogen Monitoring System I/O Tray/Drawer Assembly*, Drawing H-14-100847, Rev. 0, Mid-Columbia Engineering, Richland, Washington.
- MCE Engineering, 1997c, *Standard-E Hydrogen Monitoring System Multi-Gas Analyzer Module*, Drawing H-14-100846, Rev. 0, Mid-Columbia Engineering, Richland, Washington.
- Phillipp, B. L., 1997, *Functional Design Criteria for Standard-E Hydrogen Monitoring System, Portable Platform*, HNF-SD-WM-FDC-055, Rev. 0, Duke Engineering and Services, Incorporated, Richland, Washington.
- Ryan, G. W., 1999, *Tank 241-SY-101 Safety Basis for Remediation Activities and Operations Before Closure of the Unreviewed Safety Question on Waste Surface Change*, HNF-3737, Rev. 0., Fluor Daniel Hanford, Inc., Richland, Washington.
- Schneider, T. C., 1996a, *Standard-B Hydrogen Monitoring System, System Design Description*, WHC-SD-WM-SDD-055, Rev. 1, Westinghouse Hanford Company, Richland, Washington.
- Schneider, T. C., 1996b, *Standard-C Hydrogen Monitoring System, System Design Description*, WHC-SD-WM-SDD-058, Rev. 0, Westinghouse Hanford Company, Richland, Washington.
- Schneider, T. C., 1996c, *Standard-D Hydrogen Monitoring System, System Design Description*, WHC-SD-WM-SDD-059, Rev. 0, Westinghouse Hanford Company, Richland, Washington.
- Schneider, T. C., 1997, *Standard-E Hydrogen Monitoring System - System Design Description*, HNF-SD-WM-SDD-077, Rev. 0, Numatec Hanford Corporation, Richland, Washington.

DISTRIBUTION SHEET

To	From	Page 1 of 1
Distribution	Models and Inventory	Date 10/25/99
Project Title/Work Order		EDT No. N/A
HNF-SD-WM-ETP-227, Rev. 2, "Engineering Task Plan for Standard Hydrogen Monitoring System Operation"		ECN No. ECN-656005

Name	MSIN	Text With All Attach.	Text Only	Attach./Appendix Only	EDT/ECN Only
------	------	-----------------------	-----------	-----------------------	--------------

COGEMA

D. D. Tate	L6-37	X			
------------	-------	---	--	--	--

U. S. Department of Energy - Richland Field Office

C. A. Groendyke	H6-60	X			
DOE/RL Reading Room	H2-53	X			

Fluor Daniel Hanford

S. B. Carter	R3-86	X			
B. K. Hampton	L5-65	X			

Lockheed Martin Hanford Corp.

W. B. Barton	R2-12	X			
R. E. Bauer	S7-73	X			
R. G. Brown	S7-12	X			
C. B. Bryan	R2-58	X			
R. J. Cash	R1-44	X			
M. F. Erhart	R2-33	X			
K. D. Fowler	R2-11	X			
A. H. Friberg	R1-56	X			
J. M. Hay	T4-01	X			
K. M. Hodgson	R2-11	X			
G. D. Johnson	R1-44	X			
T. J. Kelley	R2-33	X			
G. M. Koreski	R2-11	X			
R. L. Legg	R2-33	X			
D. J. McCain	R2-12	X			
R. S. Rodriguez	S0-09	X			
R. L. Schlosser	R1-56	X			
J. J. Verderber	S5-15	X			
T.C.S.R.C.	R1-10	X			

Lockheed Martin Services, Inc.

Central Files	B1-07	X			
---------------	-------	---	--	--	--

Numatec Hanford Corporation

D. W. Crass	H0-34	X			
T. C. Schneider	L6-37	X			

Waste Management Federal Services of Hanford, Inc.

T. A. Erickson	T4-52	X			
----------------	-------	---	--	--	--