

## **SANDIA REPORT**

SAND2017-4015  
Unlimited Release  
Printed April 18, 2017

# **Library of Advanced Materials for Engineering (LAMÉ) 4.44**

William M. Scherzinger, Brian T. Lester  
Solid Mechanics Department  
Engineering Sciences Center

Prepared by  
Sandia National Laboratories  
Albuquerque, New Mexico 87185 and Livermore, California 94550

Sandia National Laboratories is a multi-program laboratory managed and operated by Sandia Corporation, a wholly owned subsidiary of Lockheed Martin Corporation, for the United States Department of Energy's National Nuclear Security Administration under Contract DE-AC04-94AL85000.



**Sandia National Laboratories**

Issued by Sandia National Laboratories, operated for the United States Department of Energy by Sandia Corporation.

**NOTICE:** This report was prepared as an account of work sponsored by an agency of the United States Government. Neither the United States Government, nor any agency thereof, nor any of their employees, nor any of their contractors, subcontractors, or their employees, make any warranty, express or implied, or assume any legal liability or responsibility for the accuracy, completeness, or usefulness of any information, apparatus, product, or process disclosed, or represent that its use would not infringe privately owned rights. Reference herein to any specific commercial product, process, or service by trade name, trademark, manufacturer, or otherwise, does not necessarily constitute or imply its endorsement, recommendation, or favoring by the United States Government, any agency thereof, or any of their contractors or subcontractors. The views and opinions expressed herein do not necessarily state or reflect those of the United States Government, any agency thereof, or any of their contractors.

Printed in the United States of America. This report has been reproduced directly from the best available copy.

Available to DOE and DOE contractors from  
U.S. Department of Energy  
Office of Scientific and Technical Information  
P.O. Box 62  
Oak Ridge, TN 37831

Telephone: (865) 576-8401  
Facsimile: (865) 576-5728  
E-Mail: [reports@adonis.osti.gov](mailto:reports@adonis.osti.gov)  
Online ordering: <http://www.osti.gov/bridge>

Available to the public from  
U.S. Department of Commerce  
National Technical Information Service  
5285 Port Royal Rd  
Springfield, VA 22161

Telephone: (800) 553-6847  
Facsimile: (703) 605-6900  
E-Mail: [orders@ntis.fedworld.gov](mailto:orders@ntis.fedworld.gov)  
Online ordering: <http://www.ntis.gov/help/ordermethods.asp?loc=7-4-0#online>



# Library of Advanced Materials for Engineering (LAMÉ) 4.44

William M. Scherzinger, Brian T. Lester  
Solid Mechanics Department  
Engineering Sciences Center  
Sandia National Laboratories  
Box 5800  
Albuquerque, NM 87185-0840

## Abstract

Accurate and efficient constitutive modeling remains a cornerstone issues for solid mechanics analysis. Over the years, the LAMÉ advanced material model library has grown to address this challenge by implementing models capable of describing material systems spanning soft polymers to stiff ceramics including both isotropic and anisotropic responses. Inelastic behaviors including (visco)plasticity, damage, and fracture have all incorporated for use in various analyses. This multitude of options and flexibility, however, comes at the cost of many capabilities, features, and responses and the ensuing complexity in the resulting implementation. Therefore, to enhance confidence and enable the utilization of the LAMÉ library in application, this effort seeks to document and verify the various models in the LAMÉ library. Specifically, the broader strategy, organization, and interface of the library itself is first presented. The physical theory, numerical implementation, and user guide for a large set of models is then discussed. Importantly, a number of verification tests are performed with each model to not only have confidence in the model itself but also highlight some important response characteristics and features that may be of interest to end-users. Finally, in looking ahead to the future, approaches to add material models to this library and further expand the capabilities are presented.

## Acknowledgments

This document, and the models contained with it, are the result of a longstanding commitment to material modeling at Sandia National Laboratories. Many people have contributed to the material in this report. The list of people includes, but is not limited to Lupe Arguello, Arthur Brown, Bob Chambers, Jim Cox, Nathan Crane, Arlo Fossum, Jay Foulk, Arne Gullerud, Jason Hales, Dan Hammerand, Sam Key, Kevin Long, Mike Neilsen, Pania Newell, Jake Ostien, Kendall Pierson, Julia Plews, Tim Shelton, Ben Spencer, Mike Stone, Mike Tupek, and Jerry Wellman

# Contents

<b>1</b>	<b>Overview</b>	<b>19</b>
<b>2</b>	<b>Strategy</b>	<b>21</b>
2.1	Code Development . . . . .	21
2.2	Model Implementation . . . . .	22
2.2.1	Code Standards . . . . .	23
2.2.2	Testing Standards . . . . .	23
2.2.2.1	Verification Testing . . . . .	23
2.2.2.2	Performance Testing . . . . .	23
2.2.3	Documentation Standards . . . . .	24
<b>3</b>	<b>Code Style</b>	<b>25</b>
3.1	C/C++ . . . . .	25
3.2	FORTRAN . . . . .	26
<b>4</b>	<b>Interface</b>	<b>29</b>
<b>5</b>	<b>Material Models</b>	<b>31</b>
5.1	Hypoelastic Models . . . . .	32
5.2	Hyperelastic Models . . . . .	34
5.3	Elastic Model . . . . .	37
5.3.1	Theory . . . . .	37
5.3.2	Implementation . . . . .	38
5.3.3	Verification . . . . .	38
5.3.3.1	Uniaxial Stress . . . . .	38
5.3.3.2	Biaxial Stress . . . . .	40
5.3.3.3	Pure Shear . . . . .	42

5.3.4	User Guide . . . . .	44
5.4	Elastic Three Dimensional Orthotropic Model . . . . .	45
5.4.1	Theory . . . . .	45
5.4.2	Implementation . . . . .	46
5.4.3	Verification . . . . .	47
5.4.3.1	Biaxial Displacement . . . . .	47
5.4.3.2	Uniaxial Strain . . . . .	48
5.4.4	User Guide . . . . .	50
5.5	Neo-Hookean Model . . . . .	51
5.5.1	Theory . . . . .	51
5.5.2	Implementation . . . . .	51
5.5.3	Verification . . . . .	52
5.5.3.1	Uniaxial Stress . . . . .	52
5.5.3.2	Pure Shear Strain . . . . .	54
5.5.3.3	Pure Shear Stress . . . . .	55
5.5.3.4	Uniaxial Strain . . . . .	57
5.5.3.5	Simple Shear . . . . .	57
5.5.4	User Guide . . . . .	59
5.6	Elastic-Plastic Model . . . . .	60
5.6.1	Theory . . . . .	60
5.6.2	Implementation . . . . .	62
5.6.3	Verification . . . . .	63
5.6.3.1	Uniaxial Stress . . . . .	63
5.6.3.2	Pure Shear . . . . .	67
5.6.4	User Guide . . . . .	70
5.7	Elastic-Plastic Power Law Hardening Model . . . . .	72
5.7.1	Theory . . . . .	72
5.7.2	Implementation . . . . .	73
5.7.3	Verification . . . . .	74
5.7.3.1	Uniaxial Stress . . . . .	74
5.7.3.2	Pure Shear . . . . .	77
5.7.4	User Guide . . . . .	79

5.8 Ductile Fracture Model . . . . .	81
5.8.1 Theory . . . . .	81
5.8.2 Implementation . . . . .	81
5.8.3 Verification . . . . .	83
5.8.3.1 Uniaxial Stress . . . . .	83
5.8.3.2 Pure Shear . . . . .	86
5.8.4 User Guide . . . . .	88
5.9 Multilinear Elastic-Plastic Model . . . . .	90
5.9.1 Theory . . . . .	90
5.9.2 Implementation . . . . .	91
5.9.3 Verification . . . . .	92
5.9.3.1 Uniaxial Stress . . . . .	92
5.9.3.2 Pure Shear . . . . .	95
5.9.4 User Guide . . . . .	97
5.10 Multilinear Elastic-Plastic Fail Model . . . . .	99
5.10.1 Theory . . . . .	99
5.10.2 Implementation . . . . .	99
5.10.3 Verification . . . . .	101
5.10.3.1 Uniaxial Stress . . . . .	101
5.10.3.2 Pure Shear . . . . .	102
5.10.4 User Guide . . . . .	104
5.11 Johnson-Cook Model . . . . .	107
5.11.1 Theory . . . . .	107
5.11.2 Implementation . . . . .	108
5.11.3 Verification . . . . .	109
5.11.3.1 Uniaxial Stress . . . . .	109
5.11.3.2 Pure Shear . . . . .	111
5.11.4 User Guide . . . . .	115
5.12 Hosford Plasticity Model . . . . .	117
5.12.1 Theory . . . . .	117
5.12.2 Implementation . . . . .	118
5.12.3 Verification . . . . .	120

5.12.3.1	Uniaxial Stress . . . . .	120
5.12.3.2	Pure Shear . . . . .	120
5.12.4	User Guide . . . . .	123
5.13	Hill Plasticity Model . . . . .	125
5.13.1	Theory . . . . .	125
5.13.2	Implementation . . . . .	127
5.13.3	Verification . . . . .	128
5.13.3.1	Uniaxial Stress . . . . .	129
5.13.3.2	Pure Shear . . . . .	134
5.13.4	User Guide . . . . .	137
5.14	Barlat Plasticity Model . . . . .	139
5.14.1	Theory . . . . .	139
5.14.2	Implementation . . . . .	142
5.14.3	Verification . . . . .	143
5.14.3.1	Uniaxial Stress . . . . .	144
5.14.3.2	Pure Shear . . . . .	149
5.14.4	User Guide . . . . .	151
5.15	Power Law Creep Model . . . . .	153
5.15.1	Theory . . . . .	153
5.15.2	Implementation . . . . .	153
5.15.3	Verification . . . . .	154
5.15.3.1	Creep . . . . .	155
5.15.3.2	Stress Relaxation . . . . .	156
5.15.4	User Guide . . . . .	158
5.16	Viscoplastic Model . . . . .	159
5.16.1	Theory . . . . .	159
5.16.2	Implementation . . . . .	161
5.16.3	Verification . . . . .	162
5.16.3.1	Creep . . . . .	162
5.16.3.2	Stress Relaxation . . . . .	163
5.16.4	User Guide . . . . .	167
5.17	Hyperfoam Model . . . . .	169

5.17.1 Theory . . . . .	169
5.17.2 Implementation . . . . .	170
5.17.3 Verification . . . . .	170
5.17.3.1 Uniaxial Strain . . . . .	171
5.17.3.2 Biaxial Strain . . . . .	175
5.17.3.3 Pure Shear . . . . .	179
5.17.3.4 Simple Shear . . . . .	181
5.17.4 User Guide . . . . .	183
5.18 Hyperelastic Damage Model . . . . .	184
5.18.1 Theory . . . . .	184
5.18.2 Implementation . . . . .	185
5.18.3 Verification . . . . .	186
5.18.3.1 Uniaxial Strain . . . . .	186
5.18.3.2 Simple Shear . . . . .	187
5.18.4 User Guide . . . . .	189
5.19 Soil and Foam Model . . . . .	190
5.19.1 Theory . . . . .	190
5.19.2 Implementation . . . . .	190
5.19.3 Verification . . . . .	191
5.19.3.1 Triaxial Compression . . . . .	192
5.19.4 User Guide . . . . .	194
5.20 Shape Memory Alloy Model . . . . .	196
5.20.1 Theory . . . . .	196
5.20.2 Implementation . . . . .	200
5.20.3 Verification . . . . .	201
5.20.3.1 Uniaxial Stress – Pseudoelasticity . . . . .	202
5.20.3.2 Constant Stress Actuation . . . . .	203
5.20.4 User Guide . . . . .	206
5.21 Low Density Foam Model . . . . .	208
5.21.1 Theory . . . . .	208
5.21.2 Implementation . . . . .	209
5.21.3 Verification . . . . .	210

5.21.3.1	Uniaxial Compression . . . . .	210
5.21.3.2	Hydrostatic Compression . . . . .	211
5.21.4	User Guide . . . . .	214
5.22	Foam Plasticity Model . . . . .	215
5.22.1	Theory . . . . .	215
5.22.2	Implementation . . . . .	216
5.22.3	Verification . . . . .	217
5.22.3.1	Hydrostatic Compression . . . . .	217
5.22.4	User Guide . . . . .	219
5.23	Viscoplastic Foam Model . . . . .	220
5.23.1	Theory . . . . .	220
5.23.2	Implementation . . . . .	222
5.23.3	Verification . . . . .	223
5.23.3.1	Uniaxial Compression . . . . .	224
5.23.3.2	Hydrostatic Compression . . . . .	224
5.23.4	User Guide . . . . .	226
5.24	Foam Damage . . . . .	228
5.24.1	Theory . . . . .	228
5.24.2	Implementation . . . . .	231
5.24.3	Verification . . . . .	234
5.24.3.1	Uniaxial Compression . . . . .	234
5.24.3.2	Uniaxial Tension . . . . .	237
5.24.3.3	Hydrostatic Compression . . . . .	238
5.24.3.4	Hydrostatic Tension . . . . .	239
5.24.4	User Guide . . . . .	241
5.25	Orthotropic Crush Model . . . . .	243
5.25.1	Theory . . . . .	243
5.25.2	Implementation . . . . .	244
5.25.3	Verification . . . . .	246
5.25.4	User Guide . . . . .	248
5.26	Orthotropic Rate Model . . . . .	250
5.26.1	Theory . . . . .	250

5.26.2	Implementation	252
5.26.3	Verification	254
5.26.3.1	Uniaxial Strain - Isotropic	254
5.26.3.2	Uniaxial Strain - Orthotropic	256
5.26.4	User Guide	258
5.27	Universal Polymer Model (UPM)	260
5.27.1	Theory	260
5.27.2	Implementation	262
5.27.3	Verification	264
5.27.3.1	Shift Factor During Traction-Free Cooling and Heating	265
5.27.3.2	Uniaxial Strain	267
5.27.4	User Guide	270
5.28	Wire Mesh Model	274
5.28.1	Theory	274
5.28.2	Implementation	275
5.28.3	Verification	276
5.28.3.1	Uniaxial Compression	276
5.28.3.2	Uniaxial Tension	277
5.28.3.3	Hydrostatic Compression	278
5.28.4	User Guide	280
<b>6</b>	<b>Implementing a Model</b>	<b>281</b>
6.1	Header File	281
6.2	Implementation File	283
6.3	Model File	284
6.4	Material Creator File	284
6.5	Sierra/SM Files	284
<b>A</b>	<b>Common Boundary Value Problems</b>	<b>287</b>
A.1	Uniaxial Stress - Displacement Controlled	287
A.2	Simple Shear	287
A.3	Pure Shear	288
A.4	Hydrostatic Compression	288

# List of Figures

5.1	Elastic Verification: Uniaxial Stress - axial stress	39
5.2	Elastic Verification: Uniaxial Stress - lateral strain	39
5.3	Elastic Verification: Biaxial Stress - out of plane stress	41
5.4	Elastic Verification: Biaxial Stress - in plane normal stresses	41
5.5	Elastic Verification: Pure Shear - shear stress	43
5.6	Elastic 3D Orthotropic Verification: Biaxial Displacement	48
5.7	Elastic 3D Orthotropic Verification: Rotated Uniaxial Strain	49
5.8	Neo-Hookean Verification Uniaxial Stress: Axial Stress	54
5.9	Neo-Hookean Verification Uniaxial Stress: Lateral Strain	54
5.10	Neo-Hookean Verification Shear Strain	55
5.11	Neo-Hookean Verification Shear Stress	56
5.12	Neo-Hookean Verification: Uniaxial Strain	57
5.13	Neo-Hookean Verification: Simple Shear	58
5.14	Elastic-Plastic Theory: Example yield surface, $f$	61
5.15	Elastic-Plastic Verification: Uniaxial Stress - axial stress	66
5.16	Elastic-Plastic Verification: Uniaxial Stress - lateral strains	66
5.17	Elastic-Plastic Verification: Pure Shear - shear stresses	69
5.18	EP Power Law Hardening Theory: Example Response	73
5.19	EP Power Law Hardening Verification: Uniaxial Stress - axial stress	76
5.20	EP Power Law Hardening Verification: Uniaxial Stress - lateral strain	76
5.21	EP Power Law Hardening Verification: Pure Shear - shear stress	78
5.22	Ductile Fracture Verification: Uniaxial Stress - tearing parameter	85
5.23	Ductile Fracture Verification: Uniaxial Stress - axial stress	85
5.24	Ductile Fracture Verification: Pure Shear - tearing parameter	87
5.25	Ductile Fracture Verification: Pure Shear - shear stress	87

5.26 Multilinear EP Theory: Example Response . . . . .	91
5.27 Multilinear EP Verification: Uniaxial Stress - axial stress . . . . .	94
5.28 Multilinear EP Verification: Uniaxial Stress - lateral strain . . . . .	94
5.29 Multilinear EP Verification: Pure Shear - shear stress . . . . .	96
5.30 Multilinear EP Failure Verification: Uniaxial Stress . . . . .	102
5.31 Multilinear EP Failure Verification: Uniaxial Stress . . . . .	103
5.32 Johnson-Cook Verification: Uniaxial Stress $-\beta = 0.0$ . . . . .	111
5.33 Johnson-Cook Verification: Uniaxial Stress $-\beta \neq 0.0$ . . . . .	112
5.34 Johnson-Cook Verification: Pure Shear $-\beta = 0.0$ . . . . .	113
5.35 Johnson-Cook Verification: Uniaxial Stress $-\beta \neq 0.0$ . . . . .	114
5.36 Hosford Plasticity Theory: Hosford yield surface with $a = 4, 8, 100$ . . . . .	118
5.37 Hosford Plasticity Verification: Uniaxial Stress - axial stress . . . . .	121
5.38 Hosford Plasticity Verification: Uniaxial Stress - lateral strains . . . . .	121
5.39 Hosford Plasticity Verification: Pure Shear . . . . .	122
5.40 Hill Plasticity Theory: Hill yield surface . . . . .	126
5.41 Hill Plasticity Verification: Uniaxial Stress - normal stresses . . . . .	132
5.42 Hill Plasticity Verification: Uniaxial Stress - lateral strain (loading in the 1 direction) . . . . .	132
5.43 Hill Plasticity Verification: Uniaxial Stress - lateral strain (loading in the 2 direction) . . . . .	133
5.44 Hill Plasticity Verification: Uniaxial Stress - lateral strain (loading in the 3 direction) . . . . .	133
5.45 Hill Plasticity Verification: Pure Shear - shear stress . . . . .	136
5.46 Barlat Plasticity Theory: Barlat yield surface . . . . .	141
5.47 Barlat Plasticity Verification: Uniaxial Stress - axial stress . . . . .	146
5.48 Barlat Plasticity Verification: Uniaxial Stress - lateral strain . . . . .	147
5.49 Barlat Plasticity Verification: Uniaxial Stress - loading in the 2 direction . . . . .	148
5.50 Barlat Plasticity Verification: Uniaxial Stress - loading in the 3 direction . . . . .	148
5.51 Barlat Plasticity Verification: Pure Shear . . . . .	150
5.52 Power Law Creep Verification: Creep - strain evolution . . . . .	155
5.53 Power Law Creep Verification: Creep - stress evolution . . . . .	156
5.54 Power Law Creep Verification: Stress Relaxation - strain evolution . . . . .	157
5.55 Power Law Creep Verification: Stress Relaxation - stress evolution . . . . .	157
5.56 Viscoplastic Verification: Creep - strain evolution . . . . .	164
5.57 Viscoplastic Verification: Creep - stress evolution . . . . .	164

5.58	Viscoplastic Verification: Stress Relaxation - strain evolution	165
5.59	Viscoplastic Verification: Stress Relaxation - stress evolution	166
5.60	Hyperfoam Verification: Uniaxial Strain - stresses (tension)	172
5.61	Hyperfoam Verification: Uniaxial Strain - stresses (compression)	173
5.62	Hyperfoam Verification: Uniaxial Strain - stresses (comparison)	174
5.63	Hyperfoam Verification: Biaxial Strain - normal stresses (tension)	176
5.64	Hyperfoam Verification: Biaxial Strain - normal stresses (compression)	177
5.65	Hyperfoam Verification: Biaxial Strain - normal stresses (comparison)	178
5.66	Hyperfoam Verification: Pure Shear - stresses	180
5.67	Hyperfoam Verification: Simple Shear - stresses	182
5.68	Hyperelastic Damage Verification: Uniaxial Strain	187
5.69	Hyperelastic Damage Verification: Simple Shear	188
5.70	Soil and Foam Verification: Triaxial Compression - lateral strains	193
5.71	Soil and Foam Verification: Triaxial Compression - axial stress	193
5.72	Shape Memory Alloy Theory: Phase Diagram	197
5.73	Shape Memory Alloy Verification: Pseudoelasticity – axial strain	203
5.74	Shape Memory Alloy Verification: Pseudoelasticity – MVF	203
5.75	Shape Memory Alloy Verification: Actuation – axial strain	204
5.76	Shape Memory Alloy Verification: Actuation - lateral strain	205
5.77	Shape Memory Alloy Verification: Actuation – MVF	205
5.78	Low Density Foam Verification: Uniaxial Compression - skeleton stress	211
5.79	Low Density Foam Verification: Uniaxial Compression - skeleton strain	211
5.80	Low Density Foam Verification: Uniaxial Compression - foam stress	212
5.81	Low Density Foam Verification: Uniaxial Compression - foam strain	212
5.82	Low Density Foam Verification: Hydrostatic Compression - foam pressure	213
5.83	Foam Plasticity Verification: Hydrostatic Compression - pressure	218
5.84	Viscoplastic Foam Verification: Uniaxial Compression - axial stress	224
5.85	Viscoplastic Foam Verification: Hydrostatic Compression - pressure	225
5.86	Foam Damage Verification: Uniaxial Compression - axial stress	236
5.87	Foam Damage Verification: Uniaxial Compression - normal strains ( $\beta = 0$ )	236
5.88	Foam Damage Verification: Uniaxial Compression - normal strains ( $\beta = 1$ )	237
5.89	Foam Damage Verification: Uniaxial Compression - solid volume fraction	237

5.90	Foam Damage Verification: Uniaxial Tension - axial stress and damage . . . . .	238
5.91	Foam Damage Verification: Hydrostatic Compression - pressure . . . . .	239
5.92	Foam Damage Verification: Hydrostatic Tension - pressure and damage . . . . .	240
5.93	Orthotropic Crush Theory: Example Crush Curve . . . . .	245
5.94	Orthotropic Crush Verification: Input Crush Curves . . . . .	246
5.95	Orthotropic Crush Verificaiton: Uniaxial Stress - stresses . . . . .	247
5.96	Orthotropic Rate Theory: Orientation of Material Coordinate System . . . . .	250
5.97	Orthotropic Rate Verification: Input strength functions, $f_{\beta\gamma}$ . . . . .	255
5.98	Orthotropic Rate Verification: Uniaxial Strain - Isotropic Response . . . . .	256
5.99	Orthotropic Rate Verification: Uniaxial Strain - Orthotropic Response . . . . .	257
5.100	Universal Polymer Model Verification: Shift Factor During a Thermal Cycle . . . . .	266
5.101	Universal Polymer Model Verification: Uniaxial Strain – two-stage load and hold .	269
5.102	Wire Mesh Verification: Uniaxial Stress – compression . . . . .	277
5.103	Wire Mesh Verification: Uniaxial Strain – tension . . . . .	278
5.104	Wire Mesh Verification: Hydrostatic Compression . . . . .	279

# List of Tables

5.1	Elastic 3D Orthotropic Verification: Material and Model Parameters . . . . .	47
5.2	Elastic 3D Orthotropic Verification: Coordinate System Rotations . . . . .	49
5.3	Neo-Hookean Verification: Material and Model Parameters . . . . .	52
5.4	State Variables for ELASTIC PLASTIC Model . . . . .	70
5.5	State Variables for ELASTIC PLASTIC Model for Shells . . . . .	71
5.6	State Variables for EP POWER HARD Model . . . . .	79
5.7	State Variables for EP POWER HARD Model for Shells . . . . .	80
5.8	State Variables for DUCTILE FRACTURE Model . . . . .	89
5.9	State Variables for MULTILINEAR EP Model . . . . .	97
5.10	State Variables for MULTILINEAR EP Model for Shells . . . . .	98
5.11	State Variables for ML EP FAIL Model . . . . .	105
5.12	State Variables for ML EP FAIL Model for Shells . . . . .	106
5.13	Johnson-Cook Verification: Material and Model Parameters . . . . .	110
5.14	State Variables for JOHNSON COOK Model . . . . .	116
5.15	State Variables for HOSFORD PLASTICITY Model . . . . .	124
5.16	State Variables for HILL PLASTICITY Model . . . . .	138
5.17	Barlat Plasticity Verification: Material and Model Parameters . . . . .	144
5.18	State Variables for BARLAT PLASTICITY Model . . . . .	152
5.19	Power Law Creep Verification: Material and Model Parameters . . . . .	154
5.20	State Variables for POWER LAW CREEP Model . . . . .	158
5.21	Viscoplastic Verification: Material and Model Parameters . . . . .	163
5.22	State Variables for VISCOPLASTIC Model . . . . .	168
5.23	Hyperfoam Verification: Material and Model Parameters . . . . .	170
5.24	Hyperelastic Damage Verification: Material and Model Parameters . . . . .	186
5.25	State Variables for HYPERELASTIC DAMAGE Model . . . . .	189

5.26 State Variables for SOIL FOAM Model . . . . .	194
5.27 Shape Memory Alloy Verification: Material and Model Parameters . . . . .	202
5.28 State Variables for SHAPE MEMORY ALLOY Model . . . . .	207
5.29 Low Density Foam Verification: Material and Model Parameters . . . . .	210
5.30 State Variables for LOW DENSITY FOAM Model . . . . .	214
5.31 Foam Plasticity Verification: Material and Model Parameters . . . . .	217
5.32 State Variables for FOAM PLASTICITY Model . . . . .	219
5.33 Viscoplastic Foam Verification: Material and Model Parameters . . . . .	223
5.34 State Variables for VISCOPLASTIC FOAM Model . . . . .	227
5.35 Foam Damage Verification: Material and Model Parameters . . . . .	234
5.36 State Variables for FOAM DAMAGE Model . . . . .	242
5.37 Orthotropic Crush Verification: Material and Model Parameters . . . . .	246
5.38 State Variables for ORTHOTROPIC CRUSH Model . . . . .	248
5.39 Orthotropic Crush Verification: Material and Model Parameters . . . . .	255
5.40 State Variables for ORTHOTROPIC RATE Model . . . . .	259
5.41 Universal Polymer Model Verification: Material and Model Parameters . . . . .	265
5.42 State Variables for Universal Polymer Model . . . . .	273
5.43 Wire Mesh Verification: Material and Model Parameters . . . . .	276
5.44 State Variables for WIRE MESH Model . . . . .	280



# Chapter 1

## Overview

Constitutive modeling is a fundamental aspect of solid mechanics modeling and simulation. The wide range of behaviors of solid materials requires a vast number of models capable of modeling all (or even some of) the different responses. This is in contrast to fluid mechanics, for example. As such, constitutive modeling is arguably *the* major problem in solid mechanics. A constitutive model is necessary for accurately predicting the state of a material. This determination includes both the stress state whose resolution is essential for many phenomena of interest like fracture and failure as well as capturing inelastic responses like damage or multiphysics couplings.

One aspect of obtaining an accurate resolution of the stress field is, in one sense, easy to understand. It is mesh discretization. More degrees of freedom in a simulation enables better resolution and results in a more accurate stress field if we look just at the mathematics. If all materials followed an elastic law, then mesh resolution on its own would be all that is needed to resolve the stress field. In reality, however, materials do not exhibit elastic responses except in very limited cases.

This leads us to a second aspect of calculating accurate stress fields, which is much harder to understand. This one concerns the physics. The specific behavior of a material depends on the physical processes specific to that material, and this must be included in a constitutive model in some form or another. The main goal of the Library of Advanced Materials for Engineering - LAMÉ - is to provide a simple means to implement the wide variety of models in a library that can be used by our solid mechanics application codes.



## Chapter 2

# Strategy

As a third party library, the Library of Advanced Materials for Engineering (LAMÉ) is renewing a commitment to accurate, robust, and efficient constitutive modeling for solid mechanics. There are three distinct groups that require services from LAMÉ: constitutive model developers, application code developers, and analysts. Each group has different, but related, requirements on LAMÉ.

Constitutive modelers who develop the mathematical models describing the response of interest and the associated numerical methodologies require a framework for developing and implementing these models. This framework must be well documented so that these developers can easily develop and implement a model that can, when the model is sufficiently robust, be used reliably in production calculations.

Application code developers, on the other hand, require that the library of constitutive models share a common, simple interface. This requires that the conceptual division between a constitutive model and the application code be well understood. The application codes also require verified behavior of the models along with certain performance requirements as these models can be called billions of times in an analysis.

Analysts require constitutive models that are both verified and well documented. The responses of interest can very greatly depending on the material utilized and the conditions under which it is loaded. This accounts for the wide range and sheer volume of constitutive models in the literature. Furthermore, there may be nothing that affects the results of an analysis more than the constitutive model. Therefore, the analyst needs a thorough knowledge of the behavior of the models along with how to use it in an application code. Such an understanding is also essential for the accurate determination and calibration of different material and model parameters. In some cases, even subtle changes in a material specimen's history can lead to large variation in properties and responses. As such, a clear description and understanding of this input data is essential for appropriate utilization of different models.

Due to the varied requirements on LAMÉ, a strategy for supporting these various user groups has been developed. This strategy is described here.

### 2.1 Code Development

There are many strategies that can be employed for a code development process. The choice of such a procedure depends on what the overall project is creating. And even after a development

process has been selected, it is often tailored to the needs of the specific code project.

The LAMÉ code development team has spent some time deciding on an appropriate process that reflects the needs of the project and its stakeholders.

Given that LAMÉ has two roles, as an interface to a host code that will supply a material model response and as a repository for constitutive models, this led us to consider two different code development processes: one for the interface and one for the constitutive models.

For the interface an *iterative* process was chosen. The iterative process allows us to plan and generate requirements, perform analysis and design, implement and deploy code changes and finally test and evaluate the code. This process can work well for the interface design where we implement the conceptual changes that we want to the interface. The models beneath the interface should be unaffected by these changes, and where they are affected it will be on the surface.

For the constitutive models a *waterfall* process was chosen. Generally the process of developing and implementing a constitutive model is a linear process that is followed by a single person. That person generates requirements, designs the solution, implements the solution as a piece of code, verifies the code and maintains the code. Much of the constitutive modeler's work involves formulating the model, which is a solid mechanics and applied mathematics problem first and foremost. This can be seen as either the gathering requirements phase or part of the design phase. The design and implementation phases are where the code development occur. All models are verified after they are implemented. However, model verification itself is quite complicated, so this step is not simple. Finally the model is maintained through documentation and user support. Bug fixes are also an aspect of code maintenance in this process.

## 2.2 Model Implementation

The key feature in LAMÉ that allows constitutive models to be implemented easily and application codes to be able to use those models is the interface. *The key concept to understand concerning the interface is that it defines what roles the constitutive models have, what roles the application codes have, and how the models and the codes transfer information.*

From the application code perspective we would like all of the constitutive models to look the same. Of course this is not the case. This is why, if we were to look at our legacy finite element codes, we see information regarding specific constitutive models show up in the application codes. Even a piece of information as simple as a material model ID will show up in the application code in order that the code call the correct model. Modern programming languages/styles allow us to avoid this confusion.

From a constitutive modeling perspective we would like a simple interface for implementing constitutive models. Constitutive modelers are only part-time code developers. They can have strengths in many areas in addition to code development, including physics, chemistry, continuum mechanics, applied mathematics, numerical methods and experimental mechanics. Having a code development environment that is useful for a constitutive model developer is necessary in the design of the constitutive model library.

## 2.2.1 Code Standards

The need to supply not only robust constitutive models, but also a robust constitutive modeling environment, requires strict adherence to code standards. Some code standards are stylistic. These are necessary to support the code (promoting readability) and to simplify the effort needed by the constitutive modeler to implement a model. Other code standards are necessary to support the code on various platforms and to prevent unintended behavior like memory leaks.

## 2.2.2 Testing Standards

Ensuring robust and reliable constitutive models also requires testing. There are two main concerns in providing constitutive modeling to an application code: accuracy and speed. Both of these concerns can be addressed to a large degree through testing. Toward this end two testing systems are developed: a verification test suite and a performance test suite.

### 2.2.2.1 Verification Testing

Constitutive models for the large deformation of materials can be extremely complex. This complexity is added to by the issues associated with implementing the model in the code. There are two questions associated with assessing this complexity. First, what is the expected result of the model, independent of its implementation? Second, does the implementation model that response?

### 2.2.2.2 Performance Testing

In a nonlinear solid mechanics analysis, the constitutive models are called often. For an explicit transient dynamics problem, the model is called once for each time step for each integration point in the finite element model. On the other hand, implicit quasi-static analyses call the model every iteration of every time step for each integration point in the finite element model.

Given the amount of time that a nonlinear solid mechanics finite element analysis spends calculating the stresses in a constitutive model, the performance of the constitutive model can have a large effect on the performance of the host code.

In order to ensure some measure of performance, a procedure for testing the performance of the models is proposed. First, a baseline set of performance data must be generated. Given that the CPU time used by the model can depend on many things, including the current loads on the machine where the test is being run, developing an approach for modeling the performance is not straightforward. If we call the various states of the machine "configurations", then the best approach appears to be to generate a large set of data for the performance of the constitutive model that reflects the performance on a single machine over a large variety of its configurations.

Specifically, since we want to test only the speed of the constitutive model, we run tests that are fully prescribed strain paths. This eliminates any need for the material driver to solve an equilibrium state. We also want to test as many of the features of the constitutive model as possible. This requires a prescribed strain path that pushes the model into regimes of interest. For example, for an elastic-plastic model the performance test has to trigger plasticity, otherwise it will not reflect accurately on how the model performs in an analysis. We also want the strain path to push the plasticity model deep enough into the plastic range.

Determination of an appropriate strain path is not clear cut for all materials. Recognizing this, the performance tests should be documented clearly so that we know exactly what we are testing and we can go back and modify a test if there is some feature of the model that doesn't appear in the performance test.

### **2.2.3 Documentation Standards**

In order to disseminate information about the models in LAMÉ, there must be a commitment to documentation. The theory behind the models and their implementation must be documented. Furthermore, much of the success of the verification and performance testing depends on documentation too. Finally, documentation must be generated for analysts that allows them to understand what materials and behavior the model can represent, along with the inputs necessary to use the model and the outputs that come from the model.

## Chapter 3

### Code Style

An important aspect of LAMÉ's success is keeping a specific code style. This is useful for a number of reasons. First, the behavior of the models is easier to understand if the code is written in a clear, consistent style. Second, given the number of people who may develop in LAMÉ, we cannot possibly maintain and support all possible coding styles. There are many ways to solve a problem from a code perspective. What we are aiming for in LAMÉ is to develop a code style that balances performance and readability. In general we avoid code complexity unless there is a very good reason to adopt a particular code strategy.

#### 3.1 C/C++

There are two areas where C/C++ code style affects LAMÉ. One is in the wrapper for the constitutive model. This is C++ code and is declares and defines the constitutive model, as derived from the Material base class, in the .h and .C files respectively. It is very important that these files follow a strict look and feel. The files are simply meant to define the interface between the host code and the constitutive model. As such, any details of the algorithms that a given constitutive model uses should appear in the model files, not the interface.

```

#ifndef _EP_POWER_LAW_H_
#define _EP_POWER_LAW_H_

#include <interface/Material.h>
#include <utilities/LameFortran.h>

namespace lame {

    class EPPowerLaw : public Material{

    public:

        explicit EPPowerLaw( const MatProps & props );
        virtual ~EPPowerLaw(){} 

        static Material * createMaterial( const MatProps & props );

        int initialize( matParams * p );
        int getStress( matParams * p );
        int getConsistentTangent( matParams * p );

    private:

        // 
        // private and unimplemented to prevent use
        //

        EPPowerLaw( const EPPowerLaw & );
        EPPowerLaw & operator= ( const EPPowerLaw & );

    };

#endif

```

Code 1: A code listing from the header file for the elastic-plastic power law hardening model showing the declarations of the class for the model, which is derived from the Material base class.

## 3.2 FORTRAN

Many, perhaps most, constitutive models are coded in FORTRAN. FORTRAN has historically been the language of choice for scientific computing, and many constitutive modelers still write models in FORTRAN. Because of this LAMÉ is committed to supporting FORTRAN.

There are many styles of code that is written in FORTRAN. In order to standardize the look and feel, and by extension influence the reliability of the models, a number of requirements on the FORTRAN code in LAMÉ are necessary.

First, we require the use of `IMPLICIT NONE`. Many models are written using `IMPLICIT DOUBLE PRECISION` where variables that start with certain letters are double precision by default. A side effect of this is that variables can sometimes be used with unintended consequences. By requiring `IMPLICIT NONE` the code developer (or model developer in this case) must explicitly declare, and by extension consider, every variable they use in the code.

As a side effect of `IMPLICIT NONE`, we require the explicit declaration of each type of variable. For consistency between models the `INTEGER` variables are declared first, followed by the `DOUBLE PRECISION` variables and finally the `CHARACTER` variables. Furthermore, the variables in the calling list to the subroutine are declared first, then the variables that are used in the

```

C
SUBROUTINE EP_POWER_LAW_GET_STRESS( NELEM, DT, NPROP, PROPS,
*          D, STRESS_OLD, STRESS_NEW, NSV, STATE_OLD, STATE_NEW )
C
header included here. See Code 3

C
IMPLICIT NONE
C
INTEGER NELEM,NPROP,NSV
DOUBLE PRECISION DT,PROPS,D,STRESS_OLD,STRESS_NEW
DOUBLE PRECISION STATE_OLD,STATE_NEW
C
INTEGER IEQPS ,IRAD,IXX,IYY ,IZZ ,IXY ,IYZ ,IZX
INTEGER K,KXX,KYY,KZZ,KXY,KYZ,KZX
C
DOUBLE PRECISION YM,PR ,YS ,HARD_CON,HARD_EXP,ELUDER
DOUBLE PRECISION E,STRESS ,TWOGL,XLAM,THREEG,TERM,FACTOR
DOUBLE PRECISION DS,PRESS ,DSMAG2,R2 ,DSMAG,DIFF ,DEQPS
DOUBLE PRECISION SMAG,H0 ,H1 ,DH1 ,F ,DF ,EQPS0 ,EQPS1
DOUBLE PRECISION ROOT23,ROOT32,TOL
C
CHARACTER*80 MESSAGE
C
DIMENSION PROPS(NPROP)
DIMENSION D(6 ,NELEM)
DIMENSION STRESS_OLD(6 ,NELEM) ,STRESS_NEW(6 ,NELEM)
C
DIMENSION STATE_OLD(NSV,NELEM) ,STATE_NEW(NSV,NELEM)
C
DIMENSION STRESS (6 ) ,DS (6 )

```

Code 2: A code listing from the elastic-plastic power law hardening model showing the declarations of variables and dimensioning of arrays used in the subroutine.

subroutine. Finally, `DIMENSION` statements set the sizes of the arrays that are used in the subroutine. Again the variables that are arrays in the calling list are sized first, followed by arrays that are used in the subroutine. While the variables in the calling list will have a variable length, depending on what is sent into the subroutine, the arrays that are declared and used in the subroutine must have fixed length. If a variable length array is needed in the subroutine, then a scratch variable must be declared and the memory allocated by the host code.<sup>1</sup> As an example consider the main subroutine in the elastic-plastic power law hardening model as shown in Code 2.

In addition to requiring the explicit declaration of variables at the start of a FORTRAN subroutine, we also require a heading that defines the input and output variables for the subroutine. This is done with comment lines. In the case of certain arrays, like the material property arrays and state variable arrays, we also require a list of the material properties and state variables respectively. This is shown in Code 3.

A number of parameters can also be declared for the subroutine. This is quite useful for predefined double precision constants and the indexing of tensors and state variable arrays. Following this material properties are declared, allowing the material properties to be declared with names that relate to the property.

Next, the model generally loops over the number of material points it is given to operate on. For some subroutines, like the `GET_STRESS` subroutines, this is the primary algorithm for the model.

---

<sup>1</sup>see the section on the C++ model wrapper for how to declare scratch space from the host code.

```

SUBROUTINE EP_POWER_LAW_GET_STRESS( NELEM, DT, NPROP, PROPS,
*           D, STRESS_OLD, STRESS_NEW, NSV, STATE_OLD, STATE_NEW )
C
C*****
C
C DESCRIPTION:
C   elastic plastic material model with power law hardening
C
C FORMAL PARAMETERS - INPUT/OUTPUT:
C   NELEM      I/-  INT  number of elements
C   DT         I/-  REAL  time increment
C   NPROP      I/-  INT  size of material property array
C   PROPS      I/-  REAL  array of material properties
C               (1) youngs modulus
C               (2) poisssons ratio
C               (3) yield stress
C               (4) hardening constant
C               (5) hardening exponent
C               (6) luders strain
C   D          I/-  REAL  strain rate (rate of deformation)
C   STRESS_OLD I/-  REAL  stress at t_n
C   STRESS_NEW -/O  REAL  stress at t_n+1
C   NSV        I/-  INT  number of state variables
C   STATE_OLD  I/-  REAL  state variables at t_n
C   STATE_NEW  -/O  REAL  state variables at t_n+1
C
C STATE VARIABLES
C   (1) equivalent plastic strain
C   (2) radius of yield surface
C   (3) xx component of back stress
C   (4) yy component of back stress
C   (5) zz component of back stress
C   (6) xy component of back stress
C   (7) yz component of back stress
C   (8) zx component of back stress
C
C*****
C

```

Code 3: A code listing from the elastic-plastic power law hardening model showing the heading for this model.

As a result, this should be well documented with comments in the code so that the algorithm that is used to numerically integrate the constitutive model can be understood.

## Chapter 4

### Interface

LAMÉ is designed to have a simple interface that allows the easy implementation of a wide range of constitutive models. This interface is between the application code (sometimes referred to as the “host code”) and the constitutive model.

The interface has two main aspects: the data that is passed between the application code and the model, and the functions that pass this data. Given that the interface consists of data and functions, the most reasonable way to set up this interface is through a class.

The class that defines this interface is the **Material** class, which is declared in **include/interface/****Material.h**.

There are two types of data that are passed between the application code and the model. The first is the material property information. This is done using an object in the **MatProps** class. This is used when constructing a material model at the beginning of an analysis.

The second type of data that is passed between the application code and the material model is the data that the material model uses during an analysis. This data is in the **MatParams** struct. This data consists of the stress, the kinematics, the time and time step, etc.



## Chapter 5

# Material Models

This section details the constitutive models that are implemented and supported in LAMÉ. The description of each model has four sections. First, a section discussing the *theory* of the model is found. This is the mathematical description of the model in a continuum mechanics framework, independent of its implementation in a computational code. As these models are intended for solid mechanics analysis, the following section describes the *numerical implementation* of the model. This delves into how the model is implemented in the code and any special numerical techniques that are used to integrate the model. The subsequent section presents the *verification* problems that are run for the model. Through the results of such problems, evidence is provided that, to the best of our understanding, the model is behaving as expected. Finally, documentation of the model *user inputs* and *user outputs* are given for analyst reference.

It is our belief that this collection of documentation is important for the use of our constitutive models, and it provides confidence that our models are implemented correctly for the capabilities that are tested.

What this documentation does not provide is guidance on how to use the models. Different materials behave differently, and it is the responsibility of the user to ensure that the material model chosen can accurately model the behavior of a particular material. Furthermore, even with a single material, many models might be capable of modeling the material depending on the loading in a given analysis. It is the responsibility of the analyst to ensure that the model they choose is the best model for their problem. Across the different models, parameters may also vary in value or have slight changes in interpretation. Care needs to be undertaken to ensure that material and model parameters used accurately reflect the specific material being investigated (some parameters may vary with simple changes in processing route) and capture the behaviors that of interest. If emphasis needs to be placed on initial yield rather than failure, subtle differences in some parameters may be expected.

## 5.1 Hypoelastic Models

Many models presented in this report are derived starting with small deformation formulations. These models are implemented in finite deformation codes by substituting the rate of deformation for the strain rate<sup>1</sup>, and making the stress rate objective. There are many objective stress rates to choose from, the two most common being the Jaumann and the Green-McInnis.

Models that are implemented using the Jaumann or Green-McInnis stress rate are done so in an un-rotated configuration. This means that the incremental constitutive relations are written in this configuration. The tensor components of the Cauchy stress,  $\sigma_{ij}$ , and the rate of deformation,  $D_{ij}$ , are un-rotated using some orthogonal tensor,  $Q_{ij} - Q_{ji}^T$

$$T_{ij} = Q_{ki}\sigma_{kl}Q_{lj} \quad ; \quad d_{ij} = Q_{ki}D_{kl}Q_{lj} \quad (5.1.1)$$

where  $T_{ij}$  and  $d_{ij}$  are the components of the un-rotated stress and rate of deformation respectively. The choice of orthogonal tensor,  $Q_{ij}$ , depends on the objective stress rate. The incremental constitutive relation is then written as

$$T_{ij}^{n+1} = T_{ij}^n + f_{ij}(d_{kl}, \Delta t) \quad (5.1.2)$$

After the stress is updated in the un-rotated configuration, it is rotated forward to the current configuration [1].<sup>2</sup>

If the Green-McInnis stress rate is used, then the un-rotated configuration is found using the rotation tensor from the polar decomposition of the deformation gradient

$$dx_i^{n+1} = F_{ij}dX_j \quad ; \quad F_{ij} = R_{ik}U_{kj} = V_{ik}R_{kj} \quad ; \quad Q_{ij} = R_{ij} \quad (5.1.3)$$

If the Jaumann stress rate is used, then the un-rotated configuration is found using the rotation tensor from the polar decomposition of the incremental deformation gradient

$$dx_i^{n+1} = \hat{F}_{ij}dx_j^n \quad ; \quad \hat{F}_{ij} = \hat{R}_{ik}\hat{U}_{kj} = \hat{V}_{ik}\hat{R}_{kj} \quad ; \quad Q_{ij} = \hat{R}_{ij} \quad (5.1.4)$$

Without loss of generality we will assume the Green-McInnis stress rate. The algorithm for the Jaumann stress rate can be recovered by substituting  $\hat{F}_{ij}$  for  $F_{ij}$  and  $\hat{R}_{ij}$  for  $R_{ij}$  in what follows.

Before updating the stress, the rotation is calculated from the deformation gradient in the *current* configuration,  $F_{ij}$ . The un-rotated rate of deformation is then

$$d_{ij} = R_{ki}^{n+1}D_{kl}R_{lj}^{n+1} \quad (5.1.5)$$

---

<sup>1</sup>It should be noted that the rate of deformation is *not* the rate of any strain measure.

<sup>2</sup>The terminology used in describing the un-rotated configuration with the rotations backward and forward is infinitely confusing. It is simply one of the many difficulties encountered using finite deformation hypoelastic models.

and the un-rotated stress is updated using (5.1.2). Then the stress is rotated to the current configuration, using the same rotation that we used to un-rotate the rate of deformation

$$\sigma_{ij}^{n+1} = R_{ik}^{n+1} T_{kl}^{n+1} R_{jl}^{n+1} \quad (5.1.6)$$

The un-rotated stress from the previous time step is simply  $T_{ij}^n = R_{ki}^n \sigma_{kl} R_{lj}^n$ . Furthermore, for the elastic model (Section 5.3) the stress update algorithm can be reduced to

$$\sigma_{ij}^{n+1} = R_{ik}^{n+1} R_{mk}^n \sigma_{mn} R_{nl}^n R_{jl}^{n+1} + \lambda \delta_{ij} \Delta t D_{kk} + 2\mu \Delta t D_{ij} \quad (5.1.7)$$

One final note about this algorithm. While it is convenient to use the rotation tensor  $R_{ij}^{n+1}$ , strictly this is not correct. Since the rate of deformation is most often computed at the mid-step configuration, the rotation used to un-rotate the rate of deformation should be the rotation from the mid-step deformation gradient, i.e. the deformation gradient that relates the mid-step configuration to the reference configuration. Other consistency considerations should also be considered, but we will not discuss them here. Suffice it to say that the solutions all converge in the limit of infinitesimal time steps. In a future release of LAMÉ other options might be added.

## 5.2 Hyperelastic Models

Hyperelastic materials are in many ways easier to understand than hypoelastic materials, and are often considered more thermodynamically consistent. On the other hand, it may be difficult to consistently extend a small deformation model to the finite deformation regime in a hyperelastic framework. Regardless of the pluses and minuses of the two formulations, hyperelastic models are in LAMÉ and will be reviewed here.

Hyperelastic models generally assume a scalar valued strain energy density that is a function of invariants of the deformation through the deformation gradient,  $F_{ij}$ . Using the principle of material frame indifference, the strain energy density is written as a function of the symmetric right Cauchy-Green tensor,  $C_{ij} = F_{ki}F_{kj}$

$$W = W(C_{ij}) \quad (5.2.1)$$

The stress, in particular the second Piola-Kirchhoff stress, is found by taking the derivative of  $W$  with respect to  $C_{ij}$ . This relation comes from the stress-power relations. From the second Piola-Kirchhoff stress, we can find the Cauchy stress

$$S_{ij} = 2 \frac{\partial W}{\partial C_{ij}} \quad ; \quad \sigma_{ij} = \frac{1}{J} F_{ik} S_{kl} F_{jl} \quad (5.2.2)$$

Hyperelastic models are generally of two types. The most common are written in terms of the three invariants of  $C_{ij}$ :  $I_1$ ,  $I_2$ , and  $I_3$

$$I_1 = \text{tr}\mathbf{C} = C_{ii} \quad ; \quad I_2 = \frac{1}{2} (C_{ii}C_{jj} - C_{ij}C_{ij}) \quad ; \quad I_3 = \det\mathbf{C} \quad (5.2.3)$$

The second Piola-Kirchhoff stress is then

$$S_{ij} = 2 \left( \frac{\partial W}{\partial I_1} \frac{\partial I_1}{\partial C_{ij}} + \frac{\partial W}{\partial I_2} \frac{\partial I_2}{\partial C_{ij}} + \frac{\partial W}{\partial I_3} \frac{\partial I_3}{\partial C_{ij}} \right) \quad (5.2.4)$$

Evaluating this expression requires the derivatives of the invariants with respect to the components  $C_{ij}$

$$\frac{\partial I_1}{\partial C_{ij}} = \delta_{ij} \quad ; \quad \frac{\partial I_2}{\partial C_{ij}} = I_1 \delta_{ij} - C_{ij} \quad ; \quad \frac{\partial I_3}{\partial C_{ij}} = I_3 C_{ij}^{-1} \quad (5.2.5)$$

Using this in the expression for the second Piola-Kirchhoff stress, and converting it to the Cauchy stress, we have

$$\sigma_{ij} = \frac{2}{J} \left\{ \frac{\partial W}{\partial I_3} \delta_{ij} + \left( \frac{\partial W}{\partial I_1} + I_1 \frac{\partial W}{\partial I_2} \right) B_{ij} - \frac{\partial W}{\partial I_2} B_{ij}^2 \right\} \quad (5.2.6)$$

The majority of hyperelastic models calculate the stress in this manner.

Some hyperelastic models, however, have their strain energy densities written in terms of the principal stretches [2]. When this is the case the calculation of the stress is more complex. The right stretch can be written as

$$\mathbf{U} = \sum_{i=1}^3 \lambda_i \bar{\mathbf{e}}_i \otimes \bar{\mathbf{e}}_i \quad (5.2.7)$$

where  $\lambda_i$  are the principal stretches, or eigenvalues, and  $\bar{\mathbf{e}}_i$  are the principal directions, or eigenvectors. The strain energy density is  $W(\lambda_i)$ . We calculate the stress components of the second Piola-Kirchhoff stress,  $\bar{S}_{ij}$ , with respect to the principal directions

$$\mathbf{S} = \bar{S}_{ij} \bar{\mathbf{e}}_i \otimes \bar{\mathbf{e}}_j \quad (5.2.8)$$

This is done by calculating  $\partial W / \partial \mathbf{C}$  in the following manner

$$\delta W = \frac{\partial W}{\partial \lambda_i} \delta \lambda_i = \frac{\partial W}{\partial \mathbf{C}} : \delta \mathbf{C} \quad (5.2.9)$$

Writing the right Cauchy-Green tensor with respect to the principal directions we have

$$\mathbf{C} = \sum_{i=1}^3 \lambda_i^2 \bar{\mathbf{e}}_i \otimes \bar{\mathbf{e}}_i \quad ; \quad \delta \mathbf{C} = \sum_{i=1}^3 2\lambda_i \delta \lambda_i \bar{\mathbf{e}}_i \otimes \bar{\mathbf{e}}_i + \lambda_i^2 \delta \bar{\omega}_{ij} (\bar{\mathbf{e}}_i \otimes \bar{\mathbf{e}}_j + \bar{\mathbf{e}}_j \otimes \bar{\mathbf{e}}_i) \quad (5.2.10)$$

Equating terms on both sides of (5.2.9) we get

$$\bar{S}_{11} = \frac{1}{\lambda_1} \frac{\partial W}{\partial \lambda_1} \quad ; \quad \bar{S}_{22} = \frac{1}{\lambda_2} \frac{\partial W}{\partial \lambda_2} \quad ; \quad \bar{S}_{33} = \frac{1}{\lambda_3} \frac{\partial W}{\partial \lambda_3} \quad ; \quad \bar{S}_{ij} = 0 \quad \text{otherwise} \quad (5.2.11)$$

These calculations can also be checked by writing the invariants in terms of the principal stretches. For a hyperelastic model written in terms of the invariants the results should be the same.

The differences between hypoelastic and hyperelastic models should not matter for the analyst. For the constitutive modeler, however, the benefits and drawbacks of the two formulations must be considered.

## References

- [1] D.P. Flanagan and L. M. Taylor. An accurate numerical algorithm for stress integration with finite rotations. *Computer Methods in Applied Mechanics and Engineering*, 62:305–320, 1987.
- [2] R. W. Ogden. *Non-Linear Elastic Deformaitons*. Dover, New York, 1984.

## 5.3 Elastic Model

### 5.3.1 Theory

The elastic model is a hypoelastic extension of isotropic, small-strain, linear elasticity [1] [2] [3]. The stress-strain response for an isotropic, elastic material is

$$\sigma_{ij} = \lambda \delta_{ij} \varepsilon_{kk} + 2\mu \varepsilon_{ij} \quad (5.3.1)$$

where the Lamé constants,  $\lambda$  and  $\mu$ , are given by

$$\lambda = \frac{E\nu}{(1+\nu)(1-2\nu)} \quad ; \quad \mu = \frac{E}{2(1+\nu)} \quad (5.3.2)$$

This model is extended to a finite-deformation, hypoelastic model by first making it a rate equation. Then the stress rate is replaced with an objective stress rate and the strain rate is replaced with the rate of deformation. This gives us

$$\overset{\circ}{\sigma}_{ij} = \lambda \delta_{ij} D_{kk} + 2\mu D_{ij} \quad (5.3.3)$$

The stress rate is arbitrary, as long as it is objective. Two objective stress rates are commonly used: the Jaumann rate and the Green-McInnis rate. For problems with fixed principal axes of deformation, these two rates give the same answers. For problems where the principal axes of deformation rotate during the deformation, the two rates can give different answers. Generally speaking there is no reason to pick one objective rate over another. Sierra/SM uses the Green-McInnis rate.

The fourth-order elastic moduli are used in many constitutive models. There are many equivalent representations for the elastic moduli. In index notation we present the following three representations

$$\overset{\circ}{\sigma}_{ij} = \mathbb{C}_{ijkl} D_{kl}$$

$$\mathbb{C}_{ijkl} = \frac{E}{1+\nu} \left[ \frac{\nu}{1-2\nu} \delta_{ij} \delta_{kl} + \frac{1}{2} (\delta_{ik} \delta_{jl} + \delta_{il} \delta_{jk}) \right] \quad (5.3.4)$$

$$\mathbb{C}_{ijkl} = \lambda \delta_{ij} \delta_{kl} + \mu (\delta_{ik} \delta_{jl} + \delta_{il} \delta_{jk}) \quad (5.3.5)$$

$$\mathbb{C}_{ijkl} = K \delta_{ij} \delta_{kl} + \mu \left( \delta_{ik} \delta_{jl} + \delta_{il} \delta_{jk} - \frac{2}{3} \delta_{ij} \delta_{kl} \right) \quad (5.3.6)$$

where  $K$  is the elastic bulk modulus and is given by

$$K = \frac{E}{3(1-2\nu)} \quad (5.3.7)$$

### 5.3.2 Implementation

The elastic model is a hypoelastic model and is implemented using an un-rotated configuration in order to preserve objectivity. Given an un-rotated rate of deformation,  $d_{ij}$ , and the un-rotated stress at time  $t_n$ ,  $T_{ij}^n$ , the unrotated stress is updated by integrating the constant un-rotated rate of deformation

$$T_{ij}^{n+1} = T_{ij}^n + \lambda \delta_{ij} \Delta t d_{kk} + 2\mu \Delta t d_{ij} \quad (5.3.8)$$

### 5.3.3 Verification

Three verification problems are run for the elastic model: uniaxial stress, pure shear, and biaxial stress. The results of these test problems serve as verification for the elastic model.

#### 5.3.3.1 Uniaxial Stress

The elastic model was verified in uniaxial stress. The problem was run with a Young's modulus of 200 GPa and a Poisson's ratio of 0.3. The axial stress is simply

$$\sigma_{11} = E \varepsilon_{11} \quad (5.3.9)$$

The axial stress is shown in Figure 5.1. The axial stress is linear with the axial strain and has a slope of  $E = 200 \times 10^3$  MPa.

The lateral strains for uniaxial stress are

$$\varepsilon_{22} = \varepsilon_{33} = -\nu \varepsilon_{11} \quad (5.3.10)$$

The lateral strains are shown in Figure 5.2.

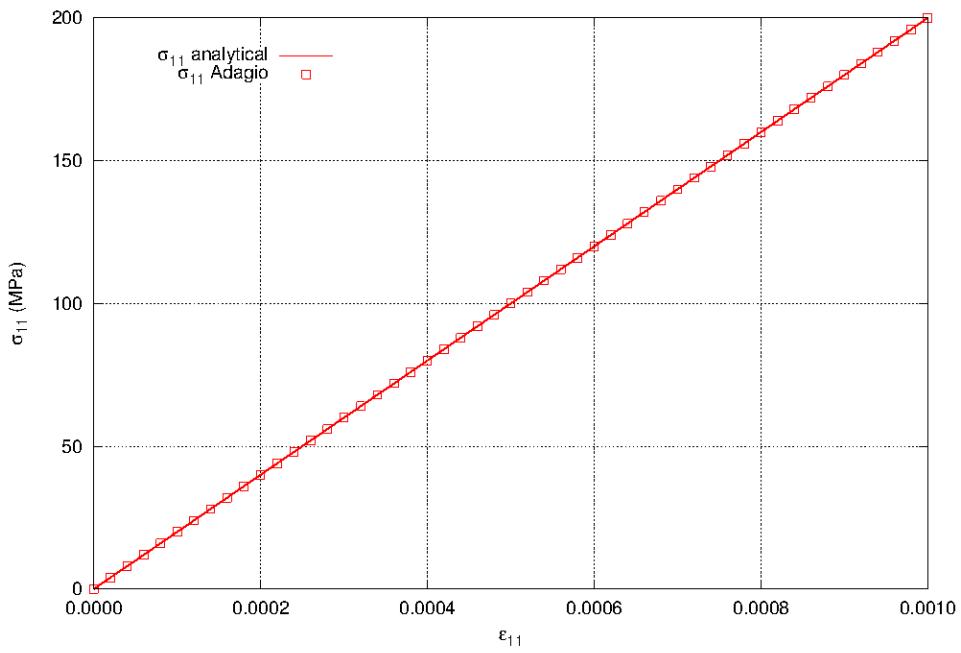


Figure 5.1: The axial stress component  $\sigma_{11}$  in uniaxial stress using the elastic model.

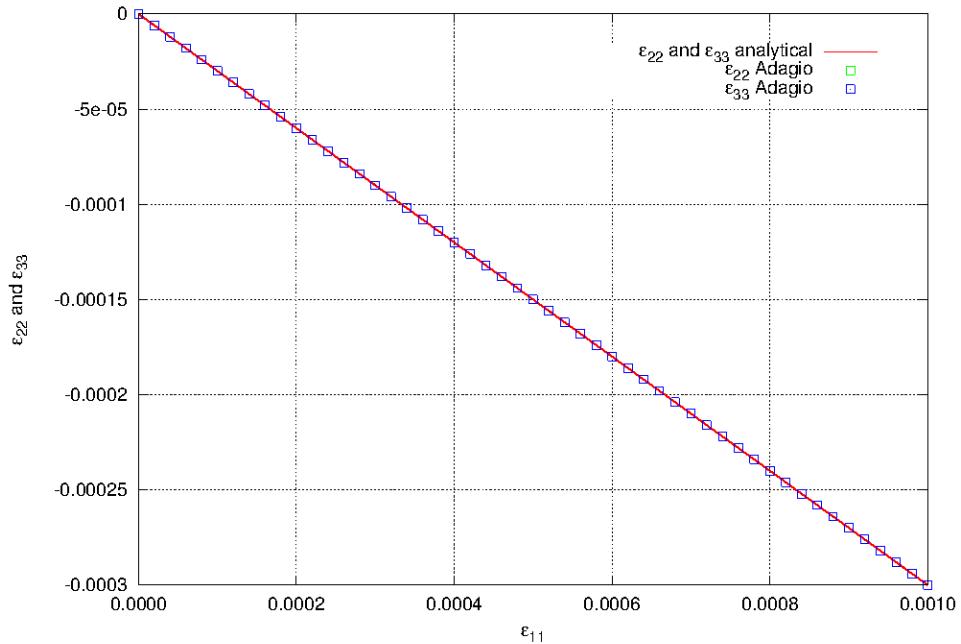


Figure 5.2: The lateral strain components  $\varepsilon_{22}$  and  $\varepsilon_{33}$  in uniaxial stress using the elastic model.

### 5.3.3.2 Biaxial Stress

The elastic model is verified in biaxial stress. Biaxial stress is a plane stress state where  $\sigma_{11} = \sigma_1$ ,  $\sigma_{22} = \sigma_2$ , and all other stress components are zero. The problem is displacement controlled in the  $x_1$  and  $x_2$  directions. If the applied strains are  $\varepsilon_{11} = \varepsilon$  and  $\varepsilon_{22} = \alpha\varepsilon$  where  $\alpha \in [0, 1]$ , then the applied displacements are

$$\begin{aligned} u_1 &= \lambda_1 - 1 \quad ; \quad \lambda_1 = \exp(\varepsilon) \\ u_2 &= \lambda_2 - 1 \quad ; \quad \lambda_2 = \exp(\alpha\varepsilon). \end{aligned} \tag{5.3.11}$$

In the following results,  $\alpha$  will be taken to be 0.45. For the plane stress state, we have  $\sigma_{33} = 0$ , which allows us to solve for  $\varepsilon_{33}$

$$\varepsilon_{33} = -\frac{\nu}{1-\nu} (1+\alpha)\varepsilon. \tag{5.3.12}$$

The component  $\varepsilon_{33}$  is shown in Figure 5.3. The in-plane stress components are

$$\begin{aligned} \sigma_{11} &= \frac{E}{1-\nu^2} (1+\alpha\nu)\varepsilon \\ \sigma_{22} &= \frac{E}{1-\nu^2} (\alpha+\nu)\varepsilon. \end{aligned} \tag{5.3.13}$$

The in-plane stress components are shown in Figure 5.4.

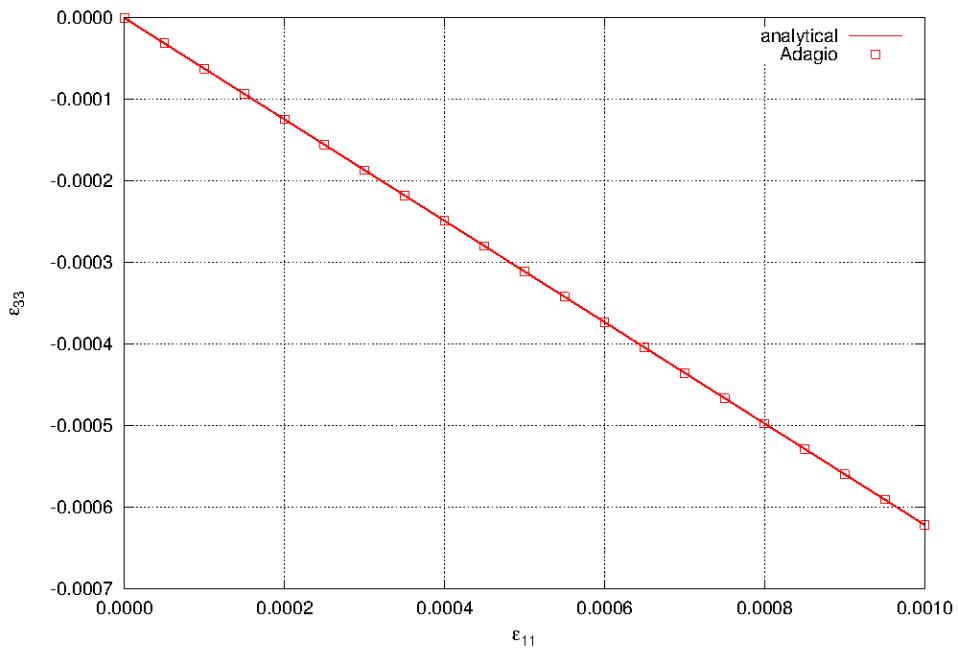


Figure 5.3: The strain component  $\varepsilon_{33}$  in biaxial stress using the elastic model.

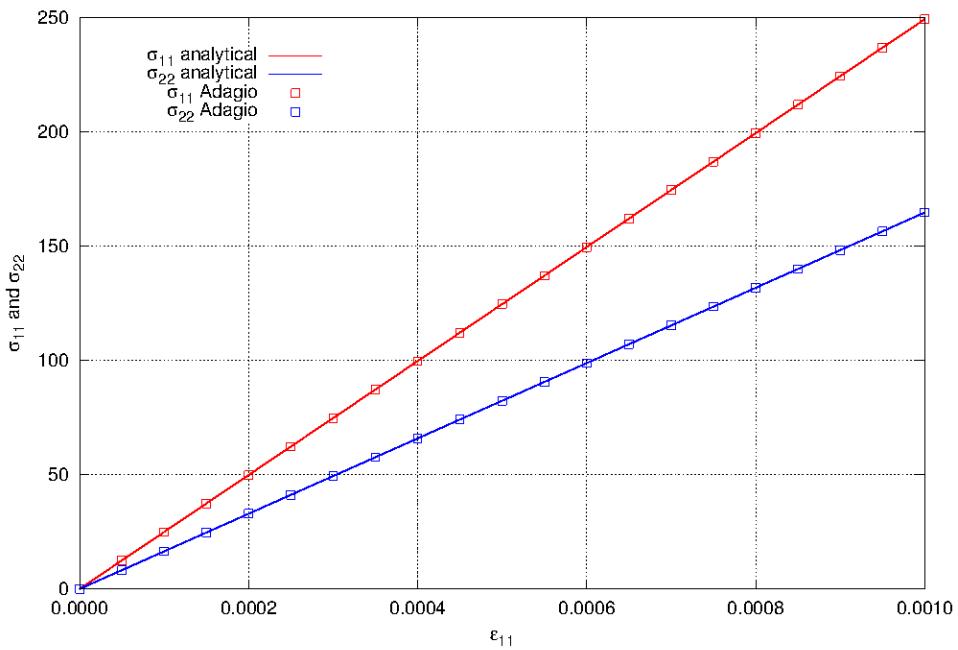


Figure 5.4: The normal stress components  $\sigma_{11}$  and  $\sigma_{22}$  in biaxial stress using the elastic model.

### 5.3.3.3 Pure Shear

The elastic model is verified in pure shear. Pure shear gives a stress state where  $\sigma_{12}$  is the only non-zero stress component. The problem is completely displacement controlled and the applied shear strain is  $\varepsilon_{12} = \varepsilon(t)$ .

The shear stress in the problem is

$$\sigma_{12} = 2\mu\varepsilon \quad (5.3.14)$$

The shear stress-strain response is shown in Figure 5.5.

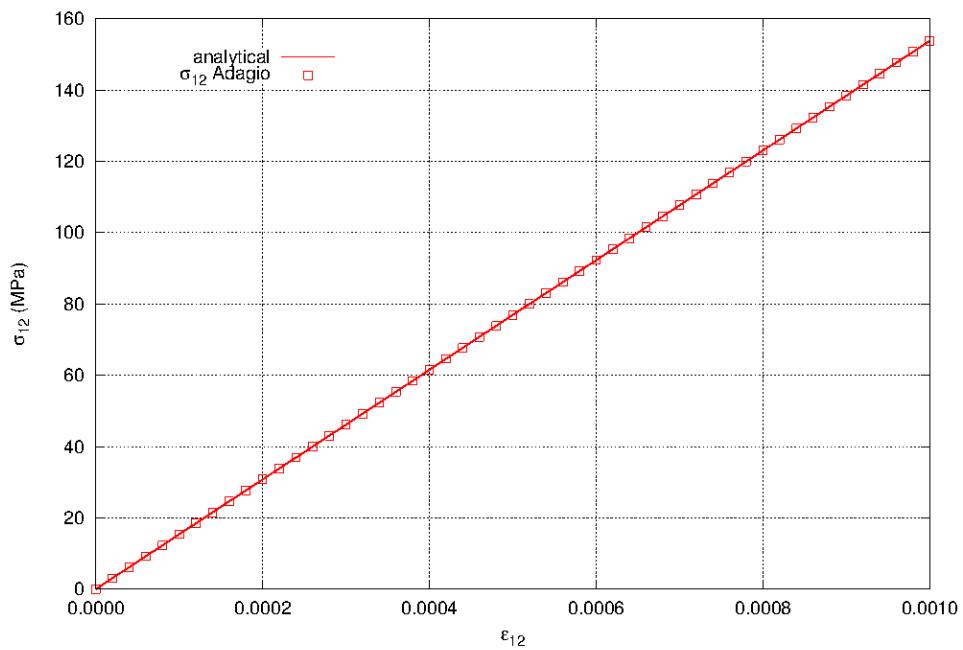


Figure 5.5: The shear stress component  $\sigma_{12}$  in pure shear using the elastic model.

### 5.3.4 User Guide

```
BEGIN PARAMETERS FOR MODEL ELASTIC
#
# Elastic constants
#
YOUNGS MODULUS = <real> E
POISSONS RATIO = <real> ν
SHEAR MODULUS = <real> G
BULK MODULUS = <real> K
LAMBDA = <real> λ
TWO MU = <real> 2μ
END [PARAMETERS FOR MODEL ELASTIC]
```

There are no output variables available for the elastic model. For information about the elastic model, consult [4].

## References

- [1] A. E. H. Love. *A Treatise on the Mathematical Theory of Elasticity*. Dover, 4th edition, 1944.
- [2] I. S. Sokolnikoff. *Mathematical Theory of Elasticity*. Krieger Publishing Company, 1956.
- [3] S. Timoshenko and J.N. Goodier. *Theory of Elasticity*. McGraw Hill Book Company, 3rd edition, 1970.
- [4] C.M. Stone. SANTOS – a two-dimensional finite element program for the quasistatic, large deformation, inelastic response of solids. Technical Report SAND90-0543, Sandia National Laboratories, Albuquerque, NM, 1996. [pdf](#).

## 5.4 Elastic Three Dimensional Orthotropic Model

### 5.4.1 Theory

The ELASTIC 3D ORTHOTROPIC model is an extension of the previously discussed ELASTIC routine and describes the linear elastic response of a material which exhibits orthotropic symmetry where the orientation of the principal material directions can be arbitrary. These principal axes are denoted as A, B, and C in the following. Thermal strains are also defined with respect to these principal material axes.

The elastic stiffness for an orthotropic material can be described in terms of the elastic compliance which relates the strain to the stress,  $\varepsilon_{ij} = \mathbb{S}_{ijkl}\sigma_{kl}$ . For a material with an orthogonal ABC coordinate system, and written in that reference frame, the elastic compliance tensor is given by

$$[\tilde{\mathbb{S}}] = \begin{bmatrix} \frac{1}{E_{AA}} & -\frac{\nu_{BA}}{E_{BB}} & -\frac{\nu_{CA}}{E_{CC}} & 0 & 0 & 0 \\ -\frac{\nu_{AB}}{E_{AA}} & \frac{1}{E_{BB}} & -\frac{\nu_{CB}}{E_{CC}} & 0 & 0 & 0 \\ -\frac{\nu_{AC}}{E_{AA}} & -\frac{\nu_{BC}}{E_{BB}} & \frac{1}{E_{CC}} & 0 & 0 & 0 \\ 0 & 0 & 0 & \frac{1}{2G_{AB}} & 0 & 0 \\ 0 & 0 & 0 & 0 & \frac{1}{2G_{BC}} & 0 \\ 0 & 0 & 0 & 0 & 0 & \frac{1}{2G_{CA}} \end{bmatrix}, \quad (5.4.1)$$

where the “ $\tilde{\cdot}$ ” is used to denote a variable in the ABC material system.

From the definition (5.4.1), it can be seen that requiring symmetry leads to relations of the form,

$$\nu_{BA} = \nu_{AB} \frac{E_{BB}}{E_{AA}} \quad ; \quad \nu_{CB} = \nu_{BC} \frac{E_{CC}}{E_{BB}} \quad ; \quad \nu_{AC} = \nu_{CA} \frac{E_{AA}}{E_{CC}}. \quad (5.4.2)$$

Therefore, only 9 independent constants are needed to fully define the model behavior.

The orthotropic model is also formulated in a hypoelastic fashion, leading to a constitutive equation (in the ABC material frame) of,

$$\overset{\circ}{\tilde{\sigma}}_{ij} = \tilde{\mathbb{C}}_{ijkl} (\tilde{D}_{kl} - \tilde{D}_{kl}^{th}), \quad (5.4.3)$$

where  $\tilde{D}_{ij}^{th}$  is the thermal strain rate.

The elastic stiffness tensor,  $\tilde{\mathbb{C}}_{ijkl}$ , is the inverse of the compliance,  $\tilde{\mathbb{C}}_{ijkl} = \tilde{\mathbb{S}}_{ijkl}^{-1}$ , and as such may be determined to be,

$$[\tilde{\mathbb{C}}] = \begin{bmatrix} \mathbb{C}_{AAAA} & \mathbb{C}_{AABB} & \mathbb{C}_{CCAA} & 0 & 0 & 0 \\ \mathbb{C}_{AABB} & \mathbb{C}_{BBBB} & \mathbb{C}_{BBCC} & 0 & 0 & 0 \\ \mathbb{C}_{CCAA} & \mathbb{C}_{BBCC} & \mathbb{C}_{CCCC} & 0 & 0 & 0 \\ 0 & 0 & 0 & 2G_{AB} & 0 & 0 \\ 0 & 0 & 0 & 0 & 2G_{BC} & 0 \\ 0 & 0 & 0 & 0 & 0 & 2G_{CA} \end{bmatrix}. \quad (5.4.4)$$

where

$$\begin{aligned} \mathbb{C}_{AAAA} &= \frac{1 - \nu_{BC}\nu_{CB}}{\Delta} E_{AA} & ; \quad \mathbb{C}_{BBBB} &= \frac{1 - \nu_{CA}\nu_{AC}}{\Delta} E_{BB} & ; \quad \mathbb{C}_{CCCC} &= \frac{1 - \nu_{AB}\nu_{BA}}{\Delta} E_{CC} \\ \mathbb{C}_{AABB} &= \frac{\nu_{BA} + \nu_{CA}\nu_{BC}}{\Delta} E_{AA} & ; \quad \mathbb{C}_{BBCC} &= \frac{\nu_{CB} + \nu_{AB}\nu_{CA}}{\Delta} E_{BB} & ; \quad \mathbb{C}_{CCAA} &= \frac{\nu_{AC} + \nu_{BC}\nu_{AB}}{\Delta} E_{CC} \end{aligned} \quad (5.4.5)$$

$$\text{and } \Delta = 1 - \nu_{AB}\nu_{BA} - \nu_{BC}\nu_{CB} - \nu_{CA}\nu_{RT} - 2\nu_{AB}\nu_{BC}\nu_{CA}.$$

See [1] for more information about the elastic three-dimensional orthotropic model.

### 5.4.2 Implementation

Given the similarities in formulation, the 3D orthotropic and elastic models are integrated in a similar fashion. Section 5.3.2 discussed many of these issues in detail for the isotropic elastic formulation. As such, in this section, special attention is paid to the treatment of the complexity associated with the orthotropic model – namely, the multiple coordinate systems.

To implement the elastic 3D orthotropic model, two coordinate systems need to be considered – the local  $ABC$  material and global  $XYZ$  coordinate systems. The former is used in defining the material response and the latter refers to the larger boundary value problem being analyzed. To map between these configurations, a user-defined coordinate system is specified that can be rotated twice about one of its current axes to give the final, desired directions. A corresponding rotation tensor,  $\tilde{Q}_{ij}$ , may also be constructed in this way and used to transform various variables. Noting that the elastic stiffness tensor is constant throughout loading enables the transformation

$$\mathbb{C}_{ijkl} = \tilde{Q}_{ai}\tilde{Q}_{bj}\tilde{Q}_{ck}\tilde{Q}_{dl}\tilde{\mathbb{C}}_{abcd} \quad (5.4.6)$$

to be performed during initialization. The “ $\tilde{\cdot}$ ” is used with the rotation tensor  $Q_{ij}$  to emphasize that it does not map between the un-rotated and rotated configurations (as defined in (5.1.1)) and is instead associated with transforming between the  $ABC$  and  $XYZ$  frames.

In the material coordinate system, the thermal strain tensor may be written as,

$$\tilde{\varepsilon}_{ij}^{th} = \varepsilon_{aa}^{th}(\theta) \delta_{ia} \delta_{ja} + \varepsilon_{bb}^{th}(\theta) \delta_{ib} \delta_{jb} + \varepsilon_{cc}^{th}(\theta) \delta_{ic} \delta_{jc}, \quad (5.4.7)$$

where  $\varepsilon_{aa}^{th}(\theta)$ ,  $\varepsilon_{bb}^{th}(\theta)$ , and  $\varepsilon_{cc}^{th}(\theta)$  are the temperature ( $\theta$ ) dependent thermal strain functions in the  $A$ ,  $B$ , and  $C$  principal material directions, respectively, and  $\delta_{ij}$  is the Kronecker delta. Using the same constant transformation,  $\tilde{Q}_{ij}$ , the  $XYZ$ -system thermal strain tensor is determined to be,

$$\varepsilon_{ij}^{th}(\theta) = \tilde{Q}_{ai} \tilde{\varepsilon}_{ab}^{th} \tilde{Q}_{jb}. \quad (5.4.8)$$

Following (5.1.7), the updated Cauchy stress may then be found to be,

$$\sigma_{ij}^{n+1} = R_{ik}^{n+1} R_{mk}^n \sigma_{mn}^n R_{nl}^n R_{jl}^{n+1} + \mathbb{C}_{ijkl} \left( \Delta t D_{kl} - (\varepsilon_{kl}^{th}(\theta^{n+1}) - \varepsilon_{kl}^{th}(\theta^n)) \right), \quad (5.4.9)$$

where the time dependency in the thermal strains is accounted for through changes in the temperature field.

### 5.4.3 Verification

The elastic 3D orthotropic model is verified through both biaxial displacement and uniaxial strain tests. The first is performed with the material and global coordinate systems aligned to investigate anisotropy while the second is done with the material coordinate system misaligned with respect to the global system. The latter also incorporates a thermal loading component to test the thermal strain contributions. In this case, it is assumed that each of the thermal strain input functions have linear slopes of  $\alpha_{aa}$ ,  $\alpha_{bb}$ , and  $\alpha_{cc}$  for the  $A$ ,  $B$ , and  $C$  principal material axes, respectively. A common zero strain reference temperature,  $T_0$ , is assumed for all three functions. The set of material properties used for these tests are given in Table 5.1.

$E_{AA} = E$	10,000.0 ksi	$G_{AB}$	100.0 ksi
$E_{BB}$	200.0 ksi	$G_{BC}$	1,000.0 ksi
$E_{CC}$	10.0 ksi	$G_{CA}$	5.0 ksi
$\nu_{AB} = \nu$	0.25	$\alpha_{aa}$	$50 \frac{\mu\epsilon}{K}$
$\nu_{BC}$	0.2	$\alpha_{bb}$	$500 \frac{\mu\epsilon}{K}$
$\nu_{CA}$	0.003	$\alpha_{cc}$	$5 \frac{\mu\epsilon}{K}$
		$\theta_0$	293 K

Table 5.1: The material properties for the elastic 3D orthotropic model used for the varying temperature, uniaxial stress tests.

#### 5.4.3.1 Biaxial Displacement

First, to investigate anisotropic effects, the case of a biaxial applied displacement of the form,

$$u_i = \lambda_1 \delta_{1i} + \lambda_2 \delta_{2i}, \quad (5.4.10)$$

is considered for a material which has its axes aligned with the global cartesian system –  $\alpha_1 = \alpha_2 = 0$  or the  $A$ ,  $B$ , and  $C$  frame is the same as the  $\hat{e}_1$ ,  $\hat{e}_2$ , and  $\hat{e}_3$ . To simplify the problem,  $\lambda_2 = \frac{1}{2}\lambda_1$  and it can be shown that (noting  $\sigma_{33} = 0$  from a corresponding traction free condition),

$$\begin{aligned}\varepsilon_{11} &= \ln(1 + \lambda_1), \\ \varepsilon_{22} &= \ln\left(1 + \frac{1}{2}\lambda_1\right) \\ \varepsilon_{33} &= -\frac{\nu_{AC} + \nu_{BC}\nu_{AB}}{1 - \nu_{AB}\nu_{BA}}\varepsilon_{11} - \frac{\nu_{BC} + \nu_{BA}\nu_{AC}}{1 - \nu_{AB}\nu_{BA}}\varepsilon_{22}.\end{aligned}\quad (5.4.11)$$

With the strain state known, analytical stresses may be found via Hooke's law. The corresponding results of both the numerical and analytical results are presented below in Figure 5.6. Numerical results are found through a single element test. Importantly, by comparing the results of Figures 5.6a and 5.6b the expected and desired anisotropy may be clearly seen in the vast difference of stress magnitudes (as indicated by the figure scaling). Additionally, the matching results serves to verify the model under such conditions.

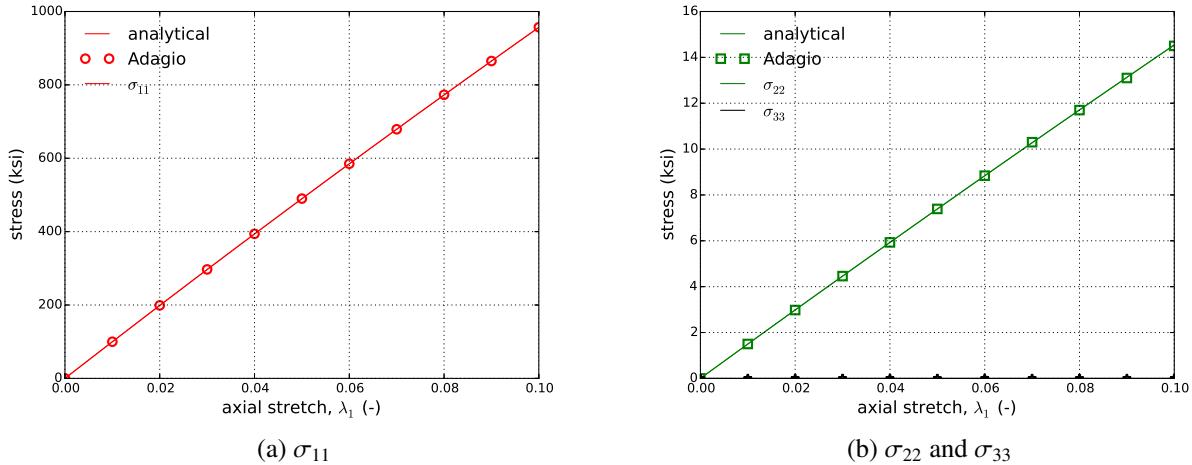


Figure 5.6: Analytical and numerical results of axial  $\sigma_{11}$  and transverse,  $\sigma_{22}$  and  $\sigma_{33}$ , as a function of the stretch  $\lambda_1$ .

### 5.4.3.2 Uniaxial Strain

Secondly, the capabilities of this model under arbitrary rotations are explored. To be able to analytically consider this problem, a uniaxial strain ( $\varepsilon_{ij} = \varepsilon_{11}\delta_{i1}\delta_{j1}$ ) loading is investigated. The material properties are rotated with the specified orientations per Equations (5.4.6) and (5.4.8) using the specified orientations in Table 5.2. A combined thermal-mechanical loading is considered. Specifically, the material is first stretched to the specified strain and that strain is then held fixed during a heating step ( $\Delta T = 400$  K) to investigate the ability of the model to accurately incorporate anisotropic coefficients of thermal expansion. The results for both the analytical and numerical

(from a corresponding single element simulation) analyses are shown in Figure 5.7 with the normal and shear stresses presented in Figures 5.7a and 5.7b respectively. Clear agreement may be seen during both the thermal and mechanical loading stages including the anisotropic effects further verifying model capabilities.

$\alpha_1$	30	Direction 1	3
$\alpha_2$	60	Direction 2	1

Table 5.2: The coordinate system rotations used with the elastic 3D orthotropic model for the uniaxial strain test.

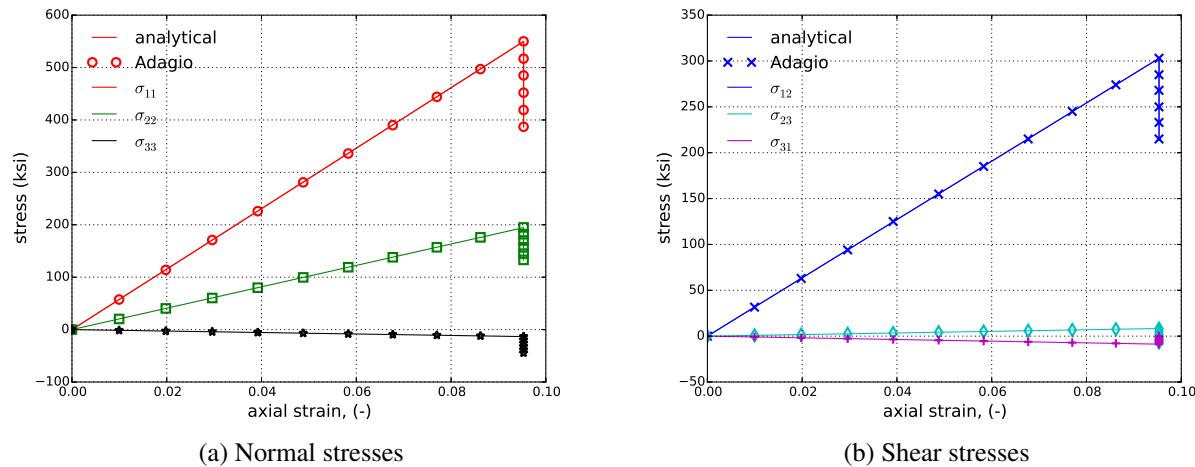


Figure 5.7: Analytical and numerical results of the stress state through a thermomechanical uniaxial strain loading as a function of the axial strain  $\varepsilon_{11}$ .

#### 5.4.4 User Guide

```

BEGIN PARAMETERS FOR MODEL ELASTIC_3D_ORTHOTROPIC
#
# Elastic constants
#
YOUNGS MODULUS = <real> E
POISSONS RATIO = <real> ν
SHEAR MODULUS = <real> G
BULK MODULUS = <real> K
LAMBDA = <real> λ
TWO MU = <real> 2μ
#
# Material coordinates system definition
#
COORDINATE SYSTEM = <string> coordinate_system_name
DIRECTION FOR ROTATION = <real> 1|2|3
ALPHA = <real> α1 (degrees)
SECOND DIRECTION FOR ROTATION = <real> 1|2|3
SECOND ALPHA = <real> α2 (degrees)
#
# Required parameters
#
YOUNGS MODULUS AA = <real> EAA
YOUNGS MODULUS BB = <real> EBB
YOUNGS MODULUS CC = <real> ECC
POISSONS RATIO AB = <real> νAB
POISSONS RATIO BC = <real> νBC
POISSONS RATIO CA = <real> νCA
SHEAR MODULUS AB = <real> GAB
SHEAR MODULUS BC = <real> GBC
SHEAR MODULUS CA = <real> GCA
#
# Thermal strain functions
#
THERMAL STRAIN AA FUNCTION = <string> εthaa(θ)
THERMAL STRAIN BB FUNCTION = <string> εthbb(θ)
THERMAL STRAIN CC FUNCTION = <string> εthcc(θ)
#
END [PARAMETERS FOR MODEL ELASTIC_3D_ORTHOTROPIC]

```

There are no output variables available for the Elastic Three-Dimensional Orthotropic material model.

## References

[1] A.E. Green and W. Zerna. *Theoretical Elasticity, 2nd Edition*. Clarendon Press, Oxford, 1968.

## 5.5 Neo-Hookean Model

### 5.5.1 Theory

The neo-Hookean model is a hyperelastic generalization of isotropic, small-strain linear elasticity. The stress-strain response for the neo-Hookean model may be determined from a free energy function - in this case the strain energy density,  $W$ . The form of the strain energy density ([1]) is

$$W(C_{ij}) = \frac{1}{2}K \left[ \frac{1}{2} (J^2 - 1) - \ln J \right] + \frac{1}{2}\mu (\bar{C}_{kk} - 3) \quad , \quad (5.5.1)$$

where  $K$  and  $\mu$  are the bulk and shear moduli, respectively. The deformation measure is given by  $C_{ij}$ , the components of the right Cauchy-Green tensor, where  $C_{ij} = F_{ki}F_{kj}$ . The determinant of the deformation gradient is given by  $J$  and is a measure of the volumetric part of the deformation.  $\bar{C}_{ij}$  provides the isochoric part of the deformation and is given by

$$\bar{C}_{ij} = \bar{F}_{ki}\bar{F}_{kj}, \quad ; \quad \bar{F}_{ij} = J^{-1/3}F_{ij} \quad . \quad (5.5.2)$$

The second Piola-Kirchoff stress, with components  $S_{ij}$ , may be determined by taking a derivative of the strain energy density and the Cauchy stress may be found by mapping from the second Piola-Kirchoff stress. The components of the Cauchy stress are

$$\sigma_{ij} = \frac{1}{2}K \left( J - \frac{1}{J} \right) \delta_{ij} + J^{-5/3}\mu \left( B_{ij} - \frac{1}{3}B_{kk}\delta_{ij} \right) \quad , \quad (5.5.3)$$

where  $B_{ij} = F_{ik}F_{jk}$ , are the components of the left Cauchy-Green tensor and  $\delta_{ij}$  is the Kronecker delta.

Linearizing (5.5.3) we recover small strain linear elasticity

$$\begin{aligned} \sigma_{ij} &= \left( K - \frac{2}{3}\mu \right) u_{k,k}\delta_{ij} + \mu (u_{i,j} + u_{j,i}) \\ &= \left( K - \frac{2}{3}\mu \right) \varepsilon_{kk}\delta_{ij} + 2\mu\varepsilon_{ij} \quad . \end{aligned} \quad (5.5.4)$$

The neo-Hookean model is used for the recoverable (elastic) part for a number of inelastic, finite deformation constitutive models.

### 5.5.2 Implementation

As a hyperelastic model, the current state of the material may be determined by the total deformation. To this end we use the polar decomposition of the deformation gradient,

$$F_{ij} = V_{ik}R_{kj} \quad , \quad (5.5.5)$$

in which  $V_{ij}$  are the components of the left stretch tensor and  $R_{ij}$  is the corresponding rotation. Noting that,

$$B_{ij} = V_{ik}V_{kj} \quad , \quad (5.5.6)$$

and  $J = \det(V_{ij})$ , the Cauchy stress (via (5.5.3)) is found. The unrotated stress,  $T_{ij}$ , which is needed for internal force calculations in Sierra/SM, is found using the transformation

$$T_{ij} = R_{ki}\sigma_{kl}R_{lj} \quad . \quad (5.5.7)$$

### 5.5.3 Verification

It is possible to find closed form solutions for a number of loadings. Five problems are described here: uniaxial stress, pure shear strain, pure shear stress, uniaxial strain and simple shear. One set of material properties was used for all tests and they are given in Table 5.3. The elastic modulus and Poisson's ratio are given in addition to the bulk and shear moduli.

$K$	0.5 MPa	$\mu$	0.375 MPa
$E$	0.9 MPa	$\nu$	0.2

Table 5.3: The material properties for the neo-Hookean model used for both the uniaxial and simple shear tests.

#### 5.5.3.1 Uniaxial Stress

For uniaxial stress we will assume, without loss of generality, that  $\sigma_{11} \neq 0$ . The deformation, in terms of the components of the left stretch tensor, for this stress state is

$$V_{11} = \lambda_1 \quad ; \quad V_{22} = V_{33} = \lambda_2 \quad , \quad (5.5.8)$$

with all other components being zero.

The Cauchy stress is given by (5.5.3), however for simplicity we will use the Kirchhoff stress instead

$$\tau_{ij} = J\sigma_{ij} \quad , \quad (5.5.9)$$

where in what follows  $\tau_{11} = \tau$ . With the lateral stresses being zero we have two equations

$$\begin{aligned}\tau &= \frac{K}{2} (J^2 - 1) + \frac{2}{3} \mu J^{-2/3} (\lambda_1^2 - \lambda_2^2) \\ 0 &= \frac{K}{2} (J^2 - 1) - \frac{1}{3} \mu J^{-2/3} (\lambda_1^2 - \lambda_2^2) \quad .\end{aligned}\tag{5.5.10}$$

First, we solve for  $J$  by looking at the trace of the stress tensor. This gives us

$$\tau = \frac{3K}{2} (J^2 - 1) \quad ; \quad J = \sqrt{1 + \frac{2\tau}{3K}} \quad .\tag{5.5.11}$$

Once we have  $J$  we can write  $\lambda_2^2 = J/\lambda_1$  and solve for  $\lambda_1$  by looking at the deviatoric part of the Kirchhoff stress. For this we have

$$\tau = \mu J^{-2/3} \left( \lambda_1^2 - \frac{J}{\lambda_1} \right) \quad .\tag{5.5.12}$$

Rearranging we get a cubic equation for  $\lambda_1$

$$\lambda_1^3 - \left( \frac{\tau}{\mu} J^{2/3} \right) \lambda_1 - J = 0 \quad .\tag{5.5.13}$$

A solution for this can be found with the following substitution

$$\lambda_1 = x + \frac{p}{3x} \quad ; \quad p = \frac{\tau}{\mu} J^{2/3} \quad ,\tag{5.5.14}$$

which gives a quadratic equation for  $x^3$

$$x^6 - Jx^3 + \frac{p^3}{27} = 0 \quad .\tag{5.5.15}$$

The one meaningful solution to this polynomial is

$$x = \left[ \frac{J}{2} + \sqrt{\left( \frac{J}{2} \right)^2 - \left( \frac{p}{3} \right)^3} \right]^{1/3} \quad ,\tag{5.5.16}$$

with which we can substitute into (5.5.14) to get  $\lambda_1$ . With  $J$  and  $\lambda_1$  we can solve for  $\lambda_2$ . Note that in this solution the axial Kirchhoff stress,  $\tau$ , is the independent variable.

This solution is compared to the solution from a single element problem in Sierra/SM in Figures 5.8 and 5.9. It should be noted that the response of the neo-Hookean model is *slightly* nonlinear. The linear elastic solution is given by the green line in each figure.

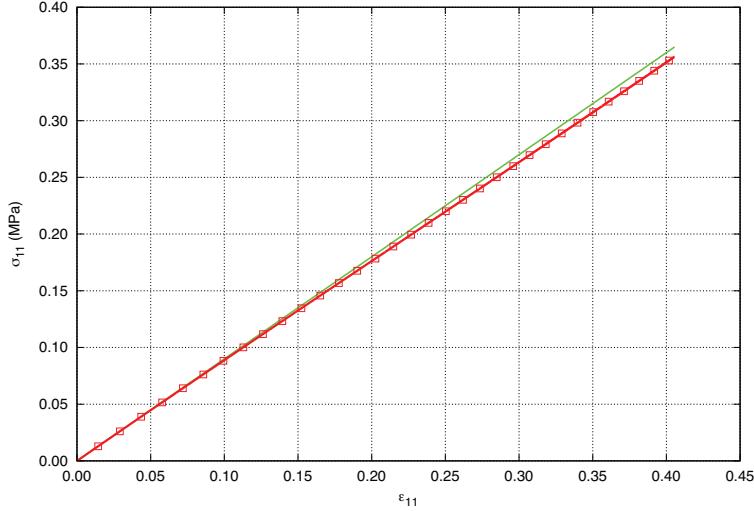


Figure 5.8: Analytical and numerical results for the uniaxial stress. The green line gives the linear elastic response.

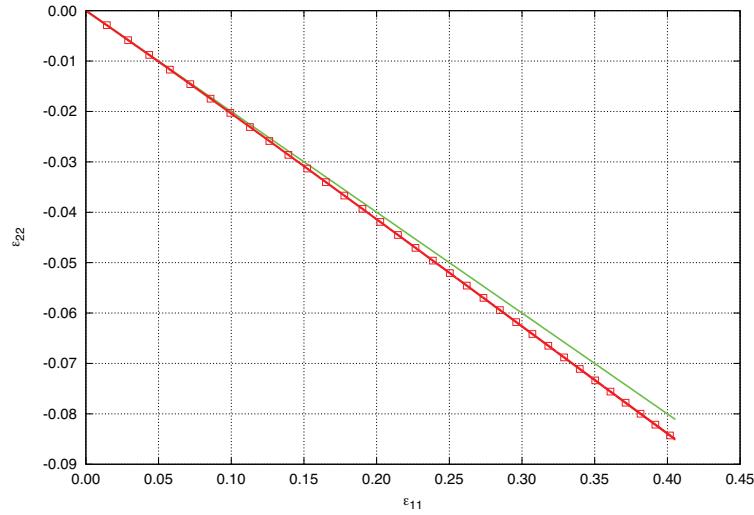


Figure 5.9: Analytical and numerical results for the lateral strain. The green line gives the linear elastic response.

### 5.5.3.2 Pure Shear Strain

For pure shear strain the deformation gradient, which is symmetric, is

$$[F_{ij}] = \frac{1}{2} \begin{bmatrix} (\lambda + \lambda^{-1}) & (\lambda - \lambda^{-1}) & 0 \\ (\lambda - \lambda^{-1}) & (\lambda + \lambda^{-1}) & 0 \\ 0 & 0 & 2 \end{bmatrix}, \quad (5.5.17)$$

which gives no volume change,  $J = 1$ . Since there is no volume change, the Kirchhoff stress is equal to the Cauchy stress:  $\tau = \sigma$ . Using (5.5.3), the non-zero stress components are

$$\sigma_{12} = \frac{\mu}{2} (\lambda^2 - \lambda^{-2})$$

$$\sigma_{11} = \sigma_{22} = \frac{\mu}{3} \left[ \frac{1}{2} (\lambda^2 + \lambda^{-2}) - 1 \right] \quad (5.5.18)$$

$$\sigma_{33} = \frac{\mu}{3} (2 - \lambda^2 + \lambda^{-2}) \quad .$$

The results of a single element problem in Sierra/SM are compared with the analytical solution in Figure 5.10. It is interesting to note that the normal stresses,  $\sigma_{11}$ ,  $\sigma_{22}$ , and  $\sigma_{33}$  are not equal to zero. This is a much different result than what we get for the linear hypoelastic model.

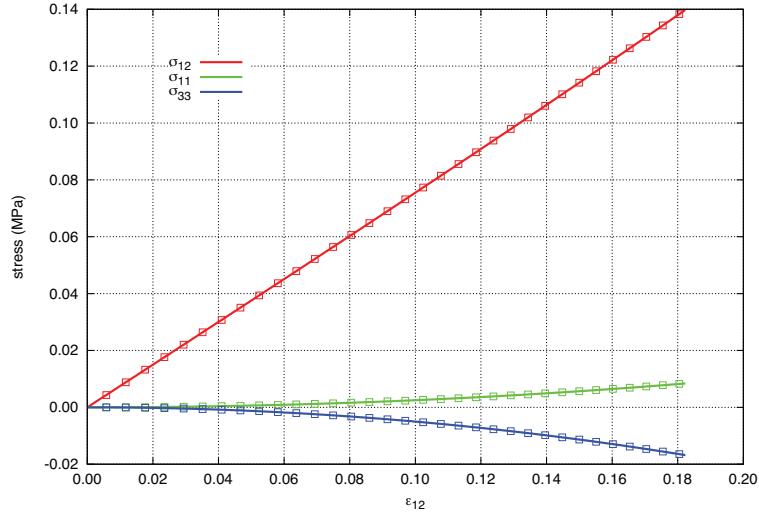


Figure 5.10: Analytical and numerical results for the neo-Hookean model subjected to a pure shear strain. The solid lines are the analytical results and the boxes are results from Sierra/SM.

### 5.5.3.3 Pure Shear Stress

Since pure shear strain did not result in a pure shear stress state, we do not expect a pure shear stress state to result in a pure shear strain state. For pure shear stress the only non-zero stress component is

$$\sigma_{12} = \tau = \mu B_{12} \quad , \quad (5.5.19)$$

and using (5.5.3) it can be shown that  $J = 1$ . The deformation, in terms of the left Cauchy-Green deformation tensor, is

$$[B_{ij}] = \begin{bmatrix} B & B_{12} & 0 \\ B_{12} & B & 0 \\ 0 & 0 & B \end{bmatrix} . \quad (5.5.20)$$

The equation we need to solve for the deformation is  $\det \mathbf{B} = 1$ . This gives us the cubic equation

$$B^3 - \left(\frac{\tau}{\mu}\right)^2 B - 1 = 0 . \quad (5.5.21)$$

This is a cubic equation of the same form as that in the uniaxial stress problem. We make the substitution

$$B = x + \frac{p}{3x} ; \quad p = \left(\frac{\tau}{\mu}\right)^2 . \quad (5.5.22)$$

This gives us a quadratic equation in  $x^3$

$$x^6 - x^3 + \frac{p^3}{27} = 0 , \quad (5.5.23)$$

which has the solution

$$x = \left[ \frac{1}{2} + \frac{1}{2} \sqrt{1 - \frac{4p^3}{27}} \right]^{1/3} . \quad (5.5.24)$$

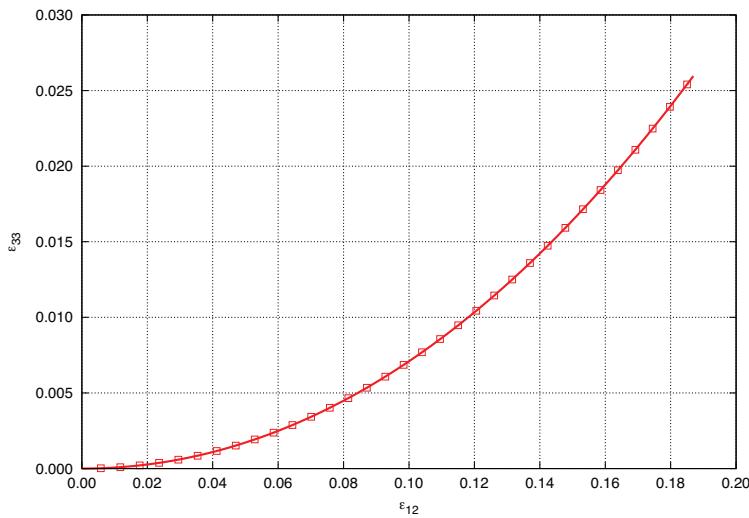


Figure 5.11: Analytical and numerical results for the neo-Hookean model subjected to a pure shear stress. The curve gives the logarithmic strain component,  $\varepsilon_{33} = \frac{1}{2} \ln B$ . The solid lines are the analytical results and the boxes are results from Sierra/SM.

Substituting this solution into (5.5.22) gives  $B$ .

The results of a single element problem in Sierra/SM are compared with the analytical solution in Figure 5.11. Of interest here is the fact that the normal strains,  $\varepsilon_{11}$ ,  $\varepsilon_{22}$ , and  $\varepsilon_{33}$  are not equal to zero. Again, this is a different result than what we get for the linear hypoelastic model.

#### 5.5.3.4 Uniaxial Strain

First, utilizing a displacement condition corresponding to uniaxial strain results in a deformation gradient of the form,

$$F_{ij} = \lambda \delta_{1i} \delta_{1j} + \delta_{2i} \delta_{2j} + \delta_{3i} \delta_{3j}. \quad (5.5.25)$$

By evaluating relation (5.5.3) with this deformation field produces stresses that may be written as

$$\begin{aligned} \sigma_{11} &= \frac{1}{2}K \left( \lambda - \frac{1}{\lambda} \right) + \frac{2}{3}\mu \left( \lambda^2 - 1 \right) \lambda^{-5/3}, \\ \sigma_{22} = \sigma_{33} &= \frac{1}{2}K \left( \lambda - \frac{1}{\lambda} \right) - \frac{1}{3}\mu \left( \lambda^2 - 1 \right) \lambda^{-5/3} \end{aligned} \quad (5.5.26)$$

with the shear stress components equal to zero. Both the corresponding analytical and numerical solutions are presented in Figure 5.12.

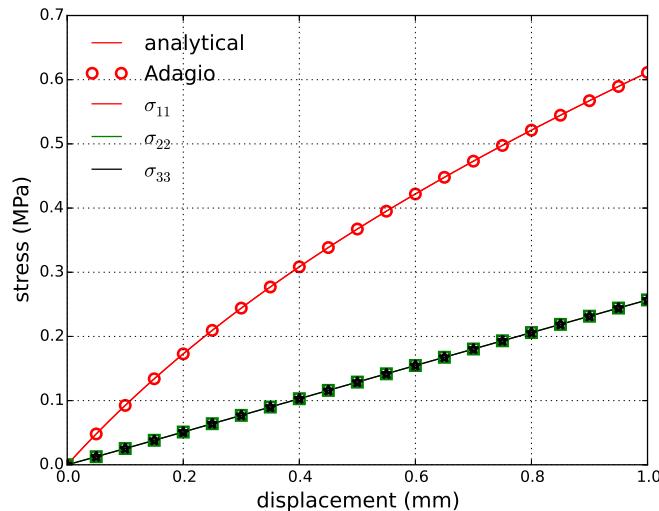


Figure 5.12: Analytical and numerical results for the uniaxial stretch case.

#### 5.5.3.5 Simple Shear

For the simple shear case, a deformation gradient of the form,

$$F_{ij} = \delta_{ij} + \gamma \delta_{1i} \delta_{2j}, \quad (5.5.27)$$

is assumed. Noting this is a volume preserving deformation ( $J = 1$ ) and again evaluating (5.5.3) produces stresses that may be written as,

$$\sigma_{11} = \frac{2}{3} \mu \gamma^2 \quad (5.5.28)$$

$$\sigma_{22} = \sigma_{33} = -\frac{1}{3} \mu \gamma^2 \quad (5.5.28)$$

$$\sigma_{12} = \mu \gamma \quad (5.5.29)$$

Both the corresponding analytical and numerical solutions are presented in Figure. 5.13.

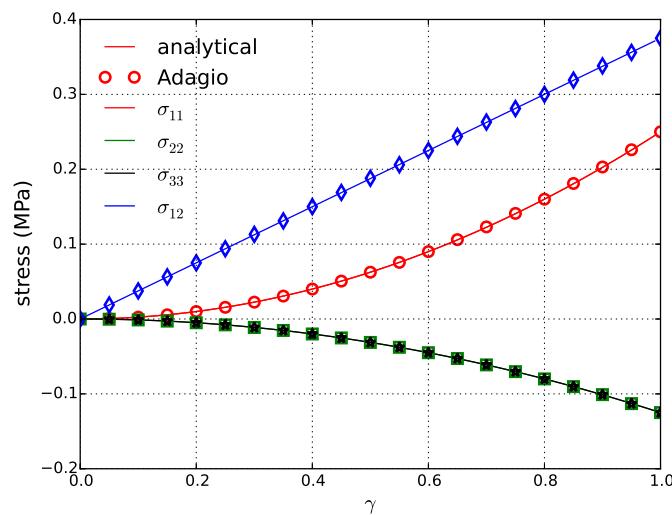


Figure 5.13: Analytical and numerical results for the simple shear case.

### 5.5.4 User Guide

```
BEGIN PARAMETERS FOR MODEL NEO_HOOKEAN
#
# Elastic constants
#
YOUNGS MODULUS = <real> E
POISSONS RATIO = <real> ν
SHEAR MODULUS = <real> G
BULK MODULUS = <real> K
LAMBDA = <real> λ
TWO MU = <real> 2μ
END [PARAMETERS FOR MODEL NEO_HOOKEAN]
```

There are no output variables available for the neo-Hookean model.

### References

- [1] J.C. Simo and T.J.R. Hughes. *Computational Inelasticity*. Springer-Verlag, New York, NY, 1998.

## 5.6 Elastic-Plastic Model

### 5.6.1 Theory

The elastic-plastic model is a hypoelastic, rate-independent linear hardening plasticity model. The rate form of the constitutive equation assumes an additive split of the rate of deformation into an elastic and plastic part

$$D_{ij} = D_{ij}^e + D_{ij}^p \quad (5.6.1)$$

The stress rate only depends on the elastic strain rate in the problem

$$\overset{\circ}{\sigma}_{ij} = \mathbb{C}_{ijkl} D_{kl}^e \quad (5.6.2)$$

where  $\mathbb{C}_{ijkl}$  are the components of the fourth-order, isotropic elasticity tensor.

The key to the model is finding the plastic rate of deformation. For associated flow the plastic rate of deformation is in a direction normal to the yield surface. The yield surface is given by

$$f(\sigma_{ij}, \alpha_{ij}, \bar{\varepsilon}^p) = \phi(\sigma_{ij}, \alpha_{ij}) - \bar{\sigma}(\bar{\varepsilon}^p) = 0 \quad (5.6.3)$$

where  $\phi$  is the effective stress,  $\alpha_{ij}$  are the components of the back stress (used with kinematic hardening), and  $\bar{\sigma}$  is the hardening function which is a function of an internal state variable, the equivalent plastic strain  $\bar{\varepsilon}^p$ . An example of such a yield surface (plotted in the deviatoric  $\pi$ -plane) is presented below in Figure 5.14. The isotropy of the yield surface is clearly evident.

For the elastic plastic model a linear hardening law is assumed

$$\bar{\sigma} = \sigma_y + H' \bar{\varepsilon}^p \quad (5.6.4)$$

where  $\sigma_y$  is the yield stress and  $H'$  is the hardening modulus.

If the stress state is such that  $f < 0$ , the behavior of the material is elastic; if the stress state is such that  $f = 0$  and  $\dot{f} < 0$ , i.e. the strain rate brings the stress inside the yield surface, then the behavior of the material is elastic; if the stress state is such that  $f = 0$  and  $\dot{f} > 0$ , i.e. the strain rate brings the stress outside the yield surface, then plastic deformation occurs.

We assume associated flow in this model, which gives the plastic rate of deformation

$$D_{ij}^p = \dot{\gamma} \frac{\partial \phi}{\partial \sigma_{ij}} \quad (5.6.5)$$

where  $\dot{\gamma}$  is the consistency parameter. For the elastic-plastic model the yield surface is assumed to be a von Mises yield surface with a back stress tensor to denote the center of the yield surface. The effective stress for a von Mises yield surface is

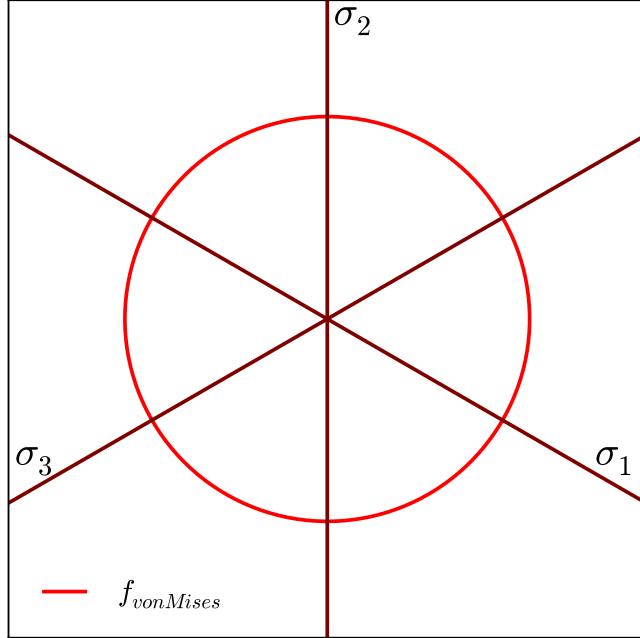


Figure 5.14: Example von Mises yield surface ( $J_2$ ) used by the elastic-plastic model presented in the deviatoric  $\pi$ -plane. In this case the surface is plotted for  $\alpha_{ij} = 0$  and  $\bar{\varepsilon}^p = 0$ .

$$\phi(\sigma_{ij}) = \sqrt{\frac{3}{2}\xi_{ij}\xi_{ij}} \quad ; \quad \xi_{ij} = s_{ij} - \alpha_{ij} \quad (5.6.6)$$

where  $s_{ij}$  are the components of the deviatoric stress tensor

$$s_{ij} = \sigma_{ij} - \frac{1}{3}\delta_{ij}\sigma_{kk} \quad (5.6.7)$$

and  $\alpha_{ij}$  are the components of the back stress tensor, another internal state variable.

The equivalent plastic strain is found through equating the rate of plastic work

$$\dot{W}^p = \sigma_{ij}D_{ij}^p = \bar{\sigma}\dot{\varepsilon}^p \quad \rightarrow \quad \dot{\varepsilon}^p = \dot{\gamma} \quad (5.6.8)$$

$$\bar{\varepsilon}^p = \int_0^t \dot{\gamma} dt$$

Finally, the model allows for kinematic hardening through the back stress. The back stress is a symmetric, deviatoric rank two tensor that evolves in the following manner

$$\dot{\alpha}_{ij} = \frac{2}{3} (1 - \beta) H' D_{ij}^p \quad (5.6.9)$$

The radius of the yield surface can be defined,  $R = \sqrt{\xi_{ij}\xi_{ij}}$ . The evolution of the radius of the yield surface is given by

$$\dot{R} = \sqrt{\frac{2}{3}\beta H' \dot{\varepsilon}^p} \quad (5.6.10)$$

In (5.6.9) and (5.6.10) the parameter  $\beta \in [0, 1]$  distributes the hardening between isotropic and kinematic hardening. If  $\beta = 1$  the hardening is isotropic, if  $\beta = 0$  the hardening is kinematic, and if  $\beta$  is between 0 and 1 the hardening is a combination of isotropic and kinematic.

## 5.6.2 Implementation

The elastic-plastic linear hardening model is implemented using a predictor-corrector algorithm. First, an elastic trial stress state is calculated. This is done by assuming that the rate of deformation is completely elastic

$$T_{ij}^{tr} = T_{ij}^n + \Delta t (\lambda \delta_{ij} d_{kk} + 2\mu d_{ij}) \quad (5.6.11)$$

The trial stress state can be decomposed into a pressure and a deviatoric stress

$$p^{tr} = \frac{1}{3} T_{kk}^{tr} \quad ; \quad s_{ij}^{tr} = T_{ij}^{tr} - p^{tr} \delta_{ij} \quad (5.6.12)$$

The difference between the deviatoric trial stress state and the back stress is compared to the current radius of the yield surface

$$\xi_{ij}^{tr} = s_{ij}^{tr} - \alpha_{ij}^n \quad ; \quad \xi_{tr}^2 = \xi_{ij}^{tr} \xi_{ij}^{tr} \quad (5.6.13)$$

If  $\xi_{tr}^2 < R^2$  then the strain rate is elastic and the stress update is finished. If  $\xi_{tr}^2 > R^2$  then plastic deformation has occurred. The algorithm then needs to determine the extent of plastic deformation.

The normal to the yield surface,  $N_{ij}$  is assumed to lie in the direction of the trial stress state. This gives us the following expression for  $N_{ij}$

$$N_{ij} = \frac{\xi_{ij}^{tr}}{\|\xi_{ij}^{tr}\|} \quad (5.6.14)$$

In what follows the change in the yield surface is assumed to be a linear combination of isotropic and kinematic hardening, i.e. the yield surface grows and or moves. Using a backward Euler algorithm the final deviatoric stress state is

$$s_{ij}^{n+1} = s_{ij}^{tr} - \Delta t 2\mu d_{ij}^p \quad (5.6.15)$$

where the plastic strain increment is

$$\Delta t d_{ij}^p = \sqrt{\frac{3}{2}} \Delta \bar{\varepsilon}^p N_{ij} \quad (5.6.16)$$

The updated back stress is

$$\alpha_{ij}^{n+1} = \alpha_{ij}^n + \sqrt{\frac{2}{3}} (1 - \beta) (H' \Delta \bar{\varepsilon}^p) N_{ij} \quad (5.6.17)$$

and the updated radius of the yield surface is

$$R^{n+1} = R^n + \beta \sqrt{\frac{2}{3}} (H' \Delta \bar{\varepsilon}^p) \quad (5.6.18)$$

Combining these expressions we get an equation for the change in the equivalent plastic strain over the load step

$$(3\mu + H') \Delta \bar{\varepsilon}^p = \sqrt{\frac{3}{2}} (\|\xi_{ij}^{tr}\| - R^n) \quad ; \quad \xi_{ij}^{tr} = s_{ij}^{tr} - \alpha_{ij}^n \quad (5.6.19)$$

With  $\Delta \bar{\varepsilon}^p$  we can update the stress and the internal state variables.

### 5.6.3 Verification

The elastic-plastic material model is verified for a number of loading conditions. The elastic properties used in these analyses are  $E = 70$  GPa and  $\nu = 0.25$ . The hardening parameters are  $\sigma_y = 200$  MPa,  $H' = 500$  MPa, and  $\beta = 1$ . By setting  $\beta = 1$  the hardening is isotropic.

#### 5.6.3.1 Uniaxial Stress

The elastic-plastic model is tested in uniaxial tension. The test looks at the stress, strain, and equivalent plastic strain and compares these values against analytical results for the same problem. The model is tested in uniaxial stress in the  $x$  ( $x_1$ ) directions.

For the uniaxial stress problem, the only non-zero stress component is  $\sigma_{11}$ . In the analysis that follows  $\sigma_{11} = \sigma$ . There are three non-zero strain components,  $\varepsilon_{11}$ ,  $\varepsilon_{22}$ , and  $\varepsilon_{33}$ . In the analysis that follows  $\varepsilon_{11} = \varepsilon$ . Furthermore, the axial elastic stress,  $\varepsilon_{11}^e = \sigma/E$  will be denoted by  $\varepsilon^e$ .

## Axial Stresses

The uniaxial stress calculated by the model in Adagio is compared to an analytical solution. For uniaxial loading in the  $x_1$  direction, the effective stress is

$$\phi = \sigma \quad (5.6.20)$$

If the stress state is on the yield surface, then  $\phi = \bar{\sigma}(\bar{\varepsilon}^p)$ , so the axial stress, as a function of the hardening function, is

$$\sigma = \bar{\sigma}(\bar{\varepsilon}^p) = \sigma_y + H' \bar{\varepsilon}^p \quad (5.6.21)$$

The stress state can be calculated from the hardening law and the anisotropy parameters.

To evaluate the axial stress we need the equivalent plastic strain as a function of the axial strain. If we equate the rate of plastic work we get

$$\bar{\sigma} \dot{\varepsilon}^p = \sigma (\dot{\varepsilon} - \dot{\varepsilon}^e) \quad \rightarrow \quad \dot{\varepsilon}^p = \dot{\varepsilon} - \dot{\varepsilon}^e \quad (5.6.22)$$

which, when integrated, gives us an equation for the equivalent plastic strain

$$\bar{\varepsilon}^p = \frac{E\varepsilon - \sigma_y}{E + H'} \quad (5.6.23)$$

The equivalent plastic strain can then be used in (5.13.17) to find the axial stress,  $\sigma$

$$\sigma = \frac{\sigma_y + H'\varepsilon}{1 + H'/E} \quad (5.6.24)$$

The axial stresses is shown in Figure 5.15.

## Lateral Strains

For the lateral strains we need the plastic strains and therefore the normal to the yield surface. The components of the normal to the yield surface are

$$\frac{\partial\phi}{\partial\sigma_{11}} = 1 \quad ; \quad \frac{\partial\phi}{\partial\sigma_{22}} = \frac{\partial\phi}{\partial\sigma_{33}} = -\frac{1}{2} \quad (5.6.25)$$

The elastic axial and lateral strain components are

$$\varepsilon_{11}^e = \frac{\sigma}{E} = \varepsilon^e \quad ; \quad \varepsilon_{22}^e = \varepsilon_{33}^e = -\nu \frac{\sigma}{E} = -\nu \varepsilon^e \quad (5.6.26)$$

The plastic axial strain component is

$$\varepsilon_{11}^p = \varepsilon_{11} - \frac{\sigma}{E} = \varepsilon - \varepsilon^e \quad (5.6.27)$$

which comes from the additive decomposition of the strain rates. Using the equivalent plastic strain (5.13.19) we can find the lateral plastic strain components

$$\varepsilon_{22}^p = \varepsilon_{33}^p = -\frac{1}{2}(\varepsilon - \varepsilon^e) \quad (5.6.28)$$

The lateral *total* strain components prior to yield are  $\varepsilon_{22} = \varepsilon_{33} = -\nu\varepsilon$ . After yield they are

$$\varepsilon_{22} = \varepsilon_{33} = -\nu\varepsilon^e - \frac{1}{2}\bar{\varepsilon}^p \quad (5.6.29)$$

where  $\varepsilon^e = \sigma/E$ .

Results are shown in Figure 5.16.

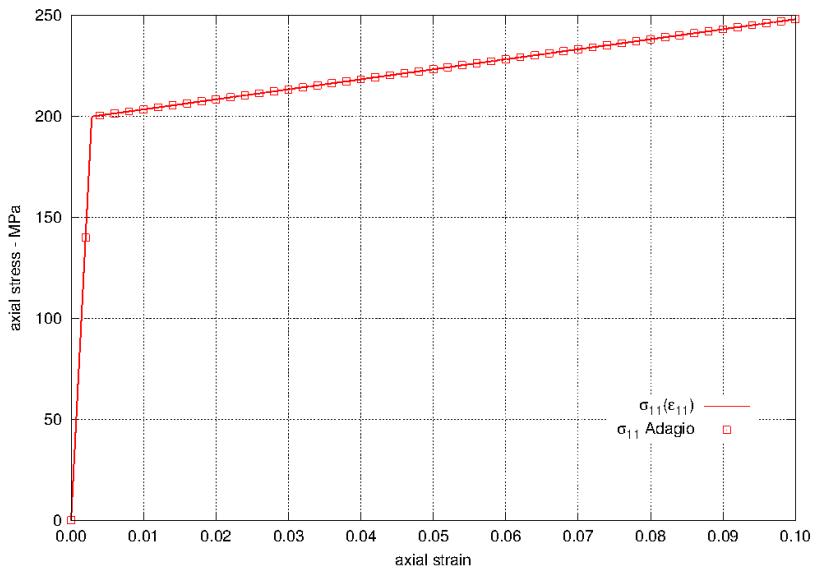


Figure 5.15: Axial stress for loading in the  $x_1$  direction for the elastic-plastic model with linear hardening.

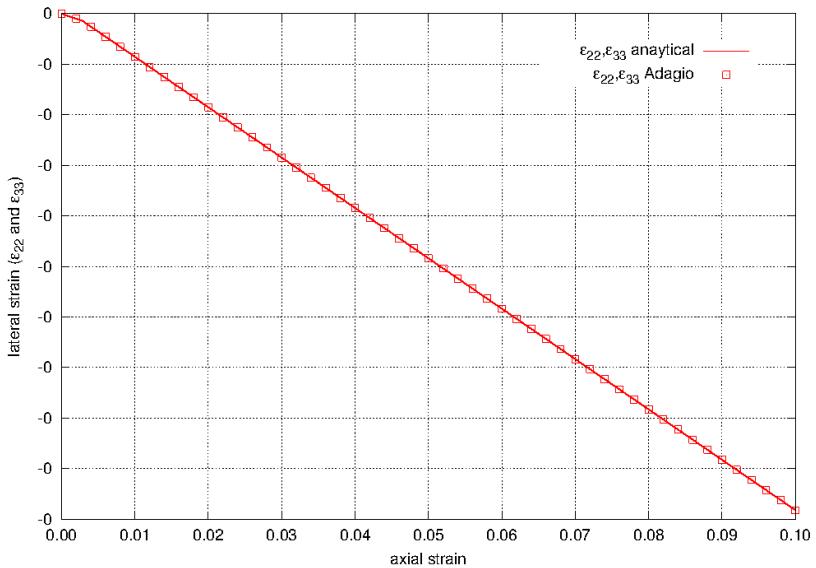


Figure 5.16: Lateral strains for uniaxial stress loading in the  $x_1$  direction for the elastic-plastic model with linear hardening.

### 5.6.3.2 Pure Shear

The shear stress calculated by the elastic-plastic model in Adagio is compared to analytical solutions. Considering pure shear with respect to the  $x_1$ - $x_2$  axes, the only non-zero shear stress is  $\sigma_{12}$ , and the only non-zero shear strain will be  $\varepsilon_{12}$ . For pure shear with respect to the  $x_1$ - $x_2$  axes, the effective stress is

$$\phi = \sqrt{3} \sigma_{12} \quad (5.6.30)$$

If the stress state is on the yield surface, then  $\phi = \bar{\sigma}(\bar{\varepsilon}^p)$ , so the shear stress is

$$\sigma_{12} = \frac{\bar{\sigma}(\bar{\varepsilon}^p)}{\sqrt{3}} \quad (5.6.31)$$

Using this, the pure shear stress state can be calculated from the hardening law and the anisotropy parameters.

To evaluate the shear stress we need the equivalent plastic strain as a function of the shear strain. If we equate the rate of plastic work we get

$$\bar{\sigma} \dot{\varepsilon}^p = 2\sigma_{12} (\dot{\varepsilon}_{12} - \dot{\varepsilon}_{12}^e) \quad \rightarrow \quad \dot{\varepsilon}^p = \frac{2}{\sqrt{3}} (\dot{\varepsilon}_{12} - \dot{\varepsilon}_{12}^e) \quad (5.6.32)$$

which, when integrated, gives us an implicit equation for the equivalent plastic strain

$$\bar{\varepsilon}^p = \frac{2}{\sqrt{3}} \left( \varepsilon_{12} - \frac{\bar{\sigma}(\bar{\varepsilon}^p)}{\sqrt{3} G} \right) \quad (5.6.33)$$

The equivalent plastic strain can now be used to find the shear stress.

#### Boundary Conditions for Pure Shear

The deformation gradient that gives pure shear for loading relative to the  $x_1$ - $x_2$  axes is

$$[\mathbf{F}] = \begin{bmatrix} \frac{1}{2}(\lambda + \lambda^{-1}) & \frac{1}{2}(\lambda - \lambda^{-1}) & 0 \\ \frac{1}{2}(\lambda - \lambda^{-1}) & \frac{1}{2}(\lambda + \lambda^{-1}) & 0 \\ 0 & 0 & 1 \end{bmatrix} \quad \rightarrow \quad [\varepsilon] = \begin{bmatrix} 0 & \varepsilon & 0 \\ \varepsilon & 0 & 0 \\ 0 & 0 & 0 \end{bmatrix} ; \quad \varepsilon = \ln \lambda \quad (5.6.34)$$

For loading relative to the  $x_2$ - $x_3$  axes and the  $x_3$ - $x_1$  axes the boundary conditions are modified appropriately.

## Results

The results for the elastic-plastic model loaded in pure shear are shown in Figure 5.16. We see that the stress strain curves in pure shear as calculated by Adagio follow the expected stress strain curves. All other stress and strain components for the three problems are zero.

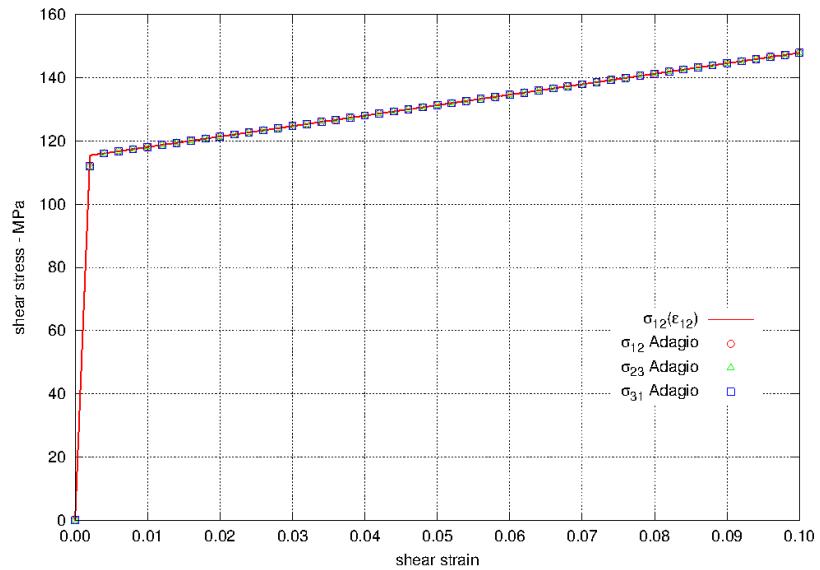


Figure 5.17: Shear stress versus shear strain using the elastic-plastic model. Results are for shear in the  $x_1$ - $x_2$  plane,  $x_2$ - $x_3$  plane, and  $x_3$ - $x_1$  plane.

#### 5.6.4 User Guide

```

BEGIN PARAMETERS FOR MODEL ELASTIC_PLASTIC
#
# Elastic constants
#
YOUNGS MODULUS = <real> E
POISSONS RATIO = <real> ν
SHEAR MODULUS = <real> G
BULK MODULUS = <real> K
LAMBDA = <real> λ
TWO MU = <real> 2μ
#
# Hardening Behavior
#
YIELD STRESS = <real> σy
BETA = <real> β (1.0)
HARDENING MODULUS = <real> H'
END [PARAMETERS FOR MODEL ELASTIC_PLASTIC]

```

Output variables available for this model are listed in Table 5.4 and Table 5.5. For information about the elastic-plastic model, consult [1].

Table 5.4: State Variables for ELASTIC PLASTIC Model

Name	Description
EQPS	equivalent plastic strain, $\bar{\epsilon}^p$
RADIUS	radius of the yield surface, $R$
BACK_STRESS	back stress (symmetric tensor), $\alpha_{ij}$

Table 5.5: State Variables for ELASTIC PLASTIC Model for Shells

Name	Description
EQPS	equivalent plastic strain, $\bar{\epsilon}^p$
TENSILE_EQPS	equivalent plastic strain only accumulated when the material is in tension (trace of stress tensor is positive)
RADIUS	radius of the yield surface, $R$
BACK_STRESS	back stress (symmetric tensor), $\alpha_{ij}$
ITERATIONS	radial return iterations
ERROR	error in plane stress iterations
PS_ITER	plane stress iterations
TSTRAIN	integrated thickness strain

## References

[1] C.M. Stone. SANTOS – a two-dimensional finite element program for the quasistatic, large deformation, inelastic response of solids. Technical Report SAND90-0543, Sandia National Laboratories, Albuquerque, NM, 1996. [pdf](#).

## 5.7 Elastic-Plastic Power Law Hardening Model

### 5.7.1 Theory

The elastic-plastic power law hardening model is a hypoelastic, rate-independent plasticity model with power law hardening [1]. The rate form of the constitutive equation assumes an additive split of the rate of deformation into an elastic and plastic part

$$D_{ij} = D_{ij}^e + D_{ij}^p \quad (5.7.1)$$

The stress rate only depends on the elastic strain rate in the problem

$$\overset{\circ}{\sigma}_{ij} = \mathbb{C}_{ijkl} D_{kl}^e \quad (5.7.2)$$

where  $\mathbb{C}_{ijkl}$  are the components of the fourth-order, isotropic elasticity tensor.

The key to integrating the model is finding the plastic rate of deformation. For associated flow the plastic rate of deformation is in a direction normal to the yield surface. The yield surface is given by

$$f(\sigma_{ij}, \bar{\varepsilon}^p) = \phi(\sigma_{ij}) - \bar{\sigma}(\bar{\varepsilon}^p) = 0 \quad (5.7.3)$$

where  $\phi$  is the equivalent stress and  $\bar{\sigma}$  is the hardening function which is a function of the equivalent plastic strain  $\bar{\varepsilon}^p$ . For this model the hardening function uses a power law

$$\bar{\sigma}(\bar{\varepsilon}^p) = \sigma_y + A \langle \bar{\varepsilon}^p - \varepsilon_L \rangle^n \quad (5.7.4)$$

which is shown in Figure 5.18. The yield stress is  $\sigma_y$ , the hardening constant is  $A$ , the hardening exponent is  $n$ , and the Luder's strain is  $\varepsilon_L$ . The bracket  $\langle \cdot \rangle$  is the Mcaulay bracket defined as

$$\langle x \rangle = \begin{cases} 0, & \text{if } x \leq 0 \\ x, & \text{if } x > 0. \end{cases} \quad (5.7.5)$$

By assuming associated plastic flow, the plastic rate of deformation can be written as

$$D_{ij}^p = \dot{\gamma} \frac{\partial \phi}{\partial \sigma_{ij}}. \quad (5.7.6)$$

For this model the yield surface is chosen to be a von Mises yield surface, so

$$\phi(\sigma_{ij}) = \sqrt{\frac{3}{2} s_{ij} s_{ij}} \quad (5.7.7)$$

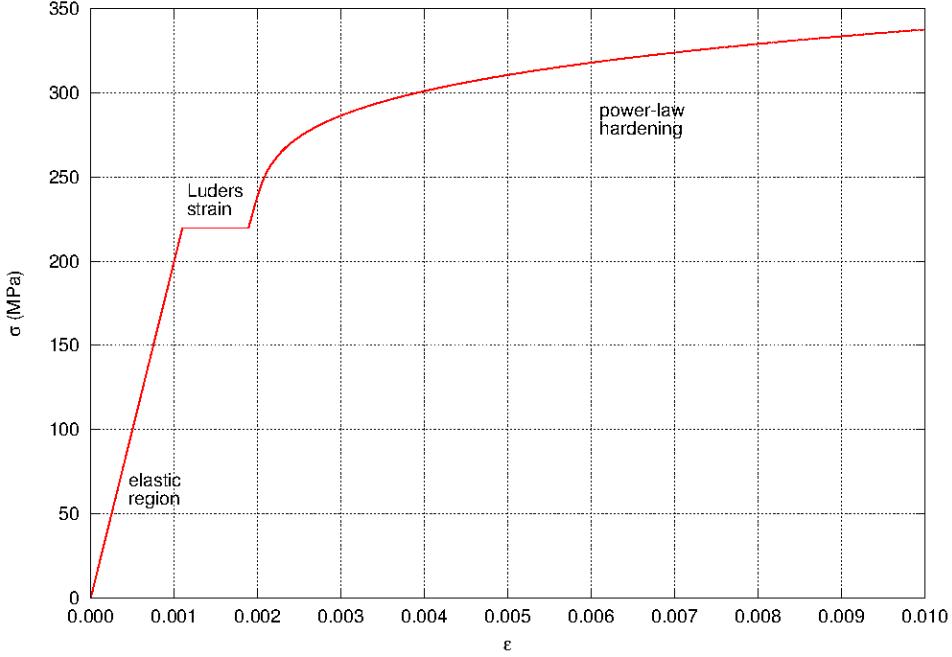


Figure 5.18: Typical stress-strain response for the power-law hardening model.

where  $s_{ij}$  are the components of the deviatoric stress

$$s_{ij} = \sigma_{ij} - \frac{1}{3}\delta_{ij}\sigma_{kk} \quad (5.7.8)$$

Unlike the elastic-plastic model 5.6, the power-law hardening model does not allow for kinematic hardening, so there is no back stress.

### 5.7.2 Implementation

The elastic-plastic power-law hardening model is implemented using a predictor-corrector algorithm. First, an elastic trial stress state is calculated. This is done by assuming that the rate of deformation is completely elastic

$$T_{ij}^{tr} = T_{ij}^n + \Delta t (\lambda \delta_{ij} d_{kk} + 2\mu d_{ij}) \quad (5.7.9)$$

The trial stress state is decomposed into a pressure and a deviatoric stress

$$p^{tr} = \frac{1}{3}T_{kk}^{tr} \quad ; \quad s_{ij}^{tr} = T_{ij}^{tr} - p^{tr}\delta_{ij} \quad (5.7.10)$$

The effective trial stress is calculated and used in the yield function (5.7.3).

$$f(s_{ij}^{tr}, \bar{\varepsilon}^p) = \phi(s_{ij}^{tr}) - \bar{\sigma}(\bar{\varepsilon}^p) \quad (5.7.11)$$

If  $f \leq 0$  then the strain rate is elastic and the stress update is finished. If  $f > 0$  then plastic deformation has occurred and a radial return algorithm determines the extent of plastic deformation.

The normal to the yield surface is assumed to lie in the direction of the trial stress state. This gives us the following expression for  $N_{ij}$

$$N_{ij} = \frac{s_{ij}^{tr}}{\|s_{ij}^{tr}\|} \quad (5.7.12)$$

Using a backward Euler algorithm, the final deviatoric stress state is

$$s_{ij}^{n+1} = s_{ij}^{tr} - \Delta t 2\mu d_{ij}^p \quad (5.7.13)$$

where the plastic strain increment is

$$\Delta d_{ij}^p = \sqrt{\frac{3}{2}} \Delta \bar{\varepsilon}^p N_{ij} \quad (5.7.14)$$

The equation for the change in the equivalent plastic strain over the load step is found as the solution to

$$3\mu \Delta \bar{\varepsilon}^p + \bar{\sigma} (\bar{\varepsilon}_n + \Delta \bar{\varepsilon}^p) - \phi^{tr} + f_n = 0 \quad (5.7.15)$$

### 5.7.3 Verification

The elastic-plastic power-law hardening model is verified for uniaxial stress and pure shear. The elastic properties used in these analyses are  $E = 70$  GPa and  $\nu = 0.25$ . The hardening law used for the model is

$$\bar{\sigma} (\bar{\varepsilon}^p) = \sigma_y + A \langle \bar{\varepsilon}^p - \varepsilon_L \rangle^n \quad (5.7.16)$$

For these calculations  $\sigma_y = 200$  MPa,  $A = 400$  MPa,  $n = 0.25$ , and  $\varepsilon_L = 0.008$ .

#### 5.7.3.1 Uniaxial Stress

The elastic-plastic power-law hardening model is tested in uniaxial tension. The test looks at the axial stress and the lateral strain and compares these values against analytical results for the same problem. In this verification problem only the normal strains/stresses are needed, and the shear terms are not exercised.

For the uniaxial stress problem, the only non-zero stress component is  $\sigma_{11}$ . In the analysis that follows  $\sigma_{11} = \sigma$ . There are three non-zero strain components,  $\varepsilon_{11}$ ,  $\varepsilon_{22}$ , and  $\varepsilon_{33}$ . In the analysis that follows  $\varepsilon_{11} = \varepsilon$  and  $\varepsilon_{22} = \varepsilon_{33}$ . Furthermore, the axial elastic strain,  $\varepsilon_{11}^e = \sigma/E$  will be denoted by  $\varepsilon^e$ .

The equivalent plastic strain,  $\bar{\varepsilon}^p$ , for this model is equivalent to  $\varepsilon_{11}^p$ , and is

$$\bar{\varepsilon}^p = \varepsilon - \frac{\bar{\sigma}(\bar{\varepsilon}^p)}{E} \quad (5.7.17)$$

This allows us, after yield, to parameterize the problem with the equivalent plastic strain.

For the lateral strains we need the lateral plastic strain. Plastic incompressibility ( $\varepsilon_{kk}^p = 0$ ) gives us

$$\varepsilon_{22}^p = -\frac{1}{2}\bar{\varepsilon}^p \quad (5.7.18)$$

Combined with the lateral elastic strains we have the lateral strain as a function of the equivalent plastic strain

$$\varepsilon_{22} = -\nu \frac{\bar{\sigma}(\bar{\varepsilon}^p)}{E} - \frac{1}{2}\bar{\varepsilon}^p \quad (5.7.19)$$

The results are shown in Figures 5.19 and 5.20 and show agreement between the model in Adagio and the analytical results.

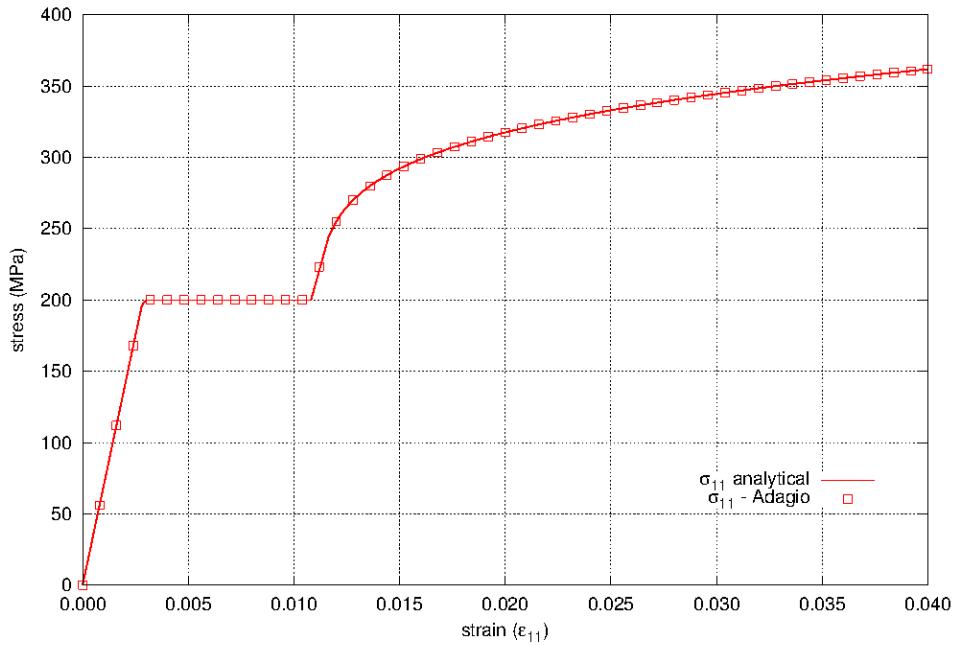


Figure 5.19: The axial stress as a function of axial strain for the elastic-plastic power-law hardening model.

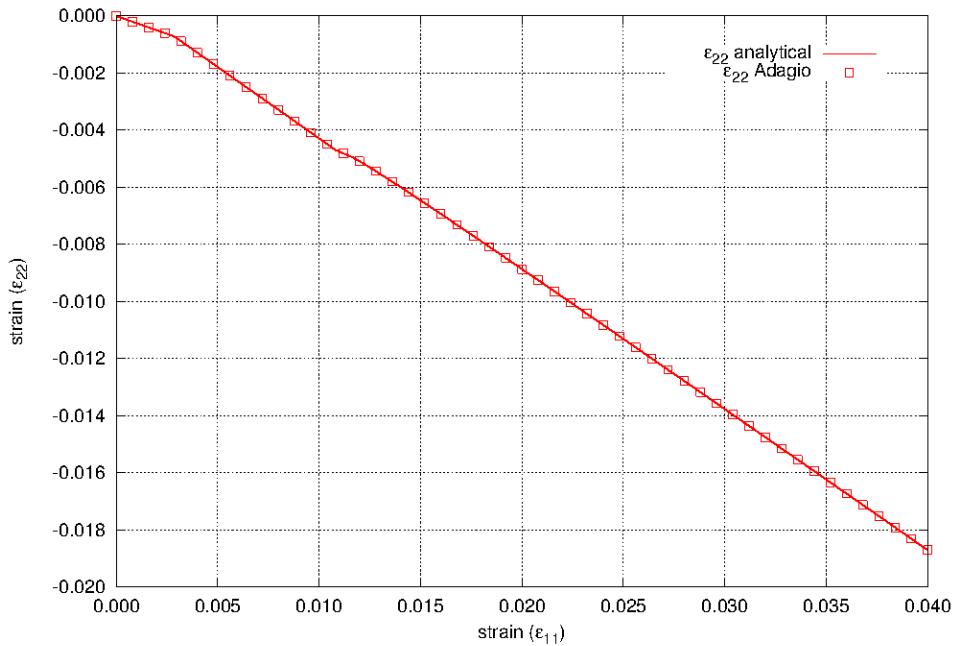


Figure 5.20: The lateral strain as a function of axial strain for the elastic-plastic power-law hardening model.

### 5.7.3.2 Pure Shear

The elastic-plastic power-law hardening model is tested in pure shear. The test looks at the shear stress as a function of the shear strain and compares these values against analytical results for the same problem. For the pure shear problem, the only non-zero strain component is  $\varepsilon_{12}$  and the only non-zero stress component is  $\sigma_{12}$ .

After yield, the shear stress as a function of the hardening curve is  $\sigma_{12} = \bar{\sigma}(\bar{\varepsilon}^p) / \sqrt{3}$ . The elastic shear strain is  $\varepsilon_{12}^e = \sigma_{12}/2G$ ; the plastic shear strain is  $\varepsilon_{12}^p = \sqrt{3}\bar{\varepsilon}^p/2$ . Using this, the shear stress and strain are given as functions of the equivalent plastic strain

$$\sigma_{12} = \frac{\bar{\sigma}(\bar{\varepsilon}^p)}{\sqrt{3}} \quad ; \quad \varepsilon_{12} = \frac{\sqrt{3}}{2}\bar{\varepsilon}^p + \frac{1}{\sqrt{3}} \frac{\bar{\sigma}(\bar{\varepsilon}^p)}{2\mu} \quad (5.7.20)$$

This allows us, after yield, to parameterize the problem with  $\bar{\varepsilon}^p$ .

The results are shown in Figure 5.21 and show agreement between the model in Adagio and the analytical results.

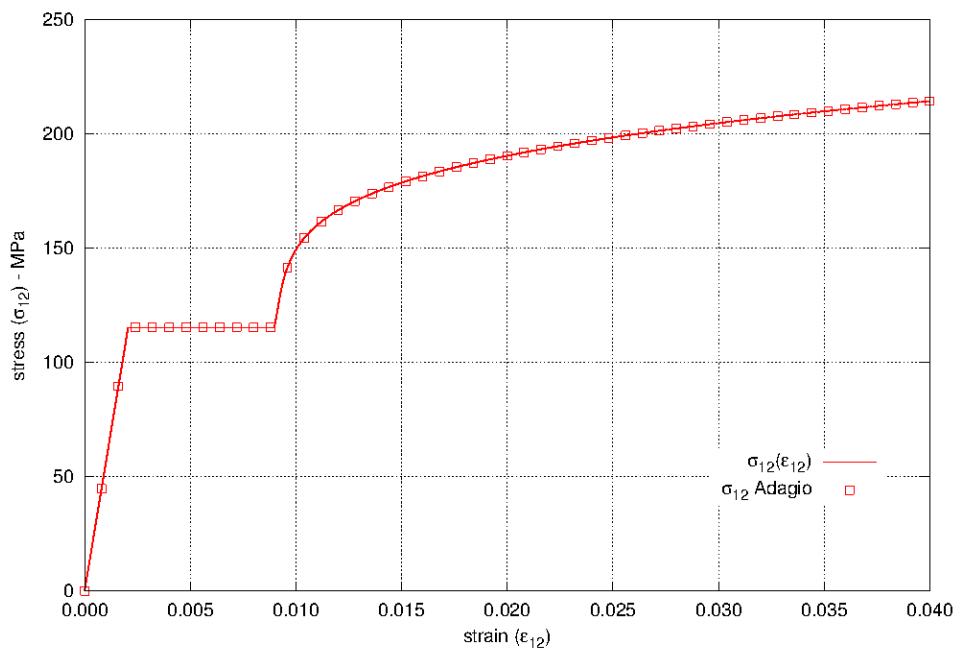


Figure 5.21: The shear stress as a function of shear strain for the elastic-plastic power-law hardening model.

### 5.7.4 User Guide

```

BEGIN PARAMETERS FOR MODEL EP_POWER_HARD
#
# Elastic constants
#
YOUNGS MODULUS = <real> E
POISSONS RATIO = <real> ν
SHEAR MODULUS = <real> G
BULK MODULUS = <real> K
LAMBDA = <real> λ
TWO MU = <real> 2μ
#
# Hardening behavior
#
YIELD STRESS = <real> σy
HARDENING CONSTANT = <real> A
HARDENING EXPONENT = <real> n
LUDERS STRAIN = <real> εL
END [PARAMETERS FOR MODEL EP_POWER_HARD]

```

Output variables available for this model are listed in Table 5.6 and Table 5.7. For information about the elastic-plastic power-law hardening model, consult [2].

Table 5.6: State Variables for EP POWER HARD Model

Name	Description
EQPS	equivalent plastic strain, $\bar{\varepsilon}^p$
TENSILE_EQPS	equivalent plastic strain only accumulated when the material is in tension (trace of stress tensor is positive)
RADIUS	radius of yield surface, $R$
ITERATIONS	number of radial return iterations

Table 5.7: State Variables for EP POWER HARD Model for Shells

Name	Description
EQPS	equivalent plastic strain, $\bar{\epsilon}^p$
TENSILE_EQPS	equivalent plastic strain only accumulated when the material is in tension (trace of stress tensor is positive)
RADIUS	radius of yield surface, $R$
ITERATIONS	number of radial return iterations
ERROR	error in plane stress iterations
PS_ITER	plane stress iterations

## References

- [1] C. M. Stone, G. W. Wellman, and R. D. Krieg. A vectorized elastic/plastic power law hardening material model including Lüders strains. Technical Report SAND90-0153, Sandia National Laboratories, Albuquerque, NM, March 1990. [pdf](#).
- [2] C.M. Stone. SANTOS – a two-dimensional finite element program for the quasistatic, large deformation, inelastic response of solids. Technical Report SAND90-0543, Sandia National Laboratories, Albuquerque, NM, 1996. [pdf](#).

## 5.8 Ductile Fracture Model

### 5.8.1 Theory

The ductile fracture model is identical to the elastic-plastic power-law hardening model with the addition of a failure criterion and an isotropic decay of the stress to zero during the failure process within the constitutive model. To accomplish this task, the tearing parameter,  $t_p$ , proposed by Wellman [1] is introduced and the functional form as given as

$$t_p = \int_0^{\varepsilon} \left\langle \frac{2\sigma_{\max}}{3(\sigma_{\max} - \sigma_m)} \right\rangle^4 d\bar{\varepsilon}^p \quad (5.8.1)$$

where  $\sigma_{\max}$  is the maximum principal stress, and  $\sigma_m$  is the mean stress. It can also be noted that the tearing parameter evolves during the plastic deformation regime as indicated by integrating over the effective plastic strain,  $\bar{\varepsilon}^p$ . The angle brackets denoting the Macaulay brackets, where

$$\langle x \rangle = \begin{cases} 0 & \text{if } x \leq 0 \\ x & \text{if } x > 0 \end{cases}, \quad (5.8.2)$$

are used to ensure that the failure process occurs only with tensile stress states and prevent “damage healing”. The failure process then initiates at a critical tearing parameter,  $t_p^{\text{crit}}$ , and the corresponding stress decay occurs over a strain interval corresponding to the *critical crack opening strain*,  $\varepsilon_{\text{ccos}}$ . Importantly, the  $\varepsilon_{\text{ccos}}$  serves a dual role in that it may also be used to control the energy dissipated during failure. With respect to the latter point, careful selection of the critical crack opening strain may be used to ensure consistent energy is dissipated through different meshes. This decay process is isotropic and linear with the current damage value being equivalent to the ratio of crack opening strain in the direction of the maximum principal stress to the critical value.

### 5.8.2 Implementation

The ductile fracture model seeks to capture both the nonlinear elastic-plastic and fracture responses of a ductile metal. Independently, each of these requirements necessitates the use of a nonlinear solution algorithm and the combination of the two is even more complex. This consideration is compounded by the relaxation and softening observed during the failure process that introduces additional complications for the global finite element solver. For this discussion, however, the focus is solely on the underlying numerical treatment of the failure process at the constitutive level. The solution of the elastic-plastic constitutive problem was discussed in detail in Section 5.7.2 while details of the implications at the global finite element problem are found in the Sierra/SM User’s Guide [2]. With respect to the latter, it is important to note that in quasistatic cases the ductile fracture model is tightly integrated with the multilevel CONTROL FAILURE capabilities although details of this coupling are left to [1, 2].

Prior to fracture initiation – while  $t_p^{n+1} < t_p^{\text{crit}}$  – the ductile fracture model is exactly that of the elastic-plastic power law. Through this process the tearing parameter is continually calculated at the plastically converged state. When fracture initiation is first detected –  $t_p^{n+1} \geq t_p^{\text{crit}}$  – the direction

of the maximum principal stress, denoted by the normalized vector  $n_i^{cr}$ , is determined and stored. Regardless of loading path, this vector does not change during the unloading process. Additionally, for this first initial failure step, the un-rotated stress tensor,  $T_{ij}$  must be set equal to its maximum value,  $T_{ij}^{crit}$  before any unloading may be performed. This maximum value is simply given by,

$$T_{ij}^{crit} = T_{ij}^n + (T_{ij}^{tr} - T_{ij}^n) \frac{t_p^{crit} - t_p^n}{t_p^{n+1} - t_p^n} \quad (5.8.3)$$

with  $T_{ij}^{tr}$  being the elastic trial stress. As alluded to in the prior section, a linear decay based on the crack opening strain in the direction of maximum stress,  $\varepsilon_{cos}$ , is utilized. To determine this decay value, the crack opening strain increment is first found via

$$d\varepsilon_{cos}^{n+1} = \langle \beta n_i^{cr} d_{ij}^{n+1} n_j^{cr} \rangle, \quad (5.8.4)$$

where  $d_{ij}^{n+1}$  is the total un-rotated rate of deformation and  $\beta$  is a partitioning factor between plastic and crack opening strains and takes the value of 1 for all loading steps *except* the initiation step. The “ $\langle \cdot \rangle$ ” are the Macaulay brackets. During the first fracture step,

$$\beta = \frac{t_p^{n+1} - t_p^{crit}}{t_p^{n+1} - t_p^n}. \quad (5.8.5)$$

The current crack opening strain is then simply,

$$\varepsilon_{cos}^{n+1} = \varepsilon_{cos}^n + d\varepsilon_{cos}^{n+1} \Delta t \quad (5.8.6)$$

and the decay value,  $\alpha^{n+1}$ , is then found as,

$$\alpha^{n+1} = \max \left[ 0, \frac{\varepsilon_{ccos} - \varepsilon_{cos}^{n+1}}{\varepsilon_{ccos}} \right]. \quad (5.8.7)$$

To perform the actual stress decay, the hardening and yield values are proportionally decayed via,

$$\bar{\sigma}^{n+1}(\bar{\varepsilon}^p) = \alpha^{n+1} \bar{\sigma}^f; \quad \beta_{ij}^{n+1} = \alpha^{n+1} \beta_{ij}^n, \quad (5.8.8)$$

with  $\bar{\sigma}^f = \phi(T_{ij}^{crit})$  being the critical yield stress associated with the yield surface,  $\phi$ , and  $\beta_{ij}$  is the backstress tensor used with kinematic hardening. The decayed stress is then found by radially returning to the reduced yield stress,  $\bar{\sigma}^{n+1}(\bar{\varepsilon})$ . As a  $J_2$  deviatoric yield stress is used for the plastic response, the hydrostatic component of the stress tensor is similarly decayed.

### 5.8.3 Verification

The ductile fracture model is tested in uniaxial stress and pure shear. For these test problems, the Young's modulus and Poisson's ratio are  $E = 70$  GPa and  $\nu = 0.25$ . The yield stress is taken to be  $\sigma_y = 200$  MPa while the hardening constant and exponent are  $A = 400$  MPa and  $n = 0.25$ , respectively, and the Luders strain is 0.008. To describe failure, the critical tearing parameter is  $t_p^{\text{crit}} = 0.025$  and the critical crack opening strain is  $\varepsilon_{\text{ccos}} = 0.001$ .

#### 5.8.3.1 Uniaxial Stress

For loading in uniaxial stress the only non-zero stress component is  $\sigma_{11}$ . All other stress components are zero. If the stress state is on the yield surface then this stress is

$$\sigma_{11} = \bar{\sigma}(\bar{\varepsilon}^p), \quad (5.8.9)$$

with  $\bar{\sigma}$  being the yield stress including any hardening effects associated with the evolution of the effective plastic strain,  $\bar{\varepsilon}^p$ . To evaluate the axial stress we need the equivalent plastic strain as a function of the axial strain,  $\varepsilon_{11}$ . If we equate the rate of plastic work we get

$$\bar{\sigma} \dot{\varepsilon}^p = \sigma_{11} (\dot{\varepsilon}_{11} - \dot{\varepsilon}_{11}^e) \quad \rightarrow \quad \dot{\varepsilon}^p = \dot{\varepsilon}_{11} - \dot{\varepsilon}_{11}^e = \dot{\varepsilon}_{11}^p \quad (5.8.10)$$

which, when integrated, gives us an implicit equation for the equivalent plastic strain

$$\bar{\varepsilon}^p = \left( \varepsilon_{11} - \frac{\bar{\sigma}(\bar{\varepsilon}^p)}{E} \right). \quad (5.8.11)$$

Alternatively, we write the axial strain as a function of the equivalent plastic strain, which allows us to parameterize the problem with  $\bar{\varepsilon}^p$

$$\varepsilon_{11} = \bar{\varepsilon}^p + \frac{\bar{\sigma}(\bar{\varepsilon}^p)}{E}. \quad (5.8.12)$$

In uniaxial stress the pressure is  $\sigma_{11}/3$  and the maximum principal stress is  $\sigma_{\text{max}} = \sigma_{11}$ . Using this in (5.8.1) we get

$$t_p = \bar{\varepsilon}^p \quad (5.8.13)$$

i.e. the tearing parameter is equal to the equivalent plastic strain. This result is shown in Figure 5.22. The final value for the tearing parameter is a function of the number of steps, or the step size. The smaller the step size the closer the final value is to  $t_p^{\text{crit}}$ .

The axial stress as a function of axial strain is shown in Figure 5.23. The axial stress depends on the elastic-plastic response until the critical tearing parameter is reached. As with the tearing

parameter results, this point is time step dependent. Once the critical tearing parameter is reached the stress decay occurs over the critical crack opening strain.

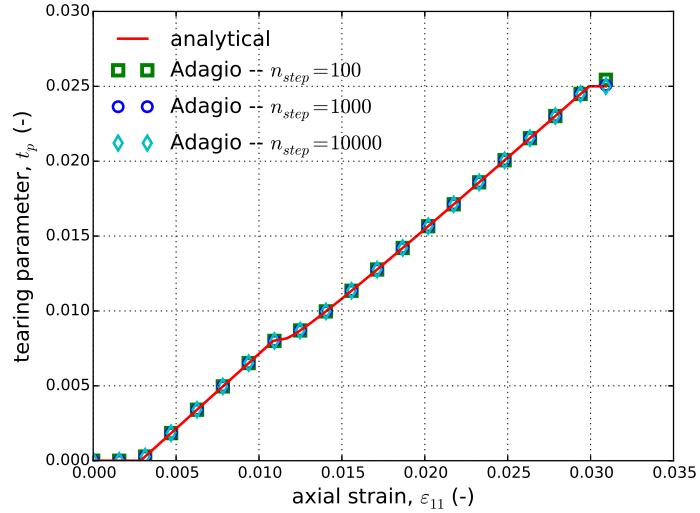


Figure 5.22: The tearing parameter,  $t_p$ , in uniaxial stress over the course of a uniaxial stress loading

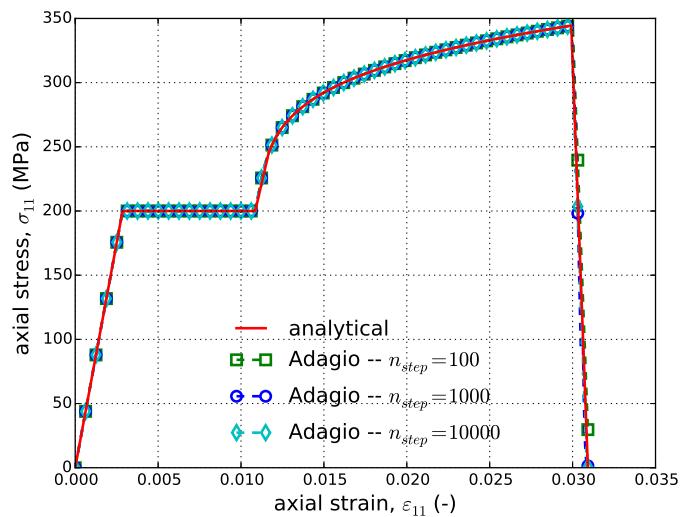


Figure 5.23: Axial stress vs. axial strain for the ductile fracture model in uniaxial stress. The post failure reduction in stress depends on the time discretization or step size.

### 5.8.3.2 Pure Shear

For loading in pure shear the only non-zero stress component is  $\sigma_{12}$ . All other stress components are zero. If the stress state is on the yield surface then the shear stress is

$$\sigma_{12} = \frac{\bar{\sigma}(\bar{\varepsilon}^p)}{\sqrt{3}}. \quad (5.8.14)$$

To evaluate the shear stress we need the equivalent plastic strain as a function of the shear strain. If we equate the rate of plastic work we get

$$\bar{\sigma} \dot{\varepsilon}^p = 2\sigma_{12} (\dot{\varepsilon}_{12} - \dot{\varepsilon}_{12}^e) \quad \rightarrow \quad \dot{\varepsilon}^p = \frac{2}{\sqrt{3}} (\dot{\varepsilon}_{12} - \dot{\varepsilon}_{12}^e) \quad (5.8.15)$$

which, when integrated, gives us an implicit equation for the equivalent plastic strain

$$\bar{\varepsilon}^p = \frac{2}{\sqrt{3}} \left( \varepsilon_{12} - \frac{\bar{\sigma}(\bar{\varepsilon}^p)}{\sqrt{3}G} \right). \quad (5.8.16)$$

Alternatively, we write the shear strain,  $\varepsilon_{12}$  as a function of the equivalent plastic strain, which allows us to parameterize the problem with  $\bar{\varepsilon}^p$

$$\varepsilon_{12} = \frac{\sqrt{3}}{2} \bar{\varepsilon}^p + \frac{\bar{\sigma}(\bar{\varepsilon}^p)}{\sqrt{3}G}. \quad (5.8.17)$$

In pure shear the pressure is zero, and the maximum principal stress is  $\sigma_{\max} = \sigma_{12}$ . Using this in (5.8.1) we get

$$t_p = \left( \frac{2}{3} \right)^4 \bar{\varepsilon}^p. \quad (5.8.18)$$

This result is shown in Figure 5.24, where the tearing parameter is a function of the shear strain. The final value for the tearing parameter is a function of the number of steps, or the step size. The smaller the step size the closer the final value is to  $t_p^{\text{crit}}$ .

The shear stress as a function of shear strain is shown in Figure 5.25. The shear stress depends on the elastic-plastic response until the critical tearing parameter is reached. As with the tearing parameter results, this point is time step dependent. Once the critical tearing parameter is reached the stress decay occurs over the critical crack opening strain.

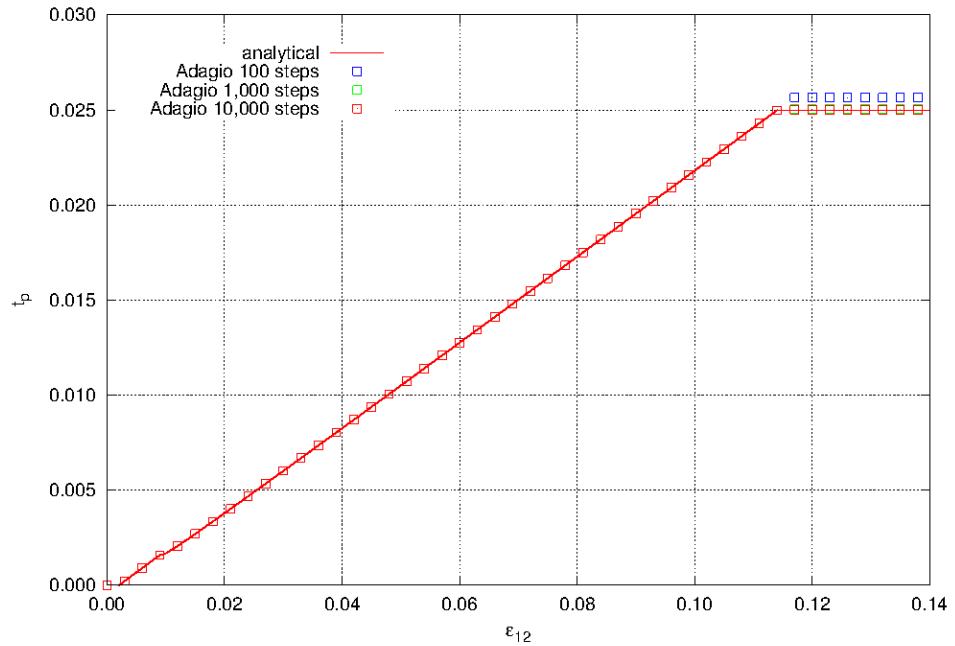


Figure 5.24: The tearing parameter,  $t_p$ , in pure shear. The maximum tearing parameter depends on the time discretization or step size.

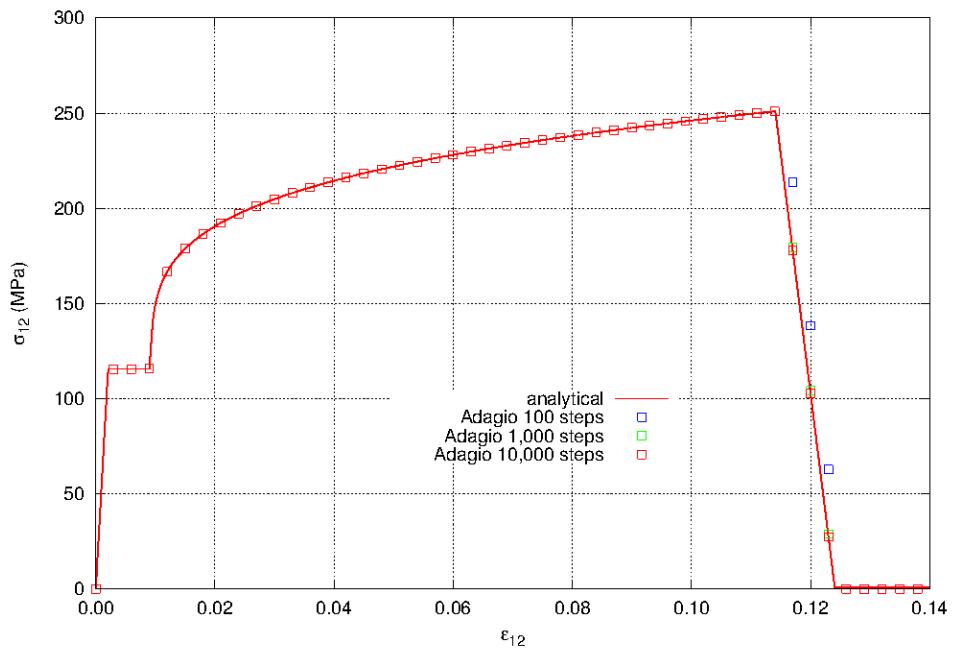


Figure 5.25: Shear stress vs. shear strain for the ductile fracture model in pure shear. The post failure reduction in stress depends on the time discretization or step size.

### 5.8.4 User Guide

```
BEGIN PARAMETERS FOR MODEL DUCTILE_FRACTURE
#
# Elastic constants
#
YOUNGS MODULUS = <real> E
POISSONS RATIO = <real> ν
SHEAR MODULUS = <real> G
BULK MODULUS = <real> K
LAMBDA = <real> λ
TWO MU = <real> 2μ
#
# Yield surface parameters
#
YIELD STRESS = <real> σy
HARDENING CONSTANT = <real> A
HARDENING EXPONENT = <real> n
LUDERS STRAIN = <real> εL
#
# Failure parameters
#
CRITICAL TEARING PARAMETER = <real> tpcrit
CRITICAL CRACK OPENING STRAIN = <real> εccos
END [PARAMETERS FOR MODEL DUCTILE_FRACTURE]
```

Output variables available for this model are listed in Table 5.8. For information about the ductile fracture material model, consult [1].

Table 5.8: State Variables for DUCTILE FRACTURE Model

Name	Description
EQPS	equivalent plastic strain, $\bar{\epsilon}^p$
RADIUS	radius of yield surface, $R$
BACK_STRESS	back stress - tensor $\alpha_{ij}$
TEARING_PARAMETER	Current value of the integrated tearing parameter
CRACK_OPENING_STRAIN	Current value of the crack opening strain. Will be zero prior to reaching the maximum tearing parameter.
FAILURE_DIRECTION	Crack opening direction (maximum principal stress direction at failure) - vector
DF_STRAIN_XX	XX component of current strain
DF_STRAIN_YY	YY component of current strain
DF_STRAIN_ZZ	ZZ component of current strain
DF_STRAIN_XY	XY component of current strain
DF_STRAIN_YZ	YZ component of current strain
DF_STRAIN_ZX	ZX component of current strain
MAX_RADIUS	Yield surface radius at failure
MAX_PRESS	Stress pressure norm at failure

## References

- [1] G. W. Wellman. A simple approach to modeling ductile failure. Technical Report SAND2012-1343, Sandia National Laboratories, Albuquerque, NM, June 2012. [pdf](#).
- [2] Sierra/SM Team. Sierra/SolidMechanics User's Guide, 2014.

## 5.9 Multilinear Elastic-Plastic Model

### 5.9.1 Theory

The multilinear elastic-plastic model is a generalization of the standard rate independent plasticity models already presented - the linear and power law hardening models. However, rather than having a specific functional form, the multilinear hardening model allows the user to input a piecewise linear function for the hardening curve. The rate form of the constitutive equation assumes an additive split of the rate of deformation into an elastic and plastic part such that

$$D_{ij} = D_{ij}^e + D_{ij}^p. \quad (5.9.1)$$

The stress rate only depends on the elastic strain rate so that,

$$\dot{\sigma}_{ij} = \mathbb{C}_{ijkl} D_{kl}^e, \quad (5.9.2)$$

where  $\mathbb{C}_{ijkl}$  are the components of the fourth-order, isotropic elasticity tensor.

The key to the model is finding the plastic rate of deformation. For associated flow, the plastic rate of deformation is in the direction normal to the yield surface. With a yield surface given by

$$\phi(\sigma_{ij}) - \bar{\sigma}(\bar{\epsilon}^p) = 0 \quad (5.9.3)$$

then the plastic rate of deformation can be written as

$$D_{ij}^p = \dot{\gamma} \frac{\partial \phi}{\partial \sigma_{ij}}. \quad (5.9.4)$$

For this model the yield surface is taken to be a von Mises yield surface, such that

$$\phi(\sigma_{ij}) = \sqrt{\frac{3}{2} s_{ij} s_{ij}} \quad (5.9.5)$$

where  $s_{ij}$  are the components of the deviatoric stress

$$s_{ij} = \sigma_{ij} - \frac{1}{3} \delta_{ij} \sigma_{kk}. \quad (5.9.6)$$

For simplicity it is easier to write (5.9.4) in terms of the normal to the yield surface

$$D_{ij}^p = \dot{\gamma} N_{ij} \quad ; \quad N_{ij} = \frac{\partial \phi}{\partial \sigma_{ij}} / \left\| \frac{\partial \phi}{\partial \sigma_{ij}} \right\| \quad (5.9.7)$$

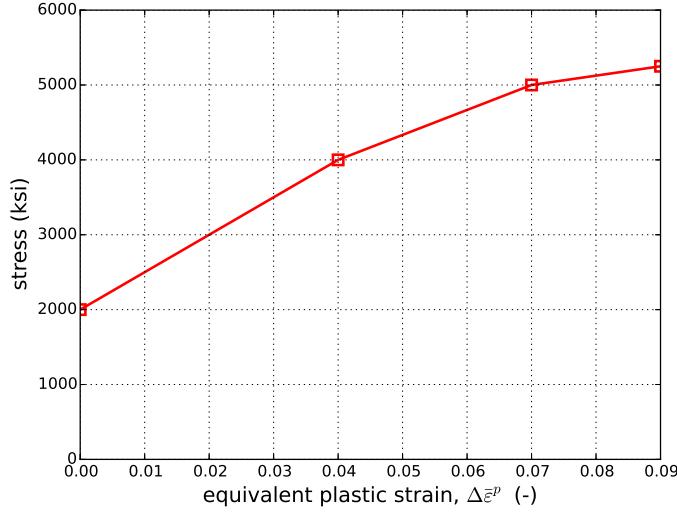


Figure 5.26: An example of a multilinear elastic-plastic stress-strain curve.

The model also incorporates temperature dependence in that the elastic properties and the yield stress can be functions of temperature. This is not as general as having the yield curves depend on temperature. For that behavior the thermoelastic-plastic model can be used.

An example stress vs. plastic strain hardening curve is shown in Figure 5.26. This curve was generated for a loading case of uniaxial strain. In this case, the effective stress is the same as the uniaxial. Therefore, for use with the multilinear elastic-plastic model this curve would simply have to be discretized and used as input.

### 5.9.2 Implementation

The multilinear elastic-plastic model is implemented using a predictor-corrector algorithm. First, an elastic trial stress state is calculated. This is done in the unrotated configuration (see Section 5.1) by assuming that the rate of deformation is completely elastic

$$T_{ij}^{tr} = T_{ij}^n + \Delta t (\lambda \delta_{ij} d_{kk} + 2\mu d_{ij}). \quad (5.9.8)$$

The trial stress state is decomposed into a pressure and a deviatoric stress

$$p^{tr} = \frac{1}{3} T_{kk}^{tr} \quad ; \quad s_{ij}^{tr} = T_{ij}^{tr} - p^{tr} \delta_{ij} \quad (5.9.9)$$

The effective trial stress is calculated and used with the yield function (5.7.3),

$$f(s_{ij}^{tr}, \bar{\varepsilon}^p) = \phi(s_{ij}^{tr}) - \bar{\sigma}(\bar{\varepsilon}^p). \quad (5.9.10)$$

If  $f \leq 0$  then the response is elastic and the stress update is finished. If  $f > 0$  then plastic deformation has occurred and a radial return algorithm is used to determine the extent of this behavior.

The model assumes associated flow such that the normal to the yield surface lies in the direction of the trial stress state. This leads to the following expression for the normal,  $N_{ij}$ ,

$$N_{ij} = \frac{s_{ij}^{tr}}{\|s_{ij}^{tr}\|}. \quad (5.9.11)$$

Using a backward Euler algorithm, the final deviatoric stress state may be written as

$$s_{ij}^{n+1} = s_{ij}^{tr} - \Delta t 2\mu d_{ij}^p \quad (5.9.12)$$

where the plastic strain increment,  $\Delta d_{ij}^p$ , is

$$\Delta d_{ij}^p = \sqrt{\frac{3}{2}} \Delta \bar{\varepsilon}^p N_{ij}. \quad (5.9.13)$$

Thus, to determine the response of the material the increment of the effective plastic strain,  $\Delta \bar{\varepsilon}^p$ , needs to be determined. This may be done by solving the linearized consistency equation over the load step that is written as,

$$3\mu \Delta \bar{\varepsilon}^p + \bar{\sigma} (\bar{\varepsilon}_n + \Delta \bar{\varepsilon}^p) - \phi^{tr} + f_n = 0. \quad (5.9.14)$$

### 5.9.3 Verification

The multilinear elastic-plastic material model is verified for uniaxial stress and pure shear. The elastic properties used in these analyses are  $E = 70$  GPa and  $\nu = 0.25$ . In order to appropriately verify this model, the hardening curve must have a functional form to appropriately determine an analytical solution. Here, the hardening law used for the model is a Voce law with the following form

$$\bar{\sigma}(\bar{\varepsilon}^p) = \sigma_y + A (1 - \exp(-n\bar{\varepsilon}^p)). \quad (5.9.15)$$

In the numerical analyses, this expression is discretized at a series of plastic strain values and used as input. For these calculations  $\sigma_y = 200$  MPa,  $A = 200$  MPa, and  $n = 20$ .

#### 5.9.3.1 Uniaxial Stress

The multilinear elastic-plastic model is tested in uniaxial tension. The test looks at the axial stress and the lateral strain and compares these values against analytical results for the same problem. In this verification problem only the normal strains/stresses are needed, and the shear terms are not exercised.

For the uniaxial stress problem, the only non-zero stress component is  $\sigma_{11}$ . In the analysis that follows  $\sigma_{11} = \sigma$ . There are three non-zero strain components,  $\varepsilon_{11}$ ,  $\varepsilon_{22}$ , and  $\varepsilon_{33}$ . In the analysis that follows  $\varepsilon_{11} = \varepsilon$  and  $\varepsilon_{22} = \varepsilon_{33}$ . Furthermore, the axial elastic strain,  $\varepsilon_{11}^e = \sigma/E$  will be denoted by  $\varepsilon^e$ .

The equivalent plastic strain,  $\bar{\varepsilon}^p$ , for this model is equivalent to  $\varepsilon_{11}^p$ , and is

$$\bar{\varepsilon}^p = \varepsilon - \frac{\bar{\sigma}(\bar{\varepsilon}^p)}{E} \quad (5.9.16)$$

This allows us, after yield, to parameterize the problem with the equivalent plastic strain.

For the lateral strains we need the lateral plastic strain. Incompressibility gives us

$$\bar{\varepsilon}_{22}^p = -\frac{1}{2}\bar{\varepsilon}^p \quad (5.9.17)$$

Combined with the lateral elastic strains we have the lateral strain as a function of the equivalent plastic strain

$$\varepsilon_{22} = -\nu \frac{\bar{\sigma}(\bar{\varepsilon}^p)}{E} - \frac{1}{2}\bar{\varepsilon}^p \quad (5.9.18)$$

The results are shown in Figures 5.27 and 5.28 and show agreement between the model in Adagio and the analytical results.

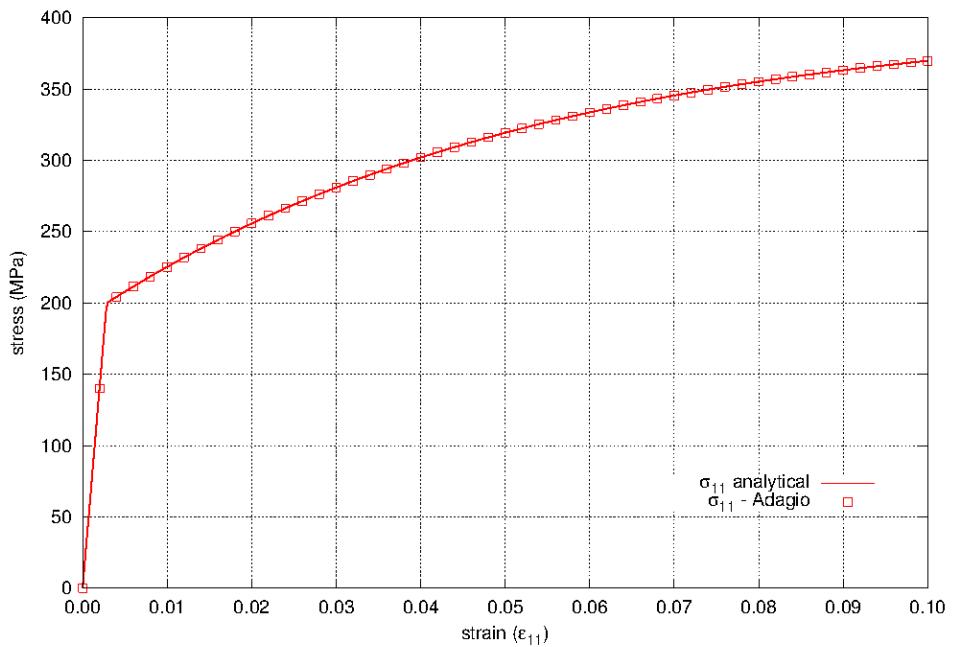


Figure 5.27: The axial stress as a function of axial strain for the multilinear elastic-plastic model with an analytical Voce law for the hardening model.

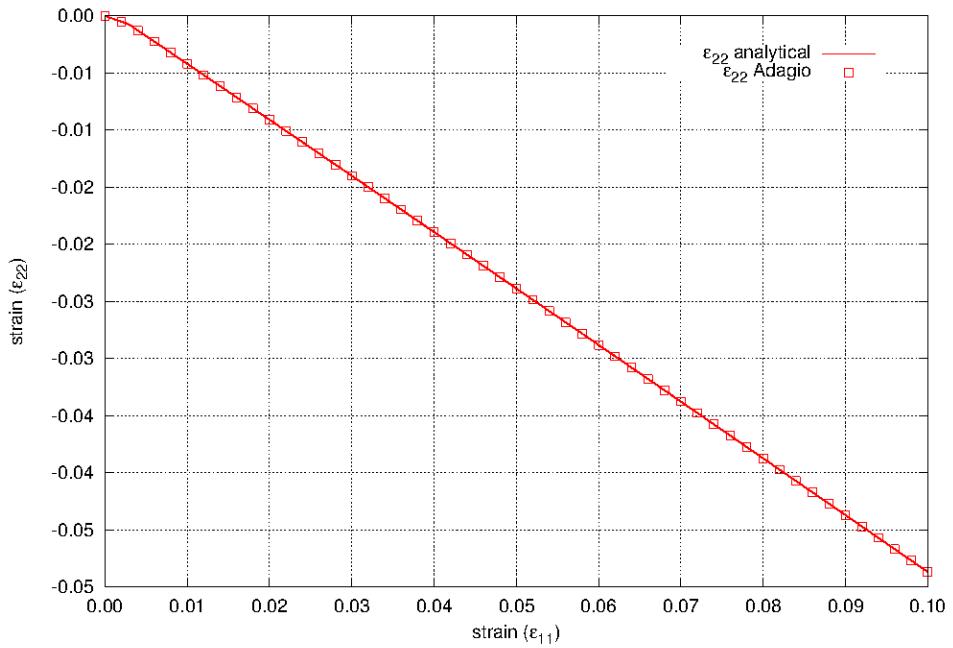


Figure 5.28: The lateral strain as a function of axial strain for the multilinear elastic-plastic model with an analytical Voce law for the hardening model.

### 5.9.3.2 Pure Shear

The multilinear elastic-plastic model is tested in pure shear. The test looks at the shear stress as a function of the shear strain and compares these values against analytical results for the same problem. For the pure shear problem, the only non-zero strain component is  $\varepsilon_{12}$  and the only non-zero stress component is  $\sigma_{12}$ .

After yield, the shear stress as a function of the hardening curve is  $\sigma_{12} = \bar{\sigma}(\bar{\varepsilon}^p) / \sqrt{3}$ . The elastic shear strain is  $\varepsilon_{12}^e = \sigma_{12}/2G$ ; the plastic shear strain is  $\varepsilon_{12}^p = \sqrt{3}\bar{\varepsilon}^p/2$ . Using this, the shear stress and strain are given as functions of the equivalent plastic strain

$$\sigma_{12} = \frac{\bar{\sigma}(\bar{\varepsilon}^p)}{\sqrt{3}} \quad ; \quad \varepsilon_{12} = \frac{\sqrt{3}}{2}\bar{\varepsilon}^p + \frac{1}{\sqrt{3}} \frac{\bar{\sigma}(\bar{\varepsilon}^p)}{2G} \quad (5.9.19)$$

This allows us, after yield, to parameterize the problem with  $\bar{\varepsilon}^p$ .

The results are shown in Figure 5.29 and show agreement between the model in Adagio and the analytical results.

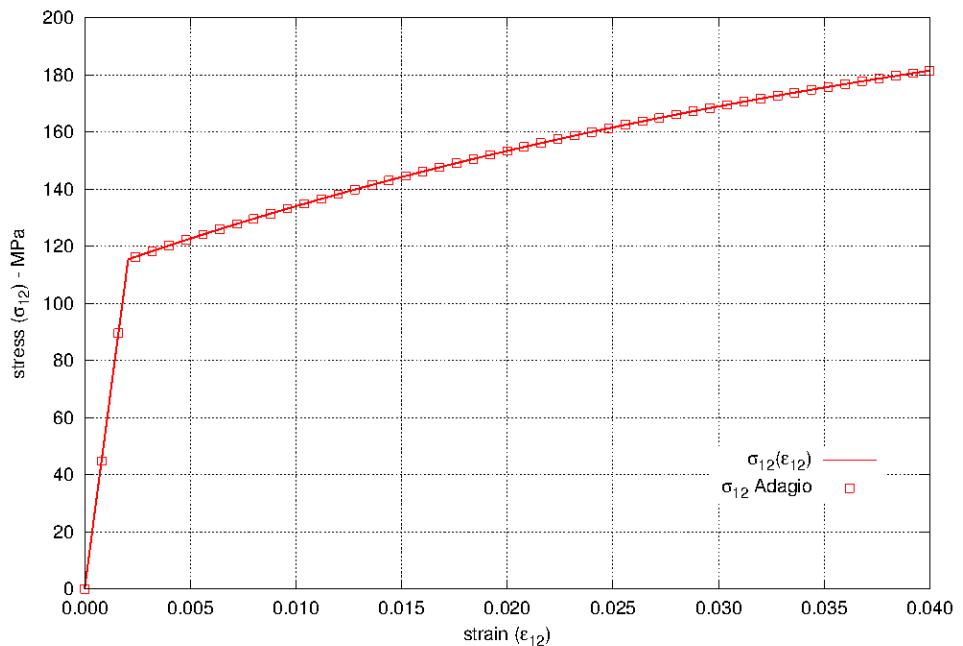


Figure 5.29: The shear stress as a function of shear strain for the multilinear elastic-plastic model with an analytical Voce law for the hardening model.

### 5.9.4 User Guide

```

BEGIN PARAMETERS FOR MODEL MULTILINEAR_EP
#
# Elastic constants
#
YOUNGS MODULUS = <real> E
POISSONS RATIO = <real> ν
SHEAR MODULUS = <real> G
BULK MODULUS = <real> K
LAMBDA = <real> λ
TWO MU = <real> 2μ
#
# Hardening behavior
#
YIELD STRESS = <real> σy
BETA = <real> β (1.0)
HARDENING FUNCTION = <string> hardening_function_name
#
# Functions
#
YOUNGS MODULUS FUNCTION = <string> ym_function_name
POISSONS RATIO FUNCTION = <string> pr_function_name
YIELD STRESS FUNCTION = <string> yield_stress_function_name
END [PARAMETERS FOR MODEL MULTILINEAR_EP]

```

Output variables available for this model are listed in Table 5.9 and Table 5.10.

Table 5.9: State Variables for MULTILINEAR EP Model

Name	Description
EQPS	equivalent plastic strain
TENSILE_EQPS	equivalent plastic strain only accumulated when the material is in tension (trace of stress tensor is positive)
RADIUS	radius of yield surface
BACK_STRESS	back stress (symmetric tensor)
YOUNGS_MODULUS	the current Young's modulus as a function of temperature
POISSONS_RATIO	the current Poisson's ratio as a function of temperature
YIELD_STRESS	the current yield stress as a function of temperature
ITERATIONS	radial return iterations
YIELD_FLAG	inside (0) or on (1) the yield surface

Table 5.10: State Variables for MULTILINEAR EP Model for Shells

<b>Name</b>	<b>Description</b>
EQPS	equivalent plastic strain
TENSILE_EQPS	equivalent plastic strain only accumulated when the material is in tension (trace of stress tensor is positive)
RADIUS	radius of yield surface
BACK_STRESS	back stress (symmetric tensor)
YOUNGS_MODULUS	the current Young's modulus as a function of temperature
POISSONS_RATIO	the current Poisson's ratio as a function of temperature
YIELD_STRESS	the current yield stress as a function of temperature
ITERATIONS	radial return iterations
ERROR	error in plane stress iterations
PS_ITER	plane stress iterations

## 5.10 Multilinear Elastic-Plastic Fail Model

### 5.10.1 Theory

Like the ductile fracture model, the multilinear elastic-plastic fail model is an extension of an existing plasticity model (multilinear elastic-plastic) to include a ductile failure criteria. Again, the tearing parameter criterion and failure propagation model of Wellman [1] is selected. Specifically, this approach uses a failure criterion (the tearing parameter,  $t_p$ ) that is based on the history of the plastic strain and stress states. Most failure criteria for ductile failure involve some form of the stress triaxiality, or the ratio of the pressure and the effective (shear) stress. The tearing parameter, however, is slightly different in that it depends on the pressure and the maximum principal stress and is given as,

$$t_p = \int_0^{\epsilon} \left\langle \frac{2\sigma_{\max}}{3(\sigma_{\max} - \sigma_m)} \right\rangle^m d\epsilon_p, \quad (5.10.1)$$

with  $\sigma_{\max}$  and  $\sigma_m$  being the maximum principal and mean stresses, respectively. The exponent  $m$  is typically taken to be 4 while the  $\langle \cdot \rangle$  are Macaulay brackets defined as,

$$\langle x \rangle = \begin{cases} 0 & x \leq 0 \\ x & x > 0 \end{cases}, \quad (5.10.2)$$

and introduced so that failure only occurs and propagates under tensile stress states. Failure then initiates when the tearing parameter,  $t_p$ , reaches a critical value,  $t_p^{\text{crit}}$ . After this point, the stress decays (to 0) in a linear fashion according to the ratio of the crack opening strain in the maximum principal stress direction to its critical value,  $\epsilon_{\text{ccos}}$ . Modification and control of this latter parameter is important as it may be used to ensure consistent energy is dissipated through different meshes.

### 5.10.2 Implementation

The multilinear elastic-plastic fail model seeks to capture both the nonlinear elastic-plastic and fracture responses of a ductile metal. Independently, each of these requirements necessitates the use of a nonlinear solution algorithm and the combination of the two is even more complex. This consideration is compounded by the relaxation and softening observed during the failure process that introduces additional complications for the global finite element solver. For this discussion, however, the focus is solely on the underlying numerical treatment of the failure process at the constitutive level. The solution of the elastic-plastic constitutive problem was discussed in detail in Section 5.9.2 while details of the implications at the global finite element problem are found in the Sierra/SM User's Guide [2]. With respect to the latter, it is important to note that the ductile fracture model is tightly integrated with the multilevel CONTROL FAILURE capabilities although details of this coupling are left to [1, 2].

Prior to fracture initiation – while  $t_p^{n+1} < t_p^{\text{crit}}$  – the multilinear elastic-plastic fail model is the same as the “normal” multilinear elastic-plastic model. Through this process the tearing parameter is continually calculated at the plastically converged state. When fracture initiation is first detected –  $t_p^{n+1} \geq t_p^{\text{crit}}$  – the crack direction (assumed aligned with the maximum principal stress), denoted

by the normalized vector  $n_i^{cr}$ , is determined and stored. Regardless of loading path, this vector does not change during the unloading process. Additionally, for this first initial failure step, the un-rotated stress tensor,  $T_{ij}$  must be updated to its maximum value,  $T_{ij}^{crit}$  before any unloading may be performed. This is done simply by,

$$T_{ij}^{crit} = T_{ij}^n + (T_{ij}^{tr} - T_{ij}^n) \frac{t_p^{crit} - t_p^n}{t_p^{n+1} - t_p^n}, \quad (5.10.3)$$

with  $T_{ij}^{tr}$  being the elastic trial stress. As alluded to in the prior section, a linear decay based on the crack opening strain in the direction of maximum stress,  $\varepsilon_{cos}$ , is utilized. To determine this decay value, the crack opening strain increment is first found via

$$d\varepsilon_{cos}^{n+1} = < \gamma n_i^{cr} d_{ij}^{n+1} n_j^{cr} >, \quad (5.10.4)$$

where  $d_{ij}^{n+1}$  is the un-rotated rate of deformation and  $\gamma$  is a partitioning factor between plastic and crack opening strains and takes the value of 1 for all loading steps *except* the initiation step and the “ $< \cdot >$ ” are the Macaulay brackets. During the first fracture step,

$$\gamma = \frac{t_p^{n+1} - t_p^{crit}}{t_p^{n+1} - t_p^n}. \quad (5.10.5)$$

The current crack opening strain is then simply,

$$\varepsilon_{cos}^{n+1} = \varepsilon_{cos}^n + d\varepsilon_{cos}^{n+1} \Delta t. \quad (5.10.6)$$

and the decay factor,  $\alpha$ , may be written as

$$\alpha^{n+1} = \max \left[ 0, \frac{\varepsilon_{ccos} - \varepsilon_{cos}^{n+1}}{\varepsilon_{ccos}} \right]. \quad (5.10.7)$$

Given the temperature dependence, stress decay is slightly more complicated than in the ductile fracture case. This task is primarily accomplished by decreasing the yield stress (radius) proportionally with the decay factor,

$$\bar{\sigma}^{n+1}(\bar{\varepsilon}^p) = \alpha^{n+1} \bar{\sigma}^f, \quad (5.10.8)$$

where  $\bar{\sigma}^f = \phi(T^{crit})$  is the yield stress at failure. The decayed stress is then found by radially returning to this reduced yield stress. Similarly, the hydrostatic and von Mises effective stress at failure ( $\sigma_m^f$  and  $\bar{\sigma}_{vM}^f$ , respectively) are also calculated and stored to appropriately constrain the stress state. An additional check is then performed to ensure (and if necessary modify) the decayed stress to ensure that,

$$\sigma_m \leq \alpha \sigma_m^f; \quad \bar{\sigma}_{vM} \leq \alpha \bar{\sigma}_{vM}^f. \quad (5.10.9)$$

### 5.10.3 Verification

The multilinear elastic-plastic model with failure has been tested with a number of verification tests. Specifically, uniaxial stress and uniaxial strain loadings are considered. For the elastic-plastic response, the same material properties as those in Section 5.9.3 are again considered. To this end, the Young's modulus and Poisson ratio are  $E = 70$  GPa and  $\nu = 0.25$ , respectively, and a Voce hardening model of the form,

$$\bar{\sigma}(\bar{\varepsilon}^p) = \sigma_y + A (1 - \exp(-n\bar{\varepsilon}^p)), \quad (5.10.10)$$

is discretized and used. In this case,  $\sigma_y = 200$  MPa,  $A = 200$  MPa, and  $n = 20$ .

In terms of failure, the critical tearing parameter,  $t_p^{\text{crit}}$  is taken to be .04, the critical crack opening strain,  $\varepsilon_{\text{ccos}}$ , is .005 and  $m = 4.0$ .

#### 5.10.3.1 Uniaxial Stress

To consider the uniaxial response, displacement controlled deformations are applied such that the only non-zero stress is the axial component,  $\sigma_{11}$ . Through such a loading path, three distinct regimes result. The first is the elastic domain with  $t_p = 0$ . Second is the plastic domain. During this stage,

$$\sigma_{11} = \bar{\sigma}(\bar{\varepsilon}^p), \quad (5.10.11)$$

and by considering the rate of plastic work and integrating yields the implicit (in terms of equivalent plastic strain) relation,

$$\bar{\varepsilon}^p = \left( \varepsilon_{11} - \frac{\bar{\sigma}(\bar{\varepsilon}^p)}{E} \right). \quad (5.10.12)$$

By rearranging, the axial strain may be found in terms of the plastic strain as,

$$\varepsilon_{11} = \bar{\varepsilon}^p + \frac{\bar{\sigma}(\bar{\varepsilon}^p)}{E}. \quad (5.10.13)$$

With this stress state ( $\sigma_{ij} = \sigma_{11}\delta_{i1}\delta_{j1}$ ), the pressure is simply  $\sigma_{11}/3$  and the maximum principal stress is  $\sigma_{\text{max}} = \sigma_{11}$ . From (5.10.1), the tearing parameter is then

$$t_p = \bar{\varepsilon}^p. \quad (5.10.14)$$

The final stage of deformation corresponds to the failure process in which the axial stress is,

$$\sigma_{11} = \alpha\sigma_{\text{peak}}, \quad (5.10.15)$$

and

$$\alpha = \frac{\varepsilon_{\text{ccos}} - (\varepsilon_{11} - \varepsilon_{\text{peak}})}{\varepsilon_{\text{ccos}}}. \quad (5.10.16)$$

In the preceding relations,  $\sigma_{\text{peak}}$  and  $\varepsilon_{\text{peak}}$  are the axial stress and strain, respectively, at failure initiation. The former is simply  $\sigma_{\text{peak}} = \bar{\sigma}(t_p^{\text{crit}})$  and  $\varepsilon_{\text{peak}} = t_p^{\text{crit}} + \sigma_{\text{peak}}/E$ .

The tearing parameter and axial stress evolution as a function of axial strain are presented in Figures 5.30a and 5.30b, respectively. Good agreement is observed between the results verifying the model capability under such a loading. Three different numerical load increments were considered in this analysis and some dependence on load step is noted in the post-failure response of Figure 5.30b. Even with this observation, the resulting agreement between the different responses is still quite good.

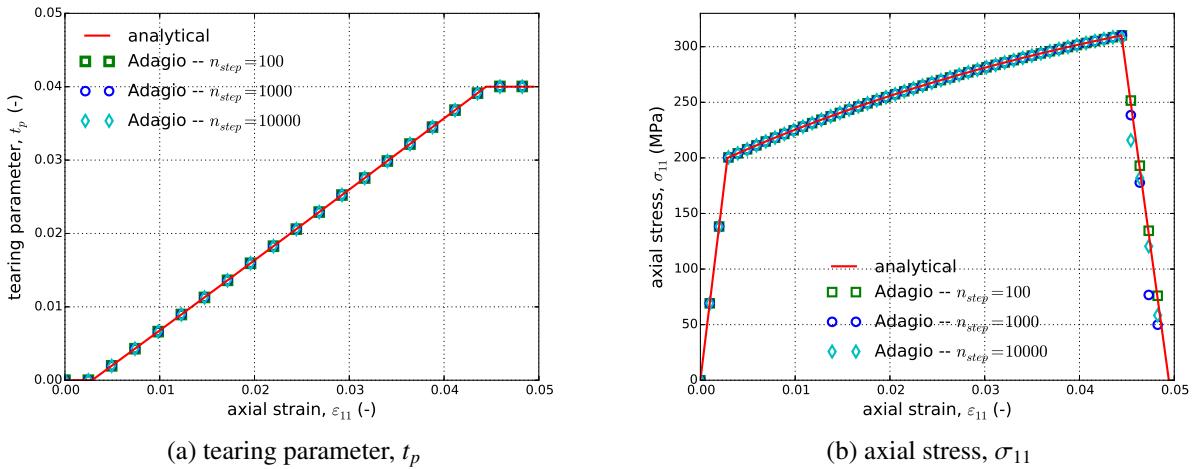


Figure 5.30: Analytical and numerical results of the tearing parameter and axial stress evolution through a uniaxial tension loading path as a function of the axial strain,  $\varepsilon_{11}$ .

### 5.10.3.2 Pure Shear

The analysis of the pure shear loading path follows closely with that of the ductile fracture model (Section 5.8.3.2). In this case, pure shear deformations are applied such that the only non-zero stress and strain are  $\sigma_{12}$  and  $\varepsilon_{12}$ , respectively. Therefore, during plastic loading

$$\sigma_{12} = \frac{\bar{\sigma}}{\sqrt{3}}, \quad (5.10.17)$$

and by comparing the plastic rate of work,

$$\varepsilon_{12} = \frac{\sqrt{3}}{2} \bar{\varepsilon}^p + \frac{\bar{\sigma}(\bar{\varepsilon}^p)}{\sqrt{3}\mu}. \quad (5.10.18)$$

Additionally, as the stress state is purely in shear there is no hydrostatic stress and the maximum principal stress is simply  $\sigma_{\max} = \sigma_{12}$  leading to an expression for the tearing parameter of the form,

$$t_p = \left(\frac{2}{3}\right)^4 \bar{\varepsilon}^p. \quad (5.10.19)$$

The stress then simply decays after the critical tearing parameter is reached. Numerical (from Adagio) and analytical results are presented in Figure 5.31. Specifically, the tearing parameter and shear stress evolutions are presented in Figures 5.31a and 5.31b, respectively. Clear agreement is noted indicating the ability of the model to capture the response over a variety of loading paths.

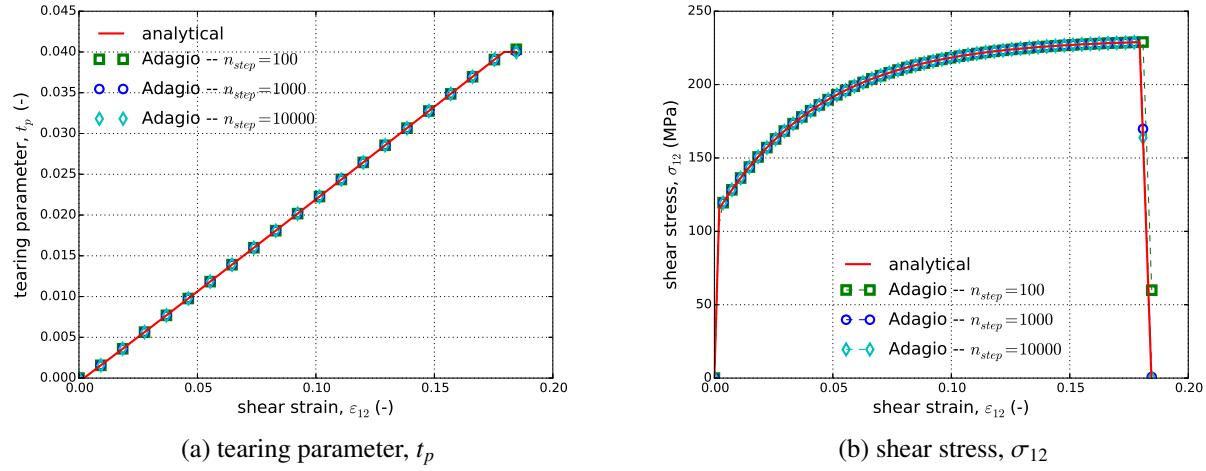


Figure 5.31: Analytical and numerical results of the tearing parameter and shear stress evolution through a pure shear loading path as a function of the shear strain,  $\varepsilon_{12}$ .

#### 5.10.4 User Guide

```
BEGIN PARAMETERS FOR MODEL ML_EP_FAIL
#
# Elastic constants
#
YOUNGS MODULUS = <real> E
POISSONS RATIO = <real> ν
SHEAR MODULUS = <real> G
BULK MODULUS = <real> K
LAMBDA = <real> λ
TWO MU = <real> 2μ
#
# Hardening behavior
#
YIELD STRESS = <real> σy
BETA = <real> β (1.0)
HARDENING FUNCTION = <string> hardening_function_name
#
# Functions
#
YOUNGS MODULUS FUNCTION = <string> ym_function_name
POISSONS RATIO FUNCTION = <string> pr_function_name
YIELD STRESS FUNCTION = <string> yield_stress_function_name
#
# Failure parameters
#
CRITICAL TEARING PARAMETER = <real>  $t_p^{\text{crit}}$ 
CRITICAL CRACK OPENING STRAIN = <real>  $\epsilon_{ccos}$ 
CRITICAL BIAXIALITY RATIO = <real> critical_ratio(0.0)
FAILURE EXPONENT = <real> m (4.0)
END [PARAMETERS FOR MODEL ML_EP_FAIL]
```

Output variables available for this model are listed in Table 5.11 and Table 5.12.

Table 5.11: State Variables for ML EP FAIL Model

<b>Name</b>	<b>Variable Description</b>
EQPS	Equivalent plastic strain
RADIUS	Radius of yield surface
BACK_STRESS	back stress - tensor
BACK_STRESS_XX	back stress - xx component
BACK_STRESS_YY	back stress - yy component
BACK_STRESS_ZZ	back stress - zz component
BACK_STRESS_XY	back stress - xy component
BACK_STRESS_YZ	back stress - yz component
BACK_STRESS_ZX	back stress - zx component
YOUNGS_MODULUS	Current Young's modulus as a function of temperature
POISSONS_RATIO	Current Poisson's ratio as a function of temperature
YIELD_STRESS	Current Yield stress as a function of temperature
TENSILE_EQPS	equivalent plastic strain only accumulated when the material is in tension (trace of stress tensor is positive)
ITERATIONS	radial return iterations
YIELD_FLAG	inside(0) or on(1) yield surface
TEARING_PARAMETER	Current integrated value of the tearing parameter. Zero until yield is reached
CRACK_OPENING_STRAIN	Current value of the crack opening strain. Zero until the critical tearing parameter is reached
FAILURE_DIRECTION	crack opening direction at failure - vector
FAILURE_DIRECTION_X	crack opening direction at failure - x component
FAILURE_DIRECTION_Y	crack opening direction at failure - y component
FAILURE_DIRECTION_Z	crack opening direction at failure - z component
MAX_RADIUS	maximum radius at initial failure
MAX_PRESSURE	maximum stress pressure norm at initial failure
CRITICAL_CRACK_ OPENING_STRAIN	
CRITICAL_TEARING_ PARAMETER	

Table 5.12: State Variables for ML EP FAIL Model for Shells

Name	Variable Description
EQPS	equivalent plastic strain
RADIUS	radius of yield surface
BACK_STRESS	back stress - tensor
BACK_STRESS_XX	back stress - xx component
BACK_STRESS_YY	back stress - yy component
BACK_STRESS_ZZ	back stress - zz component
BACK_STRESS_XY	back stress - xy component
BACK_STRESS_YZ	back stress - yz component
BACK_STRESS_ZX	back stress - zx component
YOUNGS_MODULUS	Current Young's modulus as a function of temperature
POISSONS_RATIO	Current Poisson's ratio as a function of temperature
YIELD_STRESS	Current Yield stress as a function of temperature
ITER	radial return iterations
ERROR	Error in plane stress iterations
PS_ITER	Plane stress iterations
TEARING_PARAMETER	Current integrated value of the tearing parameter. Zero until yield is reached
CRACK_OPENING_STRAIN	Current value of the crack opening strain. Zero until the critical tearing parameter is reached
FAILURE_DIRECTION	crack opening direction at failure - vector
FAILURE_DIRECTION_X	crack opening direction at failure - x component
FAILURE_DIRECTION_Y	crack opening direction at failure - y component
FAILURE_DIRECTION_Z	crack opening direction at failure - z component
RADIUS_MAX	maximum radius at initial failure
TENSILE_EQPS	equivalent plastic strain only accumulated when the material is in tension (trace of stress tensor is positive)

## References

- [1] G. W. Wellman. A simple approach to modeling ductile failure. Technical Report SAND2012-1343, Sandia National Laboratories, Albuquerque, NM, June 2012. [pdf](#).
- [2] Sierra/SM Team. Sierra/SolidMechanics User's Guide, 2014.

## 5.11 Johnson-Cook Model

### 5.11.1 Theory

The Johnson-Cook model [1, 2] is an isotropic, hypoelastic plasticity model. Unlike the previously discussed models, the Johnson-Cook formulation is *rate-dependent* and as such is often considered for high-rate, finite strain simulations like those for impact. The viscoplastic response is phenomenological in that the form of the model is not derived from any physical mechanisms like other viscoplastic models, e.g. Zerilli-Armstrong [3], Steinberg-Guinan-Lund [4, 5], BCJ [6], and the MTS model [7, 8] to name a few. Like most other rate-dependent models, the current formulation utilizes an effective plastic strain rate,  $\dot{\varepsilon}^p$ , to capture rate dependence.

As with other hypoelastic plasticity models, an additive decomposition of the total rate of deformation such that,

$$D_{ij} = D_{ij}^e + D_{ij}^p, \quad (5.11.1)$$

is used such that an objective stress rate of the form,

$$\overset{\circ}{\sigma}_{ij} = \mathbb{C}_{ijkl} D_{kl}^e, \quad (5.11.2)$$

with  $\mathbb{C}_{ijkl}$  being the fourth-order, isotropic elasticity tensor, may be used.

With respect to the yield behavior, the Johnson-Cook model incorporates both strain rate and temperature,  $\theta$ , dependence. This leads to a yield function of the form,

$$f(\sigma_{ij}, \bar{\varepsilon}^p, \dot{\varepsilon}^p, \theta) = \phi(\sigma_{ij}) - \bar{\sigma}(\bar{\varepsilon}^p, \dot{\varepsilon}^p, \theta), \quad (5.11.3)$$

in which  $\phi(\sigma_{ij})$  is the effective stress – the von Mises effective stress is used – and  $\bar{\sigma}$  is the isotropic hardening function. Incorporating the temperature and rate dependency, the hardening function is written as,

$$\bar{\sigma}(\bar{\varepsilon}^p, \dot{\varepsilon}^p, \theta) = [A + B(\bar{\varepsilon}^p)^N] [1 + C \ln \dot{\varepsilon}^{p*}] [1 - \theta^{*M}] \quad (5.11.4)$$

where  $\bar{\varepsilon}^p$  is the equivalent plastic strain,  $\dot{\varepsilon}^{p*} = \dot{\varepsilon}^p / \dot{\varepsilon}_0$  is a dimensionless plastic strain rate,  $\theta^*$  is the homologous temperature and  $A$ ,  $B$ ,  $C$ ,  $N$ , and  $M$  are material parameters. The dimensionless plastic strain rate is normalized with  $\dot{\varepsilon}_0$  which is often taken to be  $1 \text{ s}^{-1}$  while the homologous temperature is defined as,

$$\theta^* = \frac{\theta - \theta_{\text{ref}}}{\theta_{\text{melt}} - \theta_{\text{ref}}}, \quad (5.11.5)$$

with  $\theta$ ,  $\theta_{\text{ref}}$ , and  $\theta_{\text{melt}}$  being the current, reference, and melt temperatures. Note, the temperature used internal to the Johnson-Cook model is NOT the standard prescribed “temperature” field. In-

stead, the material temperature is initialized by a model input as  $\theta_0$ . By assuming adiabatic thermal conditions, subsequent plastic work raises the material temperature via,

$$\Delta\theta = \frac{\beta}{\rho C_v} \bar{\sigma} \dot{\varepsilon}^p, \quad (5.11.6)$$

where  $\rho$  is the materials density,  $C_v$  is the specific heat, and  $\beta$  ( $0 \leq \beta \leq 1$ ) is the fraction of plastic work that is converted to heat.

A modification has also been made regarding the strain rate dependence. Specifically,

$$\dot{\varepsilon}^{p*} = \max \left( 1, \dot{\varepsilon}^p / \dot{\varepsilon}_0 \right), \quad (5.11.7)$$

is implemented.

The Johnson-Cook model also has a failure criterion. The Johnson-Cook damage model [2] has a failure strain that is given by:

$$\varepsilon^f = (D_1 + D_2 \exp(D_3 \eta)) (1 + D_4 \ln \dot{\varepsilon}^{p*}) (1 + D_5 \theta^*) \quad (5.11.8)$$

with  $D_1$ ,  $D_2$ ,  $D_3$ ,  $D_4$ , and  $D_5$  being material parameters and  $\eta$  is the triaxiality ( $\eta = (1/3) \sigma_{kk} / \bar{\sigma}_{vM}$ ). The damage in the model is accumulated over time using:

$$D = \int_0^t \frac{\dot{\varepsilon}^p}{\varepsilon^f} dt. \quad (5.11.9)$$

When  $D = 1$ , the material has failed. For the default behavior of the Johnson-Cook model, the fracture behavior is not active.

### 5.11.2 Implementation

The implementation of the Johnson-Cook model requires the effective strain rate to be used for calculating the rate effects on yield. This is done through a predictor-corrector return mapping algorithm. In what follows the temperature dependence is not included; this will be addressed later.

The initial response is assumed to be elastic and a trial stress state is calculated

$$T_{ij}^{\text{tr}} = T_{ij}^n + \mathbb{C}_{ijkl} \Delta t d_{kl} \quad (5.11.10)$$

Since the plastic response is independent of pressure we can use the deviatoric stress

$$s_{ij} = T_{ij} - \frac{1}{3} \delta_{ij} T_{kk} \quad (5.11.11)$$

$$s_{ij}^{\text{tr}} = s_{ij}^n + 2\mu \Delta t d'_{ij},$$

with  $d'_{ij}$  being the total deviatoric rate of deformation –  $d'_{ij} = d_{ij} - (1/3) \delta_{ij} d_{kk}$ .

If this gives a von Mises stress that is greater than the effective stress, i.e.

$$\phi^{\text{tr}} = \sqrt{\frac{3}{2} s_{ij}^{\text{tr}} s_{ij}^{\text{tr}}} > A + B (\bar{\varepsilon}^{p(n)})^N, \quad (5.11.12)$$

then plastic deformation occurs and we solve the following nonlinear equation for  $\dot{\varepsilon}^p$ ,

$$\left[ A + B (\bar{\varepsilon}_{p(n)} + \Delta t \dot{\varepsilon}^p)^N \right] \left[ 1 + C \ln \left( \max \left( 1, \dot{\varepsilon}^p / \dot{\varepsilon}_0 \right) \right) \right] = \phi^{\text{tr}} - 3\mu \Delta t \dot{\varepsilon}^p. \quad (5.11.13)$$

This simple equation comes from the radial return algorithm

$$s_{ij}^{n+1} = s_{ij}^{\text{tr}} - 3\mu \Delta t \dot{\varepsilon}^p \frac{s_{ij}^{\text{tr}}}{\phi^{\text{tr}}} \rightarrow s_{ij}^{n+1} = (\phi^{\text{tr}} - 3\mu \Delta t \dot{\varepsilon}^p) \frac{s_{ij}^{\text{tr}}}{\phi^{\text{tr}}} \quad (5.11.14)$$

Taking the inner product of both sides gives (5.11.13).

### 5.11.3 Verification

The Johnson-Cook model is verified through a series of uniaxial stress and pure shear tests. Given the emphasis on the strain-rate and temperature dependent nature of the model a series of these tests are performed at different loading conditions. The material properties and model parameters used for these tests are given in Table 5.13 and come from the work of Corona and Orient [9]. Note, in this case a modified reference plastic strain rate is used ( $\dot{\varepsilon}_0 = 1 \times 10^{-4} \text{s}^{-1}$ ) as the one reported in [9] was selected based on calibration conditions. Here the value is selected to better investigate and highlight strain rate dependency.

#### 5.11.3.1 Uniaxial Stress

To determine a (semi)-analytical expression of the Johnson-Cook model, the equivalency of plastic work for uniaxial loading is recalled such that,

$$\bar{\sigma} \dot{\varepsilon}^p = \sigma (\dot{\varepsilon} - \dot{\varepsilon}^e), \quad (5.11.15)$$

with  $\sigma$ ,  $\dot{\varepsilon}$ , and  $\dot{\varepsilon}^e$  being the uniaxial stress, total strain rate, and elastic strain rate, respectively. Noting that  $\dot{\varepsilon}^p = \dot{\varepsilon} - \dot{\varepsilon}^e$ , the expression for the flow stress (5.11.4), the definition of the homologous

$E$	71.7 GPa	$\nu$	0.33
$A$	217 MPa	$B$	405 MPa
$C$	0.0075	$\dot{\varepsilon}_0$	$1 \times 10^{-4} \text{ s}^{-1}$
$\theta_{\text{ref}}$	293 K	$\theta_{\text{melt}}$	750 K
$N$	0.41	$M$	1.1
$\rho$	$2810 \text{ kg/m}^3$	$C_v$	960 J/(kg-K)
$D_1$	0.015	$D_2$	0.24
$D_3$	-1.5	$D_4$	-0.039
$D_5$	8.0		

Table 5.13: The material properties and model parameters of the Johnson-Cook model used for verification testing

temperature (5.11.5), and the dimensionless strain rate, the plastic work expression (5.11.15) may be rearranged as

$$\dot{\varepsilon}^p = \dot{\varepsilon}_0 \exp \left[ \frac{\sigma}{C [A + B(\bar{\varepsilon}^p)^N] [1 - \theta^{*M}]} - \frac{1}{C} \right]. \quad (5.11.16)$$


Given the implicit nature (in terms of effective plastic strain) of (5.11.16), a semi-analytical approach is used to evaluate the Johnson-Cook model. Specifically, a simple forward Euler integration scheme is adopted to solve (5.11.16) and then update the remaining state variables. Using such an approach, Figure 5.32 presents the stress-strain and corresponding damage evolution of the Johnson-Cook determined at three strain rates. A constant total logarithmic strain rate is applied by utilizing an applied displacement of the form,

$$u_i(t) = (e^{\omega t} - 1) \delta_{i1}, \quad (5.11.17)$$


where  $\omega$  is the considered strain rate. Here rates corresponding to a slow quasistatic ( $\omega = 1 \times 10^{-3} \text{ s}^{-1}$ ), medium ( $\omega = 1 \text{ s}^{-1}$ ), and high rate ( $\omega = 1 \times 10^3 \text{ s}^{-1}$ ) loading are considered to explore a variety of regimes. Temperature effects are not addressed in Figure 5.32 ( $\beta = 0$ ) to first investigate the purely mechanical response. The damage evolution is evaluated by simply integrating expression (5.11.9) and noting that for a uniaxial loading  $\eta = 1/3$ . In this case, as the constitutive behavior is being probed the material does not degrade when  $D \geq 1$ .

From the results of Figure 5.32 clear agreement is observed between the numerical and semi-analytical response verifying the model behavior in a variety of conditions. Next, to explore the thermomechanical coupling, three different plastic work conversion ratios ( $\beta = 0.00, 0.50$  and  $1.0$ ) are considered for the medium strain rate ( $\omega = 1 \text{ s}^{-1}$ ). The stress, damage, and temperature evolutions are all presented in Figure 5.33 as a function of axial strains.

From Figure 5.33 the influence of the thermomechanical coupling may be clearly observed. For instance, a roughly 50 K increase in material temperature over the loading range may be seen in the

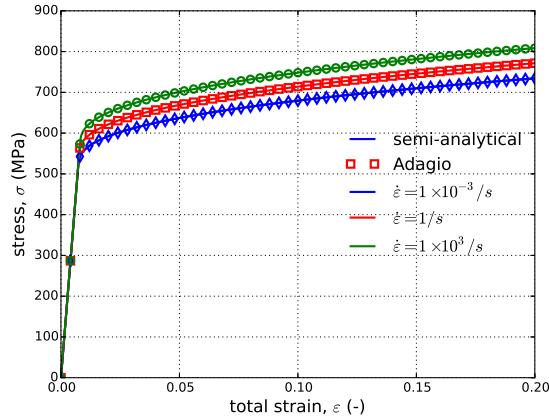

(a) Stress-strain

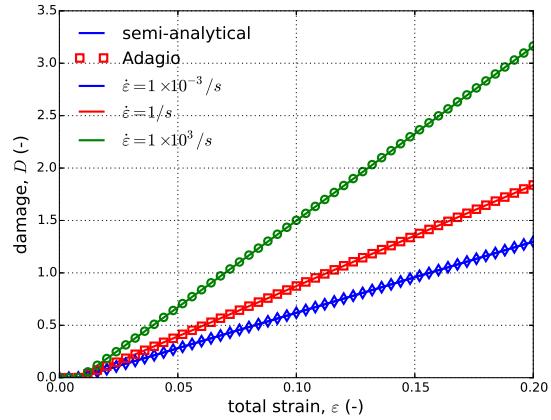

(b) Damage

Figure 5.32: Semi-analytical and numerical (a) stress-strain and (b) damage evolutions of the Johnson-Cook model subjected to a uniaxial loading at three different applied strain rates. In these results,  $\beta = 0$  such that heat associated with plastic work is allowed to transfer to the environment.

$\beta = 1$  case leading to a roughly 25% decrease in the damage metric and approximately 10% drop in final stress. Additionally, clear agreement between the semi-analytical and numerical responses providing additional verification of the coupled capabilities of the model.

### 5.11.3.2 Pure Shear

For the pure shear case, a loading like that described in Appendix A.3 is utilized. Specifically, displacements producing a deformation gradient of,

$$F_{ij} = \frac{1}{2} (\lambda + \lambda^{-1}) (\delta_{i1}\delta_{j1} + \delta_{i2}\delta_{j2}) + \frac{1}{2} (\lambda - \lambda^{-1}) (\delta_{i1}\delta_{j2} + \delta_{i2}\delta_{j1}) + \delta_{i3}\delta_{j3}, \quad (5.11.18)$$

are considered with  $\lambda = \lambda(t) = e^{\omega t}$ . This loading leads to a logarithmic shear strain rate of  $\dot{\varepsilon}_{12} = \omega$  that is constant in time enabling the study of strain rate effects.

In the shear stress case, the plastic work equivalency is written as,

$$\bar{\sigma} \dot{\varepsilon}^p = 2\sigma_{12} \dot{\varepsilon}_{12}^p. \quad (5.11.19)$$

Like the uniaxial stress case, the definition of the effective stress may be used with the fact that  $\dot{\varepsilon}_{12}^p = \frac{\sqrt{3}}{2} \dot{\varepsilon}^p$  to find the following form of the effective plastic strain rate,

$$\dot{\varepsilon}^p = \dot{\varepsilon}_0 \exp \left[ \frac{\sqrt{3}\sigma_{12}}{C [A + B(\bar{\varepsilon}^p)^N] [1 - \theta^{*M}]} - \frac{1}{C} \right]. \quad (5.11.20)$$


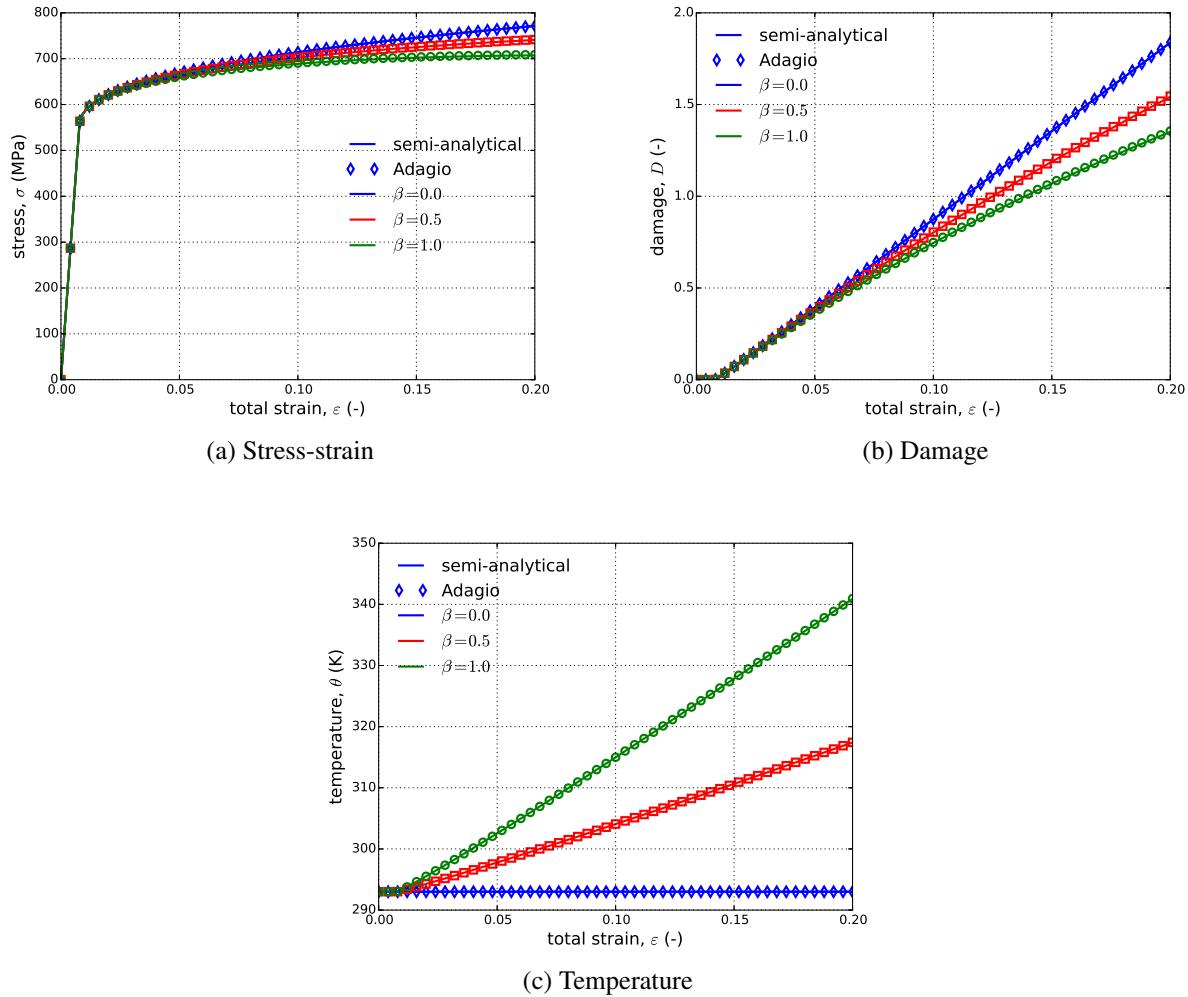



Figure 5.33: Semi-analytical and numerical (a) stress-strain (b) damage and (c) temperature evolutions of the Johnson-Cook model subjected to a uniaxial loading with three different plastic work conversion ratios,  $\beta$ . The strain rate for all three cases is  $\dot{\varepsilon} = 1\text{s}^{-1}$ .

A simple forward Euler scheme is then used to integrate the model at three different strain rates –  $\omega = .001\text{s}^{-1}$ ,  $1\text{s}^{-1}$  and  $1000\text{s}^{-1}$ . The stress-strain and damage evolution responses of these cases are presented in Figure 5.34 for the purely mechanical case ( $\beta = 0$ ). With respect to the damage evolution, it is noted that for pure shear responses  $\eta = 0$ .

The effect of plastic work is considered for  $\omega = 1\text{s}^{-1}$  in Figure 5.35. Similar influences like those reported in the uniaxial stress case are observed. A larger increase in temperature through plastic loading is noted however. Regardless in both the results of Figures 5.34 and 5.35 clear agreement between numerical and semi-analytical is observed further verifying the current implementation of the Johnson-Cook model.

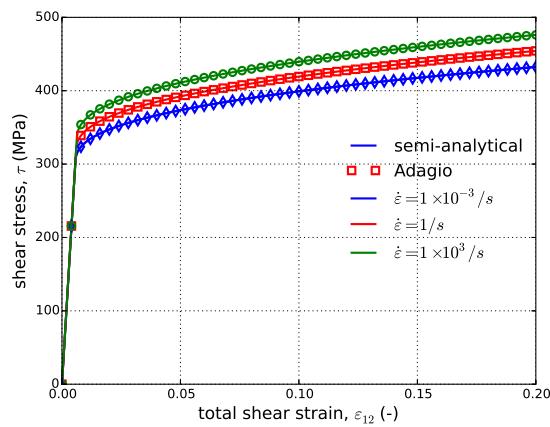


(a) Stress-strain

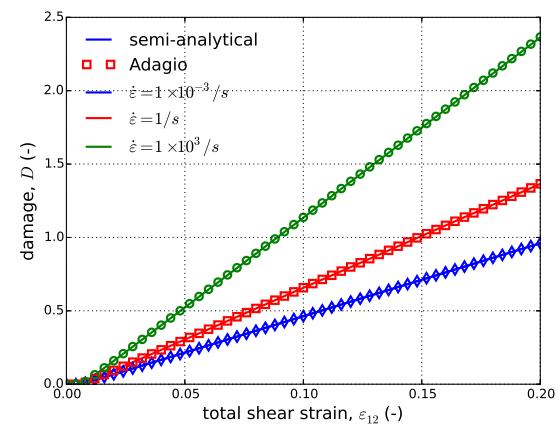


(b) Damage


Figure 5.34: Semi-analytical and numerical (a) stress-strain and (b) damage evolutions of the Johnson-Cook model subjected to a pure shear loading at three different applied strain rates. In these results,  $\beta = 0$  such that heat associated with plastic work is allowed to transfer to the environment.

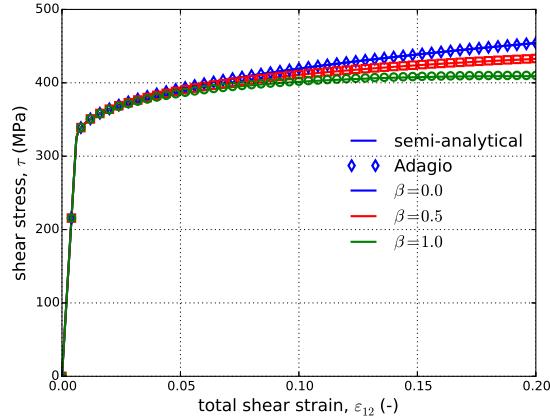

(a) Stress-strain

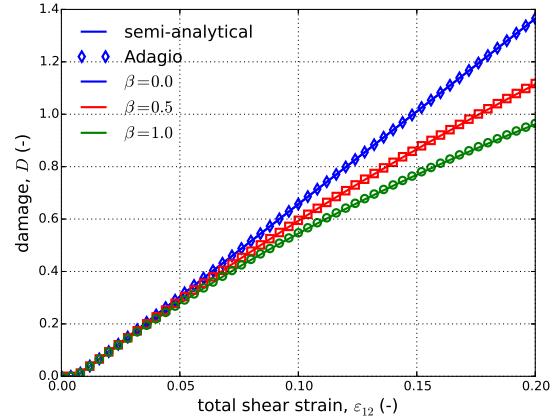

(b) Damage

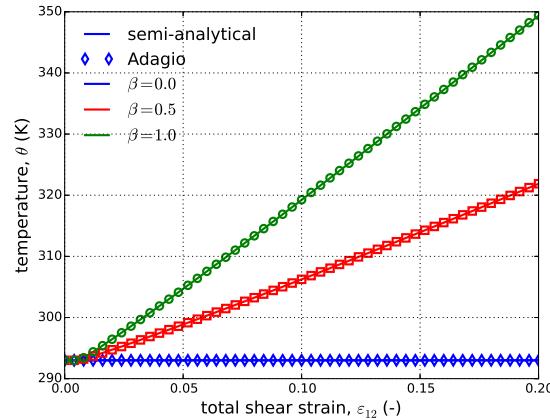

(c) Temperature

Figure 5.35: Semi-analytical and numerical (a) stress-strain (b) damage and (c) temperature evolutions of the Johnson-Cook model subjected to a pure shear loading with three different plastic work conversion ratios,  $\beta$ . The strain rate for all three cases is  $\dot{\varepsilon} = 1\text{s}^{-1}$ .

#### 5.11.4 User Guide

```
BEGIN PARAMETERS FOR MODEL JOHNSON_COOK
#
# Elastic constants
#
YOUNGS MODULUS = <real> E
POISSONS RATIO = <real> ν
SHEAR MODULUS = <real> G
BULK MODULUS = <real> K
LAMBDA = <real> λ
TWO MU = <real> 2μ
#
# Yield surface parameters
#
YIELD STRESS = <real> A
HARDENING CONSTANT = <real> B
HARDENING EXPONENT = <real> N
RATE CONSTANT = <real> C
REFERENCE RATE = <real>  $\dot{\varepsilon}_0$  (0.001)
EDOT_REF = <real> ? (0.0)
#
# Failure strain parameters
#
D1 = <real> D1 (0.0)
D2 = <real> D2 (0.0)
D3 = <real> D3 (0.0)
D4 = <real> D4 (0.0)
D5 = <real> D5 (0.0)
#
# Temperature softening commands
#
RHOCV = <real>  $\rho C_v$ 
BETA = <real>  $\beta$  (0.95)
THERMAL EXPONENT = <real> M
REFERENCE TEMPERATURE = <real>  $\theta_{ref}$ 
MELT TEMPERATURE = <real>  $\theta_{melt}$ 
INITIAL TEMPERATURE = <real>  $\theta_0$ 
#
FORMULATION = <int> ? (0)
#
END [PARAMETERS FOR MODEL JOHNSON_COOK]
```

Output variables available for this model are listed in Table 5.14.

Table 5.14: State Variables for JOHNSON COOK Model

Name	Variable Description
RADIUS	radius of yield surface
EQPS	equivalent plastic strain
THETA	temperature
EQDOT	effective total strain rate
ITER	
EFAIL	failure strain, $\varepsilon^f$
DAMAGE	damage, $D$
YIELD_STRESS	yield stress

## References

- [1] G.R. Johnson and W.H. Cook. A constitutive model and data for metals subjected to large strains, high strain rates and high temperatures. In *Proc. 7th. Int. Symp. on Ballistics*, pages 541–547, The Hague, The Netherlands, 1983.
- [2] G.R. Johnson and W.H. Cook. Fracture characteristics of three metals subjected to various strains, strain rates, temperatures and pressures. *Engineering Fracture Mechanics*, 21(1):31–48, 1985.
- [3] F.J. Zerilli and R.W. Armstrong. Dislocation-mechanics-based constitutive relations for material dynamics calculations. *Journal of Applied Physics*, 61:1816–1825, 1987.
- [4] D.J. Steinberg, S.G. Cochran, and M.W. Guinan. A constitutive model for metals applicable at high-strain rate. *Journal of Applied Physics*, 51:1498–1504, 1980.
- [5] D.J. Steinberg and C.M. Lund. A constitutive model for strain rates from  $10^{-4}$  to  $10^6$  s $^{-1}$ . *Journal of Applied Physics*, 65:1528–1533, 1989.
- [6] A.A. Brown and D.J. Bammann. Validation of a model for static and dynamic recrystallization in metals. *International Journal of Plasticity*, 32–33:17–35, 2012.
- [7] P.S. Follansbee and U.F. Kocks. A constitutive description of the deformation of copper based on the use of the mechanical threshold stress and an internal state variable. *Acta Metallurgica*, 36(1):81–93, 1988.
- [8] P.S. Follansbee and G.T. Gray III. An analysis of the low temperature, low and high strain-rate deformation of Ti-6Al-4V. *Metallurgical Transactions A*, 20A:863–874, 1989.
- [9] E. Corona and G. E. Orient. An evaluation of the Johnson-Cook model to simulate puncture of 7075 aluminum plates. Technical Report SAND2014-1550, Sandia National Laboratories, Albuquerque, NM, 2014. [pdf](#).

## 5.12 Hosford Plasticity Model

### 5.12.1 Theory

Like other elastic-plastic models in Lamé, the Hosford plasticity model is a rate-independent hypoelastic formulation. Unlike the Hill and other more complex plasticity models, it is isotropic. In a similar fashion to those models, the total rate of deformation is additively decomposed into an elastic and plastic part such that

$$D_{ij} = D_{ij}^e + D_{ij}^p. \quad (5.12.1)$$

The objective stress rate, depending only on the elastic deformation, may then be written as,

$$\dot{\sigma}_{ij} = \mathbb{C}_{ijkl} D_{kl}^e. \quad (5.12.2)$$

The Hosford plasticity model utilizes a yield surface first put forth by W. F. Hosford in the 1970's [1] that is isotropic but non-quadratic. This specific form was proposed due to experimental observations of biaxial stretching in which neither the Tresca or  $J_2$  yield surfaces could describe the results. In contrast to many of the yield surfaces proposed for similar purposes, only two parameters are utilized. Even with these limited terms, the developed model is quite versatile and can be reduced to von Mises or Tresca conditions as well as capturing responses in between. This yield surface is given as,

$$f(\sigma_{ij}, \bar{\varepsilon}^p) = \phi(\sigma_{ij}) - \bar{\sigma}(\bar{\varepsilon}^p) = 0, \quad (5.12.3)$$

in which  $\phi(\sigma_{ij})$  is the Hosford effective stress and  $\bar{\sigma}(\bar{\varepsilon}^p)$  is the isotropic hardening function. The Hosford effective stress is a non-quadratic function of the principal stresses ( $\sigma_i$ ,  $i = 1, 2, 3$ ) and is given as

$$\phi(\sigma_{ij}) = \left[ \frac{|\sigma_1 - \sigma_2|^a + |\sigma_2 - \sigma_3|^a + |\sigma_1 - \sigma_3|^a}{2} \right]^{1/a} \quad (5.12.4)$$

in which  $a$  is the yield surface exponent. Interestingly, if  $a = 2$  or  $4$  the yield surface reduces to that of a  $J_2$  von Mises surface while  $a = 1$  or as  $a \rightarrow \infty$  produces a Tresca like shape. If the value of  $a$  is above  $4$  the yield surface takes a position between the Tresca and  $J_2$  limits. Typical values are  $a = 6$  or  $a = 8$  for *bcc* and *fcc* metals, respectively [2]. To highlight this variability the yield surface is plotted below in Figure 5.36 for three values of  $a$  –  $a = 4, 8$ , and  $100$ .

For the hardening function,  $\bar{\sigma}(\bar{\varepsilon}^p)$ , a variety of forms including linear, power law, or a more general user defined function may be used.

An associated flow rule is utilized such that the plastic rate of deformation is normal to the yield surface and is given by,

$$\dot{D}_{ij}^p = \dot{\gamma} \frac{\partial \phi}{\partial \sigma_{ij}}, \quad (5.12.5)$$

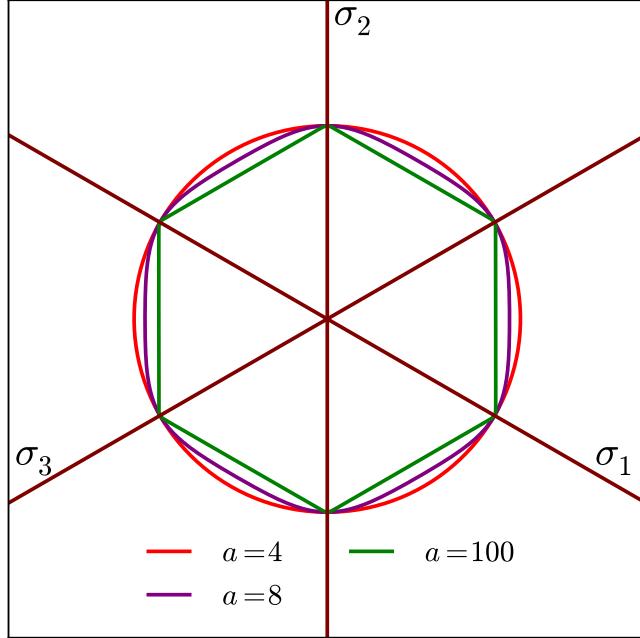


Figure 5.36: Example Hosford yield surfaces,  $f(\sigma_{ij}, \bar{\varepsilon}^p = 0; a)$ , presented in the deviatoric  $\pi$ -plane. The presented surfaces correspond to the different yield exponents  $a = 4, 8$ , and  $100$ .

where  $\dot{\gamma}$  is the consistency multiplier enforcing  $f = 0$  during plastic deformation. Given the form of  $f$ , it can also be shown that  $\dot{\gamma} = \dot{\varepsilon}^p$ .

For details, please see [3].

### 5.12.2 Implementation

The Hosford plasticity model is implicitly integrated using a closest point projection (CPP) return mapping algorithm (RMA). The resulting nonlinear equations are solved via a line search augmented Newton-Raphson method and the stress update routine is very similar to that of the Hill plasticity model. The key difference between the two is the isotropy. Specifically, given that the Hosford yield surface is isotropic and the functional form is given in terms of principal stresses, the stress update routine is performed in *principal stress* space and then converted to global cartesian values.

For a loading step, a trial stress state,  $T_{ij}^{tr}$ , may be computed by knowing the rate of deformation,  $d_{ij}$ , and time step as,

$$T_{ij}^{tr} = T_{ij}^n + \Delta t \mathbb{C}_{ijkl} d_{kl}. \quad (5.12.6)$$

The principal stresses,  $T_i^{tr}$ , may then be used to determine the trial yield function value,  $\phi^{tr} = \phi(T_i^{tr}, \bar{\varepsilon}^{p(n)})$ . If  $\phi^{tr} < 0$ , the elastic trial solution is acceptable. On the other hand, if the trial solution is inadmissible, the aforementioned CPP-RMA problem is solved in principal stress space. The crux of this algorithm is the simultaneous solution of two nonlinear equations – (i) the flow rule

and (ii) consistency condition. The former leads to a residual,  $R_i$ , of the form (again in principal stress space),

$$R_i = \Delta d_i^p - \Delta \gamma \frac{\partial \phi}{\partial T_i} = 0, \quad (5.12.7)$$

while the latter is enforced by the yield function,

$$f = \phi(T_i) - \bar{\sigma}(\bar{\epsilon}^p) = 0, \quad (5.12.8)$$

and its derivative ( $\dot{f}$ ) being zero. This system is solved via a Newton-Raphson type approach in which the state variables (stress,  $T_i$ , and consistency multiplier,  $\gamma$ ) are iteratively corrected until the residuals are satisfied. Using  $(k+1)$  and  $(k)$  to denote the next and current iterations, this updating takes the form,

$$\begin{aligned} \Delta \gamma^{(k+1)} &= \Delta \gamma^{(k)} + \Delta(\Delta \gamma), \\ T_i^{(k+1)} &= T_i^{(k)} + \Delta T_i, \end{aligned} \quad (5.12.9)$$

in which  $T^{(0)} = T_i^{tr}$  and  $\Delta \gamma^{(0)} = 0$ . Consistent linearization of the two equations can be solved to give correction increments of the form,

$$\begin{aligned} \Delta(\Delta \gamma) &= \frac{f^{(k)} - R_i^{(k)} \mathcal{L}_{ij}^{(k)} \frac{\partial \phi^{(k)}}{\partial T_j}}{\frac{\partial \phi^{(k)}}{\partial T_i} \mathcal{L}_{ij}^{(k)} \frac{\partial \phi^{(k)}}{\partial T_j} + H'^{(k)}}, \\ \Delta T_i &= -\mathcal{L}_{ij}^{(k)} \left( R_j^{(k)} + \Delta(\Delta \gamma) \frac{\partial \phi^{(k)}}{\partial T_j} \right), \end{aligned} \quad (5.12.10)$$

with  $\mathcal{L}_{ij}^{(k)}$  being the Hessian of the CPP-RMA problem and  $H'^{(k)}$  is the slope of the hardening curve.

Previous studies have indicated that the Newton-Raphson method alone may be insufficient to guarantee convergence with arbitrary stress states in the case of non-quadratic yield surfaces [4, 5, 3]. To address this, a *line search* method is adopted. In such an approach, the incrementation rule (5.12.11) is modified such that,

$$\begin{aligned} \Delta \gamma^{(k+1)} &= \Delta \gamma^{(k)} + \alpha \Delta(\Delta \gamma), \\ T_i^{(k+1)} &= T_i^{(k)} + \alpha \Delta T_i, \end{aligned} \quad (5.12.11)$$

where  $\alpha \in (0, 1]$  is the step magnitude. This parameter enforces that the solution be converging and is determined via various convergence criteria. The  $\alpha = 1$  case corresponds to the Newton-Raphson method. Utilization of this approach has been shown to greatly increase the robustness of this algorithm under large trial stresses [3].

Finally, upon convergence of the algorithm, the cartesian stress are found from the principal stresses via,

$$T_{ij}^{n+1} = \sum_{k=1}^3 T_k^{n+1} \hat{e}_i^k \hat{e}_j^k, \quad (5.12.12)$$

in which  $\hat{e}_i^k$  is the eigenvector of the  $k^{\text{th}}$  principal stress.

Details of this implementation and the line search algorithm may be found in the work of Scherzinger [3].

### 5.12.3 Verification

The Hosford plasticity material model is verified through a variety of loading and material conditions. For these cases, the elastic properties corresponding to 2090-T3 aluminum [6] given in Section 5.13.3 are utilized. The elastic properties are  $E = 70$  GPa and  $\nu = 0.25$  while a linear hardening law of the form,

$$\bar{\sigma}(\bar{\varepsilon}^p) = \sigma_y + K\bar{\varepsilon}^p, \quad (5.12.13)$$

with  $\sigma_y = 200$  MPa and  $K = E/200$  is assumed. For these studies, two different yield surface exponents will be used,  $a = 4, 8$ . The former corresponds to the  $J_2$  surface while the latter is a common value for aluminum.

#### 5.12.3.1 Uniaxial Stress

In the case of uniaxial stress ( $\sigma$ ), it is trivial to note that the corresponding principal stress state is simply  $\sigma_1 = \sigma$ ,  $\sigma_2 = \sigma_3 = 0$ . As such, regardless of  $a$ ,

$$\phi = |\sigma_1|. \quad (5.12.14)$$

With the aforementioned linear hardening, this case reduces to that discussed in Section 5.6.3.1. Corresponding analytical and numerical results (both with  $a = 4$  and 8) of the axial stress and lateral strain are presented in Figures 5.37 and 5.38, respectively. In these figures, the invariance of response on yield surface exponent through this loading is clearly observed.

#### 5.12.3.2 Pure Shear

To explore the impact of the yield exponent  $a$ , the case of pure shear is considered. Specifically, the only shear component shall be in the cartesian  $e_1 - e_2$  direction such that  $\sigma_{12} = \tau$  and  $\varepsilon_{12}$  are the only non-zero components. Noting that the three principal stresses are  $\tau, 0, -\tau$ , the yield condition simplifies to

$$\phi = [1 + 2^{a-1}]^{1/a} \tau. \quad (5.12.15)$$

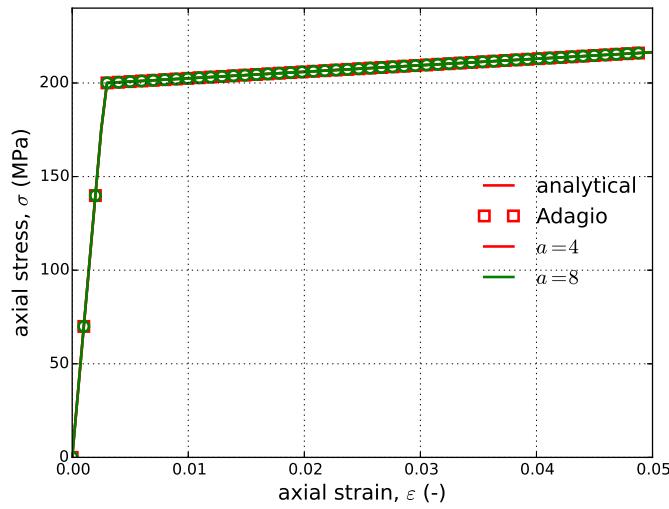


Figure 5.37: Axial stress-strain results of the Hosford plasticity model determined analytically and numerically for the case of yield surface exponents  $a = 4, 8$ .

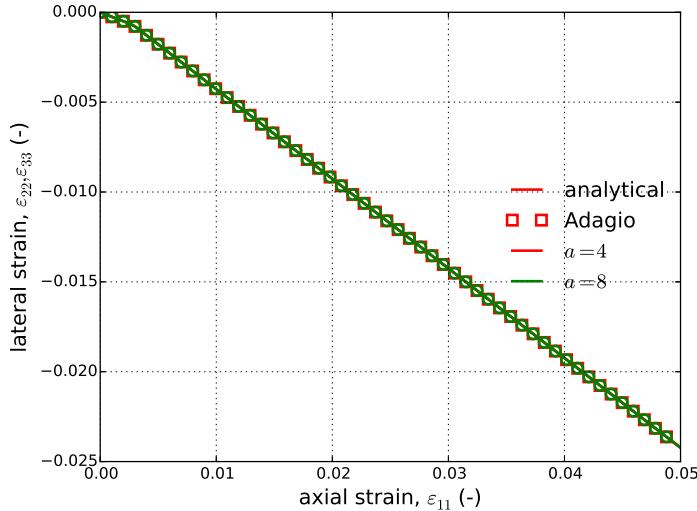


Figure 5.38: Lateral strain as a function of applied axial strain of the Hosford Plasticity model determined analytically and numerically for the case of yield surface exponents  $a = 4, 8$ .

The equivalent plastic strain may then be found as a function of  $\varepsilon_{12}$  in the same way as presented in Section 5.13.3.2. Shear stress-strain results for both  $a = 4, 8$  are presented in Figure 5.39 as determined both by adagio and analytically. The boundary conditions for this loading are given in Appendix A.3. In these results, the effect of the yield surface exponent,  $a$ , may clearly be seen.

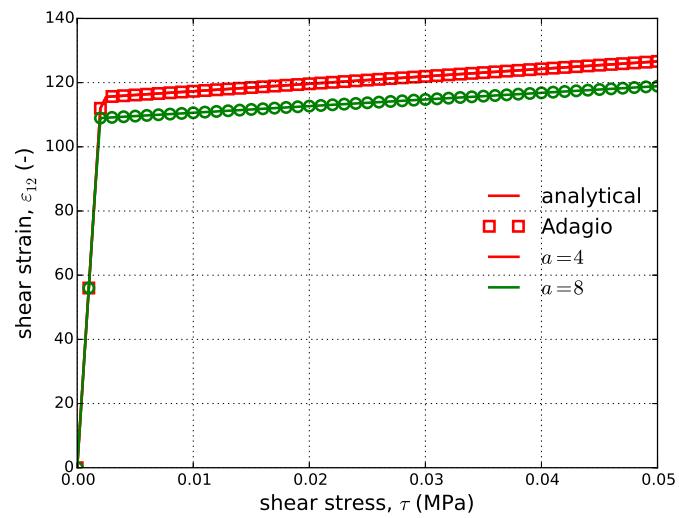


Figure 5.39: Shear stress-strain results of the Hosford plasticity model determined analytically and numerically for the case of yield surface exponents  $a = 4, 8$ .

#### 5.12.4 User Guide

```
BEGIN PARAMETERS FOR MODEL HOSFORD_PLASTICITY
#
# Elastic constants
#
YOUNGS MODULUS = <real> E
POISSONS RATIO = <real> ν
SHEAR MODULUS = <real> G
BULK MODULUS = <real> K
LAMBDA = <real> λ
TWO MU = <real> 2μ
#
# Yield surface parameters
#
YIELD STRESS = <real> σy
A = <real> a (1.0)
BETA = <real> β (1.0)
#
# Hardening model
#
HARDENING MODEL = LINEAR | POWER_LAW | USER_DEFINED |
CUBIC_HERMITE_SPLINE
#
# Linear hardening
#
HARDENING MODULUS = <real>hardening_modulus
#
# Power law hardening
#
HARDENING CONSTANT = <real>hardening_constant
HARDENING EXPONENT = <real>hardening_exponent (0.5)
LUDERS STRAIN = <real>luders_strain(0.0)
#
# User defined hardening
#
HARDENING FUNCTION = <string>hardening_function_name
#
# Spline based hardening curve
#
CUBIC SPLINE TYPE = <string>
CARDINAL PARAMETER = <real> val
KNOT EQPS = <real_list> vals
KNOT STRESS = <real_list> vals
END [PARAMETERS FOR MODEL HOSFORD_PLASTICITY]
```

Output variables available for this model are listed in Table 5.15.

Table 5.15: State Variables for HOSFORD PLASTICITY Model

Name	Description
EQPS	equivalent plastic strain, $\bar{\epsilon}^p$

## References

- [1] W.F. Hosford. A generalized isotropic yield criterion. *Journal of Applied Mechanics*, 39: 607–609, 1972.
- [2] A. Graf and W. Hosford. Calculations of forming limit diagrams. *Metallurgical Transactions A*, 21A:87–94, 1990.
- [3] W. M. Scherzinger. A return mapping algorithm for isotropic and anisotropic plasticity models using a line search method. *Computer Methods in Applied Mechanics and Engineering*, 317: 526–553, 2017.
- [4] F. Armero and A. Pèrez-Foguet. On the formulation of closest-point projection algorithms in elastoplasticity – part I: The variational structure. *International Journal for Numerical Methods in Engineering*, 53:297–329, 2002.
- [5] A. Pèrez-Foguet and F. Armero. On the formulation of closest-point projection algorithms in elastoplasticity – part II: Globally convergent schemes. *International Journal for Numerical Methods in Engineering*, 53:331–374, 2002.
- [6] F. Barlat, H. Aretz, J. W. Yoon, J. C. Brem, and R. E. Dick. Linear transformation-based anisotropic yield functions. *International Journal of Plasticity*, 21:1009–1039, 2005.

## 5.13 Hill Plasticity Model

### 5.13.1 Theory

The Hill plasticity model is similar to other plasticity models except that it is not isotropic. It is a hypoelastic, rate-independent plasticity model. The rate form of the equation assumes an additive split of the rate of deformation into an elastic and plastic part

$$D_{ij} = D_{ij}^e + D_{ij}^p \quad (5.13.1)$$

The stress rate only depends on the elastic rate of deformation

$$\dot{\sigma}_{ij} = \mathbb{C}_{ijkl} D_{kl}^e \quad (5.13.2)$$

where  $\mathbb{C}_{ijkl}$  are the components of the fourth-order, isotropic elasticity tensor.

The Hill plasticity model has an orthotropic yield surface that assumes orthogonal principal material directions. An example of this yield surface is presented below in Figure 5.40 along with examples of two isotropic surfaces – the von Mises ( $J_2$ ) and Hosford (with  $a = 8$ ). The various surface parameters correspond to 2090-T3 aluminum and the specific Hill strengths are found in [1]. By comparing the Hill surface to the two isotropic surfaces, the impact of the anisotropy is clear. Additionally, substantial differences to the normals of the yield surfaces at points of intersection highlight the impact of the yield function selection on the resulting flow directions.

In functional form, the Hill yield surface looks like a von Mises yield surface except that there are 6 yield stresses:  $\sigma_{11}^y$ ,  $\sigma_{22}^y$ ,  $\sigma_{33}^y$ ,  $\tau_{12}^y$ ,  $\tau_{23}^y$ , and  $\tau_{31}^y$ . These yield stresses correspond to 3 normal and 3 shear yield stresses. The yield function takes the form

$$\begin{aligned} \phi^2(\sigma_{ij}) = & F(\hat{\sigma}_{22} - \hat{\sigma}_{33})^2 + G(\hat{\sigma}_{33} - \hat{\sigma}_{11})^2 + H(\hat{\sigma}_{11} - \hat{\sigma}_{22})^2 \\ & + 2L\hat{\sigma}_{23}^2 + 2M\hat{\sigma}_{31}^2 + 2N\hat{\sigma}_{12}^2 = \bar{\sigma}^2(\bar{\epsilon}^p) \end{aligned} \quad (5.13.3)$$

The coefficients  $F$ ,  $G$ ,  $H$ ,  $L$ ,  $M$ , and  $N$  were introduced by Hill. In terms of the yield stresses they are:

$$\begin{aligned} F &= \frac{(\bar{\sigma})^2}{2} \left[ \frac{1}{(\sigma_{22}^y)^2} + \frac{1}{(\sigma_{33}^y)^2} - \frac{1}{(\sigma_{11}^y)^2} \right] ; \quad L = \frac{(\bar{\sigma})^2}{2} \left[ \frac{1}{(\tau_{23}^y)^2} \right] \\ G &= \frac{(\bar{\sigma})^2}{2} \left[ \frac{1}{(\sigma_{33}^y)^2} + \frac{1}{(\sigma_{11}^y)^2} - \frac{1}{(\sigma_{22}^y)^2} \right] ; \quad M = \frac{(\bar{\sigma})^2}{2} \left[ \frac{1}{(\tau_{31}^y)^2} \right] \end{aligned} \quad (5.13.4)$$

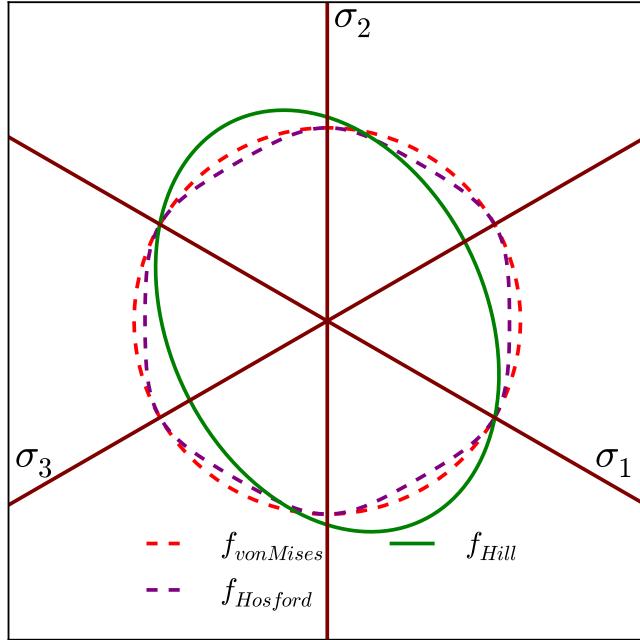


Figure 5.40: Example anisotropic Hill yield surface,  $f_{Hill} (\sigma_{ij}, \bar{\varepsilon}^p = 0)$ , presented in the deviatoric  $\pi$ -plane fit to 2090-T3 aluminum. Comparison von Mises ( $J_2$ ) and Hosford (with  $a = 8$ ) surfaces are also presented.

$$H = \frac{(\bar{\sigma})^2}{2} \left[ \frac{1}{(\sigma_{11}^y)^2} + \frac{1}{(\sigma_{22}^y)^2} - \frac{1}{(\sigma_{33}^y)^2} \right] \quad ; \quad N = \frac{(\bar{\sigma})^2}{2} \left[ \frac{1}{(\tau_{12}^y)^2} \right]$$

where  $\bar{\sigma}$  is a reference yield stress.

Rather than input the six independent yield stresses, the ratios of the yield stresses to some reference yield stress are generally used as input. These ratios are

$$\begin{aligned}
 R_{11} &= \frac{\sigma_{11}^y}{\bar{\sigma}} \quad ; \quad R_{12} = \sqrt{3} \frac{\tau_{12}^y}{\bar{\sigma}} \\
 R_{22} &= \frac{\sigma_{22}^y}{\bar{\sigma}} \quad ; \quad R_{23} = \sqrt{3} \frac{\tau_{23}^y}{\bar{\sigma}} \\
 R_{33} &= \frac{\sigma_{33}^y}{\bar{\sigma}} \quad ; \quad R_{31} = \sqrt{3} \frac{\tau_{31}^y}{\bar{\sigma}}
 \end{aligned} \tag{5.13.5}$$

These ratios are set up so that if  $R_{ij} = 1$  then the yield surface is isotropic.

The orientation of the principal material axes with respect to the global Cartesian axes is defined in the same manner as the orthotropic elastic model. First a coordinate system is defined. For

the Hill plasticity model it can be a rectangular or a cylindrical coordinate system. *The spherical coordinate system has not been implemented yet for this model.* After the coordinate system has been defined the material coordinate system can be defined through two successive rotations about axes in the rectangular or cylindrical coordinate system. In the case of the cylindrical coordinate system (and eventually the spherical coordinate system) this allows the principal material axes to vary point-wise in a given element block.

The plastic rate of deformation, as with the isotropic models, assumes associated flow

$$D_{ij}^p = \dot{\gamma} \frac{\partial \phi}{\partial \sigma_{ij}} \quad (5.13.6)$$

Given the form for  $\phi$ , the consistency parameter,  $\dot{\gamma}$  is equal to the rate of the equivalent plastic strain,  $\dot{\bar{\varepsilon}}^p$ .

The hardening behavior is given by  $\bar{\sigma}(\bar{\varepsilon}^p)$ . This hardening function can be a linear hardening function, a power law hardening function, or a user defined hardening function.

For more information about the Hill plasticity model, consult [2].

### 5.13.2 Implementation

The Hill plasticity model uses a predictor-corrector algorithm for integrating the constitutive model. Given a rate of deformation,  $d_{ij}$ , and a time step,  $\Delta t$ , a trial stress state is calculated based on an elastic response

$$T_{ij}^{tr} = T_{ij}^n + \Delta t \mathbb{C}_{ijkl} d_{kl} \quad (5.13.7)$$

If the trial stress state lies outside the yield surface, i.e. if  $\phi(T_{ij}^{tr}) > \bar{\sigma}$ , then the model uses a backward Euler algorithm to return the stress to the yield surface. There are two equations that need to be solved. To ensure that the plastic strain increment is in the correct direction we have

$$R_{ij}^p = \Delta t d_{ij}^p - \Delta \gamma \frac{\partial \phi}{\partial T_{ij}} = 0 \quad (5.13.8)$$

while to ensure that the stress state is on the yield surface we require

$$f = \phi(T_{ij}) - \bar{\sigma}(\bar{\varepsilon}^p) = 0 \quad (5.13.9)$$

The primary algorithm for solving these equations is a Newton-Raphson algorithm. Using  $\Delta \gamma$  (which is equal to  $\Delta \bar{\varepsilon}^p$ ) and  $T_{ij}$  as the solution variables, we set up an iterative algorithm where

$$\Delta\gamma^{(k+1)} = \Delta\gamma^{(k)} + \Delta(\Delta\gamma) \quad (5.13.10)$$

$$T_{ij}^{(k+1)} = T_{ij}^{(k)} + \Delta T_{ij}$$

where  $\Delta\gamma^{(0)} = 0$  and  $T_{ij}^{(0)} = T_{ij}^{tr}$  and

$$\Delta t d_{ij}^p = \mathbb{C}_{ijkl}^{-1} (T_{kl}^{tr} - T_{kl}) \quad (5.13.11)$$

The Newton-Raphson algorithm gives

$$\begin{aligned} \Delta(\Delta\gamma) &= \frac{f^{(k)} - R_{ij}^{(k)} \mathcal{L}_{ijkl}^{(k)} \frac{\partial\phi^{(k)}}{\partial T_{kl}}}{\frac{\partial\phi^{(k)}}{\partial T_{ij}} \mathcal{L}_{ijkl}^{(k)} \frac{\partial\phi^{(k)}}{\partial T_{kl}} + H'^{(k)}} \\ \Delta T_{ij} &= -\mathcal{L}_{ijkl}^{(k)} \left( R_{kl}^{(k)} + \Delta(\Delta\gamma) \frac{\partial\phi^{(k)}}{\partial T_{kl}} \right) \end{aligned} \quad (5.13.12)$$

A straightforward Newton-Raphson algorithm does not always converge, so the return mapping algorithm is augmented with a line search algorithm

$$\begin{aligned} \Delta\gamma^{(k+1)} &= \Delta\gamma^{(k)} + \alpha \Delta(\Delta\gamma) \\ T_{ij}^{(k+1)} &= T_{ij}^{(k)} + \alpha \Delta T_{ij} \end{aligned} \quad (5.13.13)$$

where  $\alpha \in (0, 1]$  is the line search parameter which is determined from certain convergence considerations. If  $\alpha = 1$  then the Newton-Raphson algorithm is recovered. The line search algorithm greatly increases the reliability of the return mapping algorithm.

### 5.13.3 Verification

The Hill plasticity material model is verified for a number of loading conditions. The elastic properties used in these analyses are  $E = 70$  GPa and  $\nu = 0.25$ . The parameters that are used to define the yield surface are

$$R_{11} = 1.000680 ; R_{12} = 0.909194$$

$$R_{22} = 0.906397 ; R_{23} = 0.851434 \quad (5.13.14)$$

$$R_{33} = 1.027380 ; R_{31} = 0.799066$$

These parameters correspond to a parameterization of the Barlat model for 2090-T3 aluminum [3] that is fit to the Hill model. The hardening law used for the model is a Voce law with the following form

$$\bar{\sigma}(\bar{\varepsilon}^p) = \sigma_y + A (1 - \exp(-n\bar{\varepsilon}^p)) \quad (5.13.15)$$

For these calculations  $\sigma_y = 200$  MPa,  $A = 200$  MPa, and  $n = 20$ . Finally, the coordinate system used in these calculations is a rectangular coordinate system with the  $e_1, e_2, e_3$  axes aligned with the  $x, y, z$  axes.

### 5.13.3.1 Uniaxial Stress

The Hill plasticity model is tested in uniaxial tension along the three orthogonal principal material directions. The tests looks at the stress, the strain, and the equivalent plastic strain and compares these values against analytical results for the same problem. In this verification problem only the normal stresses are needed, and the shear terms are not exercised. Therefore, the parameters  $R_{12}$ ,  $R_{23}$ , and  $R_{31}$  are not used in the problem and a separate verification test will be needed for shear response.

The model is tested in uniaxial stress in the  $x$ ,  $y$ , and  $z$  directions, giving three test problems. Each problem can be formulated exactly the same. For the description of the test we will only look at loading in the  $x$  direction ( $x_1$  direction).

For the uniaxial stress problem, the only non-zero stress component is  $\sigma_{11}$ . In the analysis that follows  $\sigma_{11} = \sigma$ . There are three non-zero strain components,  $\varepsilon_{11}$ ,  $\varepsilon_{22}$ , and  $\varepsilon_{33}$ . In the analysis that follows  $\varepsilon_{11} = \varepsilon$ . Furthermore, the axial elastic strain,  $\varepsilon_{11}^e = \sigma/E$  will be denoted by  $\varepsilon^e$ .

#### Axial Stresses

The uniaxial stress calculated by the model in Adagio is compared to analytical solutions. For uniaxial loading in the  $e_1$  direction, the effective stress is

$$\phi = \frac{\sigma}{R_{11}} \quad (5.13.16)$$

If the stress state is on the yield surface, then  $\phi = \bar{\sigma}(\bar{\varepsilon}^p)$ , so the axial stress, as a function of the hardening function, is

$$\sigma = R_{kk}\bar{\sigma}(\bar{\varepsilon}^p) \quad (5.13.17)$$

This shows that the stress state can be calculated from the hardening law and the anisotropy parameters.

To evaluate the axial stress we need the equivalent plastic strain as a function of the axial strain. If we equate the rate of plastic work we get

$$\bar{\sigma}\dot{\bar{\varepsilon}}^p = \sigma(\dot{\varepsilon} - \dot{\varepsilon}^e) \rightarrow \dot{\bar{\varepsilon}}^p = R_{11}(\dot{\varepsilon} - \dot{\varepsilon}^e) \quad (5.13.18)$$

which, when integrated, gives us an implicit equation for the equivalent plastic strain

$$\bar{\varepsilon}^p = R_{11} \left( \varepsilon - R_{11} \frac{\bar{\sigma}(\bar{\varepsilon}^p)}{E} \right) \quad (5.13.19)$$

The equivalent plastic strain can then be used in (5.13.17) to find the axial stress,  $\sigma$ .

The axial stresses for loading in the other directions can be found the same way. The axial stresses for loading in the  $e_1$ ,  $e_2$ , and  $e_3$  directions are shown in Figure 5.41.

### Lateral Strains

For the lateral strains we need the plastic strains and therefore the normal to the yield surface. The components of the normal to the yield surface are

$$\frac{\partial\phi}{\partial\sigma_{11}} = \frac{1}{R_{11}} \quad ; \quad \frac{\partial\phi}{\partial\sigma_{22}} = -HR_{11} \quad ; \quad \frac{\partial\phi}{\partial\sigma_{33}} = -GR_{11} \quad (5.13.20)$$

The elastic axial and lateral strain components are

$$\varepsilon_{11}^e = \frac{\sigma}{E} = \varepsilon^e \quad ; \quad \varepsilon_{22}^e = \varepsilon_{33}^e = -\nu\frac{\sigma}{E} = -\nu\varepsilon^e \quad (5.13.21)$$

The plastic axial strain component is

$$\varepsilon_{11}^p = \varepsilon_{11} - \frac{\sigma}{E} = \varepsilon - \varepsilon^e \quad (5.13.22)$$

which comes from the additive decomposition of the strain rates. Using the equivalent plastic strain (5.13.19) we can find the lateral plastic strain components

$$\varepsilon_{22}^p = -(\varepsilon - \varepsilon^e)HR_{11}^2 \quad ; \quad \varepsilon_{33}^p = -(\varepsilon - \varepsilon^e)GR_{11}^2 \quad (5.13.23)$$

The lateral *total* stain components prior to yield are  $\varepsilon_{22} = \varepsilon_{33} = -\nu\varepsilon$ . After yield they are

$$\begin{aligned}\varepsilon_{22} &= -\nu\varepsilon^e - HR_{11}\bar{\varepsilon}^p \\ \varepsilon_{33} &= -\nu\varepsilon^e - GR_{11}\bar{\varepsilon}^p\end{aligned}\tag{5.13.24}$$

where  $\varepsilon^e = \sigma/E$ .

For loading in the  $y$  direction, a similar analysis leads to the lateral strains, after yield

$$\begin{aligned}\varepsilon_{33} &= -\nu\varepsilon^e - FR_{22}\bar{\varepsilon}^p \\ \varepsilon_{11} &= -\nu\varepsilon^e - HR_{22}\bar{\varepsilon}^p\end{aligned}\tag{5.13.25}$$

For loading in the  $z$  direction, a similar analysis leads to the lateral strains, after yield

$$\begin{aligned}\varepsilon_{11} &= -\nu\varepsilon^e - GR_{33}\bar{\varepsilon}^p \\ \varepsilon_{22} &= -\nu\varepsilon^e - FR_{33}\bar{\varepsilon}^p\end{aligned}\tag{5.13.26}$$

Results for all three loadings are shown in Figures 5.42, 5.43, and 5.44.

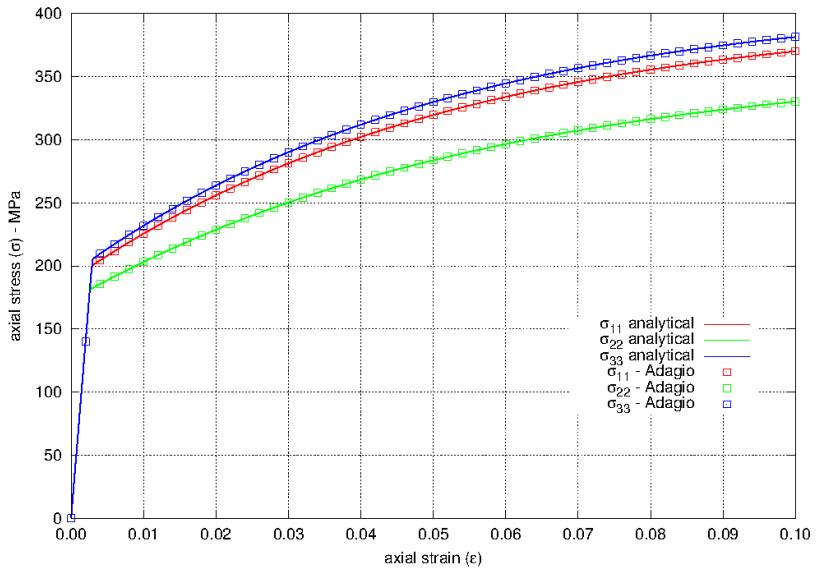


Figure 5.41: Stresses when loading in the  $e_1$ ,  $e_2$ , and  $e_3$ -directions using the Hill model with a Voce hardening law.

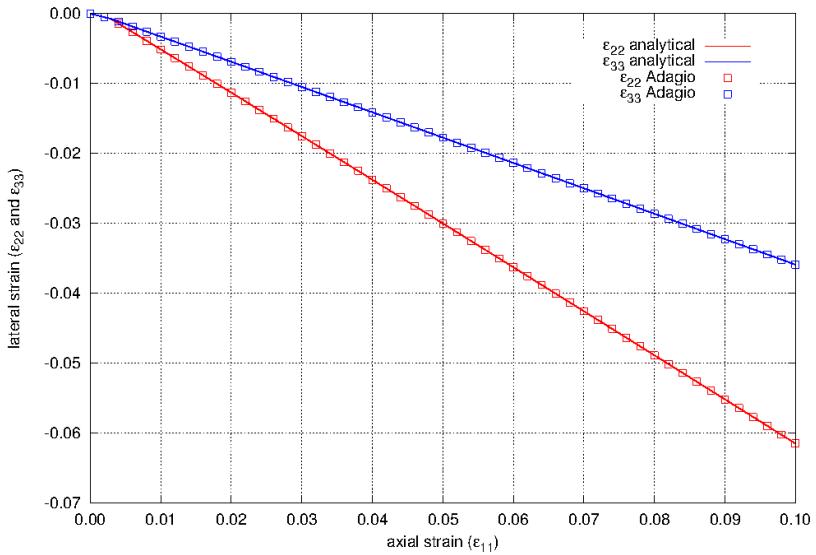


Figure 5.42: Lateral strain as a function of axial strain for the Hill model of 2090-T3 aluminum. Loading is in the  $e_1$ -direction and the hardening law is a Voce law.

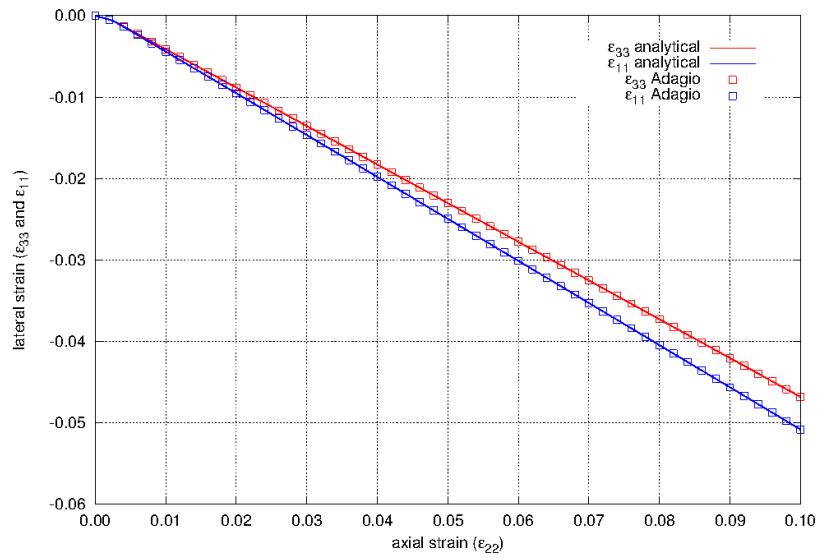


Figure 5.43: Lateral strain as a function of axial strain for the Hill model of 2090-T3 aluminum. Loading is in the  $e_2$ -direction and the hardening law is a Voce law.

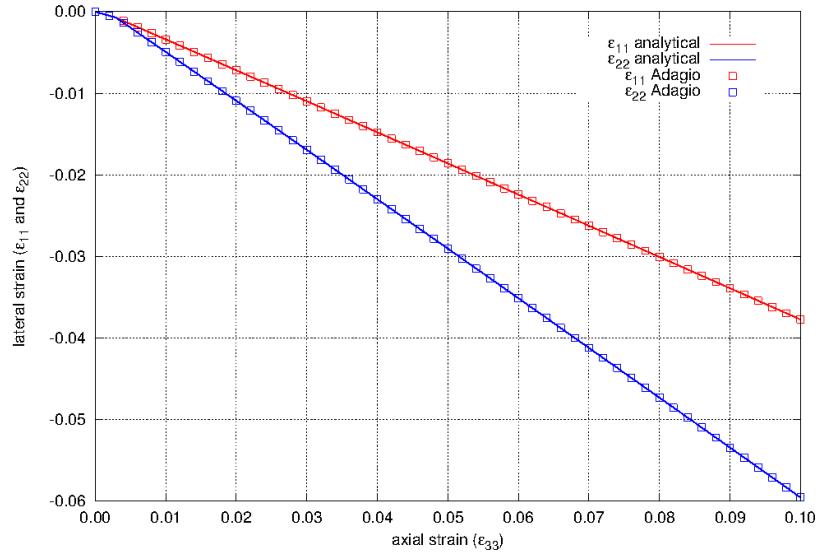


Figure 5.44: Lateral strain as a function of axial strain for the Hill model of 2090-T3 aluminum. Loading is in the  $e_3$ -direction and the hardening law is a Voce law.

### 5.13.3.2 Pure Shear

The shear stress calculated by the Hill plasticity model in Adagio is compared to analytical solutions. Without loss of generality we will look at solutions for pure shear with respect to the  $e_1$ - $e_2$  axes. Solutions for shear with respect to the other axes will be similar. In what follows, the only non-zero shear stress will be  $\sigma_{12}$ , and the only non-zero shear strain will be  $\varepsilon_{12}$ . In general, for pure shear with respect to the  $e_1$ - $e_2$  axes, the effective stress is

$$\phi = \sqrt{3} \frac{\sigma_{12}}{R_{12}} \quad (5.13.27)$$

If the stress state is on the yield surface, then  $\phi = \bar{\sigma}(\bar{\varepsilon}^p)$ , so the shear stress is

$$\sigma_{12} = \frac{R_{12}}{\sqrt{3}} \bar{\sigma}(\bar{\varepsilon}^p) \quad (5.13.28)$$

This shows that the pure shear stress state can be calculated from the hardening law and the anisotropy parameters.

To evaluate the shear stress we need the equivalent plastic strain as a function of the shear strain. If we equate the rate of plastic work we get

$$\bar{\sigma} \dot{\bar{\varepsilon}}^p = 2\sigma_{12} (\dot{\varepsilon}_{12} - \dot{\varepsilon}_{12}^e) \quad \rightarrow \quad \dot{\bar{\varepsilon}}^p = \frac{2R_{12}}{\sqrt{3}} (\dot{\varepsilon}_{12} - \dot{\varepsilon}_{12}^e) \quad (5.13.29)$$

which, when integrated, gives us an implicit equation for the equivalent plastic strain

$$\bar{\varepsilon}^p = \frac{2R_{12}}{\sqrt{3}} \left( \varepsilon_{12} - \frac{R_{12}}{\sqrt{3}} \frac{\bar{\sigma}(\bar{\varepsilon}^p)}{2G} \right) \quad (5.13.30)$$

If we define  $\hat{R}_{12} = R_{12}/\sqrt{3}$  then we get a form similar to what we had for uniaxial stress

$$\bar{\varepsilon}^p = 2\hat{R}_{12} \left( \varepsilon_{12} - \hat{R}_{12} \frac{\bar{\sigma}(\bar{\varepsilon}^p)}{2G} \right) \quad (5.13.31)$$

The equivalent plastic strain can now be used to find the shear stress.

#### Boundary Conditions for Pure Shear

The deformation gradient that gives pure shear for loading relative to the  $e_1$ - $e_2$  axes is

$$[\mathbf{F}] = \begin{bmatrix} \frac{1}{2}(\lambda + \lambda^{-1}) & \frac{1}{2}(\lambda - \lambda^{-1}) & 0 \\ \frac{1}{2}(\lambda - \lambda^{-1}) & \frac{1}{2}(\lambda + \lambda^{-1}) & 0 \\ 0 & 0 & 1 \end{bmatrix} \rightarrow [\boldsymbol{\varepsilon}] = \begin{bmatrix} 0 & \boldsymbol{\varepsilon} & 0 \\ \boldsymbol{\varepsilon} & 0 & 0 \\ 0 & 0 & 0 \end{bmatrix} ; \quad \boldsymbol{\varepsilon} = \ln \lambda \quad (5.13.32)$$

For loading relative to the  $e_2$ - $e_3$  axes and the  $e_3$ - $e_1$  axes the boundary conditions are modified appropriately.

## Results

The results for the Hill plasticity model loaded in pure shear are shown in Figure 5.45. We see that the stress strain curves in pure shear as calculated by Adagio follow the expected stress strain curves. All other stress and strain components for the three problems are zero.

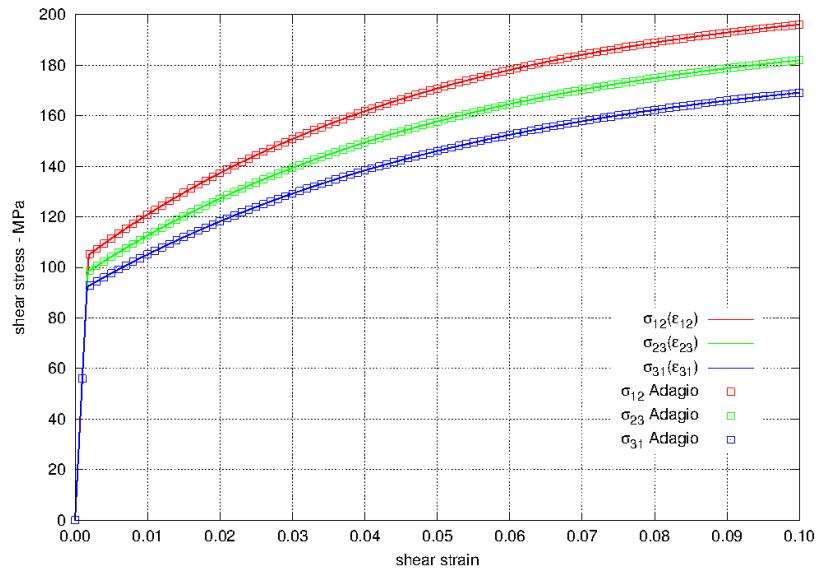


Figure 5.45: Shear stress versus shear strain using the Hill model with a Voce hardening law. Results are for shear in the three orthogonal planes of the material coordinate system.

#### 5.13.4 User Guide

```
BEGIN PARAMETERS FOR MODEL HILL_PLASTICITY
#
# Elastic constants
#
YOUNGS MODULUS = <real> E
POISSONS RATIO = <real> ν
SHEAR MODULUS = <real> G
BULK MODULUS = <real> K
LAMBDA = <real> λ
TWO MU = <real> 2μ
#
# Material coordinates system definition
#
COORDINATE SYSTEM = <string> coordinate_system_name
DIRECTION FOR ROTATION = <real> 1|2|3
ALPHA = <real> α1 (degrees)
SECOND DIRECTION FOR ROTATION = <real> 1|2|3
SECOND ALPHA = <real> α2 (degrees)
#
# Yield surface parameters
#
YIELD STRESS = <real> σy
R11 = <real> R11 (1.0)
R22 = <real> R22 (1.0)
R33 = <real> R33 (1.0)
R12 = <real> R12 (1.0)
R23 = <real> R23 (1.0)
R31 = <real> R31 (1.0)
#
# Hardening model
#
HARDENING MODEL = LINEAR | POWER_LAW | USER_DEFINED |
CUBIC_HERMITE_SPLINE
#
# Linear hardening
#
HARDENING MODULUS = <real>hardening_modulus
#
# Power law hardening
#
HARDENING CONSTANT = <real>hardening_constant
HARDENING EXPONENT = <real>hardening_exponent(0.5)
LUDERS STRAIN = <real>luders_strain(0.0)
#
# User defined hardening
#
```

```

HARDENING FUNCTION = <string>hardening_function_name
#
# Spline based hardening curve
#
CUBIC SPLINE TYPE = <string>
CARDINAL PARAMETER = <real> val
KNOT EQPS          = <real_list> vals
KNOT STRESS         = <real_list> vals
END [PARAMETERS FOR MODEL HILL_PLASTICITY]

```

Output variables available for this model are listed in Table 5.16.

Table 5.16: State Variables for HILL PLASTICITY Model

Name	Description
EQPS	equivalent plastic strain, $\bar{\epsilon}^p$

## References

- [1] W. M. Scherzinger. A return mapping algorithm for isotropic and anisotropic plasticity models using a line search method. *Computer Methods in Applied Mechanics and Engineering*, 317: 526–553, 2017.
- [2] R. Hill. *The Mathematical Theory of Plasticity*. Clarendon Press, Oxford, 1950.
- [3] F. Barlat, H. Aretz, J. W. Yoon, J. C. Brem, and R. E. Dick. Linear transformation-based anisotropic yield functions. *International Journal of Plasticity*, 21:1009–1039, 2005.

## 5.14 Barlat Plasticity Model

### 5.14.1 Theory

The Barlat plasticity model is a hypoelastic, rate-independent plasticity model. The underlying yield surface is both anisotropic and non-quadratic [1]. With respect to the former, linear transformations of the deviatoric stress are used to capture texture and anisotropy effects. The rate form of this model assumes an additive split of the rate of deformation into an elastic and plastic part

$$D_{ij} = D_{ij}^e + D_{ij}^p. \quad (5.14.1)$$

The stress rate only depends on the elastic rate of deformation

$$\dot{\sigma}_{ij} = \mathbb{C}_{ijkl} D_{kl}^e \quad (5.14.2)$$

where  $\mathbb{C}_{ijkl}$  are the components of the fourth-order, isotropic elasticity tensor.

To describe anisotropy in the yield-behavior, two linear transformation tensors,  $C'_{ijkl}$  and  $C''_{ijkl}$ , are introduced such that,

$$s'_{ij} = C'_{ijkl} s_{kl} \quad ; \quad s''_{ij} = C''_{ijkl} s_{kl}, \quad (5.14.3)$$

with  $s_{ij}$  being the deviatoric stress tensor ( $s_{ij} = \sigma_{ij} - 1/3\sigma_{kk}\delta_{ij}$ ) and  $s'_{ij}$  and  $s''_{ij}$  being transformed stresses. Two transformations are used to capture both the anisotropy of the yield surface and flow rule. In Voigt notation the two transformation tensors are given as,

$$[C'] = \begin{bmatrix} 0 & -c'_{12} & -c'_{13} & 0 & 0 & 0 \\ -c'_{21} & 0 & -c'_{23} & 0 & 0 & 0 \\ -c'_{31} & -c'_{32} & 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & c'_{44} & 0 & 0 \\ 0 & 0 & 0 & 0 & c'_{55} & 0 \\ 0 & 0 & 0 & 0 & 0 & c'_{66} \end{bmatrix} \quad (5.14.4)$$

$$[C''] = \begin{bmatrix} 0 & -c''_{12} & -c''_{13} & 0 & 0 & 0 \\ -c''_{21} & 0 & -c''_{23} & 0 & 0 & 0 \\ -c''_{31} & -c''_{32} & 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & c''_{44} & 0 & 0 \\ 0 & 0 & 0 & 0 & c''_{55} & 0 \\ 0 & 0 & 0 & 0 & 0 & c''_{66} \end{bmatrix}. \quad (5.14.5)$$

Alternatively, the transformed stresses may be written in terms of the Cauchy stress tensor as,

$$s'_{ij} = L'_{ijkl} \sigma_{kl} \quad ; \quad s''_{ij} = L''_{ijkl} \sigma_{kl}, \quad (5.14.6)$$

where  $L'_{ijkl} = C'_{ijmn} II_{mnkl}$  and  $L''_{ijkl} = C''_{ijmn} II_{mnkl}$ . In this case,  $II_{ijkl}$  is the symmetric deviatoric projection tensor and takes the form of,

$$II_{ijkl} = \frac{1}{2} (\delta_{ik}\delta_{jl} + \delta_{il}\delta_{jk}) - \frac{1}{3}\delta_{ij}\delta_{kl}. \quad (5.14.7)$$

In reduced form,

$$[L'] = \frac{1}{3} \begin{bmatrix} c'_{12} + c'_{13} & -2c'_{12} + c'_{13} & c'_{12} - 2c'_{13} & 0 & 0 & 0 \\ -2c'_{21} + c'_{23} & c'_{21} + c'_{23} & c'_{21} - 2c'_{23} & 0 & 0 & 0 \\ -2c'_{31} + c'_{32} & c'_{31} - 2c'_{32} & c'_{31} + c'_{32} & 0 & 0 & 0 \\ 0 & 0 & 0 & 3c'_{44} & 0 & 0 \\ 0 & 0 & 0 & 0 & 3c'_{55} & 0 \\ 0 & 0 & 0 & 0 & 0 & 3c'_{66} \end{bmatrix}, \quad (5.14.8)$$

and an analogous expression may be written for  $L''_{ijkl}$ .

The yield surface,  $f$ , is given as,

$$f(\sigma_{ij}, \bar{\varepsilon}^p) = \phi(\sigma_{ij}) - \bar{\sigma}(\bar{\varepsilon}^p) = 0, \quad (5.14.9)$$

in which  $\phi(\sigma_{ij})$  is the effective stress and  $\bar{\sigma}(\bar{\varepsilon}^p)$  is the (isotropic) hardening function. The effective stress is written in terms of the principal transformed stresses ( $s'_i$  and  $s''_i$ , respectively) and the yield surface exponent,  $a$ , as,

$$\begin{aligned} \phi(\sigma_{ij}) = & \left\{ \frac{1}{4} \left[ |s'_1 - s''_1|^a + |s'_1 - s''_2|^a + |s'_1 - s''_3|^a \right. \right. \\ & + |s'_2 - s''_1|^a + |s'_2 - s''_2|^a + |s'_2 - s''_3|^a \\ & \left. \left. + |s'_3 - s''_1|^a + |s'_3 - s''_2|^a + |s'_3 - s''_3|^a \right] \right\}^{1/a}. \end{aligned} \quad (5.14.10)$$

An example of such a yield surface is given in Figure 5.46 along with examples of previously presented (von Mises, Hosford, Hill) surfaces. The presented Barlat surface corresponds to that of 2090-T3 aluminum first characterized by Barlat *et al.* [1]. In Figure 5.46, both the anisotropy and non-quadratic nature of the yield surface is evident leading to differing strengths and flow directions at various stresses from any of the other models.

The orientation of the principal material axes with respect to the global Cartesian axes is defined in the same manner as the orthotropic elastic model. First, a reference coordinate system is defined. For the Barlat plasticity model it can be a rectangular or a cylindrical coordinate system. *The spherical coordinate system has not been implemented yet for this model.* After the coordinate system has been defined the material coordinate system can be defined through two successive rotations about axes in the specified rectangular or cylindrical coordinate system. In the case of

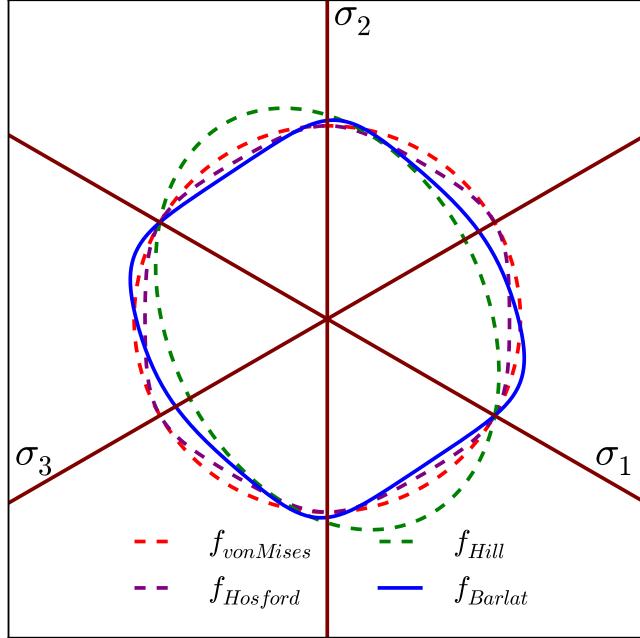


Figure 5.46: Example Barlat yield surface,  $f_{Barlat} (\sigma_{ij}, \bar{\varepsilon}^p = 0)$ , of 2090-T3 aluminum presented in the deviatoric  $\pi$ -plane. Comparison von Mises ( $J_2$ ), Hosford (with  $a = 8$ ), and Hill surfaces are also presented for comparison.

the cylindrical coordinate system (and eventually the spherical coordinate system) this allows the principal material axes to vary point-wise in a given element block.

The plastic rate of deformation, as with the isotropic models, assumes associated flow

$$D_{ij}^p = \dot{\gamma} \frac{\partial \phi}{\partial \sigma_{ij}}, \quad (5.14.11)$$

in which  $\dot{\gamma}$  is the consistency multiplier. Given the form for  $\phi$ ,  $\dot{\gamma}$  is equal to the rate of the equivalent plastic strain,  $\dot{\varepsilon}^p$ . As the yield surface is cast in transformed stress space, determining the flow direction in cartesian space may be done via the chain rule (details may be found in [2]) leading to an expression of the form,

$$\frac{\partial \phi}{\partial \sigma_{ij}} = \sum_{k=1}^3 \left( \frac{\partial \phi}{\partial s'_k} \frac{\partial s'_k}{\partial s'_{mn}} L'_{mni,j} + \frac{\partial \phi}{\partial s''_k} \frac{\partial s''_k}{\partial s''_{mn}} L''_{mni,j} \right). \quad (5.14.12)$$

The hardening behavior is given by  $\bar{\sigma}(\bar{\varepsilon}^p)$ . This hardening function can be a linear hardening function, a power law hardening function, or a user defined hardening function.

For more information about the Barlat plasticity model, consult [1, 2].

### 5.14.2 Implementation

Like the Hill and Hosford models, the Barlat plasticity model uses a elastic predictor-inelastic corrector closest point projection (CPP) return mapping algorithm (RMA) for integration. Details of the numerical scheme and forms of the necessary derivatives may be found in the work of Scherzinger [2]. For this approach, given a rate of deformation,  $d_{ij}$ , and a time step,  $\Delta t$ , a trial stress state is calculated based on an elastic response

$$T_{ij}^{tr} = T_{ij}^n + \Delta t \mathbb{C}_{ijkl} d_{kl}. \quad (5.14.13)$$

If the trial stress state lies outside the yield surface, i.e. if  $\phi(T_{ij}^{tr}) > \bar{\sigma}$ , then the model uses an implicit, backward Euler algorithm to return the stress to the yield surface. To perform this task, two nonlinear equations need to be solved. The first is associated with the satisfaction of the flow-rule and ensures that the plastic strain increment is in the correct direction. Such a relation leads to a residual of the form,

$$R_{ij} = \Delta d_{ij}^p - \Delta \gamma \frac{\partial \phi}{\partial T_{ij}} = 0. \quad (5.14.14)$$

while the second equation to be addressed enforces that the converged stress state is on the yield surface and is written as,

$$f = \phi(T_{ij}) - \bar{\sigma}(\bar{\varepsilon}^p) = 0. \quad (5.14.15)$$

The primary method for solving these equations is a Newton-Raphson algorithm. With  $\Delta \gamma$  (which is equal to  $\Delta \bar{\varepsilon}^p$ ) and  $T_{ij}$  being the solution variables, an iterative algorithm is utilized such that

$$\begin{aligned} \Delta \gamma^{(k+1)} &= \Delta \gamma^{(k)} + \Delta(\Delta \gamma) \\ T_{ij}^{(k+1)} &= T_{ij}^{(k)} + \Delta T_{ij}, \end{aligned} \quad (5.14.16)$$

with  $\Delta \gamma^{(0)} = 0$  and  $T_{ij}^{(0)} = T_{ij}^{tr}$ . The plastic rate of deformation correction is then simply

$$\Delta d_{ij}^p = \mathbb{C}_{ijkl}^{-1} (T_{kl}^{tr} - T_{kl}). \quad (5.14.17)$$

After linearizing the residual and consistency equations (Equations (5.14.14) and (5.14.15)), the set of nonlinear equations may be solved for the correction increments leading to expressions of the form,

$$\Delta(\Delta\gamma) = \frac{f^{(k)} - R_{ij}^{(k)} \mathcal{L}_{ijkl}^{(k)} \frac{\partial\phi^{(k)}}{\partial T_{kl}}}{\frac{\partial\phi^{(k)}}{\partial T_{ij}} \mathcal{L}_{ijkl}^{(k)} \frac{\partial\phi^{(k)}}{\partial T_{kl}} + H'^{(k)}} \quad (5.14.18)$$

$$\Delta T_{ij} = -\mathcal{L}_{ijkl}^{(k)} \left( R_{kl}^{(k)} + \Delta(\Delta\gamma) \frac{\partial\phi^{(k)}}{\partial T_{kl}} \right),$$

and  $\mathcal{L}_{ijkl}^{(k)}$  is the Hessian of the RMA problem (*not* the yield surface) and is given as,

$$\mathcal{L}_{ijkl}^{(k)} = \left( \mathbb{S}_{ijkl} + \Delta\gamma^{(k)} \frac{\partial^2\phi^{(k)}}{\partial\sigma_{ij}\partial\sigma_{kl}} \right)^{-1}, \quad (5.14.19)$$

and  $\mathbb{S}_{ijkl} = \mathbb{C}_{ijkl}^{-1}$ .

Unfortunately, a straightforward Newton-Raphson algorithm does not always converge, so the RMA is augmented with a line search algorithm producing modified incrementation relations with

$$\Delta\gamma^{(k+1)} = \Delta\gamma^{(k)} + \alpha\Delta(\Delta\gamma), \quad (5.14.20)$$

$$T_{ij}^{(k+1)} = T_{ij}^{(k)} + \alpha\Delta T_{ij},$$

where  $\alpha \in (0, 1]$  is the line search parameter which is determined from certain convergence considerations. If  $\alpha = 1$  then the Newton-Raphson algorithm is recovered. The line search algorithm greatly increases the reliability of the return mapping algorithm.

### 5.14.3 Verification

To verify the Barlat plasticity model a similar approach to that used for the Hill plasticity model (Section 5.13.3) is utilized. Specifically, both uniaxial stress and pure shear loadings are considered. To this end, the response of a 2090-T3 aluminum with Voce hardening of the form,

$$\bar{\sigma}(\bar{\varepsilon}^p) = \sigma_y + A \left( 1 - \exp(-b\bar{\varepsilon}^p) \right), \quad (5.14.21)$$

is used. The corresponding elastic, plastic, and anisotropy model parameters are given in Table 5.17.

Finally, the coordinate system used in these calculations is a rectangular coordinate system with the  $e_i^1, e_i^2, e_i^3$  axes aligned with the  $x, y, z$  axes.

$E$	70 GPa	$\nu$	0.25
$a$	8	$\sigma_y$	200 MPa
$A$	200 MPa	$b$	20
$c'_{12}$	-0.069888	$c''_{12}$	0.981171
$c'_{13}$	0.936408	$c''_{13}$	0.476741
$c'_{21}$	0.079143	$c''_{21}$	0.575316
$c'_{23}$	1.003060	$c''_{23}$	0.866827
$c'_{31}$	0.524741	$c''_{31}$	1.145010
$c'_{32}$	1.363180	$c''_{32}$	-0.079294
$c'_{44}$	1.023770	$c''_{44}$	1.051660
$c'_{55}$	1.069060	$c''_{55}$	1.147100
$c'_{66}$	0.954322	$c''_{66}$	1.404620

Table 5.17: The material and model parameters for the Barlat plasticity model used for verification testing. The anisotropy coefficients correspond to 2090-T3 aluminum and are from [1].

### 5.14.3.1 Uniaxial Stress

First, the response of the material subject to a uniaxial stress is considered. As such, the Cauchy stress tensor takes the form  $\sigma_{ij} = \sigma\delta_{i1}\delta_{j1}$ . In the transformed stress space, this uniaxial tensor becomes,

$$s'_{ij} = \frac{1}{3}\sigma \begin{bmatrix} c'_{12} + c'_{13} & 0 & 0 \\ 0 & -2c'_{21} + c'_{23} & 0 \\ 0 & 0 & -2c'_{31} + c'_{32} \end{bmatrix} \quad (5.14.22)$$

$$s''_{ij} = \frac{1}{3}\sigma \begin{bmatrix} c''_{12} + c''_{13} & 0 & 0 \\ 0 & -2c''_{21} + c''_{23} & 0 \\ 0 & 0 & -2c''_{31} + c''_{32} \end{bmatrix}.$$

It is noted from (5.14.22) the that two transformed stress tensors are purely diagonal and therefore in a principal state. The actual ordering of the components into the corresponding principal stresses depends on the anisotropy coefficients. By inspection of Table 5.17 it is clear in this instance that tensors are already ordered ( $s'_1 = s'_{11}$ ,  $s''_1 = s''_{11}$  etc.). With this observation, the effective stress may be reduced to,

$$\phi(\sigma_{ij}) = \omega|\sigma|, \quad (5.14.23)$$

where  $\omega$  is a constant dependent on model parameters and is written as,

$$\omega = \left\{ \frac{1}{4} \left[ |c'_{12} + c'_{13} - c''_{12} - c''_{13}|^a + |c'_{12} + c'_{13} + 2c''_{21} - c''_{23}|^a + |c'_{12} + c'_{13} + 2c''_{31} - c''_{32}|^a + |c'_{23} - 2c'_{21} - c''_{12} - c''_{13}|^a + |c'_{23} - 2c'_{21} + 2c''_{21} - c''_{23}|^a + |c'_{23} - 2c'_{21} + 2c''_{31} - c''_{32}|^a + |c'_{32} - 2c'_{31} - c''_{12} - c''_{13}|^a + |c'_{32} - 2c'_{31} + 2c''_{21} - c''_{23}|^a + |c'_{32} - 2c'_{31} + 2c''_{31} - c''_{32}|^a \right] \right\}^{1/a}. \quad (5.14.24)$$

## Axial Stresses

To determine the axial stress, it is first noted that during plastic deformation,

$$\phi(\sigma_{ij}) = \omega\sigma = \bar{\sigma}(\bar{\varepsilon}^p), \quad (5.14.25)$$

where the fact that a tensile loading will be investigated ( $\sigma > 0$ ) is leveraged. The stress is then simply,

$$\sigma = \frac{\bar{\sigma}(\bar{\varepsilon}^p)}{\omega}. \quad (5.14.26)$$

This shows that during plastic deformation the stress state can be calculated from the hardening law and anisotropy parameters.

To evaluate the axial stress, a relationship between the equivalent plastic strain and axial strain is needed. By noting the uniaxial stress state and equating the rate of plastic work, it is evident that,

$$\bar{\sigma}\dot{\varepsilon}^p = \sigma(\dot{\varepsilon} - \dot{\varepsilon}^e) \rightarrow \dot{\varepsilon}^p = \frac{1}{\omega}(\dot{\varepsilon} - \dot{\varepsilon}^e) \quad (5.14.27)$$

which, when integrated, gives an implicit equation for the equivalent plastic strain that is written as

$$\bar{\varepsilon}^p = \frac{1}{\omega} \left( \varepsilon - \frac{\bar{\sigma}(\bar{\varepsilon}^p)}{\omega E} \right). \quad (5.14.28)$$

The equivalent plastic strain can then be used in (5.14.26) to find the axial stress,  $\sigma$ . Corresponding stress-strain results determined analytically in this fashion and numerically via Adagio are presented below in Figure 5.47.

## Lateral Strains

To determine the plastic strain, the derivatives of the yield surface with respect to the Cauchy stress ( $\partial\phi/\partial\sigma_{ij}$ ) are needed. From (5.14.12) it can be seen that these relations are quite complex and the reader is referred to [2] for a detailed discussion of how to rigorously evaluate these derivatives

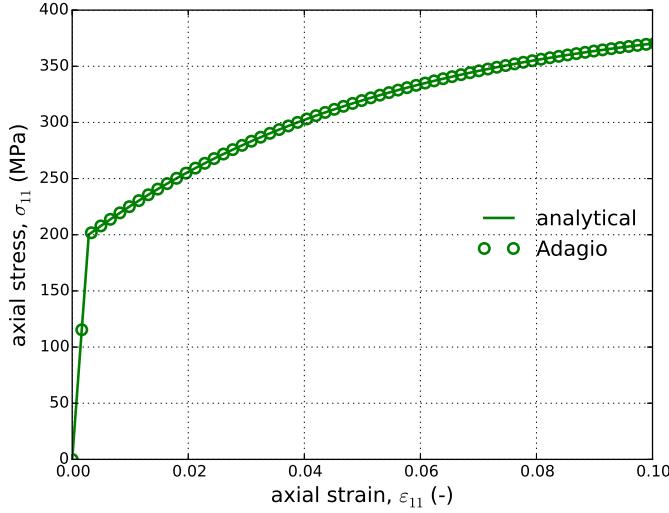


Figure 5.47: Axial stress-strain response determined analytically and numerically for 2090-T3 aluminum using the Barlat plasticity model with Voce hardening.

under arbitrary conditions. In this effort, the fact that the principal directions of the transformed stresses ( $\hat{e}_i^{k''}$  and  $\hat{e}_i^{k''''}$ ) are aligned with the global coordinate system ( $\hat{e}_i^{1'} = e_i^1$  etc.) simplifies the problem sufficiently to allow for an analytical treatments. In this case,

$$\frac{\partial s'_k}{\partial s'_{ij}} = e_i^k e_j^k. \quad (5.14.29)$$

With this observation, the lateral flow directions may be written as,

$$\begin{aligned} \frac{\partial \phi}{\partial \sigma_{22}} = & \frac{1}{3} \left[ \frac{\partial \phi}{\partial s'_1} (c'_{13} - 2c'_{12}) + \frac{\partial \phi}{\partial s'_2} (c'_{21} + c'_{23}) + \frac{\partial \phi}{\partial s'_3} (c'_{31} - 2c'_{32}) \right. \\ & \left. + \frac{\partial \phi}{\partial s''_1} (c''_{13} - 2c''_{12}) + \frac{\partial \phi}{\partial s''_2} (c''_{21} + c''_{23}) + \frac{\partial \phi}{\partial s''_3} (c''_{31} - 2c''_{32}) \right] \end{aligned} \quad (5.14.30)$$

$$\begin{aligned} \frac{\partial \phi}{\partial \sigma_{33}} = & \frac{1}{3} \left[ \frac{\partial \phi}{\partial s'_1} (c'_{12} - 2c'_{13}) + \frac{\partial \phi}{\partial s'_2} (c'_{21} - 2c'_{23}) + \frac{\partial \phi}{\partial s'_3} (c'_{31} + c'_{32}) \right. \\ & \left. + \frac{\partial \phi}{\partial s''_1} (c''_{12} - 2c''_{13}) + \frac{\partial \phi}{\partial s''_2} (c''_{21} - 2c''_{23}) + \frac{\partial \phi}{\partial s''_3} (c''_{31} + c''_{32}) \right], \end{aligned} \quad (5.14.31)$$

in which the various  $\partial\phi/\partial s'_i$  derivates are functions of the anisotropy coefficients and explicit forms may be found in [2].

The total strain is written simply as,

$$\varepsilon_{ij} = \varepsilon_{ij}^e + \varepsilon_{ij}^p, \quad (5.14.32)$$

with the elastic strain being

$$\varepsilon_{22}^e = \varepsilon_{33}^e = -\nu \frac{\sigma}{E}, \quad (5.14.33)$$

and the plastic strains found via the flow rules as,

$$\varepsilon_{22}^p = \bar{\varepsilon}^p \frac{\partial \phi}{\partial \sigma_{22}} \quad ; \quad \varepsilon_{33}^p = \bar{\varepsilon}^p \frac{\partial \phi}{\partial \sigma_{33}}. \quad (5.14.34)$$

The flow directions were given previously in (5.14.30) and (5.14.31) while the equivalent plastic strain may be found via (5.14.28). Figure 5.48 presents the lateral strains as a function of the axial. Clear agreement may be observed both in Figure 5.47 and 5.48 verifying the model. Additionally, the effect of the anisotropy is plainly evident in Figure 5.48 in which the two lateral strains differ by approximately a factor of four.

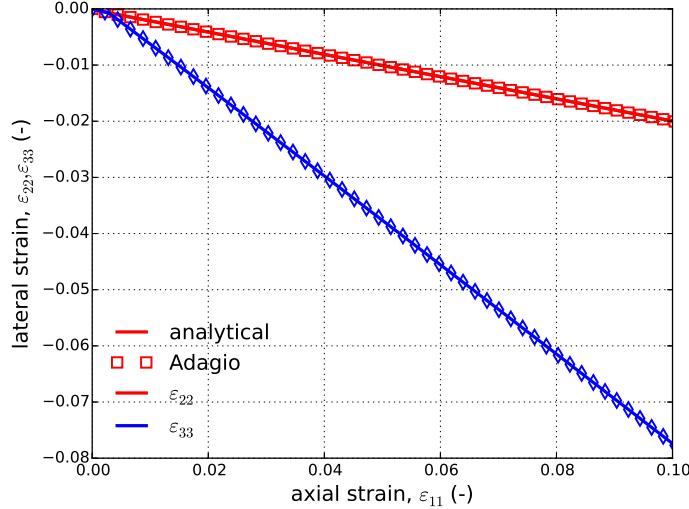


Figure 5.48: Lateral strain as a function of axial strain of 2090-T3 aluminum with Voce hardening as determined by the Barlat plasticity model both analytically and numerically.

To test the other directions and further examine the anisotropic character of the model, the coordinate system rotation input options are used to align the “2” and “3” directions of the material with the applied load. Analytical expressions may be determined by similarly rotating the coefficients in the previous expressions, although these are not repeated here for brevity. The corresponding results for the loading aligned with the “2” and “3” directions are presented in Figures 5.49 and 5.50, respectively. All of the results are given with respect to the original coordinate system to

avoid confusion. Clear agreement between analytical and simulation results is noted in both cases further verifying the capabilities of the model. Importantly, by comparing the various stress-strain and lateral strain curves, the influence of the material and model anisotropy on the responses may readily be observed.

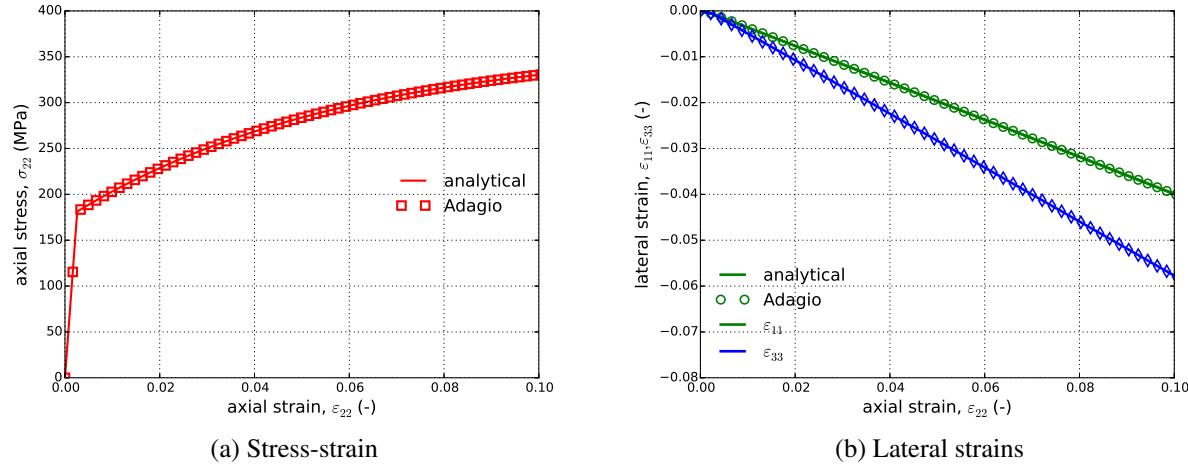


Figure 5.49: Analytical and numerical (a) stress-strain and (b) lateral strain responses of 2090-T3 aluminum with Voce hardening and the Barlat plasticity model. The material is rotated such that the loading is aligned with the “2” direction.

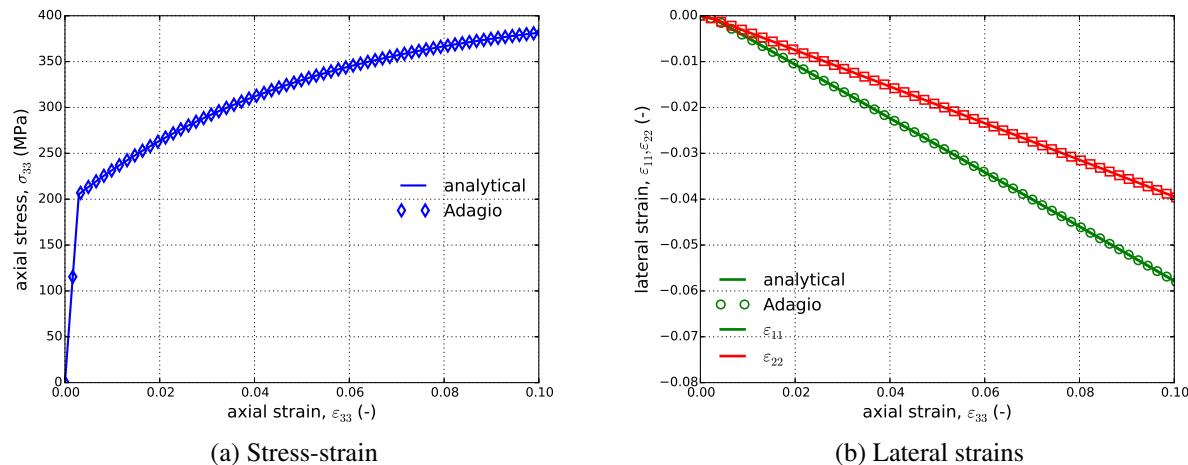


Figure 5.50: Analytical and numerical (a) stress-strain and (b) lateral strain responses of 2090-T3 aluminum with Voce hardening and the Barlat plasticity model. The material is rotated such that the loading is aligned with the “3” direction.

### 5.14.3.2 Pure Shear

In this section, the pure shear response of the Barlat model is interrogated to assess its performance under such conditions. Before proceeding, it is important to recall the ordering of the shear stresses in Sierra/SM. Specifically, the  $\sigma_{12}$ ,  $\sigma_{23}$ , and  $\sigma_{31}$  stresses are associated with the 44, 55, and 66, respectively, anisotropy coefficients.

To explore the shear performance of the Barlat plasticity model, a stress tensor of the form  $\sigma_{ij} = \tau (\delta_{i1}\delta_{j2} + \delta_{i2}\delta_{j1})$  is considered. The ordered principal stresses of the transformed stress tensors are,

$$s'_i = \begin{bmatrix} c'_{44}\tau \\ 0 \\ -c'_{44}\tau \end{bmatrix} \quad ; \quad s''_i = \begin{bmatrix} c''_{44}\tau \\ 0 \\ -c''_{44}\tau \end{bmatrix}, \quad (5.14.35)$$

thereby simplifying the effective stress to,

$$\phi(\sigma_{ij}) = \tau\zeta, \quad (5.14.36)$$

with

$$\zeta = \left\{ \frac{1}{2} \left[ |c'_{44} - c''_{44}|^a + |c'_{44} + c''_{44}|^a + |c'_{44}|^a + |c''_{44}|^a \right] \right\}^{1/a}. \quad (5.14.37)$$

During plastic flow,

$$\phi = \tau\zeta = \bar{\sigma}(\bar{\varepsilon}^p), \quad (5.14.38)$$

producing an expression for the stress in terms of equivalent plastic strain as,

$$\tau = \frac{1}{\zeta} \bar{\sigma}(\bar{\varepsilon}^p). \quad (5.14.39)$$

A relationship between the equivalent plastic and axial strains may be determined by first considering the equivalency of plastic work,

$$\bar{\sigma} \dot{\bar{\varepsilon}}^p = 2\tau (\dot{\varepsilon}_{12} - \dot{\varepsilon}_{12}^e) \quad \rightarrow \quad \dot{\bar{\varepsilon}}^p = \frac{2}{\zeta} (\dot{\varepsilon}_{12} - \dot{\varepsilon}^e). \quad (5.14.40)$$

Integrating leads to an implicit expression of the form,

$$\bar{\varepsilon}^p = \frac{2}{\zeta} \left( \varepsilon_{12} - \frac{\bar{\sigma}(\bar{\varepsilon}^p)}{\zeta G} \right). \quad (5.14.41)$$

The preceding relations may be used to analytically determine the shear stress-strain response. Corresponding results, along with those produced by Adagio, are presented in Figure 5.51. Shear responses are also presented for stress tensors of the form  $\sigma_{ij} = \tau (\delta_{2i}\delta_{3j} + \delta_{3i}\delta_{2j})$  ("23") and  $\sigma_{ij} = \tau (\delta_{1i}\delta_{3j} + \delta_{3i}\delta_{1j})$  ("31"). Analytically, these results were determined by substituting the relevant anisotropy coefficients in (5.14.35)-(5.14.41). For the results from Adagio, the coordinate system input commands were used to rotate the material coordinate system accordingly.

In all the cases presented in Figure 5.51 excellent agreement is noted. This not only verifies the performance of the current model under pure shear loadings but also demonstrates the impact of the anisotropy and exercises the coordinate system rotation capabilities.

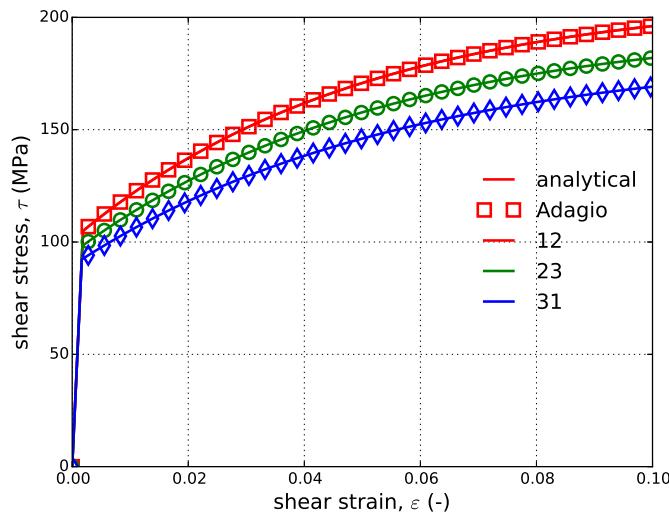


Figure 5.51: Shear stress-strain results for 2090-T3 aluminum determined analytically and numerically by the Barlat plasticity model with Voce Hardening

#### 5.14.4 User Guide

```
BEGIN PARAMETERS FOR MODEL BARLAT_PLASTICITY
#
# Elastic constants
#
YOUNGS MODULUS = <real> E
POISSONS RATIO = <real> ν
SHEAR MODULUS = <real> G
BULK MODULUS = <real> K
LAMBDA = <real> λ
TWO MU = <real> 2μ
#
# Material coordinates system definition
#
COORDINATE SYSTEM = <string> coordinate_system_name
DIRECTION FOR ROTATION = <real> 1|2|3
ALPHA = <real> α1 (degrees)
SECOND DIRECTION FOR ROTATION = <real> 1|2|3
SECOND ALPHA = <real> α2 (degrees)
#
# Yield surface parameters
#
YIELD STRESS = <real> σy
A = <real> a (4.0)
CP12 = <real> c12' (1.0)
CP13 = <real> c13' (1.0)
CP21 = <real> c21' (1.0)
CP23 = <real> c23' (1.0)
CP31 = <real> c31' (1.0)
CP32 = <real> c32' (1.0)
CP44 = <real> c44' (1.0)
CP55 = <real> c55' (1.0)
CP66 = <real> c66' (1.0)
CPP12 = <real> c12'' (1.0)
CPP13 = <real> c13'' (1.0)
CPP21 = <real> c21'' (1.0)
CPP23 = <real> c23'' (1.0)
CPP31 = <real> c21'' (1.0)
CPP32 = <real> c32'' (1.0)
CPP44 = <real> c44'' (1.0)
CPP55 = <real> c55'' (1.0)
CPP66 = <real> c66'' (1.0)
#
# Hardening model
#
HARDENING MODEL = LINEAR | POWER_LAW | USER_DEFINED |
CUBIC_HERMITE_SPLINE
```

```

#
# Linear hardening
#
HARDENING MODULUS = <real>hardening_modulus
#
# Power law hardening
#
HARDENING CONSTANT = <real>hardening_constant
HARDENING EXPONENT = <real>hardening_exponent (0.5)
LUDERS STRAIN      = <real>luders_strain(0.0)
#
# User defined hardening
#
HARDENING FUNCTION = <string>hardening_function_name
#
# Spline based hardening curve
#
CUBIC SPLINE TYPE = <string>
CARDINAL PARAMETER = <real> val
KNOT EQPS          = <real_list> vals
KNOT STRESS         = <real_list> vals
END [PARAMETERS FOR MODEL BARLAT_PLASTICITY]

```

Output variables available for this model are listed in Table 5.18.

Table 5.18: State Variables for BARLAT PLASTICITY Model

Name	Description
EQPS	equivalent plastic strain, $\bar{\epsilon}^p$

## References

- [1] F. Barlat, H. Aretz, J. W. Yoon, J. C. Brem, and R. E. Dick. Linear transformation-based anisotropic yield functions. *International Journal of Plasticity*, 21:1009–1039, 2005.
- [2] W. M. Scherzinger. A return mapping algorithm for isotropic and anisotropic plasticity models using a line search method. *Computer Methods in Applied Mechanics and Engineering*, 317: 526–553, 2017.

## 5.15 Power Law Creep Model

### 5.15.1 Theory

The power law creep model describes the secondary (or steady-state) creep and is useful in capturing the time-dependent behavior of metals, brazes, or solder at high homologous temperatures. It may also be used as a simple model for the time-dependent behavior of geologic materials such as salt. A general discussion of such creep behaviors and the associated modeling may be found in the texts of [1, 2] while the specific implementation used here is discussed in [3].

In the power law creep model, the effective creep strain rate is taken to be explicitly a function of stress and temperature. A power law relation is used for the stress dependence while an Arrhenius like expression is used to capture thermal effects. As such, the effective creep strain rate is written as,

$$\dot{\varepsilon}^c = A \bar{\sigma}_{vM}^m \exp \left( \frac{-Q}{R\theta} \right), \quad (5.15.1)$$

where  $\dot{\varepsilon}^c$  is the effective creep strain rate,  $\bar{\sigma}_{vM}$  is the von Mises stress,  $A$  is the creep constant,  $m$  is the creep exponent,  $Q$  is the activation energy,  $R$  is the universal gas constant (1.987 cal/mole K), and  $\theta$  is the absolute temperature. As a slip based mechanism, it is assumed that the creep strains are deviatoric leading to a 3D evolution law of the form,

$$D_{ij}^c = \dot{\varepsilon}^c \frac{3}{2} \frac{s_{ij}}{\bar{\sigma}_{vM}}, \quad (5.15.2)$$

with  $s_{ij}$  being the deviatoric stress. The corresponding incremental constitutive equation for this model is then given as,

$$\overset{\circ}{\sigma}_{ij} = \mathbb{C}_{ijkl} (D_{kl} - D_{kl}^c). \quad (5.15.3)$$

### 5.15.2 Implementation

Given the time-dependent nature of the model response, an explicit, forward Euler scheme is used to integrate the routine. Prior analysis [3] has shown that this implementation is conditionally stable and found an expression of the form

$$\Delta t_{st} < \frac{4(1+\nu)}{3EA \exp \left( \frac{-Q}{R\theta} \right) m \bar{\sigma}_{vM}^{m-1}} \quad (5.15.4)$$

for the critical time step for stability,  $\Delta t_{st}$ . This time step is calculated using the previously determined material state (state  $n$ ) and compared to the input time step. If necessary, the time step is cut back to meet this critical limit.

To determine the updated material state (state  $n + 1$ ) it is first noted that the creep process is purely deviatoric. Therefore, the stress may be decomposed as,

$$T_{ij}^n = -p^n \delta_{ij} + s_{ij}^n \quad (5.15.5)$$

where  $p$  is the pressure ( $p^n = -(1/3) T_{kk}^n$ ) and  $T_{ij}$  is the un-rotated stress. Given the decoupled nature of the hydrostatic and deviatoric components, the updated pressure may be found as,

$$p^{n+1} = p^n - K d_{kk} \Delta t, \quad (5.15.6)$$

with  $d_{ij}$  being the un-rotated rate of deformation. By similarly decomposing the rate of deformation,

$$d_{ij} = \frac{1}{3} d_{kk} \delta_{ij} + \hat{d}_{ij}, \quad (5.15.7)$$

with  $\hat{d}_{ij}$  being the deviatoric part of the rate of deformation, the updated deviatoric stress is

$$s_{ij}^{n+1} = s_{ij}^n + 2\mu \left( \hat{d}_{ij} - \frac{3}{2} A \exp \left( \frac{-Q}{R\theta^n} \right) (\bar{\sigma}_{vM}^n)^{m-1} s_{ij}^n \right). \quad (5.15.8)$$

The updated stress is then simply,

$$T_{ij}^{n+1} = -p^{n+1} \delta_{ij} + s_{ij}^{n+1}. \quad (5.15.9)$$

### 5.15.3 Verification

The power law creep model is verified through two, time-dependent tests – creep and stress relaxation. It is noted that given the strong time dependency and form of the differential constitutive equations, a closed form analytical expression for the response is not readily available. Semi-analytical approaches in which simple numerical integration is used to solve the underlying differential equation, however, are well suited to such efforts and are used here to verify the numerical responses. The set of material properties and model parameters used for these tests are taken from [4] and are given in Table 5.19 and it is assumed that there are no thermal strains.

$E$	90.68 MPa	$\nu$	0.39
$A$	$5.12 \times 10^{-5}$	$m$	4.51
$Q/R$	19,853.50 K	$\theta$	673.00 K

Table 5.19: The material properties and model parameters for the power law creep model used for the verification testing.

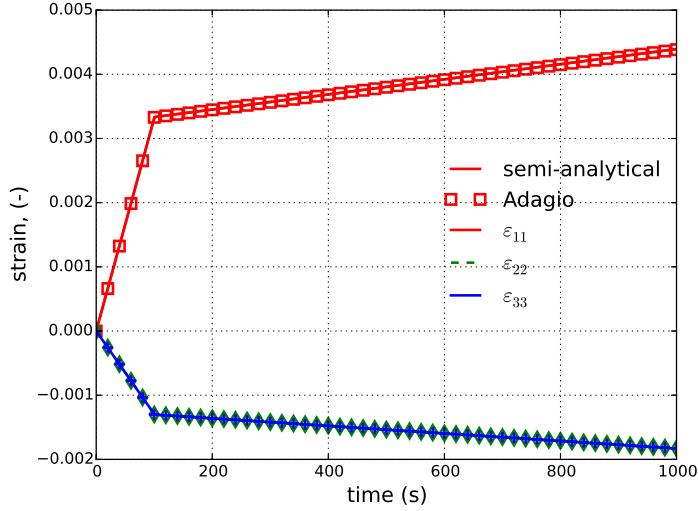


Figure 5.52: Semi-analytical and numerical results of strain evolution during a creep test.

### 5.15.3.1 Creep

To consider the creep response, the model response is determined both numerically and semi-analytically. Through such a response, the stress tensor is  $\sigma_{ij} = \sigma(t) \delta_{i1} \delta_{j1}$  where  $\sigma(t)$  is a prescribed boundary condition. For this investigation,  $\sigma(t)$  ramps linearly from 0 to  $\sigma_{max}$  over the interval  $t = [0, 100 \text{ s}]$  and  $\sigma_{max} = 300 \text{ MPa}$ . The stress is then held constant ( $\dot{\sigma} = 0$ ) for the next 900 s. Inverting the constitutive law (5.15.3) for the strain rate yields,

$$D_{ij} = \mathbb{S}_{ijkl} \dot{\sigma}_{kl} + D_{ij}^c. \quad (5.15.10)$$

Furthermore, given the stress tensor form above, the creep deformation rate is,

$$D_{ij}^c = A \bar{\sigma}_{vM}^m \exp \left( \frac{-Q}{R\theta} \right) \left[ \delta_{i1} \delta_{j1} - \frac{1}{2} (\delta_{i2} \delta_{j2} + \delta_{i3} \delta_{j3}) \right], \quad (5.15.11)$$

and

$$\mathbb{S}_{ijkl} \dot{\sigma}_{kl} = \dot{\sigma} \mathbb{S}_{ij11}. \quad (5.15.12)$$

The total deformation rate may then be determined and easily integrated to find an analytical response for the strain. To this end, both the semi-analytical and numerical strain and stress responses (as a function of time) are presented in Figures 5.52 and 5.53, respectively.

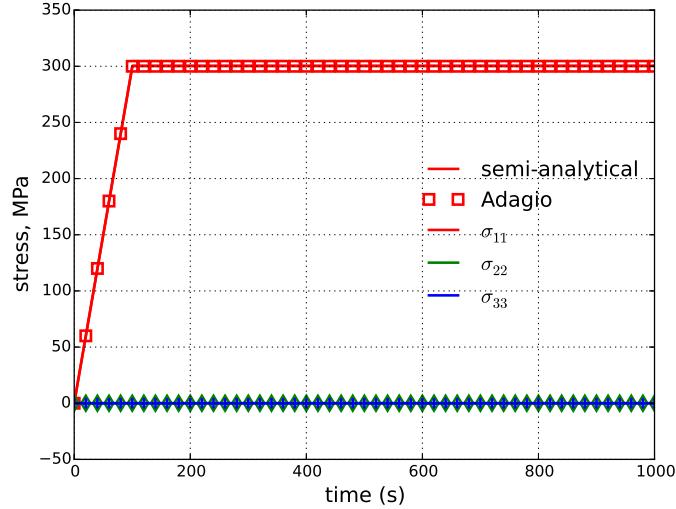


Figure 5.53: Semi-analytical and numerical results of stress evolution during a creep test

### 5.15.3.2 Stress Relaxation

The stress relaxation response of the considered model is evaluated both numerically and semi-analytically. Specifically, a displacement controlled loading of  $u_1 = \lambda(t)$  is investigated. The other displacement degrees of freedom are not constrained so that a uniaxial stress state results –  $\sigma_{ij}(t) = \sigma(t) \delta_{i1} \delta_{j1}$ . The displacement is prescribed such that it scales linearly from  $u_1 = 0$  at  $t = 0$  to  $u_1 = .01$  at  $t = 100$  s and then held fixed for 900 s. Initially the considered element is of unit length.

To determine the material response, it is noted that: (i)  $\sigma_{22} = \sigma_{33} = 0$ ; (ii)  $D_{22}^e = D_{33}^e$  due to isotropy; and (iii) the creep deformation rate takes the form (5.15.11). With these observations, the elastic deformation rate in the direction of loading ( $D_{11}^e$ ) becomes,

$$D_{11}^e = \frac{\lambda(t)}{1 + \lambda(t)} - A \bar{\sigma}_{vM}^m \exp\left(\frac{-Q}{R\theta}\right). \quad (5.15.13)$$

Additionally, from (i) and (ii) above, it may be found that,

$$D_{22}^e = D_{33}^e = -\nu D_{11}^e, \quad (5.15.14)$$

leading to an equation for the stress in the direction of loading of,

$$\dot{\sigma}_{11} = (\mathbb{C}_{1111} - 2\nu\mathbb{C}_{1122}) D_{11}^e. \quad (5.15.15)$$

Additionally, as  $D_{ij} = D_{ij}^e + D_{ij}^c$  the strains may easily integrated by using relations (5.15.11), (5.15.13), and (5.15.14). The resultant numerical and semi-analytical strain and stress responses

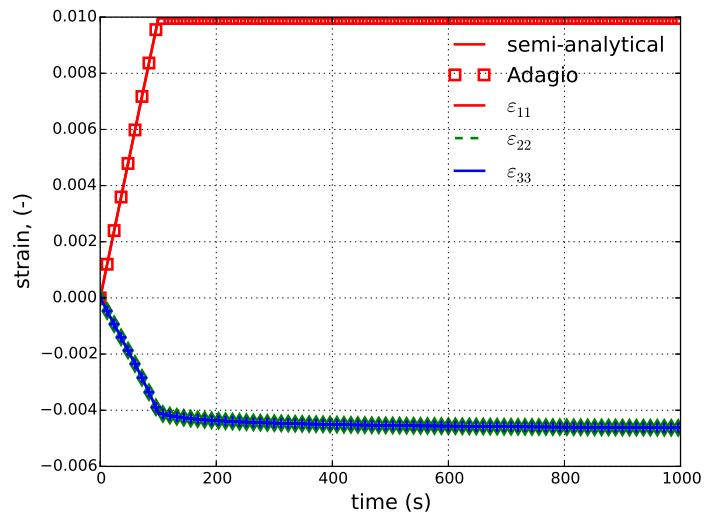


Figure 5.54: Semi-analytical and numerical results of strain evolution during a stress relaxation test.

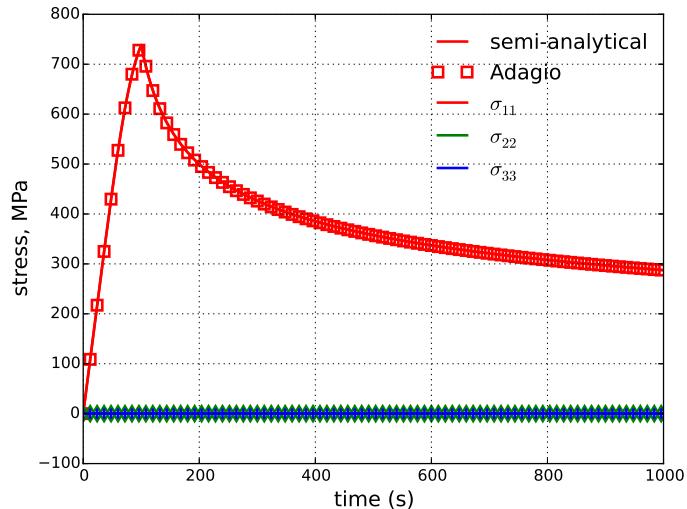


Figure 5.55: Semi-analytical and numerical results of stress evolution during a stress relaxation test

are shown in Figures 5.54 and 5.55, respectively.

#### 5.15.4 User Guide

```
BEGIN PARAMETERS FOR MODEL POWER_LAW_CREEP
#
# Elastic constants
#
YOUNGS MODULUS = <real> E
POISSONS RATIO = <real> ν
SHEAR MODULUS = <real> G
BULK MODULUS = <real> K
LAMBDA = <real> λ
TWO MU = <real> 2μ
#
# Viscoplastic parameters
#
CREEP CONSTANT = <real> A
CREEP EXPONENT = <real> m
THERMAL CONSTANT = <real> Q/R
MAX SUBINCREMENTS = <integer> max_subincrements(100)
END [PARAMETERS FOR MODEL POWER_LAW_CREEP]
```

Output variables available for this model are listed in Table 5.20.

Table 5.20: State Variables for POWER LAW CREEP Model

Name	Description
ECREEP	equivalent creep strain
SEQDOT	equivalent stress rate

## References

- [1] J. Lemaitre and J.-L. Chaboche. *Mechanics of Solid Materials*. Cambridge University Press, 1990.
- [2] F.K.G. Odqvist. *Mathematical theory of creep and creep rupture*. Clarendon Press, Oxford, 1966.
- [3] C.M. Stone. SANTOS – a two-dimensional finite element program for the quasistatic, large deformation, inelastic response of solids. Technical Report SAND90-0543, Sandia National Laboratories, Albuquerque, NM, 1996. [pdf](#).
- [4] W.M. Scherzinger and D.C. Hammerand. Testing of constitutive models in LAME. Technical Report SAND2007-5872, Sandia National Laboratories, Albuquerque, NM, September 2007. [pdf](#).

## 5.16 Viscoplastic Model

### 5.16.1 Theory

The viscoplastic model is a rate dependent plasticity model that is useful for modeling solders and brazes and was developed by Neilsen et al. [1]. This model is formulated in terms of the stress rate for the material. Like many inelastic models, the rate of deformation,  $D_{ij}$ , is additively decomposed into an elastic,  $D_{ij}^e$ , and an inelastic,  $D_{ij}^{\text{in}}$  part such that,

$$D_{ij} = D_{ij}^e + D_{ij}^{\text{in}}. \quad (5.16.1)$$

The elastic rate of deformation is the only part that contributes to the stress rate and it does so through the elastic moduli,  $\mathbb{C}_{ijkl}$ , in a linear fashion leading to the relation,

$$\dot{\sigma}_{ij} = \mathbb{C}_{ijkl} D_{kl}^e, \quad (5.16.2)$$

where  $\mathbb{C}_{ijkl}$  are the components of the fourth-order, isotropic elasticity tensor. The stress rate is arbitrary, as long as it is objective. Two objective stress rates are commonly used: the Jaumann rate and the Green-McInnis rate. For problems with fixed principal axes of deformation, these two rates give the same answers. For problems where the principal axes of deformation rotate during the deformation, the two rates can give different answers. Generally speaking there is no reason to pick one objective rate over another.

The inelastic strain rate is a function of the stress state,  $\sigma_{ij}$ , the temperature,  $\theta$ , and a number of internal state variables including both scalar isotropic,  $D$ , and tensorial kinematic,  $B_{ij}$ , hardening variables. With these dependencies defined, a general form for the evolution of the inelastic deformation may be given by,

$$D_{ij}^{\text{in}} = \frac{3}{2} \gamma (\sigma_{ij}, \theta; D, B_{ij}) n_{ij}, \quad (5.16.3)$$

where  $n_{ij}$  is the direction of inelastic deformation and is defined as,

$$n_{ij} = \frac{1}{\tau} \left( s_{ij} - \frac{2}{3} B_{ij} \right), \quad (5.16.4)$$

and

$$\tau = \sqrt{\frac{3}{2} \left( s_{ij} - \frac{2}{3} B_{ij} \right) \left( s_{ij} - \frac{2}{3} B_{ij} \right)}, \quad (5.16.5)$$

with  $s_{ij}$  being the deviatoric stress tensor. The inelastic strain rate,  $\gamma$ , is defined via a hyperbolic sin law,

$$\gamma = f(\theta) \left[ \sinh \left( \frac{\tau}{\alpha(\theta)D} \right) \right]^{p(\theta)}, \quad (5.16.6)$$

where  $f(\theta) = \exp(g(\theta))$ . The expressions  $g(\theta)$ ,  $\alpha(\theta)$ , and  $p(\theta)$  are model parameters that are functions of temperature.

The evolution laws for the state variables  $D$  and  $B_{ij}$  are,

$$\dot{D} = \frac{A_1}{(D - D_0)^{A_3}} \gamma - A_2 (D - D_0)^2, \quad (5.16.7)$$

and

$$\dot{B}_{ij} = \frac{A_4}{b^{A_6}} D_{ij}^{\text{in}} - A_5 b B_{ij}, \quad (5.16.8)$$

where

$$b = \sqrt{\frac{2}{3} B_{ij} B_{ij}}. \quad (5.16.9)$$

The parameters  $D_0$ ,  $A_1$ ,  $A_2$ ,  $A_3$ ,  $A_4$ ,  $A_5$  and  $A_6$  are model parameters. The parameters  $A_1$ ,  $A_2$ ,  $A_4$  and  $A_5$  are also functions of temperature. The model can be simplified with the appropriate choice of these parameters.

The following material parameters are functions of temperature and have the following form

$$\begin{aligned} G(\theta) &= G_0 h_G(\theta) \quad ; \quad K(\theta) = K_0 h_K(\theta) \\ g(\theta) &= g_0 h_g(\theta) \quad ; \quad p(\theta) = p_0 h_p(\theta) \quad ; \quad \alpha(\theta) = \alpha_0 h_\alpha(\theta) \\ A_1(\theta) &= A_1^0 h_1(\theta) \quad ; \quad A_2(\theta) = A_2^0 h_2(\theta) \\ A_4(\theta) &= A_4^0 h_4(\theta) \quad ; \quad A_5(\theta) = A_5^0 h_5(\theta) \end{aligned} \quad (5.16.10)$$

where the functions  $h_*(\theta)$  are normalized functions of temperature and the values  $(*)_0$  or  $(*)^0$  are the reference values that are input in the command block.

### 5.16.2 Implementation

An explicit, forward Euler scheme is used to integrate the viscoplastic model. First, during initialization, the isotropic hardening variable  $D$  is set to  $1.001D_0$ . This is done to avoid a singularity in (5.16.7). Additionally, the kinematic variable is set to zero ( $B_{ij} = 0$ ).

Like the power law creep model that is integrated in a similar fashion, the chosen numerical scheme is conditionally stable. As detailed in [1], a critical stability time step of,

$$\Delta t_{n+1} \leq \frac{2\alpha(\theta)D}{3Gf(\theta)p(\theta)\sinh^{p(\theta)-1}\left(\frac{\tau}{\alpha(\theta)D}\right)\cosh\left(\frac{\tau}{\alpha(\theta)D}\right)}, \quad (5.16.11)$$

may be determined. For convenience, in the following the dependence of  $f$ ,  $p$ , and  $\alpha$  will be assumed and not explicitly written. Instead,  $f^{n+1}$  will be used to refer to  $f(\theta^{n+1})$ . Two additional limits are also imposed to ensure accurate integration of the state variables. Specifically,

$$\Delta t_{n+1} \leq \sqrt{\frac{2\delta D_0 \Delta t_n}{|\dot{D}_n - \dot{D}_{n-1}|}}, \quad (5.16.12)$$

and

$$\Delta t_{n+1} \leq \sqrt{\frac{2\delta D_0 \Delta t_n}{|\dot{b}_n - \dot{b}_{n-1}|}}, \quad (5.16.13)$$

where  $\delta$  is an allowable error measure (here,  $1.0 \times 10^{-3}$ ) and  $\dot{x}_n$  refers to the time rate of change of variable  $x$  at timestep  $n$ . The current timestep is checked to ensure it meets those criteria or else it is scaled back to ensure accurate integration.

After assessing the acceptability of the timestep, the new material state at time  $t = t_{n+1}$  is determined. If the time step needs to be cut back, multiple subincrements are used. To elaborate, let  $k$  denote a specific subincrement and  $N$  represent the total number of subincrements. Each  $k^{th}$  interval evaluates the numerical routine over a step size  $\delta t^k$  where  $\Delta t = \sum_{k=0}^N \delta t^k$ . In such cases, temperature dependent variables are linearly interpolated between their values at  $t_n$  and  $t_{n+1}$ . For example,

$$G^k = G_n + \frac{\Delta t^k}{\Delta t} (G_{n+1} - G_n), \quad (5.16.14)$$

where  $\Delta t^k$  is the current subincrement time,  $\Delta t^k = \sum_{r=0}^k \delta t^r$ . For simplicity and clarity of presentation, in the discussion below it is assumed that the input timestep is acceptable and only a single increment is needed. If additional subincrements were needed, the below steps would be repeated  $N$  times with time intervals of  $\delta t^k$ .

It is first noted that the un-rotated stress,  $T_{ij}$ , and deformation rate,  $d_{ij}$ , may be decomposed as,

$$T_{ij}^n = -p^n \delta_{ij} + s_{ij}^n, \quad (5.16.15)$$

$$d_{ij}^n = \frac{1}{3} d_{kk}^n \delta_{ij} + \hat{d}_{ij}^n, \quad (5.16.16)$$

with  $p$  being the pressure ( $p = -\frac{1}{3}T_{kk}$ ) and  $\hat{d}_{ij}$  being the rate of deviatoric deformation. As the inelastic deformation flows in a deviatoric direction, the hydrostatic and deviatoric components may be evaluated separately. With this in mind, the pressure may be easily integrated via,

$$p^{n+1} = p^n \frac{K^{n+1}}{K^n} + \frac{1}{2} (K^n + K^{n+1}) d_{kk} \Delta t, \quad (5.16.17)$$

where  $K^n$  is abbreviated notation for  $K(\theta^n)$ . The inelastic deformation rate is then determined as,

$$D_{ij}^{\text{in}} = \frac{3}{2} \gamma (\sigma_{ij}^n, \theta^n; D^n, B_{ij}^n) n_{ij}^n, \quad (5.16.18)$$

by evaluating expressions (5.16.4)-(5.16.6) at  $t = t_n$  and  $\theta = \theta^n$ . The internal state variables may then be similarly evolved via (5.16.7) and (5.16.8). With the inelastic state determined, the updated deviatoric stress may be found via,

$$s_{ij}^{n+1} = \frac{G^{n+1}}{G^n} s_{ij}^n + 2\Delta t G^n (\hat{d}_{ij} - D_{ij}^{\text{in}}), \quad (5.16.19)$$

with the updated stress being,

$$T_{ij}^{n+1} = -p^{n+1} \delta_{ij} + s_{ij}^{n+1}. \quad (5.16.20)$$

### 5.16.3 Verification

The viscoplastic model is verified through two, time-dependent tests – creep and stress relaxation. To simplify the problem for verification purposes, the isothermal response only considering isotropic hardening and recovery is investigated. It is noted, however, that given the stress dependence and evolving internal state variable in the inelastic strain rate, a closed-form analytical solution may not be found. Semi-analytical approaches numerically integrating the differential equations are easily obtainable and used for comparison purposes. The considered test temperature is 450°C (723 K) and material properties and model parameters are those of CusilABA taken from Table 3 of [1] and are reproduced for convenience below in Table 5.21.

#### 5.16.3.1 Creep

The creep response of the viscoplastic model is investigated both numerically and semi-analytically. For such a loading, the stress tensor is  $\sigma_{ij} = \sigma(t) \delta_{i1} \delta_{j1}$  with  $\sigma(t)$  being a prescribed quantity. For this study,  $\sigma(t)$  ramps linearly from 0 to  $\sigma_{\text{max}}$  over the interval  $t = [0, 100 \text{ s}]$  with  $\sigma_{\text{max}} = 300 \text{ MPa}$ . That magnitude is then maintained for the next 900 s.

To analytically determine the model response, the constitutive law (5.16.2) is inverted to yield

$$D_{ij} = \mathbb{S}_{ijkl}\dot{\sigma}_{kl} + D_{ij}^{\text{in}}, \quad (5.16.21)$$

and it is trivial to determine that

$$\mathbb{S}_{ijkl}\dot{\sigma}_{kl} = \dot{\sigma}\mathbb{S}_{11kl}. \quad (5.16.22)$$

For the inelastic response, for the purely isotropic case it is noted that  $\tau = \sigma(t)$  and therefore  $n_{ij} = \frac{2}{3} [\delta_{i1}\delta_{j1} - \frac{1}{2} (\delta_{i2}\delta_{j2} + \delta_{i3}\delta_{j3})]$ . Additionally, the inelastic strain rate reduces to,

$$\gamma = f \left[ \sinh \left( \frac{\sigma(t)}{\alpha D} \right) \right]^p \quad (5.16.23)$$

producing a rate of inelastic deformation of,

$$D_{ij}^{\text{in}} = \gamma \left[ \delta_{i1}\delta_{j1} - \frac{1}{2} (\delta_{i2}\delta_{j2} + \delta_{i3}\delta_{j3}) \right]. \quad (5.16.24)$$

Expressions (5.16.21), (5.16.22), (5.16.24), and (5.16.7) can be easily integrated (via forward Euler or Runga-Kutta) to determine a semi-analytical response. Both the numerical and semi-analytical responses of the strain and stress (including flow stress,  $D$ ) are presented below in Figures 5.56 and 5.57, respectively.

### 5.16.3.2 Stress Relaxation

The model response through a stress relaxation type loading is considered here both numerically and semi-analytically. For this purpose, a displacement controlled loading,  $u_1 = \lambda(t)$ , is employed. The other displacement degrees of freedom are not prescribed to ensure that a uniaxial stress state ( $\sigma_{ij} = \sigma(t) \delta_{i1}\delta_{j1}$ ) develops. Specifically, the displacement is set to scale linearly over 100 s (from  $t = 0$  to  $t = 100$  s) obtaining a maximum of  $u_1 = 0.01$  at  $t = 100$  s. Initially, a unit length is assumed. This displacement is held fixed over the next 900 s to investigate the stress relaxation characteristics of the model.

$E$	77.8 GPa	$\nu$	0.375
$g$	-13.88	$p$	2.589
$A_1$	$3 \times 10^4 \text{ MPa}^{A_3+1}$	$A_2$	$2.07 \times 10^{-5} \frac{1}{\text{MPa s}}$
$A_3$	1.746	$D_0$	50.0 MPa
$A_4$	$0 \text{ MPa}^{A_6+1}$	$A_5$	$0.0 \frac{1}{\text{MPa s}}$
$A_6$	0.0	$\alpha$	1.0

Table 5.21: Material properties and model parameters used for isothermal, isotropic hardening/recovery creep and stress relaxation tests of the viscoplastic model.

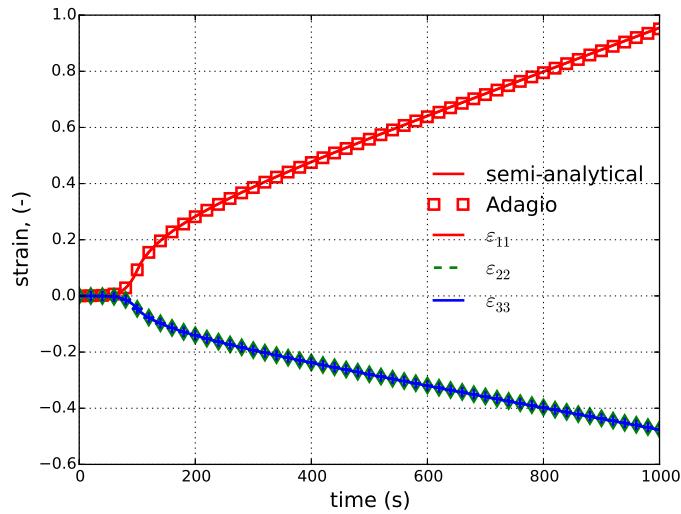


Figure 5.56: Semi-analytical and numerical results of strain evolution during a creep test with the viscoplastic model.

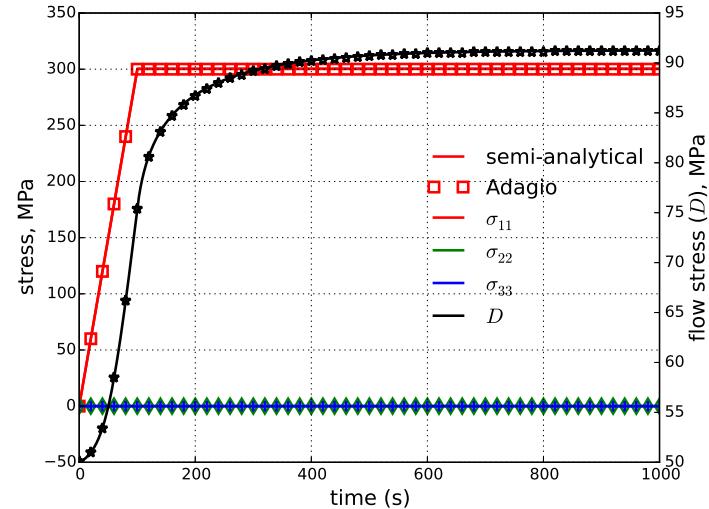


Figure 5.57: Semi-analytical and numerical results of external and internal ( $D$ ) stress evolution during a creep test with the viscoplastic model.

A similar procedure to the power law creep model (Section 5.15.3.2) is employed here. Specifically, by noting the elastic isotropy, uniaxial stress state, and (5.16.24) the elastic deformation rate in the direction of loading ( $D_{11}^e$ ) is found to be,

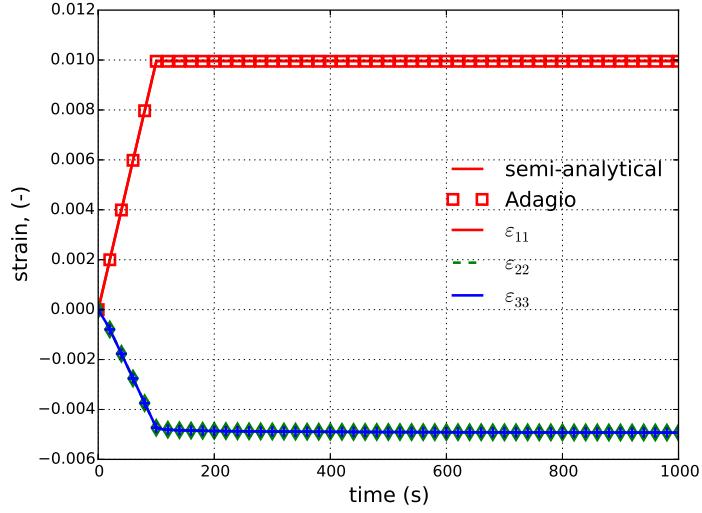


Figure 5.58: Semi-analytical and numerical results of strain evolution during a stress relaxation test with the viscoplastic model.

$$D_{11}^e = \frac{\dot{\lambda}(t)}{1 + \lambda(t)} - \gamma, \quad (5.16.25)$$

where an expression for  $\gamma$  is given in (5.16.23). By noting  $\dot{\sigma}_{ij} = \mathbb{C}_{ijkl}D_{kl}^e$  and  $D_{ij} = D_{ij}^e + D_{ij}^{\text{in}}$ , the material state may easily be found via numerical integration. The result strain and stress evolutions are given in Figures 5.58 and 5.59, respectively.

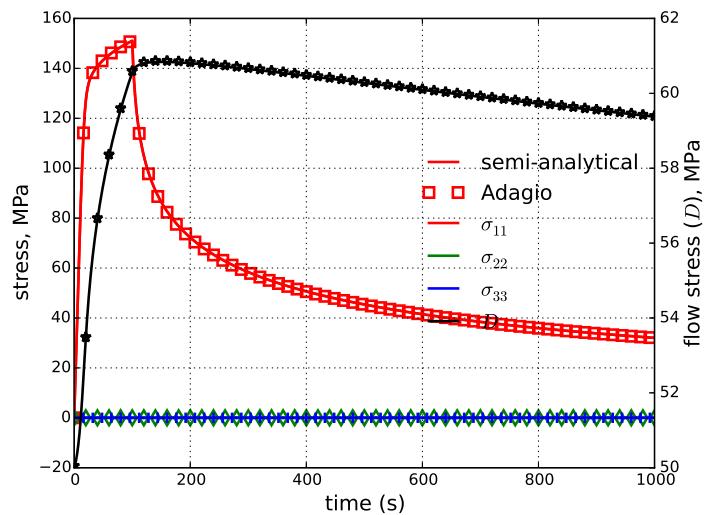


Figure 5.59: Semi-analytical and numerical results of external and internal ( $D$ ) stress evolution during a stress relaxation test with the viscoplastic model.

#### 5.16.4 User Guide

```
BEGIN PARAMETERS FOR MODEL VISCOPLASTIC
#
# Elastic constants
#
YOUNGS MODULUS = <real> E
POISSONS RATIO = <real> ν
SHEAR MODULUS = <real> G
BULK MODULUS = <real> K
LAMBDA = <real> λ
TWO MU = <real> 2μ

FLOW RATE = <real> g₀
SINH EXPONENT = <real> p₀
ALPHA = <real> α₀
ISO HARDENING = <real> A₁⁰
ISO RECOVERY = <real> A₂⁰
ISO EXPONENT = <real> A₃
KIN HARDENING = <real> A₄⁰
KIN RECOVERY = <real> A₅⁰
KIN EXPONENT = <real> A₆
FLOW STRESS = <real> D₀

SHEAR FUNCTION = <string> h_G(θ)
BULK FUNCTION = <string> h_K(θ)
RATE FUNCTION = <string> h_g(θ)
EXPONENT FUNCTION = <string> h_p(θ)
ALPHA FUNCTION = <string> h_α(θ)
IHARD FUNCTION = <string> h₁(θ)
IREC FUNCTION = <string> h₂(θ)
KHARD FUNCTION = <string> h₄(θ)
KREC FUNCTION = <string> h₅(θ)
MAX SUBINCREMENTS = <int> itmax (2000)
END [PARAMETERS FOR MODEL VISCOPLASTIC]
```

Output variables available for this model are listed in Table 5.22.

More information on the model can be found in the report by Neilsen, et. al. [1].

Table 5.22: State Variables for VISCOPLASTIC Model

Name	Description
EQPS	equivalent plastic strain
SVB	kinematic hardening variable, $\mathbf{B}$
SVB_XX	kinematic hardening variable - xx component, $B_{xx}$
SVB_YY	kinematic hardening variable - yy component, $B_{yy}$
SVB_ZZ	kinematic hardening variable - zz component, $B_{zz}$
SVB_XY	kinematic hardening variable - xy component, $B_{xy}$
SVB_YZ	kinematic hardening variable - yz component, $B_{yz}$
SVB_ZX	kinematic hardening variable - zx component, $B_{zx}$
SVD	isotropic hardening variable, $D$
EQDOT	inelastic strain rate, $\gamma$
COUNT	number of sub-increments
SHEAR	shear modulus, $G(\theta)$
BULK	bulk modulus, $K(\theta)$
RATE	$g(\theta)$ (see <a href="#">(5.16.6)</a> )
EXP	$p(\theta)$ (see <a href="#">(5.16.6)</a> )
ALPHA	$\alpha(\theta)$ (see <a href="#">(5.16.6)</a> )
A1	isotropic hardening parameter, $A_1(\theta)$
A2	isotropic recovery parameter, $A_2(\theta)$
A4	kinematic hardening parameter, $A_4(\theta)$
A5	kinematic recovery parameter, $A_5(\theta)$

## References

[1] M.K. Neilsen, S. N. Burchett, C. M. Stone, and J. J. Stephens. A viscoplastic theory for braze alloys. Technical Report SAND96-0984, Sandia National Laboratories, Albuquerque, NM, 1996. [pdf](#).

## 5.17 Hyperfoam Model

### 5.17.1 Theory

The hyperfoam model is a hyperelastic model that can be used for modeling elastomeric foams. It is based on a strain energy with a form given by Störakers [1] which is similar to a form presented by Ogden [2]. The strain energy depends on the principal stretch ratios of the material and is given by

$$W(\lambda_k) = \sum_{i=1}^N \frac{2\mu_i}{\alpha_i^2} \left[ \lambda_1^{\alpha_i} + \lambda_2^{\alpha_i} + \lambda_3^{\alpha_i} - 3 + \frac{1}{\beta_i} (J^{-\alpha_i \beta_i} - 1) \right] \quad (5.17.1)$$

where  $\mu_i$  and  $\alpha_i$  are input parameters and  $J$  is the determinant of the deformation gradient. The value of  $\beta_i$  is calculated from the parameters  $\nu_i$  via

$$\beta_i = \frac{\nu_i}{1 - 2\nu_i}. \quad (5.17.2)$$

The  $\nu_i$  can be thought of as Poisson's ratios, however in the context of the summation in (5.17.1) it is best to consider them as fitting parameters.

The strain energy (5.17.1) is a sum of  $N$  contributions. The principal Kirchoff stresses for the hyperfoam model,  $\tau_k$ , can be calculated as

$$\tau_k = \lambda_k \frac{\partial W}{\partial \lambda_k} \quad (5.17.3)$$

which can be used to calculate the components of the Kirchoff stress,  $\tau_{ij}$ , through

$$\tau_{ij} = \sum_{k=1}^3 \tau_k \hat{e}_i^k \hat{e}_j^k. \quad (5.17.4)$$

where  $\hat{e}_i^k$  are the components of the  $k^{\text{th}}$  eigenvector of the left stretch tensor in the global Cartesian coordinate system. The components of the Cauchy stress are then

$$\sigma_{ij} = \frac{1}{J} \tau_{ij}. \quad (5.17.5)$$

Finally, it should be noted that the Hyperfoam model is also capable of reproducing the Blatz-Ko model [3] [4]. If only one term is chosen,  $N = 1$ , and  $\mu_1 = \mu$ ,  $\alpha_1 = -2$ , and  $\nu_1 = 0.25$  we get the Blatz-Ko strain energy density

$$W = \frac{\mu}{2} \left( \frac{I_2}{I_3} + 2 \sqrt{I_3} - 5 \right) \quad , \quad (5.17.6)$$

where  $I_2$  and  $I_3$  are the second and third invariants of the right Cauchy-Green tensor (see (5.2.3)).

### 5.17.2 Implementation

The hyperfoam model is evaluated using the left stretch tensor,  $V_{ij}$ . Given the left stretch, the eigenvalues,  $\lambda_k$ , and eigenvectors,  $\hat{e}_i^k$ , of the stretch are calculated

$$V_{ij} \hat{e}_j^k = \lambda_k \hat{e}_i^k \quad ; \quad V_{ij} = \sum_{k=1}^3 \lambda_k \hat{e}_i^k \hat{e}_j^k. \quad (5.17.7)$$

Next, the determinant of the deformation gradient is calculated

$$J = \lambda_1 \lambda_2 \lambda_3. \quad (5.17.8)$$

Then the contribution of each term in the expansion is added to the Kirchoff stress

$$\tau_{ij}^n = \tau_{ij}^{n-1} + \lambda_1 \frac{\partial W^{(n)}}{\partial \lambda_1} \hat{e}_i^1 \hat{e}_j^1 + \lambda_2 \frac{\partial W^{(n)}}{\partial \lambda_2} \hat{e}_i^2 \hat{e}_j^2 + \lambda_3 \frac{\partial W^{(n)}}{\partial \lambda_3} \hat{e}_i^3 \hat{e}_j^3 \quad (5.17.9)$$

where  $\tau_{ij}^0 = 0$  and

$$\lambda_k \frac{\partial W^{(n)}}{\partial \lambda_k} = \frac{2\mu_n}{\alpha_n} (\lambda_k^{\alpha_n} - J^{-\alpha_n \beta_n}). \quad (5.17.10)$$

After summing the terms  $n = 1, \dots, N$  the Kirchoff stress is converted to the Cauchy stress using (5.17.5). If necessary the Cauchy stress is transformed back into an un-rotated configuration to be returned to the host code.

### 5.17.3 Verification

The hyperfoam model is verified for four loading paths: uniaxial strain, biaxial strain, pure shear, and simple shear. The material parameters used for the verification tests are shown in Table 5.23. For these problems  $N = 3$ .

$\mu_i$	25.8 MPa	-21.9 MPa	0.0814 MPa
$\alpha_i$	2.536	2.090	-8.807
$\nu_i$	0.5630	0.5507	0.3662

Table 5.23: The material properties for the hyperfoam model tested in uniaxial strain.

### 5.17.3.1 Uniaxial Strain

Since the hyperfoam model is formulated in terms of principal stretches, a uniaxial strain problem is a very simple verification problem that can be run.

In uniaxial strain, the stretch ratio in the direction of straining is  $\lambda = \exp(\varepsilon)$ , where  $\varepsilon$  is the applied strain. In a direction orthogonal to the direction of straining the stretch ratios are equal to one. The determinant of the deformation gradient is  $J = \lambda$ .

Since the deformation is aligned with the coordinate axes, the eigenvectors of the left stretch are also aligned with the coordinate axes. Using the derivatives of the strain energy density given in (5.17.10), the non-zero stress components are

$$\sigma_{11} = \frac{1}{\lambda} \sum_{i=1}^N \frac{2\mu_i}{\alpha_i} (\lambda^{\alpha_i} - \lambda^{-\alpha_i\beta_i})$$

$$\sigma_{22} = \sigma_{33} = \frac{1}{\lambda} \sum_{i=1}^N \frac{2\mu_i}{\alpha_i} (1 - \lambda^{-\alpha_i\beta_i}) \quad (5.17.11)$$

The results of the analysis in tension are shown in Figures 5.60 to Figure 5.62.

For the results in Figure 5.60, a single element is strained to  $\varepsilon = 0.6$  which, in uniaxial strain in tension, is very large for this model. At some point the stresses begin to increase rapidly. Since the axial stress and the lateral stresses are both very large, the pressure in uniaxial strain in tension is also very large. For this extreme loading the model in Adagio shows agreement with the analytical solution.

The model is also loaded in uniaxial compression. These results are shown in Figure 5.61. The model again shows agreement with the analytical solution. The behavior in compression is very different than tension. The maximum stress is an order of magnitude less at a strain of  $\varepsilon = -0.6$ , where the axial stress is just over 9 MPa, compared to  $\varepsilon = 0.6$  in tension where the axial and lateral stresses are nearly 450 MPa. The lateral stresses reach a plateau while the axial stress increases. The stresses in compression also have a different nonlinear form than the stresses in tension.

Finally, both the tension and compression responses are shown in Figure 5.62. Here the continuity of the behavior at  $\varepsilon = 0$  can be seen along with the very different responses in tension and compression.

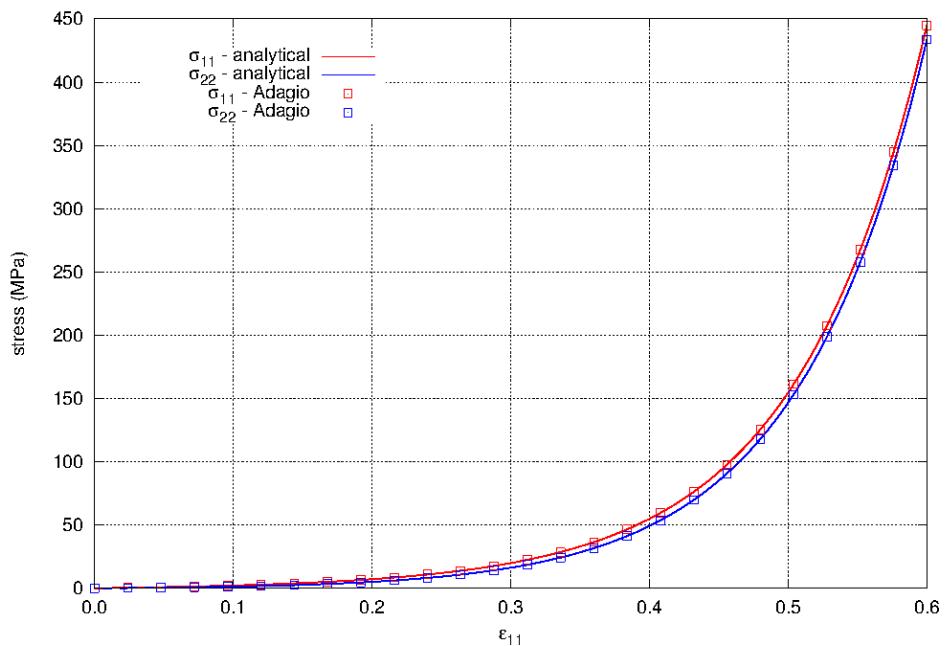


Figure 5.60: The axial and lateral stresses for uniaxial strain in tension using the hyperfoam model. The results show agreement with the analytical results. The material properties for the model are given in Table 5.23.

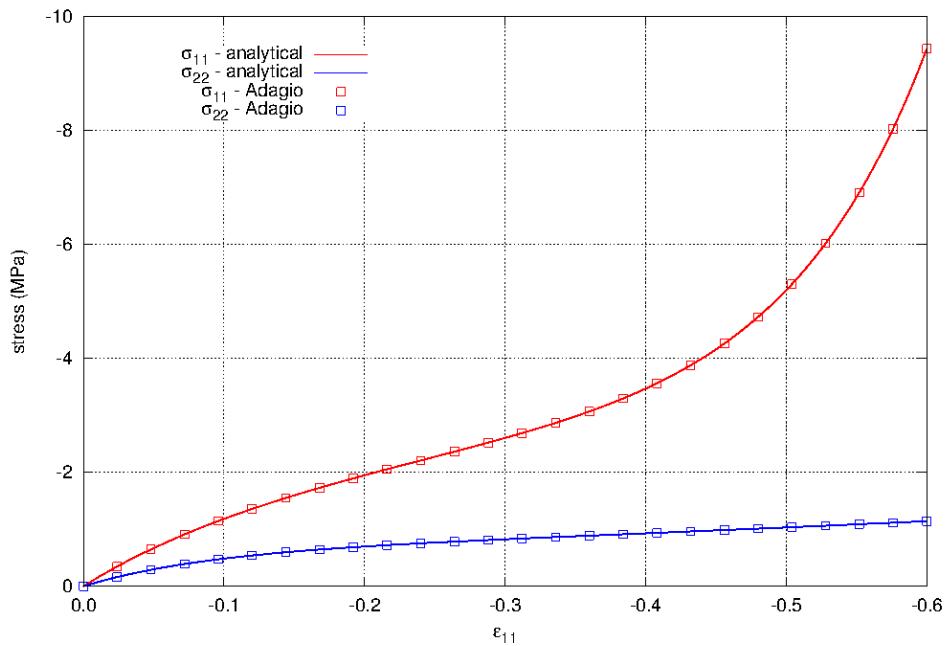


Figure 5.61: The axial and lateral stresses for uniaxial strain in compression using the hyperfoam model. The results show agreement with the analytical results. The material properties for the model are given in Table 5.23.

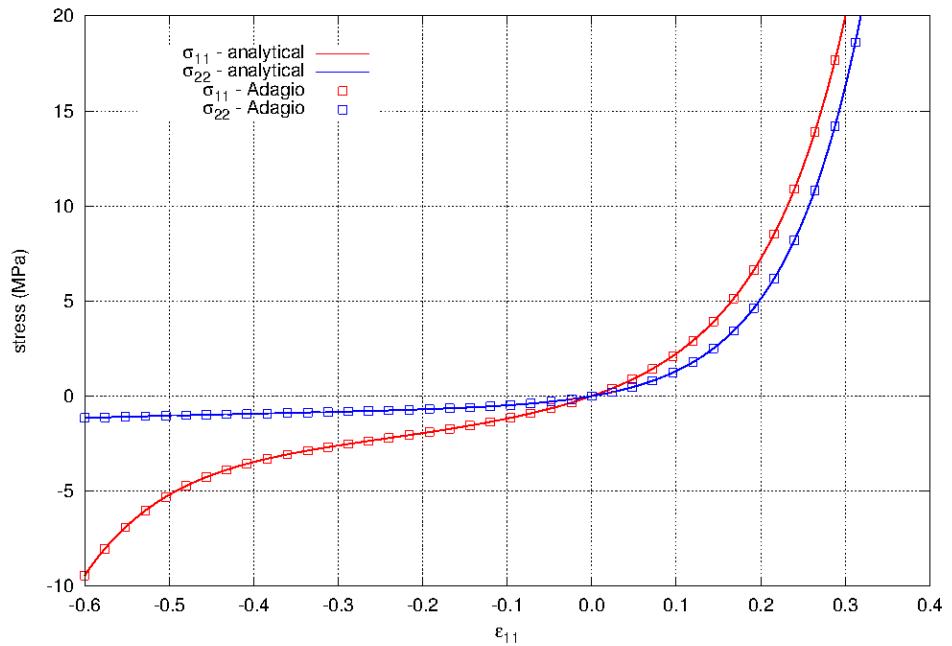


Figure 5.62: The axial and lateral stresses for uniaxial strain in both tension and compression using the hyperfoam model. The results show agreement with the analytical results and that the response of the material is very different in tension and compression. The material properties for the model are given in Table 5.23.

### 5.17.3.2 Biaxial Strain

Another simple verification problem for the hyperfoam model is biaxial strain.

In biaxial strain, the stretch ratios are prescribed in two orthogonal directions. For this  $\lambda_1 = \exp(\varepsilon_1)$  and  $\lambda_2 = \exp(\varepsilon_2)$ , where  $\varepsilon_i$  are the applied strains in the  $x_1$  and  $x_2$  directions. In the third direction orthogonal to the first two, the stretch ratio is one. The determinant of the deformation gradient is  $J = \lambda_1 \lambda_2$ .

$$\begin{aligned}\sigma_{11} &= \frac{1}{\lambda_1 \lambda_2} \sum_{i=1}^N \frac{2\mu_i}{\alpha_i} [\lambda_1^{\alpha_i} - (\lambda_1 \lambda_2)^{-\alpha_i \beta_i}] \quad ; \quad \sigma_{22} = \frac{1}{\lambda_1 \lambda_2} \sum_{i=1}^N \frac{2\mu_i}{\alpha_i} [\lambda_2^{\alpha_i} - (\lambda_1 \lambda_2)^{-\alpha_i \beta_i}] \\ \sigma_{33} &= \frac{1}{\lambda_1 \lambda_2} \sum_{i=1}^N \frac{2\mu_i}{\alpha_i} [1 - (\lambda_1 \lambda_2)^{-\alpha_i \beta_i}]\end{aligned}\tag{5.17.12}$$

The results of the analysis in tension are shown in Figures 5.63 to Figure 5.65.

For the results in Figure 5.63, a single element is strained with  $\varepsilon_1 = 0.4$  and  $\varepsilon_2 = 0.2$  which, in biaxial strain in tension, is very large for this model. At some point the normal stresses begin to increase rapidly. Since the normal stresses are very large, the hydrostatic pressure is also very large. For this extreme loading the model in Adagio shows agreement with the analytical solution.

The model is also loaded in biaxial compression. These results are shown in Figure 5.64. The model again shows agreement with the analytical solution. The behavior in compression is very different than tension. The maximum stress is orders of magnitude less at a strain of  $\varepsilon_1 = -0.4$  and  $\varepsilon_2 = -0.3$ , where the maximum normal stress is just over 4.5 MPa, compared to  $\varepsilon_1 = 0.4$  and  $\varepsilon_2 = 0.3$  in tension where the normal stresses from the model are nearly 1.3 GPa. The lateral stress  $\sigma_{zz}$  reaches a plateau while the other two stress increase with increased straining. The stresses in compression also have a different nonlinear form than the stresses in tension.

Finally, both the tension and compression responses are shown in Figure 5.65. Here the continuity of the behavior at  $\varepsilon = 0$  can be seen along with the very different responses in tension and compression.

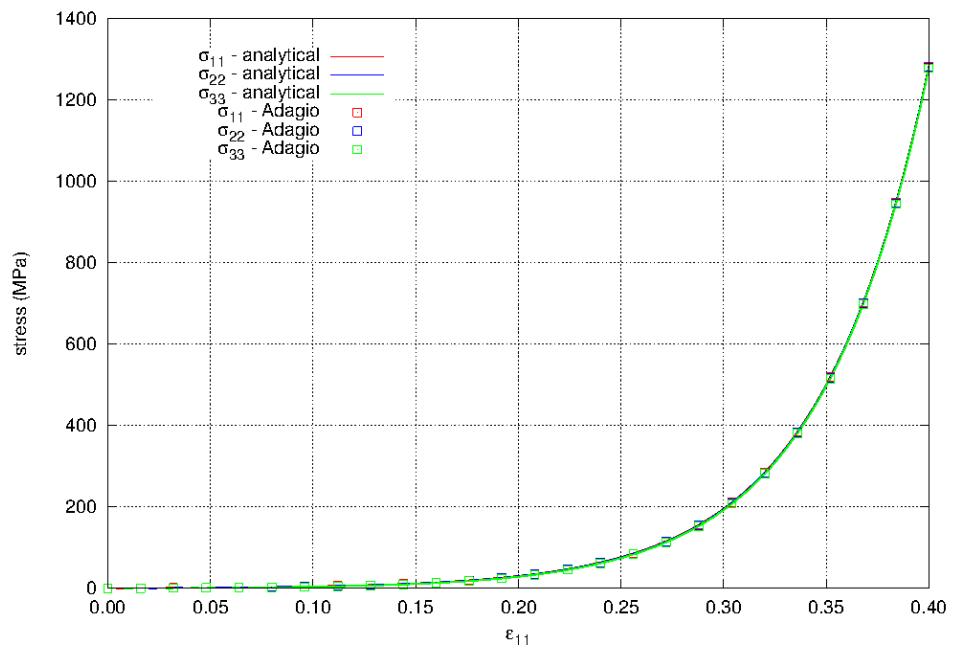


Figure 5.63: The normal stresses for biaxial strain in tension using the hyperfoam model. The results show agreement with the analytical results. The material properties for the model are given in Table 5.23.

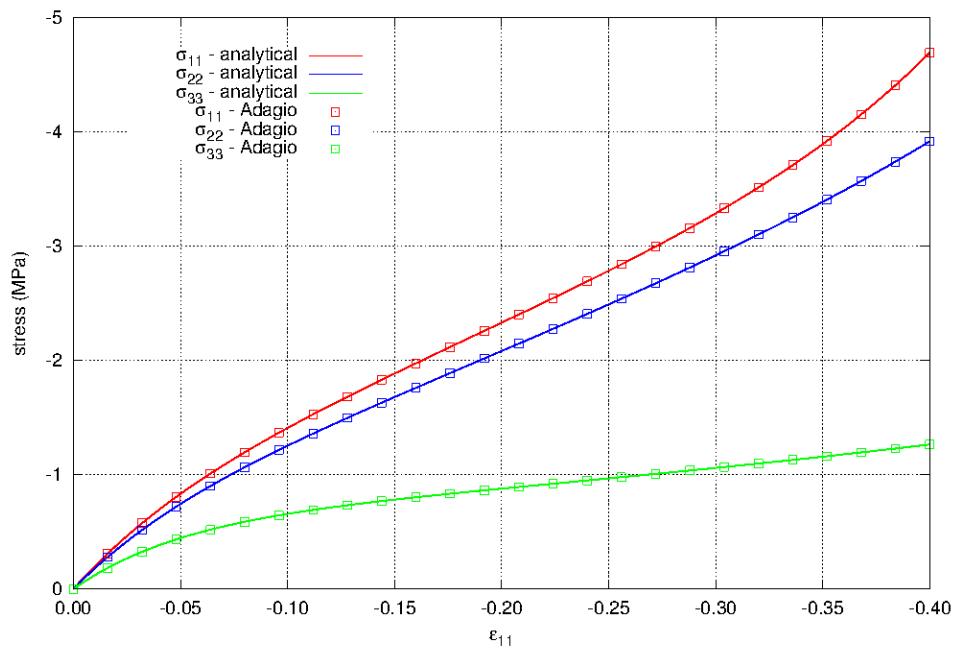


Figure 5.64: The normal stresses for biaxial strain in compression using the hyperfoam model. The results show agreement with the analytical results. The material properties for the model are given in Table 5.23.

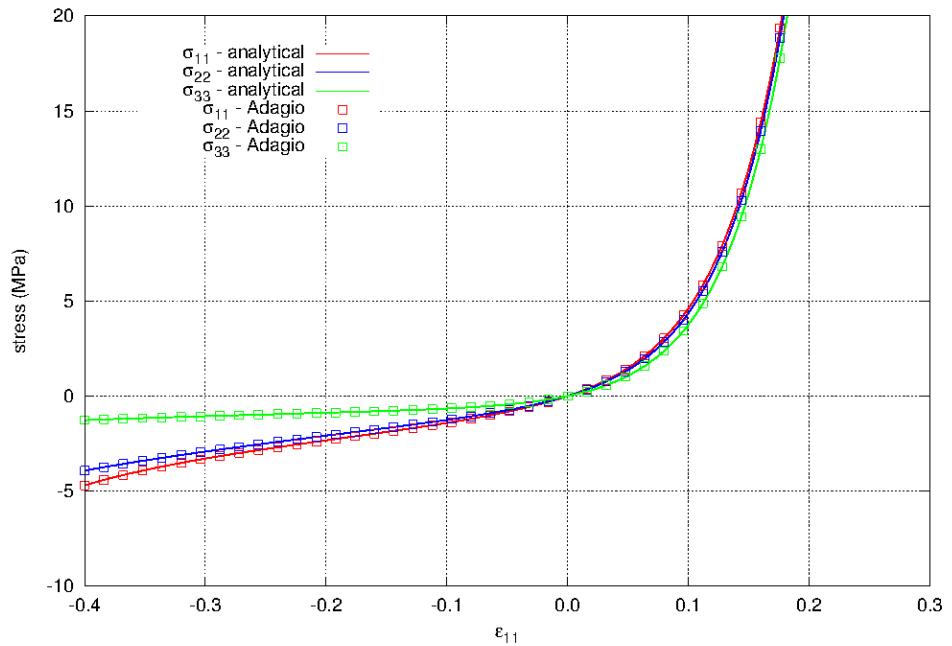


Figure 5.65: The normal stresses for biaxial strain in both tension and compression using the hyperfoam model. The results show agreement with the analytical results and that the response of the material is very different in tension and compression. The material properties for the model are given in Table 5.23.

### 5.17.3.3 Pure Shear

The hyperfoam model is also tested in pure shear in strain. Note that this is different from pure shear in stress.

In pure shear, the principal stretch ratios are  $\lambda_1 = \lambda$ ,  $\lambda_2 = 1$ , and  $\lambda_3 = \lambda^{-1}$ . The determinant of the deformation gradient is  $J = 1$ , which means the Kirchhoff and Cauchy stress measures are the same.

The principal stresses are

$$\sigma_1 = \sum_{i=1}^N \frac{2\mu_i}{\alpha_i} (\lambda^{\alpha_i} - 1) \quad ; \quad \sigma_2 = 0 \quad ; \quad \sigma_3 = \sum_{i=1}^N \frac{2\mu_i}{\alpha_i} (\lambda^{-\alpha_i} - 1) \quad (5.17.13)$$

The principal axes of deformation are aligned at  $45^\circ$  to the coordinate axes. In the global coordinate system the non-zero stress components are

$$\begin{aligned} \sigma_{11} = \sigma_{22} &= \sum_{i=1}^N \frac{2\mu_i}{\alpha_i} (\lambda^{\alpha_i} + \lambda^{-\alpha_i} - 2) \\ \sigma_{12} &= \sum_{i=1}^N \frac{2\mu_i}{\alpha_i} (\lambda^{\alpha_i} - \lambda^{-\alpha_i}) \end{aligned} \quad (5.17.14)$$

The results of the analysis in pure shear are shown in Figure 5.66. A single element is strained to a shear strain of  $\varepsilon = 0.4$ . The model in Adagio shows agreement with the analytical solution presented above. It is interesting to note that pure shear strain produces not only normal stresses with the hyperfoam model, but a non-zero pressure. The deviatoric/volumetric split so often used with our constitutive model does not occur with the hyperfoam model.

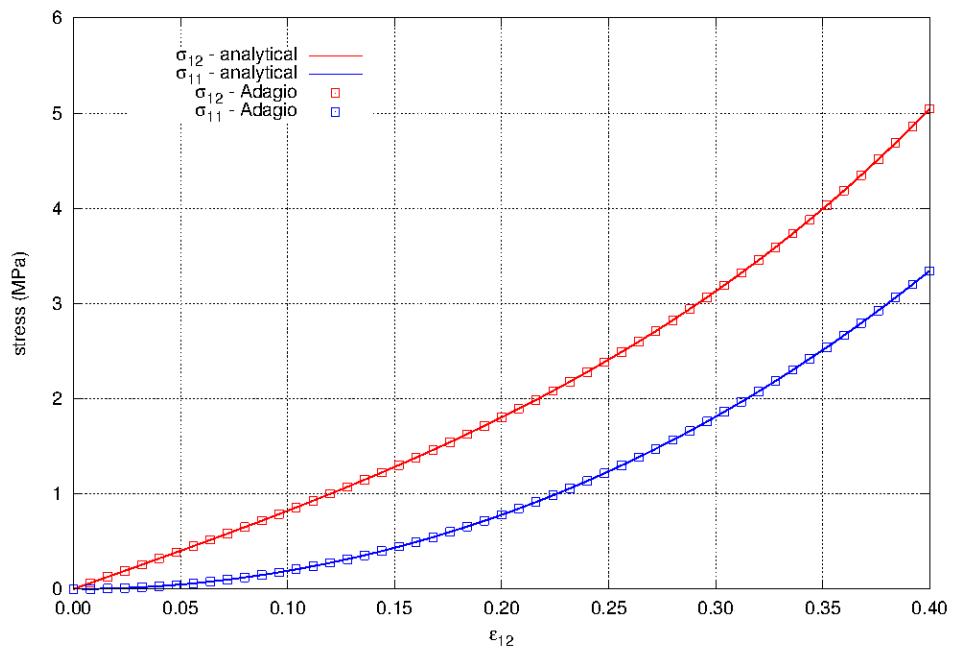


Figure 5.66: The shear and normal stresses for the hyperfoam model in pure shear. The material properties for the model are given in Table 5.23.

#### 5.17.3.4 Simple Shear

The hyperfoam model is also tested in simple shear. Note that this is a different deformation path than pure shear. In simple shear the deformation gradient is

$$[F_{ij}] = \begin{bmatrix} 1 & \gamma & 0 \\ 0 & 1 & 0 \\ 0 & 0 & 1 \end{bmatrix} \quad (5.17.15)$$

The principal stretch ratios are  $\lambda_1 = \lambda$ ,  $\lambda_2 = 1$ , and  $\lambda_3 = \lambda^{-1}$ . The determinant of the deformation gradient is  $J = 1$ , which means the Kirchhoff and Cauchy stress measures are the same. This gives the *same* principal stresses as in pure shear when written in terms of the principal stretch ratio,  $\lambda$ . The principal stresses are

$$\sigma_1 = \sum_{i=1}^N \frac{2\mu_i}{\alpha_i} (\lambda^{\alpha_i} - 1) \quad ; \quad \sigma_2 = 0 \quad ; \quad \sigma_3 = \sum_{i=1}^N \frac{2\mu_i}{\alpha_i} (\lambda^{-\alpha_i} - 1) \quad (5.17.16)$$

The principal stretch ratio is

$$\lambda = \frac{1 + \sin \theta}{\cos \theta} \quad ; \quad \theta = \tan^{-1} \left( \frac{\gamma}{2} \right) \quad (5.17.17)$$

The principal axes of deformation in the current configuration, i.e. the eigenvectors of the left stretch, are given by

$$\hat{e}_i^1 = \cos \phi e_i^1 + \sin \phi e_i^2 \quad ; \quad \hat{e}_i^2 = e_i^3 \quad ; \quad \hat{e}_i^3 = -\sin \phi e_i^1 + \cos \phi e_i^2 \quad (5.17.18)$$

where  $\phi = \pi/4 - \theta/2$ .

The results of the analysis in simple shear are shown in Figure 5.67. A single element is strained to a shear parameter of  $\gamma = 0.4$ . The model in Adagio shows agreement with the analytical solution presented above. It is interesting to note that simple shear with the hyperfoam model produces different normal stresses than simple shear, i.e. the two non-zero normal stresses are not equal. The difference arises from the fact that the principal axes of deformation in pure shear are fixed, while in simple shear the principal axes rotate. There is still a non-zero pressure which again shows that the deviatoric/volumetric split does not occur with the hyperfoam model.

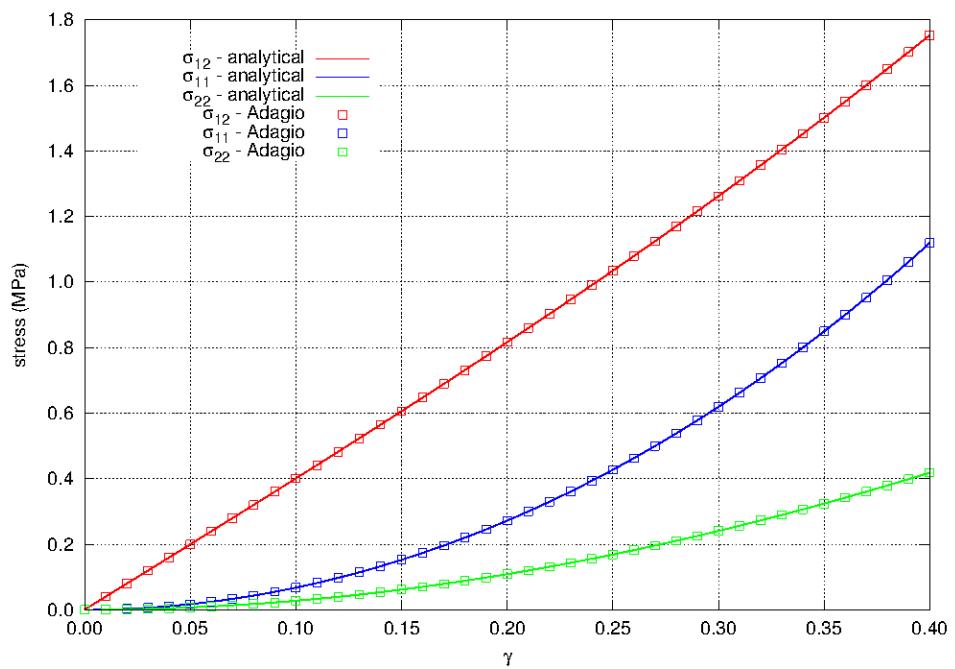


Figure 5.67: The shear and normal stresses for the hyperfoam model in simple shear. The material properties for the model are given in Table 5.23.

#### 5.17.4 User Guide

```
BEGIN PARAMETERS FOR MODEL HYPERFOAM
#
# Elastic constants
#
YOUNGS MODULUS = <real> E
POISSONS RATIO = <real> ν
SHEAR MODULUS = <real> G
BULK MODULUS = <real> K
LAMBDA = <real> λ
TWO MU = <real> 2μ
#
# Strain energy density
#
N = <integer> N
SHEAR = <real_list> μi
ALPHA = <real_list> αi
POISSON = <real_list> νi
END [PARAMETERS FOR HYPERFOAM]
```

There are no output variables available for this model.

#### References

- [1] B. Störakers. On material representation and constitutive branching in finite compressible elasticity. *Journal of the Mechanics and Physics of Solids*, 34:125–145, 1986.
- [2] R. W. Ogden. *Non-Linear Elastic Deformaitons*. Dover, New York, 1984.
- [3] P. J. Blatz and W. L. Ko. Application of finite elasticity theory to the deformation of rubbery materials. *Transactions of the Society of Rheology*, 6:223–251, 1962.
- [4] G. Bolzon and R. Vitaliani. The blatz-ko model and homogenization. *Archive of Applied Mechanics*, 63:228–241, 1993.

## 5.18 Hyperelastic Damage Model

### 5.18.1 Theory

The hyperelastic damage model is an isotropic, strain rate and temperature independent continuum damage formulation. In this case, the specific form is that discussed by Holzapfel [1] and proposed primarily for particulate reinforced (filled) rubber-like materials exhibiting the so called Mullins effect. Specifically, this model utilizes a Kachanov-like effective stress concept to propose an *effective* Helmholtz free energy,  $W$ , of the form

$$W = (1 - \zeta) W_0 (C_{ij}), \quad (5.18.1)$$

in which  $\zeta = [0, 1]$  is the isotropic damage variable and  $W_0$  is the Helmholtz free energy of the *undamaged* material and  $C_{ij}$  is the right Cauchy-Green tensor ( $C_{ij} = F_{ki}F_{kj}$  with  $F_{ij}$  the deformation gradient). The free energy expression of the neo-Hookean model (Section 5.5) is used to describe the undamaged strain energy and is given as,

$$W_0 (C_{ij}) = \frac{1}{2} K \left[ \frac{1}{2} (J^2 - 1) - \ln J \right] + \frac{1}{2} \mu (\bar{C}_{kk} - 3), \quad (5.18.2)$$

with  $K$  and  $\mu$  the bulk and shear moduli,  $J$  the determinant of the deformation gradient and  $\bar{C}_{kk}$  the isochoric part of the deformation –  $\bar{C}_{ij} = \bar{F}_{ki}\bar{F}_{kj}$  and  $\bar{F}_{ij} = J^{-1/3}F_{ij}$ . In the undamaged configuration, the second Piola-Kirchoff stress,  $S_{ij}^0$ , is the energetic conjugate of the right Cauchy-Green strain such that

$$S_{ij}^0 = 2 \frac{\partial W_0}{\partial C_{ij}}, \quad (5.18.3)$$

leading to a *damaged* stress of the form,

$$S_{ij} = (1 - \zeta) S_{ij}^0. \quad (5.18.4)$$

To describe the softening process, two damage related variables are needed. The first is the previously mentioned smooth, continuous effective damage variable,  $\zeta$ , while the second is the so-called discontinuous damage variable,  $\alpha$ . In essence, this second variable may be considered to be the maximum strain energy in the undamaged material throughout the entire loading history. This statement may be expressed as,

$$\alpha = \max_{s \in [0, t]} W_0 (s), \quad (5.18.5)$$

in which  $s$  is a history variable representing any time in the loading history and the dependence on  $s$  in (5.18.5) is used to indicate the loading history and not an explicit dependence on time or strain rate. The two damage terms are related by assuming  $\zeta = \zeta(\alpha)$ . To ascertain this dependence,

it is noted that  $\zeta(0) = 0$  and  $\zeta(\infty) = 1$  the former explicitly stating that the material is initially undamaged and the latter noting in the limit the material is completely damaged the strain energy will go to  $\infty$ . These observations lead to an expression of the form,

$$\zeta(\alpha) = \zeta_\infty [1 - \exp(-\alpha/\tau)], \quad (5.18.6)$$

with  $\tau$  being a constant referred to as the damage saturation parameter and  $\zeta_\infty$  being the maximum value of the damage parameter that may be achieved.

The evolution of the damage process is governed by a so-called damage function,  $f(C_{ij}, \alpha)$  (analogous to the yield function in plasticity), postulated as,

$$f(C_{ij}, \alpha) = \phi(C_{ij}) - \alpha, \quad (5.18.7)$$

where  $\phi$  is the thermodynamic driving of the damage process. In this case, the thermodynamic conjugate of the damage variable  $\zeta$  is the undamaged strain energy,  $W_0$ , such that  $\phi(C_{ij}) = W_0(C_{ij})$ . By enforcing the consistency condition during damage ( $\dot{f} = 0$ ), it can be shown that,

$$\dot{\alpha} = \dot{\phi} = \frac{\partial W_0}{\partial C_{ij}} \dot{C}_{ij} = \frac{1}{2} S_{ij}^0 \dot{C}_{ij}. \quad (5.18.8)$$

## 5.18.2 Implementation

For the hyperelastic damage model, the first step is to calculate the undamaged second Piola-Kirchoff stress,  $S_{ij}^{0(n+1)}$  of the current  $(n+1)^{th}$  time step. To this end, the deformation gradient,  $F_{ij}^{(n+1)}$ , is calculated based on the input stretch,  $V_{ij}^{(n+1)}$ , and rotation,  $R_{ij}^{(n+1)}$ , tensors via the polar decomposition. The second Piola-Kirchoff stress may then be determined as,

$$S_{ij}^{0(n+1)} = \left[ \frac{1}{2} K \left( (J^{(n+1)})^2 - 1 \right) I_{ik} + \mu (J^{(n+1)})^{-2/3} C_{ki}^{(n+1)} \right] (C_{jk}^{(n+1)})^{-1}. \quad (5.18.9)$$

To determine the damage state, the undamaged strain energy  $W_0^{(n+1)}$ , is first calculated as,

$$W_0^{(n+1)} = \frac{1}{2} K \left( \frac{1}{2} \left( (J^{(n+1)})^2 - 1 \right) - \ln J^{(n+1)} \right) + \frac{1}{2} \mu \left[ (J^{(n+1)})^{-2/3} C_{kk}^{(n+1)} - 3 \right]. \quad (5.18.10)$$

The current discrete damage variable,  $\alpha^{(n+1)}$ , may then be determined via,

$$\alpha^{(n+1)} = \max [\alpha^{(n)}, W_0^{(n+1)}], \quad (5.18.11)$$

so that the current continuous damage variable,  $\zeta^{(n+1)}$ , is,

$$\zeta^{(n+1)} = \zeta_\infty [1 - \exp(\alpha^{(n+1)}/\tau)]. \quad (5.18.12)$$

Finally, these expressions lead to an unrotated Cauchy stress of the form,

$$T_{ij}^{(n+1)} = \frac{1}{J^{(n+1)}} (1 - \zeta^{(n+1)}) R_{ki}^{(n+1)} F_{km}^{(n+1)} S_{mn}^{0(n+1)} F_{rn}^{(n+1)} R_{rj}^{(n+1)}. \quad (5.18.13)$$

### 5.18.3 Verification

Given the hyperelastic formulation of the hyperelastic damage model, it is possible to find closed form solutions for simple loadings. Two such instances (uniaxial strain and simple shear) are considered here to evaluate and verify the response of this implementation. In this case, the results explored here are extensions of the neo-Hookean verification tests previously discussed in Section 5.5.3 and [2]. One set of material properties was used for all tests and they are given in Table 5.24. The damage parameters are taken from [1].

$K$	0.5 MPa	$\mu$	0.375 MPa
$\zeta_\infty$	0.8	$\tau$	0.3 MPa

Table 5.24: The material properties for the hyperelastic damage model used for both the uniaxial and simple shear tests.

#### 5.18.3.1 Uniaxial Strain

First, utilizing a displacement condition corresponding to uniaxial strain results in a deformation gradient of the form,

$$F_{ij} = \lambda \delta_{1i} \delta_{1j} + \delta_{2i} \delta_{2j} + \delta_{3i} \delta_{3j}. \quad (5.18.14)$$

As the undamaged material is neo-Hookean, it is noted that the under these loading conditions the stress field is found by evaluating relation (5.5.3) and may be written as

$$\begin{aligned} \sigma_{11}^0 &= \frac{1}{2} K \left( \lambda - \frac{1}{\lambda} \right) + \frac{2}{3} \mu (\lambda^2 - 1) \lambda^{-5/3}, \\ \sigma_{22}^0 = \sigma_{33}^0 &= \frac{1}{2} K \left( \lambda - \frac{1}{\lambda} \right) - \frac{1}{3} \mu (\lambda^2 - 1) \lambda^{-5/3}, \\ \sigma_{12}^0 = \sigma_{23}^0 = \sigma_{31}^0 &= 0. \end{aligned} \quad (5.18.15)$$

The damaged, effective stresses are then simply  $\sigma_{ij} = (1 - \zeta) \sigma_{ij}^0$  and the problem reduces to the determination of  $\zeta$ . In this case, given the deformation gradient in (5.18.14),  $J = \lambda$  and

$$W_0 = \frac{1}{2} K \left[ \frac{1}{2} (\lambda^2 - 1) - \ln \lambda \right] + \frac{1}{2} \mu \left[ \lambda^{-2/3} (\lambda^2 + 2) - 3 \right]. \quad (5.18.16)$$

During loading,  $\alpha = W_0$  while during unloading  $\alpha = W_0(\lambda^{\max})$  and  $\zeta$  can be determined from (5.18.6).

Both the corresponding analytical and numerical solutions are presented in Figure 5.68 for a complete loading and unloading cycle. Note, the damage parameter,  $\zeta$ , increases during loading but remains constant during unloading verifying the irreversibility of the proposed model.

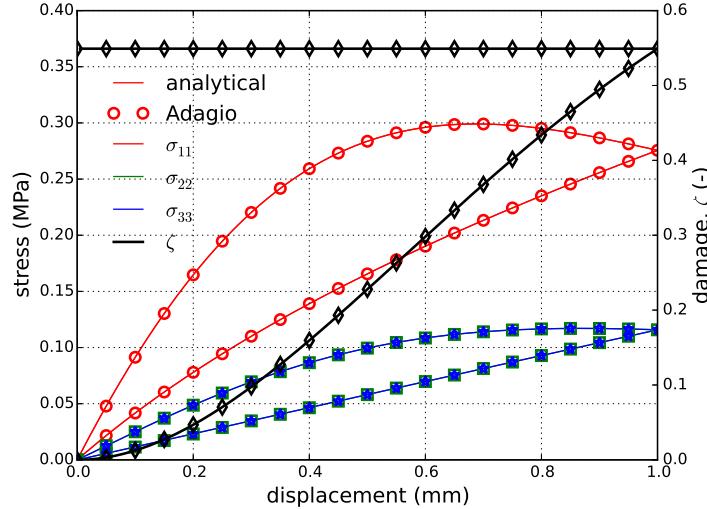


Figure 5.68: Analytical and numerical results of the stress and damage state for the uniaxial stretch case.

### 5.18.3.2 Simple Shear

For the simple shear case, a deformation gradient of the form,

$$F_{ij} = \delta_{ij} + \gamma \delta_{1i} \delta_{2j}, \quad (5.18.17)$$

is prescribed. Again, from the neo-hookean model definitions the undamaged stresses may be determined via (5.5.3) and noting this is a volume preserving definition ( $J = 1$ ) leading to expressions of the form,

$$\begin{aligned} \sigma_{11}^0 &= \frac{2}{3} \mu \gamma^2, \\ \sigma_{22}^0 = \sigma_{33}^0 &= -\frac{1}{3} \mu \gamma^2, \\ \sigma_{12}^0 &= \mu \gamma, \\ \sigma_{23}^0 = \sigma_{31}^0 &= 0. \end{aligned} \quad (5.18.18)$$

In this case, the undamaged strain energy is simply,

$$W_0 = \frac{1}{2} \mu \gamma^2, \quad (5.18.19)$$

and  $\zeta$  may be evaluated via (5.18.6). The effective stresses are then  $\sigma_{ij} = (1 - \zeta) \sigma_{ij}^0$

Both the corresponding analytical and numerical solutions are presented in Figure 5.69 for a complete loading and unloading cycle. Note, the damage parameter,  $\zeta$ , increases during loading but remains constant during unloading given the irreversible form of the damage process.

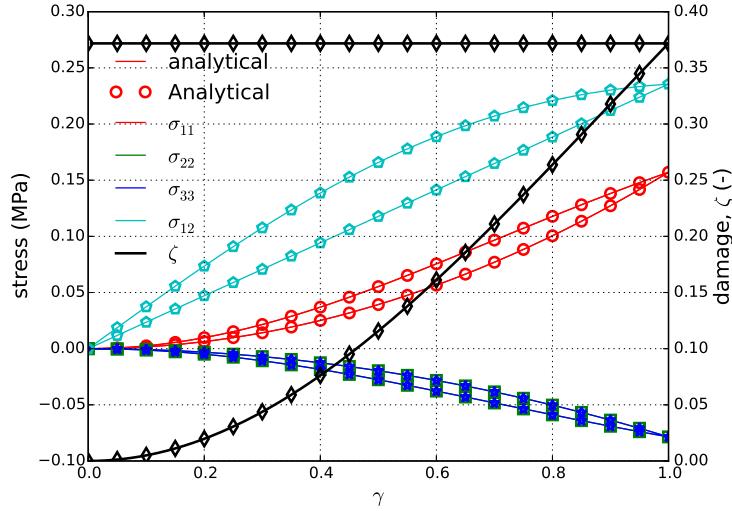


Figure 5.69: Analytical and numerical results of the stress and damage state for the simple shear case.

#### 5.18.4 User Guide

```

BEGIN PARAMETERS FOR MODEL HYPERELASTIC_DAMAGE
#
# Elastic constants
#
YOUNGS MODULUS = <real> E
POISSONS RATIO = <real> ν
SHEAR MODULUS = <real> G
BULK MODULUS = <real> K
LAMBDA = <real> λ
TWO MU = <real> 2μ
#
DAMAGE MAX = <real> ζ∞
DAMAGE SATURATION = <real> τ
END [PARAMETERS FOR MODEL HYPERELASTIC_DAMAGE]

```

Output variables available for this model are listed in Table 5.25. For information about the hyperelastic damage model, consult [1].

Table 5.25: State Variables for HYPERELASTIC DAMAGE Model

Name	Description
DAMAGE	continuous isotropic damage variable, $\zeta$
ALPHA	discontinuous damage variable, $\alpha$
PRESSURE	reference undamaged tensile pressure, $(1/3)(1 - \zeta) S_{kk}$

## References

- [1] G. A. Holzapfel. *Nonlinear Solid Mechanics: A Continuum Approach For Engineering*. John Wiley & Sons, Ltd, 2000.
- [2] W.M. Scherzinger and D.C. Hammerand. Testing of constitutive models in LAME. Technical Report SAND2007-5872, Sandia National Laboratories, Albuquerque, NM, September 2007. [pdf](#).

## 5.19 Soil and Foam Model

### 5.19.1 Theory

The soil and crushable foam model is a plasticity model that can be used for modeling soil, crushable foam, or other highly compressible materials. Given the right input, the model is a Drucker-Prager model.

For the soil and crushable foam model, the yield surface is a surface of revolution about the hydrostat in principal stress space. A planar end cap is assumed for the yield surface so that the yield surface is closed. The yield stress  $\sigma_{yd}$  is specified as a polynomial in pressure  $p$ . The yield stress is given as:

$$\sigma_{yd} = a_0 + a_1 p + a_2 p^2, \quad (5.19.1)$$

where the pressure  $p$  is positive in compression. The determination of the yield stress from Equation (5.19.1) places severe restrictions on the admissible values of  $a_0$ ,  $a_1$ , and  $a_2$ . There are three valid cases for the yield surface. In the first case, there is an elastic–perfectly plastic deviatoric response, and the yield surface is a cylinder oriented along the hydrostat in principal stress space. In this case,  $a_0$  is positive, and  $a_1$  and  $a_2$  are zero. In the second case, the yield surface is conical. A conical yield surface is obtained by setting  $a_2$  to zero and using appropriate values for  $a_0$  and  $a_1$ . In the third case, the yield surface has a parabolic shape. For the parabolic yield surface, all three coefficients in Equation (5.19.1) are nonzero. The coefficients are checked to determine that a valid negative tensile-failure pressure can be derived based on the specified coefficients.

For the case of the cylindrical yield surface (e.g.,  $a_0 > 0$  and  $a_1 = a_2 = 0$ ), there is no tensile-failure pressure. For the other two cases, the computed tensile-failure pressure may be too low. To handle the situations where there is no tensile-failure pressure or the tensile-failure pressure is too low, a pressure cutoff can be defined. If a pressure cutoff is defined, the tensile-failure pressure is the larger of the computed tensile-failure pressure and the defined cutoff pressure.

The plasticity theories for the volumetric and deviatoric parts of the material response are completely uncoupled. The volumetric response is computed first. The mean pressure  $p$  is assumed to be positive in compression, and a yield function  $\phi_p$  is written for the volumetric response as:

$$\phi_p = p - f_p(\varepsilon_V), \quad (5.19.2)$$

where  $f_p(\varepsilon_V)$  defines the volumetric stress-strain curve for the pressure. The yield function  $\phi_p$  determines the motion of the end cap along the hydrostat.

### 5.19.2 Implementation

The soil and crushable foam model is a rate-independent, hypoelastic model that splits and sequentially evaluates the volumetric and deviatoric response. To determine the inelastic flow, an elastic predictor-inelastic corrector approach is adopted for each of the aforementioned responses.

For the volumetric response, an updated logarithmic volume strain,  $\varepsilon_v^{n+1}$ , is computed by,

$$\varepsilon_v^{n+1} = \varepsilon_v^n - \Delta t d_{kk}. \quad (5.19.3)$$

Note, in this case, the volume strain is defined such that it is positive in compression. This strain value is then used to evaluate the volumetric yield function defined in (5.19.2) and determine the appropriate pressure,  $p$ , the material is subject to.

To evaluate the deviatoric response, a trial deviatoric stress,  $s_{ij}^{tr}$ , is defined as,

$$s_{ij}^{tr} = s_{ij}^n + 2\mu \hat{d}_{ij} \Delta t, \quad (5.19.4)$$

with  $\hat{d}_{ij}$  being the deviatoric part of the un-rotated rate of deformation. The deviatoric yield function,  $f$ , is then used to evaluate if any deviatoric plastic flow is occurring and is written as,

$$f(s_{ij}, p) = \phi(s_{ij}) - \sigma_{yd}(p), \quad (5.19.5)$$

where  $\sigma_{yd}$  is the yield stress given in (5.19.1) and  $\phi(s_{ij})$  the effective stress given as,

$$\phi(s_{ij}) = \sqrt{\frac{3}{2} s_{ij} s_{ij}}. \quad (5.19.6)$$

If an elastic response is evident ( $f \leq 0$ ), then the final stress is simply,

$$T_{ij}^{n+1} = s_{ij}^{tr} - p \delta_{ij}. \quad (5.19.7)$$

Otherwise, if a plastic response is observed, a radial return approach like that discussed in Section 5.6.2 is utilized to find the equivalent plastic strain increment,  $\Delta \bar{\varepsilon}^p$ . Unlike that case, given the decoupling between the volumetric and deviatoric behaviors, the hardening component of the yield surface does not change leading to an expression of the form,

$$\Delta \bar{\varepsilon}^p = \frac{f}{3\mu}, \quad (5.19.8)$$

and the final stress is,

$$T_{ij}^{n+1} = s_{ij}^{tr} - 3\mu \Delta \bar{\varepsilon}^p \frac{s_{ij}^{tr}}{\phi} - p \delta_{ij}. \quad (5.19.9)$$

### 5.19.3 Verification

The soil and foam model is verified for a triaxial compression load path. First the material is biaxially loaded in plane strain using load control, then the prescribed loads are released while the material is compressed in displacement control.

### 5.19.3.1 Triaxial Compression

The soil and foam model is tested in triaxial compression. For this problem, both lateral stresses,  $\sigma_{11}$  and  $\sigma_{33}$ , are prescribed along with the axial strain,  $\varepsilon_{22}$ . Furthermore, the lateral stresses are equal,  $\sigma_{11} = \sigma_{33}$ . For the elastic response, the axial stress is

$$\sigma_{22} = E\varepsilon_{22} + 2\nu\sigma_{11} \quad (5.19.10)$$

where  $E$  is the elastic modulus and  $\nu$  is the Poisson's ratio. The lateral strains are

$$\varepsilon_{11} = -\nu(\varepsilon_{22} - \sigma_{11}/\lambda) \quad (5.19.11)$$

where  $\lambda$  is the Lamé constant.

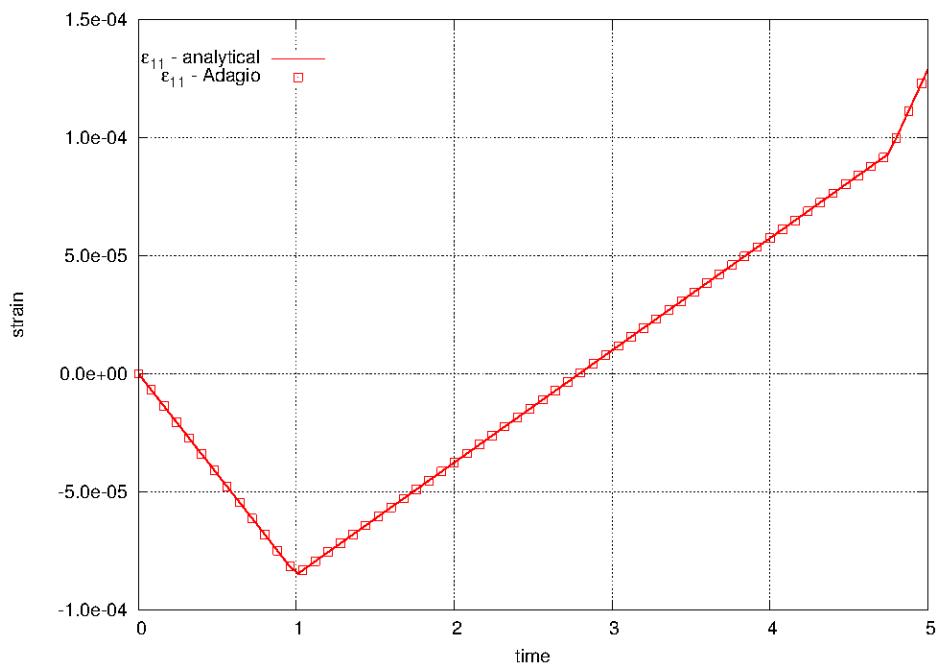


Figure 5.70: Lateral strain,  $\varepsilon_{11}$  and  $\varepsilon_{33}$ , over the course of the prescribed triaxial loading path.

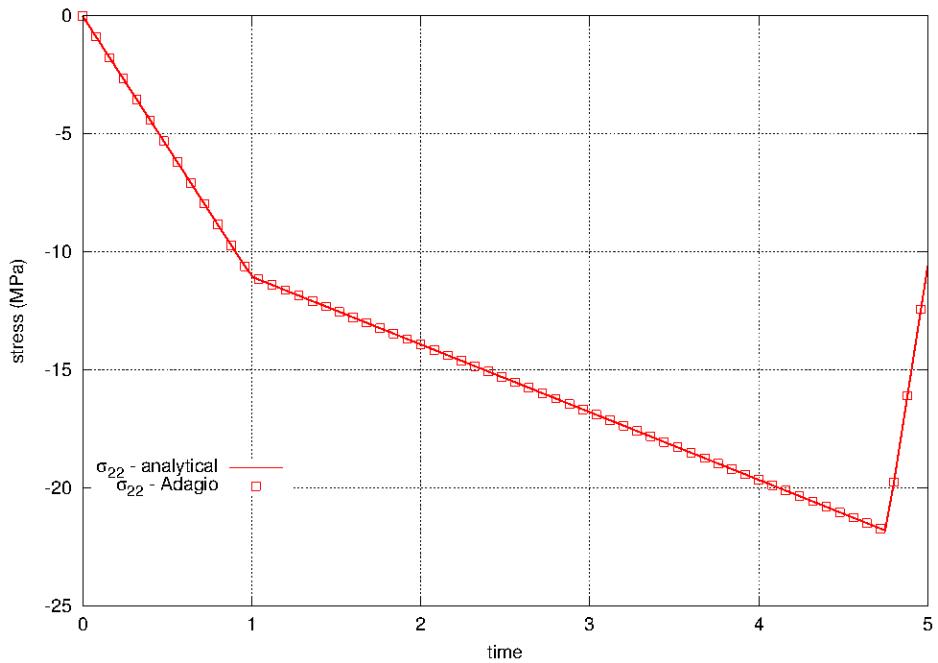


Figure 5.71: Axial stress,  $\sigma_{22}$ , over the course of the prescribed triaxial loading path.

#### 5.19.4 User Guide

```

BEGIN PARAMETERS FOR MODEL SOIL_FOAM
#
# Elastic constants
#
YOUNGS MODULUS = <real> E
POISSONS RATIO = <real> ν
SHEAR MODULUS = <real> G
BULK MODULUS = <real> K
LAMBDA = <real> λ
TWO MU = <real> 2μ
#
# Yield surface parameters
#
A0 = <real> a0
A1 = <real> a1
A2 = <real> a2
PRESSURE CUTOFF = <real> pc
PRESSURE FUNCTION = <string> fp(εV)
END [PARAMETERS FOR MODEL SOIL_FOAM]

```

For information about the soil and crushable foam model, see the PRONTO3D document listed as Reference [1]. The soil and crushable foam model is the same as the soil and crushable foam model in PRONTO3D. The PRONTO3D model is based on a material model developed by Krieg [2]. The Krieg version of the soil and crushable foam model was later modified by Swenson and Taylor [3]. The soil and crushable foam model developed by Swenson and Taylor is the model in PRONTO3D and is also the shared model for Presto and Adagio.

Output variables available for this model are listed in Table 5.26.

Table 5.26: State Variables for SOIL FOAM Model

Name	Description
EVOL_MAX	maximum volumetric strain seen by the material point
EVOL_FRAC	volumetric strain for tensile fracture
EVOL	current volumetric strain
EQPS	equivalent plastic strain

## References

[1] L.M. Taylor and D.P. Flanagan. Pronto3D: A three-dimensional transient solid dynamics program. Technical Report SAND87-1912, Sandia National Laboratories, Albuquerque, NM, March 1989. [pdf](#).

- [2] R.D. Krieg. A simple constitutive description for cellular concrete. Technical Report SAND SC-DR-72-0883, Sandia National Laboratories, Albuquerque, NM, 1978. [pdf](#).
- [3] D.V. Swenson and L. M. Taylor. A finite element model for the analysis of tailored pulse stimulation of boreholes. *International Journal for Numerical and Analytical Methods in Geomechanics*, 7:469–484, 1983. [doi](#).

## 5.20 Shape Memory Alloy Model

### 5.20.1 Theory

The shape memory alloy (SMA) model is used to describe the thermomechanical response of intermetallics (e.g. NiTi, NiTiCu, NiTiPd, NiTiPt) that can undergo a reversible, diffusionless, solid-to-solid martensitic transformation. Specifically, the materials have a high-symmetry (typically cubic) austenitic crystallographic structure at high temperature and/or low stress. At lower-temperatures and/or high stress the crystallographic structure is transformed to a lower symmetry (typically orthorhombic or monoclinic) martensitic phase. The change in structure and symmetry may be taken advantage of to produce large inelastic strains of  $\approx 1\text{-}8\%$ . Importantly, this class of materials differentiates itself from TRIP steels in that the transformation is *reversible* and a variety of thermomechanical loading paths have been conceived of to take advantage of this behavior. A notable application of these materials is as an actuator in smart, morphing structures.

Phenomenologically, the macroscopic behavior of SMAs is typically discussed in effective stress-temperature space via a *phase diagram* like in Figure 5.72. The four lines denoted  $M_s$ ,  $M_f$ ,  $A_s$ , and  $A_f$  indicate the martensitic start, martensitic finish, austenitic start, and austenitic finish transformation surfaces. *Forward transformation* (from an austenitic to a martensitic state) is described by the martensitic start and finish surfaces. Specifically, the former refers to the thermomechanical conditions at which transformation will initiate while the latter corresponds to complete transformation. The difference between the two surfaces is associated with internal hardening effects due to microstructure (i.e. texture, back stresses). Transformation from martensite to austenite is referred to as *reverse* and is characterized by the austenitic start and finish surfaces. Detailed discussion of the crystallography and phenomenology may be found in [1, 2]<sup>3</sup>.

Two responses characteristic of SMAs may also be represented via the phase diagram. These are the *actuation response* and the *pseudoelastic* (often referred to as *superelastic* in the literature) responses. The first (actuation) is indicated by path “A” in Figure 5.72. In this case, a mechanical bias load is applied to the SMA and the material is then thermally cycled through forward and reverse transformation. The resulting transformation first produces and then removes the large transformation strains of SMAs and is commonly used for (surprisingly) actuation applications. At higher temperatures ( $T > A_f$ ), mechanical loading may be used to induce forward and, upon unloading, reverse transformation as indicated in path “B” of Figure 5.72. Through such a cycle, a distinctive flag shape in the stress strain response is observed through which large amounts of energy may be dissipated while producing no permanent deformations. As such, this loading path is often considered for vibration isolation or damping applications.

In LAMÉ, the response of SMAs is described by the phenomenological model of Lagoudas and coworkers [3]. This model was motivated by actuator applications and it describes the inelastic deformation associated with martensitic transformation through two internal state variables – the scalar martensitic volume fraction,  $\xi$ , and tensorial transformation strain tensor,  $\varepsilon_{ij}^{\text{tr}}$ . Before proceeding it should be noted that the *structural* response of SMA specimens and components exhibit

<sup>3</sup>In the martensitic configuration, the crystallographic structure can either self-accommodate in a *twinned* configuration producing no macroscopic inelastic strain or an internal or external stress field may be used to *detwin* the microstructure thereby producing the desired inelastic strain. For simplicity, this distinction is bypassed in this brief text and the interested reader should consult the referenced works.

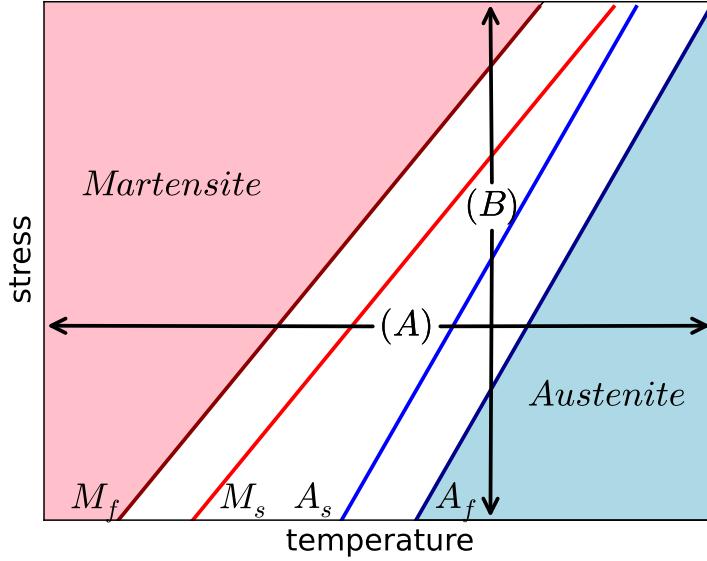


Figure 5.72: Representative phase diagram of shape memory alloys highlighting characteristic loading paths ((A) and (B)), transformation surfaces, and phases.

a rate dependency associated with the strong thermomechanical coupling of SMAs. Specifically, the transformation process gives off/absorbs large amounts of energy via the *latent heat of transformation*. The rate dependence observed is a result of the characteristic time scale associated with thermal transport of this heat. In pure mechanical analyses (like Sierra/SM), this means quasistatics loadings are typically considered (a strain rate of  $\approx 1 \times 10^{-4}$  and/or heating/cooling rate of  $\approx 2^\circ\text{C}/\text{min}$ ). Formulations accounting for the full coupling have been developed but require more complex implementations.

To begin, the model assumes an additive decomposition of the total, elastic, thermal, and transformation deformation (strain) rates respectively denoted by  $D_{ij}$ ,  $D_{ij}^e$ ,  $D_{ij}^{\text{th}}$  and  $D_{ij}^{\text{tr}}$  producing a total deformation rate of the form,

$$D_{ij} = D_{ij}^e + D_{ij}^{\text{th}} + D_{ij}^{\text{tr}}. \quad (5.20.1)$$

With respect to the thermoelastic deformations, it is noted that the different crystallographic phases have different thermoelastic constants. Previous studies have demonstrated that a rule of mixtures on the compliance and other material properties of the form,

$$\mathbb{S}_{ijkl} = \mathbb{S}_{ijkl}^A + \xi (\mathbb{S}_{ijkl}^M - \mathbb{S}_{ijkl}^A) = \mathbb{S}_{ijkl}^A + \xi \Delta \mathbb{S}_{ijkl}, \quad (5.20.2)$$

$$\alpha_{ij} = \alpha^A \delta_{ij} + \xi (\alpha^M \delta_{ij} - \alpha^A \delta_{ij}) = \alpha^A \delta_{ij} + \xi \Delta \alpha \delta_{ij}, \quad (5.20.3)$$

in which  $\mathbb{S}_{ijkl}$  and  $\alpha_{ij}$  are the current effective compliance and coefficient of thermal expansion and the superscripts “A” and “M” denote thermoelastic properties in the austenitic and martensitic con-

figuration. The symbol “ $\Delta$ ” is used to indicate the difference in a property between the martensitic and austenitic phases while  $\delta_{ij}$  is the Kronecker delta. Isotropy is assumed for all these properties and the compliances are determined via the definition of elastic moduli and Poisson’s ratio of the two phases –  $E^A$ ,  $E^M$ ,  $\nu^M$ , and  $\nu^A$ . The two Poisson ratios are often the same and take typical values for metals ( $\nu^A \approx \nu^M \approx 0.3$ ) while the elastic moduli can differ by a factor of more than two. For instance the austenitic modulus of NiTi is typically given as  $\approx 70$  GPa while the martensitic one is  $\approx 30$  GPa<sup>4</sup>. Importantly, this difference means that the thermoelastic properties and corresponding deformations vary with transformation. As such, the corresponding rates of deformation are given as,

$$D_{ij}^e = \dot{\xi} \Delta \mathbb{S}_{ijkl} \sigma_{kl} + \mathbb{S}_{ijkl} \dot{\sigma}_{kl}, \quad (5.20.4)$$

$$D_{ij}^{\text{th}} = \dot{\xi} \Delta \alpha \delta_{ij} (\theta - \theta_0) + \alpha \delta_{ij} \dot{\theta}, \quad (5.20.5)$$

where  $\theta$  and  $\theta_0$  are the current and reference temperature and  $\sigma_{ij}$  is the symmetric Cauchy stress. Note, in using the SMA model a temperature field *must* be defined. The stress rate may then be shown to be,

$$\dot{\sigma}_{ij} = \mathbb{C}_{ijkl} (D_{kl} - \alpha \delta_{kl} \theta) - \dot{\xi} (\Delta \mathbb{S}_{klmn} \sigma_{mn} + \Delta \alpha \delta_{kl} (\theta - \theta_0)) - D_{kl}^{\text{tr}}, \quad (5.20.6)$$

with  $\mathbb{C}_{ijkl}$  being the current stiffness tensor defined as  $\mathbb{C}_{ijkl} = \mathbb{S}_{ijkl}^{-1}$ .

To describe the transformation strain evolution, it is assumed that these deformations evolve with (and only with) the martensitic volume fraction,  $\xi$ . The corresponding flow rule is given as,

$$D_{ij}^{\text{tr}} = \dot{\xi} \Lambda_{ij}, \quad (5.20.7)$$

and  $\Lambda_{ij}$  is the transformation direction tensor assumed to be of the form,

$$\Lambda_{ij} = \begin{cases} H^{\text{cur}} (\bar{\sigma}_{vM}) \frac{3}{2} \frac{s_{ij}}{\bar{\sigma}_{vM}} & \dot{\xi} \geq 0 \\ \frac{\varepsilon_{ij}^{\text{tr-rev}}}{\xi^{\text{rev}}} & \dot{\xi} < 0 \end{cases}. \quad (5.20.8)$$

In (5.20.8),  $H^{\text{cur}}$  is the transformation strain magnitude that is dependent on the von Mises effective stress,  $\bar{\sigma}_{vM}$ , and  $s_{ij}$  is the deviatoric stress. With forward transformation defined in this way, it is assumed that deformation is shear-based and follows a  $J_2$  like flow direction. For reverse transformation ( $\dot{\xi} < 0$ ), the postulated form is utilized to ensure complete recovery of transformation strains with martensitic volume fraction. In other words, all transformation strain components are zero-valued at  $\xi = 0$ . Without enforcing this condition in this way, non-proportional loading paths could be constructed producing a non-zero transformation strain when the material is austenitic. The transformation strain at load reversal,  $\varepsilon_{ij}^{\text{tr-rev}}$ , and martensitic volume fraction at load reversal,  $\xi^{\text{rev}}$ , are then tracked (via the implementation) and used for this purpose.

<sup>4</sup>Given the lower symmetry of the martensitic phase the determination of an isotropic elastic modulus can vary with characterization methodology. In this case, the apparent elastic modulus measured from macroscopic thermoelastic tests should be used.

The transformation strain magnitude,  $H^{\text{cur}}$ , is a function of the von Mises effective stress ( $\bar{\sigma}_{vM}$ ) and is introduced to incorporate detwinning effects without introducing an additional internal state variable complicating the model. Specifically, at low stress values, this function returns a minimum value. If the microstructure is self-accommodated this value will be zero. A decaying exponential is used such that as the stress increases the value of the strain magnitude becomes that of the maximum value incorporating both crystallographic and texture effects. The given functional form is,

$$H^{\text{cur}} = \begin{cases} H_{\min} & \bar{\sigma}_{vM} \leq \sigma_{\text{crit}} \\ H_{\min} + (H_{\text{sat}} - H_{\min}) \left( 1 - \exp(-k(\bar{\sigma}_{vM} - \sigma_{\text{crit}})) \right) & \bar{\sigma}_{vM} > \sigma_{\text{crit}} \end{cases}, \quad (5.20.9)$$

where  $H_{\min}$ ,  $H_{\text{sat}}$ ,  $k$ , and  $\sigma_{\text{crit}}$  are model parameters giving the minimum transformation strain magnitude, maximum transformation strain magnitude, exponential fitting parameter governing the transition zone, and critical stress values (in some ways analogous to the detwinning stress).

The evolution of martensitic transformation process is governed by a transformation function serving an analogous role to the yield function in plasticity. This function is given by,

$$f(\sigma_{ij}, \theta, \xi) = \pm\phi(\sigma_{ij}, \theta, \xi) - \bar{\sigma}(\sigma_{ij}), \quad (5.20.10)$$

with  $\phi$  begin the thermodynamic driving force for transformation and  $\bar{\sigma}$  the critical value. The  $\pm$  is used to denote either forward (+) or reverse (-) transformation. This transformation function and the associated forms are derived from continuum thermodynamic considerations and the details of that process are neglected here for brevity but may be found in [3]. The functional forms of these variables are given as,

$$\begin{aligned} \phi(\sigma_{ij}, \theta, \xi) &= \sigma_{ij}\Lambda_{ij} + \frac{1}{2}\sigma_{ij}\Delta\mathbb{S}_{ijkl}\sigma_{kl} + \sigma_{ij}\Delta\alpha\delta_{ij}(\theta - \theta_0) + \rho\Delta s_0\theta - \rho\Delta u_0 - f^t(\xi), \\ \bar{\sigma}(\sigma_{ij}) &= \sigma_0 + D\sigma_{ij}\Lambda_{ij}, \end{aligned} \quad (5.20.11)$$

in which  $\rho\Delta s_0$  and  $\rho\Delta u_0$  are the differences in reference entropy and internal energy of the two phases,  $D$  is a calibration parameter intended to capture variations in dissipation with stress, and  $f^t(\xi)$  is the hardening function. With respect to this latter term, empirical observations were used to arrive at a postulated form of,

$$f^t(\xi) = \begin{cases} \frac{1}{2}a_1(1 + \xi^{n_1} - (1 - \xi)^{n_2}) + a_3 & \dot{\xi} \geq 0 \\ \frac{1}{2}a_2(1 + \xi^{n_3} - (1 - \xi)^{n_4}) - a_3 & \dot{\xi} < 0 \end{cases}, \quad (5.20.12)$$

with  $a_1$ ,  $a_2$ , and  $a_3$  being fitting parameters and  $n_1$ ,  $n_2$ ,  $n_3$ , and  $n_4$  are exponents fit to match the smooth transformation from elastic to inelastic deformations at the start of forward, end of forward, start of reverse, and end of reverse transformation respectively.

Before proceeding, one final note should be given in regards to calibration. Specifically, some of the model parameters just listed ( $a_1$ ,  $a_2$ ,  $a_3$ ,  $D$ ,  $\sigma_0$ ,  $\rho\Delta s_0$  and  $\rho\Delta u_0$ ) are not easily identified or conceptualized in terms of common thermomechanical experiments. Some easily identifiable

parameters ( $M_s$ ,  $M_f$ ,  $A_s$ , and  $A_f$ ), however, are not evident in the theoretical formulation. Conditions associated with these terms and some physical constraints may be used to determine the model parameters in terms of these more accessible properties. These relations are,

$$\rho\Delta s_0 = \frac{-2(C^M C^A) [H^{\text{cur}}(\sigma) + \sigma \frac{\partial H^{\text{cur}}}{\partial \sigma} + \sigma \left(\frac{1}{E^M} - \frac{1}{E^A}\right)]}{C^M + C^A} \Big|_{\sigma=\sigma^*}, \quad (5.20.13)$$

$$D = \frac{(C^M - C^A) [H^{\text{cur}}(\sigma) + \sigma \frac{\partial H^{\text{cur}}}{\partial \sigma} + \sigma \left(\frac{1}{E^M} - \frac{1}{E^A}\right)]}{(C^M + C^A) [H^{\text{cur}}(\sigma) + \sigma \frac{\partial H^{\text{cur}}}{\partial \sigma}]} \Big|_{\sigma=\sigma^*}, \quad (5.20.14)$$

$$a_1 = \rho\Delta s_0 (M_f - M_s), \quad a_2 = \rho\Delta s_0 (A_s - A_f), \quad (5.20.15)$$

$$a_3 = -\frac{a_1}{4} \left(1 + \frac{1}{n_1 + 1} - \frac{1}{n_2 + 1}\right) + \frac{a_2}{4} \left(1 + \frac{1}{n_3 + 1} - \frac{1}{n_4 + 1}\right), \quad (5.20.16)$$

$$\rho\Delta u_0 = \frac{\rho\Delta s_0}{2} (M_s + A_f), \quad \sigma_0 = \frac{\rho\Delta s_0}{2} (M_s - A_f) - a_3, \quad (5.20.17)$$

in which  $\sigma^*$  is the scalar stress measure in which the calibration is performed at. For additional discussion on the characterization of SMAs and calibration of this model, the user is referred to [4, 5].

### 5.20.2 Implementation

Similar to the various plasticity models in LAMÉ, an elastic predictor-inelastic corrector approach is used to perform the stress updating routine. Unlike the other models, however, in the shape memory alloy routine a convex cutting plane (CCP) return mapping algorithm (RMA) is used in lieu of the closest point projection. This difference essentially simplifies the integration of flow rule and the corresponding problem at the cost of some algorithmic stability. Prior studies [6] have shown that this implementation is sufficient for convergence in most cases while providing a substantial savings in cost. The specific implementation used here is that of [3].

To compute an elastic trial state, a trial stress is determined assuming purely thermoelastic deformations such that,

$$T_{ij}^{tr} = \mathbb{C}_{ijkl}(\xi^n) (d_{kl} \Delta t - \alpha_{kl}(\xi^n) \Delta \theta), \quad \Delta \theta = \theta^{n+1} - \theta^n. \quad (5.20.18)$$

In this case, it is assumed that the temperature fields are known at  $t_{n+1}$  and  $t_n$  (denoted  $\theta^{n+1}$  and  $\theta^n$ , respectively) and the thermoelastic properties are computed using the martensitic volume fraction at the previous time step  $\xi^n$ . At this stage, a perturbation stress ( $T_{ij}^{per} = T_{ij}^n + \beta (T_{ij}^{tr} - T_{ij}^n)$  with  $\beta \ll 1$ ) is computed and used to determine local variations of the thermodynamic driving force,  $\phi$ . This is necessary to determine the direction of transformation (forward or reverse). Using the full trial stress to this end can produce spurious results in some thermally-driven cases. The trial yield function value is then computed as,

$$f^{tr} = f(T_{ij}^{tr}, \theta^{n+1}, \xi^n) = \pm \phi(T_{ij}^{tr}, \theta^{n+1}, \xi^n) - \bar{\sigma}(T_{ij}^{tr}). \quad (5.20.19)$$

If  $f^{tr} < 0$ , no nonlinear deformation occurs and the trial solution is accepted as the material state at  $t = t_{n+1}$ . When this condition is not satisfied, the CCP-RMA routine is used to correct the trial state and return it to the yield surface.

To perform the inelastic correction, the Newton-Raphson method is iteratively used to update the material state ( $T_{ij}$  and  $\xi$ ) until convergence is achieved. Denoting the current and next iteration by  $(k)$  and  $(k+1)$ , respectively, produces updating expressions of the form,

$$\begin{aligned} T_{ij}^{(k+1)} &= T_{ij}^{(k)} + \Delta T_{ij}, \\ \xi^{(k+1)} &= \xi^{(k)} + \Delta \xi, \end{aligned} \quad (5.20.20)$$

with  $\xi^{(0)}$  and  $T_{ij}^{(0)}$  initialized to  $\xi^n$  and  $T_{ij}^{tr}$ , respectively. The key difference between the CCP and closest point projection (CPP) methods is associated with how the inelastic strain flow rules are integrated. In the former method, an explicit evaluation of the flow direction is utilized while the latter is associated with a fully implicit expression. For the CPP algorithms, this implicit expression means the flow rule must be solved in a nonlinear system of equations with the consistency equation. Relaxing this assumption via the CCP method, however, produces an explicitly evaluated flow rule of,

$$\varepsilon_{ij}^{t(k+1)} = \varepsilon_{ij}^{t(k)} + \Delta \xi \Lambda_{ij}^{(k)}. \quad (5.20.21)$$

Importantly, this means that the only nonlinear equation to be solved is the scalar consistency equation ( $f = 0$ ) which can be linearized such that,

$$\Delta \xi = -\frac{f^{(k)}}{\frac{\partial f^{(k)}}{\partial \xi} - \frac{\partial f^{(k)}}{\partial T_{ij}} \mathbb{C}_{ijkl}(\xi^{(k)}) (\Delta \mathbb{S}_{klmn} T_{mn}^{(k)} + \Delta \alpha_{kl} \Delta \theta + \Lambda_{kl}^{(k)})}, \quad (5.20.22)$$

and the stress increment is then found as,

$$\Delta T^{(k)} = -\mathbb{C}_{ijkl}(\xi^{(n)}) (\Delta \mathbb{S}_{klmn} T_{mn}^{(k)} + \Delta \alpha_{kl} \Delta \theta + \Lambda_{kl}^{(k)}) \Delta \xi. \quad (5.20.23)$$

### 5.20.3 Verification

The shape memory alloy model is verified through a series of thermomechanical loadings. The material properties and model parameters for these investigations are given in Table 5.27. These properties correspond to those given in Table 3.4 in [1] with all  $n$ 's assumed to be 1 and setting  $E^M = E^A$ .

It should also be clear that because  $H_{\min} = H_{\text{sat}}$  the model response is independent of the values of  $\sigma^{\text{crit}}$  and  $k$ . For convenience, values of  $k = 1.0 \times 10^6$  and  $\sigma^{\text{crit}} = 0$  will be used. Additionally,  $\sigma^*$  will be taken to be zero although inspection of Equation (5.20.13) and consideration of the relative magnitudes of the transformation strain and the difference in elastic strain similarly indicates an invariance in the model response to this parameter with constant  $H^{\text{cur}}$ . The default prestrain values are also utilized such that the SMA is initially austenitic.

$E^A$	55 GPa	$E^M$	55 GPa
$\nu^A$	0.33	$\nu^M$	0.33
$\alpha^A$	$22.0 \times 10^{-6} \frac{1}{K}$	$\alpha^M$	$22.0 \times 10^{-6} \frac{1}{K}$
$M_s$	245 K	$A_s$	270 K
$M_f$	230 K	$A_f$	280 K
$C^M$	$7.4 \frac{\text{MPa}}{\text{K}}$	$C^A$	$7.4 \frac{\text{MPa}}{\text{K}}$
$H_{\min}$	0.056	$H_{\text{sat}}$	0.056

Table 5.27: The material and model parameters for the shape memory alloy model used during verification test.

### 5.20.3.1 Uniaxial Stress – Pseudoelasticity

First, the isothermal ( $\theta > A_f$ ) pseudoelastic response through a uniaxial stress loading is explored. Importantly, the simplifications and model parameters described above ( $E^A = E^M = E$ ,  $H^{\text{cur}}(\bar{\sigma}_{vM}) = H$ ,  $C^A = C^M = C$ ,  $n_i = 1$ ) allow for a simple analytical description of the pseudoelastic response (essentially trilinear). For instance, given the constant slopes of the transformation surfaces, the stresses needed to induce or complete transformation are simply given by,

$$\sigma^\beta(\theta) = C(\theta - \beta), \quad \beta = M_s, M_f, A_s, A_f, \quad (5.20.24)$$

where  $\sigma^{M_s}(\theta)$  is the stress needed to start forward transformation at temperature,  $\theta$ . Given a stress value, the strain and material state may be completely determined by knowing the martensitic volume fraction,  $\xi$ . Specifically, the axial (here taken to be the 1 direction) strain is simply,

$$\varepsilon_{11} = \frac{\sigma}{E} + \xi H, \quad (5.20.25)$$

and the lateral strains are

$$\varepsilon_{22} = \varepsilon_{33} = -\nu \frac{\sigma}{E} - \frac{1}{2} \xi H, \quad (5.20.26)$$

in which the fact that the transformation strain tensor is deviatoric is being leveraged. The martensitic volume fraction may then simply be found by noting that  $f = 0$  during transformation. Therefore, for forward transformation,

$$\xi = \begin{cases} 0 & \sigma \leq \sigma^{M_s} \\ \frac{1}{a_1} (\sigma H + \rho \Delta s_0 \theta - \rho \Delta u_0 - a_3 - \sigma_0) & \sigma^{M_s} < \sigma < \sigma^{M_f} \\ 1 & \sigma \geq \sigma^{M_f} \end{cases} . \quad (5.20.27)$$

A comparable expression is easily determined for reverse transformation.

The results of this simple analytical expression and those determined by Adagio are presented in Figures 5.73 and 5.74 for three different temperatures. Figure 5.73 presents the stress-strain response under these conditions while Figure 5.74 presents the evolution of the martensitic volume fraction.

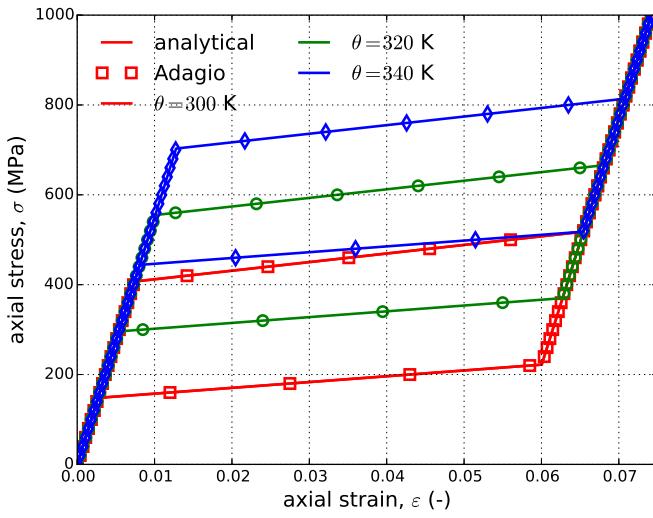


Figure 5.73: Axial stress-strain response of the Shape Memory Alloy model determined analytically and via adagio for three different ambient temperatures  $\theta = 300, 320$  and  $340$  K.

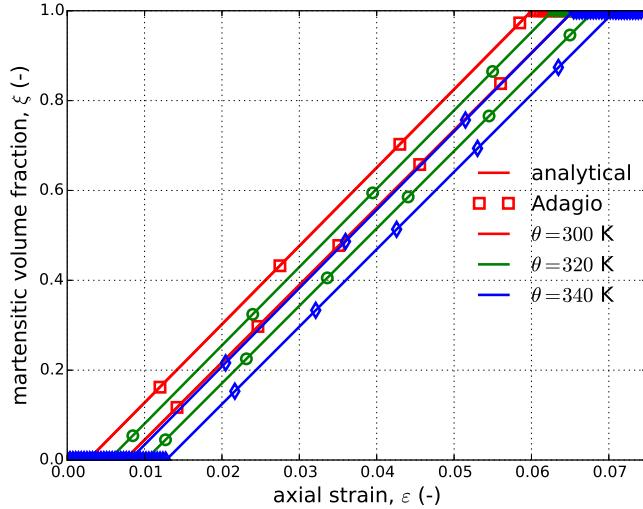


Figure 5.74: Martensitic volume fraction,  $\xi$ , evolution as a function of axial strain as determined analytically and through adagio using the Shape Memory Alloy model. Results are presented for three different ambient temperatures  $\theta = 300, 320$  and  $340$  K.

### 5.20.3.2 Constant Stress Actuation

To consider thermally driven transformation, the constant stress actuation response is investigated. In such a loading, a mechanical load is applied at high temperature ( $\theta > A_f$ ) and held constant while the specimen is cooled through forward transformation and then heated back to its initial

state. Given the aforementioned simplifications to the model parameters, the analytical response is determined in a very similar fashion to that of pseudoelasticity. In this instance, critical temperatures needed for transformation are first determined by

$$\beta^\sigma = \beta + \frac{\sigma}{C}, \quad \beta = M_s, M_f, A_s, A_f, \quad (5.20.28)$$

with  $M_s^\sigma$  being the temperature needed to start forward transformation at an effective stress,  $\sigma$ . The zero-stress value is  $M_s$ . Similarly, the axial and lateral strains may be adjusted as,

$$\varepsilon_{11} = \frac{\sigma}{E} + \xi H + \alpha(\theta - \theta_0), \quad (5.20.29)$$

$$\varepsilon_{22} = \varepsilon_{33} = -\nu \frac{\sigma}{E} - \frac{1}{2} \xi H + \alpha(\theta - \theta_0). \quad (5.20.30)$$

The martensitic volume fraction is found through relations (5.20.27) albeit with the piecewise intervals defined in terms of temperature (e.g  $\sigma^{M_s} < \sigma < \sigma^{M_f} \leftrightarrow M_f^\sigma < \theta < M_s^\sigma$ ). Results for the axial strain-temperature, lateral strain-temperature, and martensitic volume fraction-temperature as determined analytically and via adagio are presented below in Figures 5.75, 5.76, and 5.77, respectively.

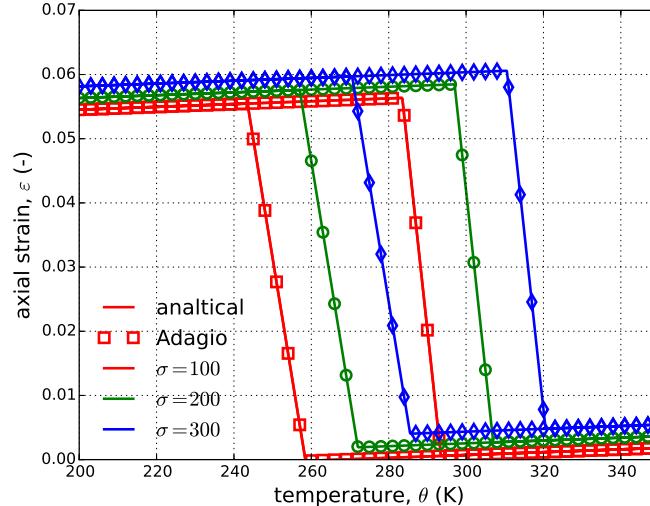


Figure 5.75: Axial strain-temperature response of the Shape Memory Alloy model determined analytically and via adagio for three different applied stresses  $\sigma = 100, 200$ , and  $300$  MPa.

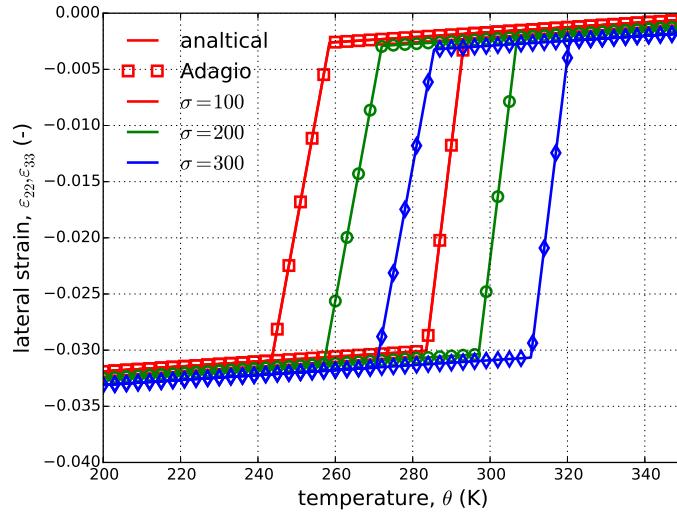


Figure 5.76: Lateral strain-temperature response of the Shape Memory Alloy model determined analytically and via adagio for three different applied stresses  $\sigma = 100, 200$ , and  $300$  MPa.

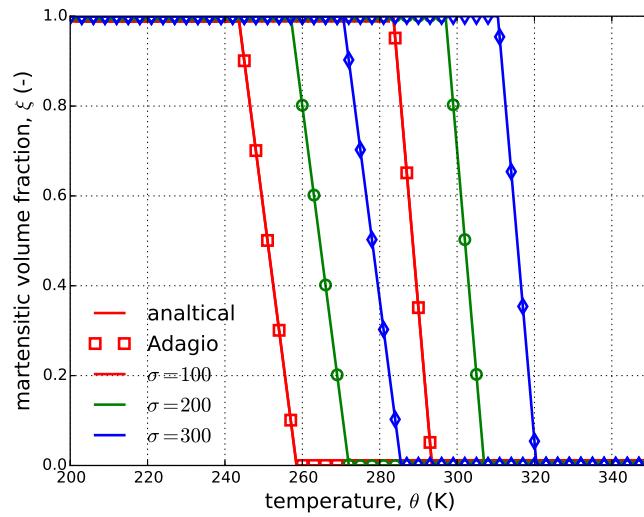


Figure 5.77: Martensitic volume fraction,  $\xi$ , evolution as a function of temperature as determined analytically and through adagio using the Shape Memory Alloy model. Results are presented for three different constant biasing stresses  $\sigma = 100, 200$  and  $300$  MPa.

#### 5.20.4 User Guide

```
BEGIN PARAMETERS FOR MODEL SHAPE_MEMORY_ALLOY
#
# Elastic constants
#
YOUNGS MODULUS = <real> E
POISSONS RATIO = <real> ν
SHEAR MODULUS = <real> G
BULK MODULUS = <real> K
LAMBDA = <real> λ
TWO MU = <real> 2μ
#
# Thermoelastic properties of two crystallographic phases
#
ELASTIC MODULUS AUSTENITE = <real> EA
POISSON RATIO AUSTENITE = <real> νA
CTE AUSTENITE = <real> αA
ELASTIC MODULUS MARTENSITE = <real> EM
POISSON RATIO MARTENSITE = <real> νM
CTE MARTENSITE = <real> αM
#
# Phase diagram parameters
#
MARTENSITE START = <real> Ms
MARTENSITE FINISH = <real> Mf
AUSTENITE START = <real> As
AUSTENITE FINISH = <real> Af
STRESS INFLUENCE COEFF MARTENSITE = <real> CM
STRESS INFLUENCE COEFF AUSTENITE = <real> CA
#
# Transformation strain magnitude parameters
#
H_MIN = <real> Hmin
H_SAT = <real> Hsat
KT = <real> k
SIGMA_CRITICAL = <real> σcrit
#
# Calibration parameters
#
N1 = <real> n1
N2 = <real> n2
N3 = <real> n3
N4 = <real> n4
SIGMA STAR = <real> σ*
T0 = <real> θ0
#
# Initial phase conditions
```

```

#
XI0           = <real>  $\xi(t = 0)$  (0.0)
PRESTRAIN_DIRECTION = <int>  $n^{\text{ps}}$  (0)
PRESTRAIN_MAGNITUDE = <real>  $\|\varepsilon_{ij}^{\text{tr}}(t = 0)\|$  (0.0)
#
END [PARAMETERS FOR MODEL SHAPE_MEMORY_ALLOY]

```

Output variables available for this model are listed in Table 5.28.

Table 5.28: State Variables for SHAPE MEMORY ALLOY Model

Name	Description
MVF	martensitic volume fraction, $\xi$
TransStrain	transformation strain tensor, $\varepsilon_{ij}^{\text{tr}}$

## References

- [1] D. C. Lagoudas, editor. *Shape Memory Alloys: Modeling and Engineering Application*. Springer, New York, NY USA, 2008.
- [2] K. Otsuka and X. Ren. Physical metallurgy of Ti-Ni-based shape memory alloys. *Progress in Materials Science*, 50:511–678, 2005.
- [3] D. Lagoudas, D. Hartl, Y. Chemisky, L. Machado, and P. Popov. Constitutive model for the numerical analysis of phase transformation in polycrystalline shape memory alloys. *International Journal of Plasticity*, 32-33:155–183, 2012.
- [4] D. J. Hartl, D. C. Lagoudas, F. T. Calkins, and J. H. Mabe. Use of a Ni60Ti shape memory alloy for active jet engine chevron application: I. thermomechanical characterization. *Smart Materials and Structures*, 19:015020, 2010.
- [5] D. J. Hartl, J. T. Mooney, D. C. Lagoudas, F. T. Calkins, and J. H. Mabe. Use of a Ni60Ti shape memory alloy for active jet engine chevron application: II. experimentally validated numerical analysis. *Smart Materials and Structures*, 19:015021, 2010.
- [6] M. A. Qidwai and D. C. Lagoudas. Numerical implementation of a shape memory alloy thermomechanical constitutive model using return mapping algorithms. *International Journal for Numerical Methods in Engineering*, 47:1123–1168, 2000.

## 5.21 Low Density Foam Model

### 5.21.1 Theory

The low density foam material model is a phenomenological model for rigid, low density polyurethane foams. Development of this model followed extensive characterization efforts at Sandia National Laboratory with special emphasis placed on hydrostatic and triaxial compression tests [1]. A key observation of this investigation was the impact of trapped air inside the foam on the load bearing capabilities of the material.

In constructing a model describing the response of the low-density foams, Neilsen et al. [1] decomposed the response into that of the polymeric skeleton and the air such that,

$$\sigma_{ij} = \sigma_{ij}^{\text{sk}} + \sigma^{\text{air}} \delta_{ij}, \quad (5.21.1)$$

where the super script “sk” is used to refer to variables relating to the skeleton and “air” to the air. The contribution of the air component is only present, however, in constrained cases when the internal gases are trapped and not allowed to escape. If the foam material is not encased or encapsulated in someway, the air may escape and  $\sigma^{\text{air}} = 0$ . A model parameter,  $N_{\text{air}}$ , is included to distinguish between these cases. If  $N_{\text{air}}$  is set to 0, the air pressure term is set to zero. For any other value, it is included.

Using the ideal gas law, it can be found that for an isothermal case,

$$\sigma^{\text{air}} = \frac{p_0 \varepsilon_V}{\varepsilon_V + 1 - \phi}, \quad (5.21.2)$$

where  $p_0$ ,  $\varepsilon_V$ , and  $\phi$  are the initial air pressure, volumetric strain, and the volume fraction of the solid (skeleton) material. Knowing the total stress of the material volume and air contribution, the skeleton stress may be found via (5.21.1). Furthermore, it should be noted that the foam (total) and skeleton strains are the same.

Based on their experimental observations, Neilsen et al. [1] noted a decoupling between the skeleton principal stresses. Therefore, the Poisson’s ratio of the skeleton is zero and that the yielding behavior in each principal direction is independent. A yield function of the form,

$$f_i = \sigma_i^{\text{sk}} - \bar{\sigma}, \quad (5.21.3)$$

where  $f_i$  and  $\sigma_i^{\text{sk}}$  are the  $i^{\text{th}}$  yield function and skeleton principal stress, respectively, and

$$\bar{\sigma} = A \langle I'_2 \rangle + B (1.0 + C \varepsilon_V) \quad (5.21.4)$$

with A, B, and C are material parameters, and  $\langle \cdot \rangle$  denoting the Heaviside step function where

$$\langle x \rangle = \begin{cases} 0 & \text{if } x \leq 0 \\ 1 & \text{if } x > 0 \end{cases}, \quad (5.21.5)$$

was proposed. Additionally,  $I'_2$  is the second invariant of the deviatoric strain. If a skeleton principal stress indicates yielding, it is set to the effective yield stress value,  $\bar{\sigma}$ .

### 5.21.2 Implementation

The low density foam material model is implemented in a hypoelastic fashion. Therefore, a trial material state of,

$$T_{ij}^{\text{sk}-tr} = T_{ij}^{\text{sk}-n} + E\Delta t d_{ij}, \quad (5.21.6)$$

$$\varepsilon_{ij}^{n+1} = \varepsilon_{ij}^n + \Delta t d_{ij}, \quad (5.21.7)$$

with  $d_{ij}$ ,  $T_{ij}^{\text{sk}}$ , and  $\varepsilon_{ij}$  are the unrotated rate of deformation, unrotated skeleton stress, and foam strain, respectively, is calculated. The superscript “*tr*” denotes a trial stress while  $E$  is the Youngs Modulus and (5.21.6) leverages the fact that the Poisson’s ratio of the skeleton is zero. The principal stresses of the trial skeleton stress state,  $T_i^{\text{sk}-tr}$ , are then computed via the algorithm of Scherzinger and Dohrmann [2].

To check the yielding behavior, the (logarithmic) volumetric strain,  $\varepsilon_V^{n+1}$ , and second invariant of the deviatoric strain,  $I'_2$ , are needed. These values are simply calculated as,

$$\varepsilon_V^{n+1} = \exp(\varepsilon_{kk}^{n+1}) - 1, \quad (5.21.8)$$

$$I'_2 = \hat{\varepsilon}_{11}^{n+1} \hat{\varepsilon}_{22}^{n+1} + \hat{\varepsilon}_{11}^{n+1} \hat{\varepsilon}_{33}^{n+1} + \hat{\varepsilon}_{22}^{n+1} \hat{\varepsilon}_{33}^{n+1} - \left[ (\hat{\varepsilon}_{12}^{n+1})^2 + (\hat{\varepsilon}_{23}^{n+1})^2 + (\hat{\varepsilon}_{31}^{n+1})^2 \right], \quad (5.21.9)$$

with  $\hat{\varepsilon}_{ij}^{n+1}$  being the deviatoric strain tensor. The effective yield stress,  $\bar{\sigma}^{n+1}$ , may be written as,

$$\bar{\sigma}^{n+1} = A \langle I'_2^{n+1} \rangle + B (1 + C \varepsilon_V^{n+1}). \quad (5.21.10)$$

It should also be noted that a steep sinusoidal approximation of the Heaviside step function to alleviate numerical issues associated with the sharp discontinuity inherit to the use of the Heaviside function. The updated principal stresses may then be determined as,

$$T_i^{\text{sk}-n+1} = \begin{cases} T_i^{\text{sk}-tr}, & |T_i^{\text{sk}-tr}| \leq |\bar{\sigma}| \\ \text{sgn}(T_i^{\text{sk}-tr}) \bar{\sigma}, & |T_i^{\text{sk}-tr}| > |\bar{\sigma}| \end{cases}, \quad (5.21.11)$$

where  $\text{sgn}(x)$  denotes the sign of  $x$ . An updated air pressure is then computed from (5.21.2) and the current stress is found to be,

$$T_{ij}^{n+1} = \sum_{k=1}^3 T_k^{\text{sk}-n+1} \hat{e}_i^k \hat{e}_j^k + \sigma^{\text{air}-n+1} (\varepsilon_V^{n+1}) \delta_{ij}, \quad (5.21.12)$$

where  $\hat{e}_i^k$  is the eigenvector associated with the  $k^{\text{th}}$  principal skeleton stress.

### 5.21.3 Verification

The low density foam model is implemented through two compression tests – uniaxial and hydrostatic. Cases both including ( $N_{\text{air}} = 1.0$ ) and excluding ( $N_{\text{air}} = 0.0$ ) the contribution of the air are investigated. The rest of the properties and parameters used for these tests are given in Table 5.29 and are originally from [3].

#### 5.21.3.1 Uniaxial Compression

First, a uniaxial compression test under displacement control is considered with and without the contribution of air. In this case, a displacement of the form  $u_1 = \lambda$  is applied while the other two directions are left traction free. When air pressure does not play a role, the model response reduces to that of the skeleton and the problem becomes one-dimensional. The deformation rate can be easily integrated to find that  $\varepsilon_{11} = \ln(1 + \lambda)$  and  $\varepsilon_V = \lambda$ . Additionally, the uniaxial compression loading considered here is obviously deviatoric in nature leading to  $\langle I'_2 \rangle$  evaluating to 1. Therefore,

$$\bar{\sigma} = A + B(1 + C\lambda), \quad (5.21.13)$$

$$\sigma_{11} = \begin{cases} E\varepsilon_{11} & |\sigma_{11}| \leq |\bar{\sigma}| \\ \text{sgn}(\varepsilon_{11})\bar{\sigma} & |\sigma_{11}| > |\bar{\sigma}| \end{cases}. \quad (5.21.14)$$

The corresponding stress and strain results are presented in Figures 5.78 and 5.79.

The case of internal air pressure is also considered by setting  $N_{\text{air}} = 1$ . This, however, complicates the response and turns it into a three-dimensional case given the pressure components in the off-loading directions. Specifically, it can be found trivially that,  $\varepsilon_{22} = \varepsilon_{33} = -\sigma^{\text{air}}/E$ . The complication arises as the volumetric strain is now,

$$\varepsilon_V = (1 + \lambda) \exp(-2\sigma^{\text{air}}/E) - 1, \quad (5.21.15)$$

leading to an implicit expression for  $\sigma^{\text{air}}$ . By evaluating  $\sigma^{\text{air}}$  in a forward Euler fashion, noting  $\bar{\sigma} = A + B(1 + C\varepsilon_V)$ , and treating (5.21.14) as an expression for  $\sigma_{11}^{\text{sk}}$  the stress and strain responses may be found as given in Figures 5.80 and 5.81. The impact of the air on the model response is clear by comparing the two sets of figures.

$E$	3010 psi	$\nu$	0.0
$A$	49.2 psi	$B$	60.8 psi
$C$	-0.517	$p_0$	14.7 psi
$\phi$	0.09		

Table 5.29: Material properties and model parameters for the low density foam model used during verification testing.

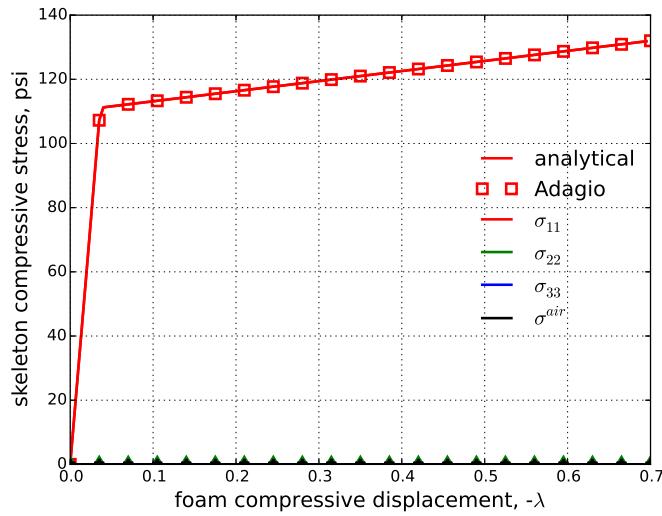


Figure 5.78: Skeleton stress determined analytically and numerically (with  $N_{\text{air}} = 0$ ) with the low density foam model during a displacement controlled uniaxial compression test

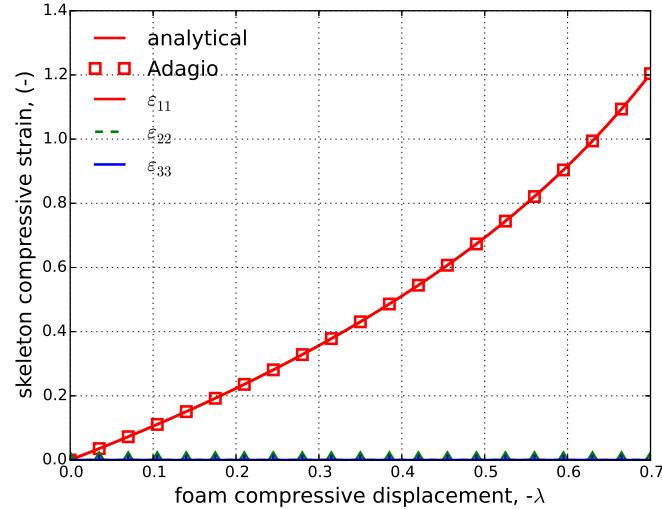


Figure 5.79: Skeleton strain determined analytically and numerically (with  $N_{\text{air}} = 0$ ) with the low density foam model during a displacement controlled unaixial compression test

### 5.21.3.2 Hydrostatic Compression

The volumetric deformation capabilities of the model are also investigated through displacement controlled hydrostatic compression. Specifically, an imposed displacement of the form  $u_i = \lambda$  is considered. The resultant strain field is  $\varepsilon_{11} = \varepsilon_{22} = \varepsilon_{33} = \ln(1 + \lambda)$  leading to a volumetric strain of the form  $\varepsilon_V = (1 + \lambda)^3 - 1$ . As there is no deviatoric deformation it is apparent that  $\langle I_2' \rangle = 0$ .

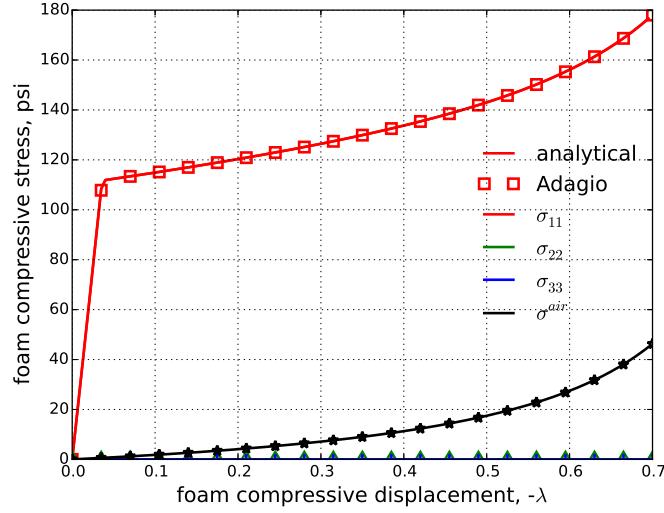


Figure 5.80: Foam stress determined analytically and numerically (with  $N_{\text{air}} = 1$ ) with the low density foam model during a displacement controlled uniaxial compression test

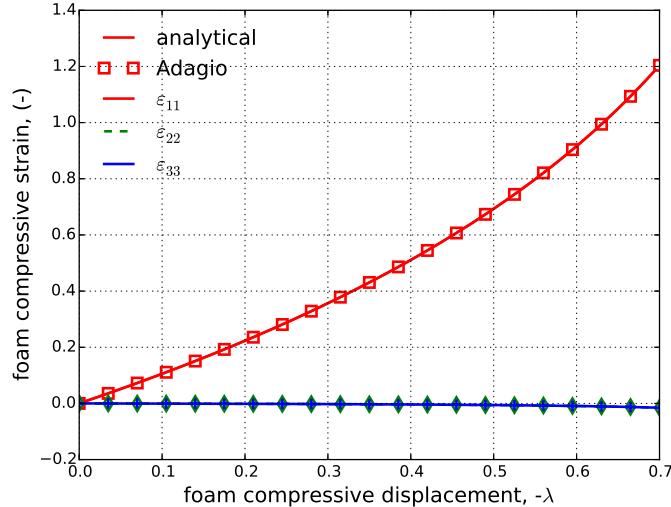


Figure 5.81: Foam strain determined analytically and numerically (with  $N_{\text{air}} = 1$ ) with the low density foam model during a displacement controlled uniaxial compression test

Therefore, the effective yield stress is  $\bar{\sigma} = B(1 + C\varepsilon_V)$ . Also noting that  $\sigma = \sigma_{11} = \sigma_{22} = \sigma_{33}$ , the foam response through such a loading may easily be determined. The foam stress for both the with and without air case is presented in Figure 5.82 along with  $\sigma^{\text{air}}$  for the appropriate case.

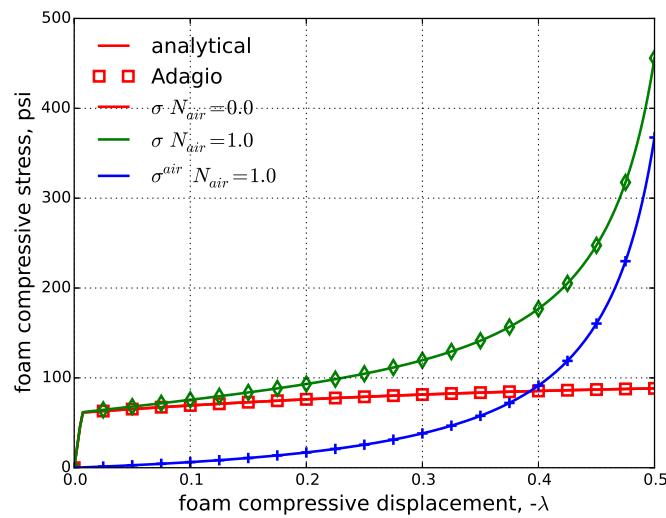


Figure 5.82: Foam stress determined analytically and numerically for both  $N_{air} = 0.0$  and  $N_{air} = 1.0$  cases for the low density foam model during displacement controlled hydrostatic compression

#### 5.21.4 User Guide

```
BEGIN PARAMETERS FOR MODEL LOW_DENSITY_FOAM
#
# Elastic constants
#
YOUNGS MODULUS = <real> E
POISSONS RATIO = <real> ν
SHEAR MODULUS = <real> G
BULK MODULUS = <real> K
LAMBDA = <real> λ
TWO MU = <real> 2μ
#
A = <real> A
B = <real> B
C = <real> C
NAIR = <real> Nair
P0 = <real> p0
PHI = <real> φ
END [PARAMETERS FOR MODEL LOW_DENSITY_FOAM]
```

State variables for this model are listed in Table 5.30.

For more information on the low density foam material model, see [1].

Table 5.30: State Variables for LOW DENSITY FOAM Model

Name	Description
PAIR	Air pressure

## References

- [1] M.K. Neilsen, H.S. Morgan, and R.D. Krieg. A phenomenological constitutive model for low density polyurethane foams. Technical Report SAND86-2927, Sandia National Laboratories, Albuquerque, NM, April 1987. [pdf](#).
- [2] W.M. Scherzinger and C.R. Dohrmann. A robust algorithm for finding the eigenvalues and eigenvectors of 3x3 symmetric matrices. *Computer Methods in Applied Mechanics and Engineering*, 197(45-48):4007–4015, 2008.
- [3] W.M. Scherzinger and D.C. Hammerand. Testing of constitutive models in LAME. Technical Report SAND2007-5872, Sandia National Laboratories, Albuquerque, NM, September 2007. [pdf](#).

## 5.22 Foam Plasticity Model

### 5.22.1 Theory

The foam plasticity model was developed to describe the response of porous materials (like closed-cell polyurethane foams) exhibiting irreversible, elastic-plastic like responses through large deformations. Such foams can exhibit significant plastic deviatoric and volumetric strains leading to permanent shape and volume changes, respectively. The former behavior is quite typical of metals and corresponding theories are well established. The latter response, however, is not typical of metals and a theory combining these two behaviors is needed. Given these responses of interest, the foam plasticity model is well suited to use with metal foams and many closed-cell polymeric foams (e.g. polyurethane, polystyrene bead, etc.) subjected to large deformations. As permanent strains are of interest, this model is not appropriate for use with flexible foams that return to their undeformed shape after loads are removed.

Specifically, the model developed by Neilsen et al. [? ] seeks to capture the response associated with three distinct deformation regimes. First, when foams are initially compressed, they typically exhibit an elastic response. After sufficient load is applied, a plateau of nearly constant stress over a large deformation region is noted as pores start to compress and cell walls undergo substantial deformation. Eventually, the various collapsed cells and walls begin to interact and a densification response with substantial hardening is observed. Details of these deformation processes may be found in the text of Gibson and Ashby [? ].

Like other plasticity-based models, the incremental constitutive law for the foam plasticity model is written as,

$$\dot{\sigma}_{ij} = \mathbb{C}_{ijkl} D_{kl}^e, \quad (5.22.1)$$

where an additive decomposition of the strain rates such that  $D_{ij} = D_{ij}^e + D_{ij}^p$  is assumed. To describe the inelastic response of the foams of interest, Neilsen and coworkers [? ] proposed a yield function of the form

$$f = \frac{\bar{\sigma}^2}{a^2} + \frac{p^2}{b^2} - 1, \quad (5.22.2)$$

where  $\bar{\sigma}$  is the von Mises effective stress ( $\bar{\sigma} = \sqrt{(3/2) s_{ij} s_{ij}}$  with  $s_{ij}$  being the deviatoric stress) and  $p$  being the hydrostatic pressure that is positive in compression ( $p = -(1/3) \sigma_{kk}$ ). In such a form, the initial yield surface forms an ellipsoid about the hydrostat. The two denominators,  $a$  and  $b$ , are state variables capturing hardening effects and have the functional form of,

$$a = A_0 + A_1 \phi^{A_2}, \quad (5.22.3)$$

$$b = \begin{cases} B_0 + B_1 \phi^{B_2} & p \geq 0 \\ B_0 & p < 0 \end{cases}, \quad (5.22.4)$$

with  $A_0$ ,  $A_1$ ,  $A_2$ ,  $B_0$ ,  $B_1$ , and  $B_2$  being model parameters and  $\phi$  being the maximum volume fraction of solid material obtained through the loading history and is defined as,

$$\phi = \phi_0 \frac{V_0}{V}, \quad (5.22.5)$$

in which  $\phi_0$  is the initial volume fraction of solid material and  $V_0$  and  $V$  are the initial volume and current volume, respectively, of the foam. Put in terms of the deformation,

$$\phi = \phi_0 \frac{1}{1 + \varepsilon_V}, \quad (5.22.6)$$

where  $\varepsilon_V$  is the engineering volume strain.

To describe the inelastic plastic deformation, a non-associated flow rule is used. Specifically,

$$D_{ij}^p = \dot{\gamma} g_{ij}, \quad (5.22.7)$$

where  $\dot{\gamma}$  is the consistency multiplier found by enforcing the corresponding condition and

$$g_{ij} = (1 - \beta) g_{ij}^a + \beta g_{ij}^r, \quad (5.22.8)$$

with the superscripts “a” and “r” being used to denote associated and radial flow directions, respectively. The model parameter  $\beta$  is introduced in (5.22.8) to enable associated ( $\beta = 0$ ), radial ( $\beta = 1$ ), or a linear combination of the two flow rules ( $0 < \beta < 1$ ) to be used. The two direction vectors may be written as,

$$g_{ij}^a = \frac{\frac{\partial f}{\partial \sigma_{ij}}}{\left| \frac{\partial f}{\partial \sigma_{kl}} \right|} = \frac{\frac{3}{a^2} s_{ij} - \frac{2}{3b^2} p \delta_{ij}}{\left| \frac{3}{a^2} s_{ij} - \frac{2}{3b^2} p \delta_{ij} \right|}, \quad (5.22.9)$$

$$g_{ij}^r = \frac{\sigma_{ij}}{|\sigma_{kl}|} = \frac{\sigma_{ij}}{\sqrt{\sigma_{kl} \sigma_{kl}}}. \quad (5.22.10)$$

## 5.22.2 Implementation

Like other more classical rate-independent plasticity models (e.g. 5.6.2), the foam plasticity model is implemented in a hypoelastic fashion using an elastic predictor-inelastic corrector scheme. As such, a trial material state is calculated by assuming purely elastic deformations. The trial stress is given by,

$$T_{ij}^{tr} = T_{ij}^n + \Delta t (\lambda \delta_{ij} d_{kk} + 2\mu d_{ij}), \quad (5.22.11)$$

and an updated logarithmic volume strain is given by,

$$\varepsilon_{kk}^{n+1} = \varepsilon_{kk}^n + \Delta t d_{kk}. \quad (5.22.12)$$

The engineering volume strain may then be readily computed via  $\varepsilon_{\text{V}}^{n+1} = \exp(\varepsilon_{kk}^{n+1}) - 1$ . A trial solid volume fraction is then calculated,  $\phi^{tr} = \phi_0 \frac{1}{1+\varepsilon_{\text{V}}^{n+1}}$ , and compared to the previous maximum to obtain the maximum solid volume fraction over the loading history,

$$\phi^{n+1} = \max(\phi^n, \phi^{tr}). \quad (5.22.13)$$

Equations (5.22.3) and (5.22.4) are evaluated using the volume fraction found in (5.22.13). Using invariants of the trial stress state, the yield function (5.22.2) is calculated. If  $f \leq 0$ , the loading is elastic and the trial solution is correct. On the other hand, if  $f > 0$  a correction scheme is necessary to iterate and determine the inelastic solution. To that end, by noting  $\Delta T_{ij} = -\mathbb{C}_{ijkl}\Delta d_{kl}^P = -\Delta\gamma\mathbb{C}_{ijkl}g_{kl}$  (with “ $\Delta$ ” being a correction increment), the consistency condition may be used to find,

$$\Delta\gamma = \frac{f}{\frac{\partial f}{\partial \sigma_{ij}}\mathbb{C}_{ijkl}g_{kl}}, \quad (5.22.14)$$

where the fact that the strain (and therefore  $a$  and  $b$  do not change over an increment. The correction is repeated until  $f < \text{tol}$ .

### 5.22.3 Verification

The foam plasticity model is verified through a hydrostatic compression tests. Material properties used for this test are presented in Table 5.31 and correspond to room temperature properties of the PMDI20 rigid polyurethane foam characterized in [? ].

$E$	22,600 psi	$\nu$	0.343
$A_0$	513.3 psi	$A_1$	4,629 psi
$A_2$	2.90	$\phi_0$	0.238
$B_0$	971 psi	$B_1$	7,377.5 psi
$B_2$	4.89	$\beta$	0.95

Table 5.31: Material properties and model parameters for the foam plasticity model used during verification testing.

#### 5.22.3.1 Hydrostatic Compression

The response of the foam plasticity model to hydrostatic compression is investigated here. Specifically, a displacement of the form  $u_i = \lambda$  is imposed resulting in a total strain field of  $\varepsilon_{11} = \varepsilon_{22} = \varepsilon_{33} = \ln(1 + \lambda)$  and the engineering volume strain is simply  $\varepsilon_{\text{V}} = (1 + \lambda)^3 - 1$ . Furthermore, the maximum solid volume fraction monotonically increases and may be found to be  $\phi = \phi_0 \frac{1}{(1+\lambda)^3}$ . The stress state undergoes a similar reduction and is given to  $\sigma_{ij} = -p\delta_{ij}$  and  $s_{ij} = 0$ . This simplification leads to a reduced yield function of the form,

$$f = \frac{p^2}{b^2} - 1, \quad (5.22.15)$$

where  $b$  is evaluated via (5.22.4) and is a function of the strain. The model may then be simply solved as,

$$p = \begin{cases} -3K \ln(1 + \lambda) & f \leq 0 \\ b & f > 0 \end{cases} \quad (5.22.16)$$

The elastic strains then reduce to  $\varepsilon_{ij}^e = -\frac{p}{3K}\delta_{ij}$  and the plastic strains computed as  $\varepsilon_{ij}^p = (\ln(1 + \lambda) + \frac{p}{3K})\delta_{ij}$ . The resulting engineering strain vs. pressure results determined numerically and analytically are presented in Figure 5.83.

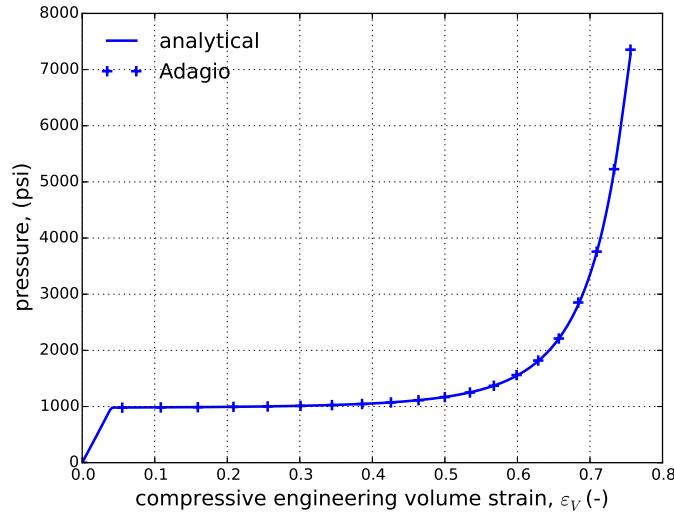


Figure 5.83: Pressure vs. engineering volume strain ( $\varepsilon_V$ ) response of the foam plasticity model through a hydrostatic compression cycle

#### 5.22.4 User Guide

```

BEGIN PARAMETERS FOR MODEL FOAM_PLASTICITY
#
# Elastic constants
#
YOUNGS MODULUS = <real> E
POISSONS RATIO = <real> ν
SHEAR MODULUS = <real> G
BULK MODULUS = <real> K
LAMBDA = <real> λ
TWO MU = <real> 2μ
#
#
#
PHI = <real> φ₀
SHEAR STRENGTH = <real> A₀
SHEAR HARDENING = <real> A₁
SHEAR EXPONENT = <real> A₂
HYDRO STRENGTH = <real> B₀
HYDRO HARDENING = <real> B₁
HYDRO EXPONENT = <real> B₂
BETA = <real> β
END [PARAMETERS FOR MODEL FOAM_PLASTICITY]

```

Output variables available for this model are listed in Table 5.32.

Table 5.32: State Variables for FOAM PLASTICITY Model

Name	Description
ITER	iterations
EVOL	volumetric strain
PHI	phi, $φ$
EQPS	equivalent plastic strain, $\bar{ε}^p$
PA	$A$
PB	$B$

## 5.23 Viscoplastic Foam Model

### 5.23.1 Theory

The viscoplastic foam model is used to model the rate (and temperature) dependent crushing of foams [1]. It is based on an additive split of the rate of deformation into an elastic and plastic portion

$$D_{ij} = D_{ij}^e + D_{ij}^p. \quad (5.23.1)$$

The stress in the material is due strictly to the elastic portion of the rate of deformation so that

$$\overset{\circ}{\sigma}_{ij} = \mathbb{C}_{ijkl} D_{kl}^e, \quad (5.23.2)$$

where  $\mathbb{C}_{ijkl}$  are the components of the fourth-order, isotropic elasticity tensor. The stress rate is arbitrary, as long as it is objective. Two objective stress rates are commonly used: the Jaumann rate and the Green-McInnis rate. For problems with fixed principal axes of deformation, these two rates give the same answers. For problems where the principal axes of deformation rotate during deformation, the two rates can give different answers. Generally speaking there is no reason to pick one objective rate over another.

To describe the rate-dependent response, an over-stress type yield function is used. Specifically, the rate-independent foam plasticity yield function (5.22.2) is rearranged such that,

$$f = \sigma^* - a, \quad (5.23.3)$$

where  $\sigma^*$  is the effective stress given by

$$\sigma^* = \sqrt{\bar{\sigma}^2 + \frac{a^2}{b^2} p^2}. \quad (5.23.4)$$

In (5.23.4),  $\bar{\sigma}$  is the von Mises effective stress ( $\bar{\sigma} = \sqrt{\frac{3}{2} s_{ij} s_{ij}}$ ) and  $p$  is the pressure resulting from a stress decomposition of the form,

$$\sigma_{ij} = s_{ij} - p \delta_{ij}. \quad (5.23.5)$$

Furthermore,  $a$  and  $b$  are state variables that are functions of the absolute temperature,  $\theta$ , and maximum solid volume fraction,  $\phi$ , and are defined as<sup>5</sup>

---

<sup>5</sup>In addition to the given analytical expressions,  $a$  and  $b$  may be optionally specified as user defined functions of the maximum solid volume fraction. In these cases, however, the temperature dependence is neglected.

$$a(\theta, \phi) = A_0(\theta) + A_1(\theta) \phi^{A_2} \quad (5.23.6)$$

$$(5.23.7)$$

$$b(\theta, \phi) = B_0(\theta) + B_1(\theta) \phi^{B_2}. \quad (5.23.8)$$

The temperature dependent material properties in the preceding relations are all defined as,  $A_0(\theta) = A_0 h_{A_0}(\theta)$  where  $A_0$  is the reference material parameter and  $h_{A_0}(\theta)$  is the relative value as a function of temperature. In addition to the  $a$  and  $b$  state variables, the Young's modulus and Poisson's ratio are also functions of the absolute temperature. The latter may be written as  $\nu(\theta) = \nu h_\nu(\theta)$  while the former is also dependent on the maximum volume fraction of solid material and is given as  $E(\theta, \phi) = E h_E(\theta) f_E(\phi)$ .

The maximum volume fraction of solid material,  $\phi$ , is given by

$$\phi = \max_{t>0} \tilde{\phi}(t) \quad (5.23.9)$$

where  $\tilde{\phi}(t)$  is the current volume fraction of solid material and is defined as,

$$\tilde{\phi}(t) = \frac{\phi_0}{\exp(\varepsilon_\nu^p)} \quad (5.23.10)$$

with  $\phi_0$  being the initial solid volume fraction and  $\varepsilon_\nu^p$  is

$$\varepsilon_\nu^p = \int_0^t D_{kk}^p dt. \quad (5.23.11)$$

During inelastic deformation ( $f > 0$ ), the corresponding rate of plastic deformation is given in a Perzyna-type form as,

$$D_{ij}^p = \begin{cases} \exp(h(\theta)) \left( \frac{\sigma^*}{a} - 1 \right)^{n(\theta)} g_{ij} & \text{if } f > 0 \\ 0 & \text{if } f < 0 \end{cases} \quad (5.23.12)$$

where  $h(\theta)$  and  $n(\theta)$  are the flow rate and power exponent respectively. The inelastic flow direction,  $g_{ij}$ , is given as a linear combination of the associated (with respect to (5.22.2)),  $g_{ij}^a$ , and radial,  $g_{ij}^r$ ,

$$g_{ij} = (1 - \beta) g_{ij}^a + \beta g_{ij}^r. \quad (5.23.13)$$

The directions  $g_{ij}^a$  and  $g_{ij}^r$  are given in Equations (5.22.9) and (5.22.10), respectively. In this model, the flow rule weight,  $\beta$ , may be specified as either a constant value or as a function of the maximum solid volume fraction ( $\beta = \beta(\phi)$ ).

### 5.23.2 Implementation

As the viscoplastic foam model is a time-dependent, hypoelastic model it is integrated using an explicit, forward Euler scheme. Given this approach, a critical time step for stability is computed based on the shear strength, current modulus, and deviatoric deformation rate. If the input timestep is acceptable, the new material state at time  $t = t_{n+1}$  is computed. On the other hand, if the timestep is too large a series of subincrements are used. In this case, the total timestep  $\Delta t$  is subdivided into  $N$  subincrements. Each such subinterval (denoted by  $k$ ) has a time increment  $\delta t^k$  such that  $\Delta t = \sum_{k=1}^N \delta t^k$  and the forward Euler time stepping scheme is performed over each subinterval until the desired material state at time  $t_{n+1}$  is determined. For the case of temperature dependent variables (e.g. the Poisson's ratio  $\nu$ ), the value at the start of the subincrement is determined by linearly interpolating over the total time step,

$$\nu^k = \nu_n + \frac{\Delta t^k}{\Delta t} (\nu_{n+1} - \nu_n), \quad (5.23.14)$$

where  $\Delta t^k$  is the current subincrement time,  $\Delta t^k = \sum_{r=1}^k \delta t^r$ . For simplicity, in the remainder of this section it is assumed that the input timestep is acceptable and only a single increment is needed. If additional subincrements are needed, the below steps would be repeated  $N$  times with time intervals of  $\delta t^k$ .

Noting the forward Euler approach adopted in this formulation, the first step is to determine the temperature (and solid volume fraction) dependent model parameters ( $E$ ,  $\nu$ ,  $A_0$ ,  $A_1$ ,  $B_0$ ,  $B_1$ ,  $h$  and  $n$ ). With the parameters established, state variables  $a$  and  $b$  are easily determined through (5.23.6) and (5.23.8), respectively, enabling the calculation of the effective stress via (5.23.4). The effective inelastic (plastic) strain rate,  $\dot{\varepsilon}^p$ , is then given as,

$$\dot{\varepsilon}^p = \exp(h(\theta_n)) \left\langle \frac{\sigma_n^*}{a_n} - 1 \right\rangle^{n(\theta_n)}, \quad (5.23.15)$$

with  $\langle \rangle$  being the Macaulay brackets such that,

$$\langle x \rangle = \begin{cases} x & x \geq 0 \\ 0 & x < 0 \end{cases}. \quad (5.23.16)$$

Knowing the magnitude of the rate of inelastic deformation, the change in deviatoric and hydrostatic stresses is simply,

$$\dot{s}_{ij} = 2\mu(\theta_n, \phi_n) (\hat{d}_{ij} - \hat{d}_{ij}^p), \quad (5.23.17)$$

$$\dot{p} = K(\theta_n, \phi_n) (d_{kk} - d_{kk}^p), \quad (5.23.18)$$

where  $d_{ij}$  is the total un-rotated rate of deformation,  $\hat{x}_{ij}$  denotes the deviatoric portion of tensor  $x_{ij}$ , and  $d_{ij}^p$  is the plastic rate of deformation given by,

$$d_{ij}^p = \dot{\varepsilon}^p g_{ij}^n. \quad (5.23.19)$$

In (5.23.19),  $g_{ij}$  is the inelastic flow direction and can be calculated via (5.23.13).

An additional comment is needed with respect to accounting for temperature and solid volume fraction dependence in the shear and bulk moduli. This careful consideration is necessary due to the fact that the temperature dependence is only given with respect to the elastic moduli and Poisson's ratio. As such, the shear and bulk moduli inherit the associated dependencies and are calculated for isotropic elastic relations. For the bulk moduli, this leads to an expression of the form,

$$K(\theta, \phi) = \frac{Eh_E(\theta)f_E(\phi)}{3(1 - 2\nu h_v(\theta))}. \quad (5.23.20)$$

The updated stress state is then easily computed by explicitly integrating the established expressions. Specifically,

$$s_{ij}^{n+1} = \frac{\mu_{n+1}}{\mu_n} s_{ij}^n + \dot{s}_{ij}\Delta t, \quad (5.23.21)$$

$$p^{n+1} = \frac{K_{n+1}}{K_n} p^n + \dot{p}\Delta t, \quad (5.23.22)$$

$$T_{ij}^{n+1} = s_{ij}^{n+1} + p^{n+1}\delta_{ij}, \quad (5.23.23)$$

with  $\mu_n$  and  $K_n$  representing  $\mu(\theta_n, \phi_n)$  and  $K(\theta_n, \phi_n)$ , respectively, and  $T_{ij}$  being the un-rotated stress.

### 5.23.3 Verification

The viscoplastic foam model was verified in both uniaxial and hydrostatic compression. The material properties and model parameters for both of these investigations are given in Table 5.33. As both loadings are isothermal, temperature dependence is neglected in the relevant model parameters. Furthermore, analytical solutions could not be found directly, so semi-analytical solutions were found.

$E$	4,807 psi	$A_0$	63.03 psi
$\nu$	0.33	$A_1$	7000 psi
$h$	-8.12	$A_2$	3.7878
$n$	2	$B_0$	93 psi
$\beta$	0.9	$B_1$	1483.4 psi
$\phi_0$	0.1148	$B_2$	3.7878

Table 5.33: The material properties for the viscoplastic foam model tested in uniaxial stress.

### 5.23.3.1 Uniaxial Compression

To obtain a semi-analytical solution for the uniaxial compression test, the model was reduced to a one-dimensional form and then numerically integrated. The results obtained from the implemented model and the semi-analytical solution are shown below in Figure 5.84.

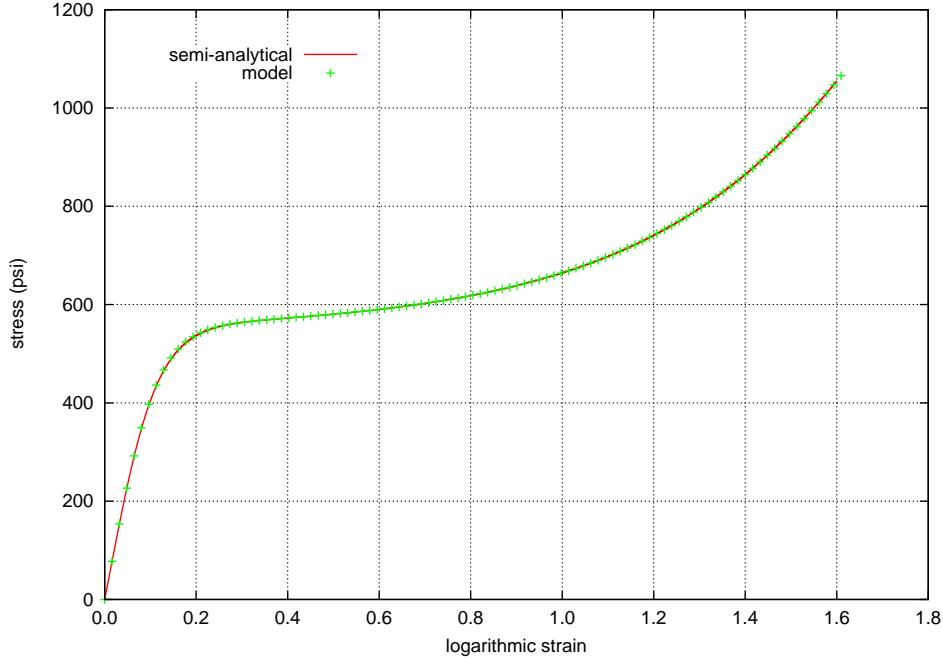


Figure 5.84: Verification of the viscoplastic foam model in uniaxial compression showing the axial stress as a function of the logarithmic strain.

### 5.23.3.2 Hydrostatic Compression

The response of the model through hydrostatic compression. To this end, a displacement of the form  $u_i = \lambda(t)$  is considered. The applied displacement scales linearly from  $\lambda = 0$  at  $t = 0.0$  to  $\lambda = -0.7$  at  $t = t_{\max}$ . Rate-dependent effects are considered through the use of two cases each with a different  $t_{\max}$ . Creatively denoted “Fast” and “Slow”, the two cases correspond to  $t_{\max} = 1$  s and  $t_{\max} = 100$  s, respectively. With such a displacement field, the engineering volume strain,  $\varepsilon_V$ , is simply  $\varepsilon_V = (1 + \lambda)^3 - 1$ . Additionally, the stress state reduces trivially to  $\sigma_{ij} = -p\delta_{ij}$ .

Given the rate-dependent overstress form of the constitutive model, an analytical solution is not readily available. Therefore, a semi-analytical analysis using a model reduction specialized for hydrostatic loadings is considered. Specifically, noting  $s_{ij} = 0$ , the overstress reduces to,

$$\sigma^* = \frac{a}{b}|p|. \quad (5.23.24)$$

Furthermore, the associated and radial flow direction vectors simplify to the same form and are given as,

$$g_{ij}^a = g_{ij}^r = -\frac{1}{\sqrt{3}} \operatorname{sgn}(p) \delta_{ij}, \quad (5.23.25)$$

where  $\operatorname{sgn}(p)$  is the sign of  $p$ . The semi-analytical (integrated in a forward Euler fashion) and numerical results are presented in Figure 5.85.

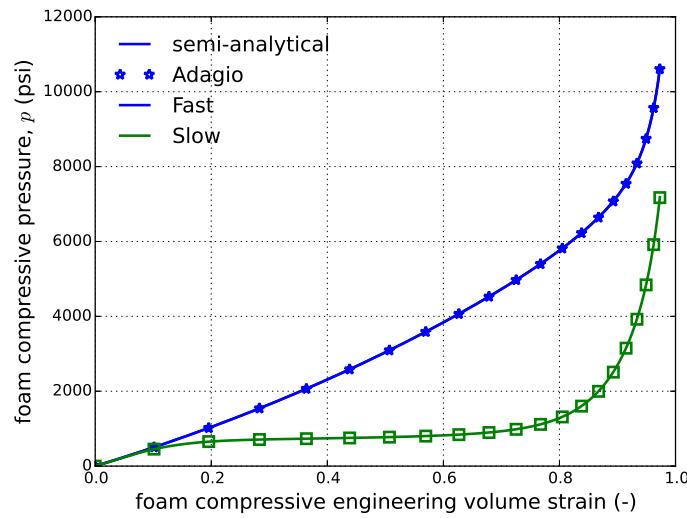


Figure 5.85: Pressure-engineering volume strain results of viscoplastic foam model subjected to a hydrostatic loading at both fast and slow rates determined semi-analytically and numerically.

#### 5.23.4 User Guide

```

BEGIN PARAMETERS FOR MODEL VISCOPLASTIC_FOAM
#
# Elastic constants
#
YOUNGS MODULUS = <real> E
POISSONS RATIO = <real> ν
SHEAR MODULUS = <real> G
BULK MODULUS = <real> K
LAMBDA = <real> λ
TWO MU = <real> 2μ

FLOW RATE = <real> h
POWER EXPONENT = <real> n
BETA = <real> β
PHI = <real> φ₀

SHEAR STRENGTH = <real> A₀
SHEAR HARDENING = <real> A₁
SHEAR EXPONENT = <real> A₂
HYDRO STRENGTH = <real> B₀
HYDRO HARDENING = <real> B₁
HYDRO EXPONENT = <real> B₂

YOUNGS FUNCTION = <string> hE(θ)
POISSONS FUNCTION = <string> hν(θ)
SS FUNCTION = <string> hA₀(θ)
SH FUNCTION = <string> hA₁(θ)
HS FUNCTION = <string> hB₀(θ)
HH FUNCTION = <string> hB₁(θ)
RATE FUNCTION = <string> hh(θ)
EXPONENT FUNCTION = <string> hn(θ)
STIFFNESS FUNCTION = <string> fE(φ)

#Optional user-specified functions
SHEAR HARDENING FUNCTION = <string> a(φ) #Do not specify A₀, A₁, A₂
HYDRO HARDENING FUNCTION = <string> b(φ) #Do not specify B₀, B₁, B₂
BETA FUNCTION = <string> β(φ) #Do not specify β
END [PARAMETERS FOR MODEL VISCOPLASTIC_FOAM]

```

Output variables available for this model are listed in Table 5.34.

Table 5.34: State Variables for VISCOPLASTIC FOAM Model

Name	Description
ITER	number of subincrements
EPVOL	inelastic volumetric strain, $\varepsilon_v^p$
EDOT	effective inelastic strain rate, $\dot{\varepsilon}^p$
PHI	volume fraction of solid material, $\phi$
FA	shear strength, $a$
FB	hydrostatic strength, $b$
STIF	elastic stiffness as a function of $\phi$

## References

[1] M. K. Neilsen, W. Y. Lu, B. Olsson, and T. Hinnerichs. A viscoplastic constitutive model for polyurethane foams. In *Proceedings ASME 2006 International Mechanical Engineering Congress and Exposition*, Chicago, IL, 2006. ASME.

## 5.24 Foam Damage

### 5.24.1 Theory

The foam damage model was developed at Sandia National Laboratories to model the behavior of rigid polyurethane foams under a variety of loading conditions [1]. For instance, temperature, rate, and tension-compression dependencies are all built into this model. In constructing this model, previous efforts and experience with other foam models (e.g. low density foam 5.21, foam plasticity 5.22, and viscoplastic foam 5.23) was leveraged. Like those past efforts, this model utilizes an additive decomposition of the strain rates into elastic and inelastic parts,

$$D_{ij} = D_{ij}^e + D_{ij}^{\text{in}}. \quad (5.24.1)$$

It is also assumed that the elastic response is linear and isotropic such that the stress rate for isothermal conditions is given by the following equation

$$\overset{\circ}{\sigma}_{ij} = \mathbb{C}_{ijkl} D_{kl}^e = \mathbb{C}_{ijkl} (D_{kl} - D_{kl}^{\text{in}}), \quad (5.24.2)$$

with  $\mathbb{C}_{ijkl}$  being the fourth-order, isotropic elasticity tensor. The specific stress rate considered is arbitrary as long as it is object. Two common rates satisfying that constraint are the Jaumann and Green-McInnis rates.

The initial yield surface is assumed to be an ellipsoid about the hydrostat and is described by the function

$$f = \frac{\bar{\sigma}^2}{a^2} + \frac{p^2}{b^2} - 1 = 0, \quad (5.24.3)$$

where  $a$  and  $b$  are state variables that define the current deviatoric and volumetric strengths, respectively, of the foam. The von Mises effective stress,  $\bar{\sigma}$  is a scalar measure of the deviatoric stress given by

$$\bar{\sigma} = \sqrt{\frac{3}{2} s_{ij} s_{ij}}, \quad (5.24.4)$$

while  $p$  is the pressure, or mean stress, and is defined as

$$p = \frac{1}{3} \sigma_{kk}, \quad (5.24.5)$$

with  $\sigma_{ij}$  and  $s_{ij}$  being the components of the Cauchy and deviatoric stress. This latter tensor may be written as,

$$s_{ij} = \sigma_{ij} - p\delta_{ij}, \quad (5.24.6)$$

where  $\delta_{ij}$  are the components of the identity tensor -  $\delta_{ij} = 1$  if  $i = j$ ,  $\delta_{ij} = 0$  if  $i \neq j$ .

For this model, the yield function (5.24.3) is re-written as

$$f = \sigma^* - a = 0 \quad (5.24.7)$$

with the effective stress,  $\sigma^*$ , being a function of the von Mises effective stress,  $\bar{\sigma}$ , and the pressure,  $p$ , as follows

$$\sigma^* = \sqrt{\bar{\sigma}^2 + \frac{a^2}{b^2} p^2}. \quad (5.24.8)$$

Next, using a Perzyna-type formulation, the following expression for the inelastic strain rate,  $D_{ij}^{\text{in}}$ , is developed

$$D_{ij}^{\text{in}} = \begin{cases} \dot{\varepsilon}^p g_{ij} = e^h \left( \frac{\sigma^*}{a} - 1 \right)^n g_{ij} & \text{if } \frac{\sigma^*}{a} - 1 > 0 \\ 0 & \text{if } \frac{\sigma^*}{a} - 1 \leq 0, \end{cases} \quad (5.24.9)$$

where  $g_{ij}$  are the components of a symmetric, second-order tensor that defines the orientation of the inelastic flow. This type of model is sometimes referred to as an over-stress model because the inelastic rate is a function of the over-stress - the distance outside the yield surface. For associated flow,  $g_{ij}$  is simply normal to the yield surface and is given by

$$g_{ij}^a = \frac{\frac{\partial f}{\partial \sigma_{ij}}}{\left| \frac{\partial f}{\partial \sigma_{kl}} \right|} = \frac{\frac{3}{a^2} s_{ij} + \frac{2}{3b^2} p \delta_{ij}}{\left| \frac{3}{a^2} s_{kl} + \frac{2}{3b^2} p \delta_{kl} \right|}. \quad (5.24.10)$$

When lower density foams are subjected to a simple load path like uniaxial compression, the inelastic flow direction at moderate strains appears nearly uniaxial. In other words, the flow direction is given by the normalized stress tensor as follows

$$g_{ij}^r = \frac{\sigma_{ij}}{|\sigma_{kl}|}. \quad (5.24.11)$$

This type of flow is called radial flow. The foam damage model has another parameter,  $\beta$ , which allows for the flow direction to be prescribed as a linear combination of associated and radial flow such that,

$$g_{ij} = \frac{(1 - \beta) g_{ij}^a + \beta g_{ij}^r}{|(1 - \beta) g_{kl}^a + \beta g_{kl}^r|}. \quad (5.24.12)$$

Rigid polyurethane foams have little ductility when they are subjected to tensile stress. For this loading case, the materials behave more like brittle materials and even for uniaxial compression the foams often show cracking at large strains.

The damage surfaces for the foam damage model are simply three orthogonal planes with the normals given by the positive principal stress axes. The damage surfaces are given by the following equation

$$f_{\text{dam}}^i = \hat{\sigma}^i - c(1 - w), \quad ; \quad i = 1, 2, 3 \quad (5.24.13)$$

where  $\hat{\sigma}^i$  is a principal stress,  $c$  is the initial tensile strength which is a material parameter, and  $w$  is a scalar measure of the damage. As damage occurs, the damage surface will collapse toward the origin and the foam will lose tensile strength. The foam will, however, still have compressive strength.

Damage is taken to be a positive, monotonically increasing function of the damage strain,  $\varepsilon_{\text{dam}}$ , and the damage strain is a function of the maximum principal strain,  $\varepsilon_{\text{max}}$ , and the plastic volume strain,  $\varepsilon_v^p$ , such that

$$w = w(\varepsilon_{\text{dam}}) \quad ; \quad \varepsilon_{\text{dam}} = a_{\text{dam}} \varepsilon_{\text{max}} + b_{\text{dam}} \varepsilon_v^p, \quad (5.24.14)$$

with the material parameters  $a_{\text{dam}}$  and  $b_{\text{dam}}$  controlling the rate at which damage is generated in tension and compression, respectively. The model does not allow healing, so the damage never decreases even if the damage strain decreases.

To fully capture temperature, strain rate, and lock-up effects, several material parameters are defined as functions of temperature,  $\theta$ , and/or some measure of the amount of compaction, e.g. the maximum volume fraction of the solid material obtained during any prior loading,  $\phi$ . For instance,

$$\begin{aligned} E(\theta, \phi) &= E h_E(\theta) f_E(\phi), \\ \nu(\theta, \phi) &= \nu h_\nu(\theta) f_\nu(\phi), \end{aligned} \quad (5.24.15)$$

and the natural logarithm of the reference flow rate,  $h$ , and the power law exponent,  $n$  are also functions of temperature

$$\begin{aligned}
h(\theta) &= h h_h(\theta) \\
n(\theta) &= n h_n(\theta).
\end{aligned} \tag{5.24.16}$$

The current deviatoric and volumetric strengths are hardening functions of the maximum volume fraction of the solid material obtained during any prior loading,  $\phi$ , as is the parameter that defines the fraction of associated and radial flow,  $\beta$ . Therefore,

$$\begin{aligned}
a &= a(\phi) \quad ; \quad b = b(\phi) \\
\beta &= \beta(\phi).
\end{aligned} \tag{5.24.17}$$

Through the loading cycle, the maximum volume fraction of solid material is written as,

$$\phi = \max_{t>0} \tilde{\phi}(t) \tag{5.24.18}$$

where  $\tilde{\phi}(t)$  is the current volume fraction of solid material defined as

$$\tilde{\phi}(t) = \frac{\phi_0}{\exp(\varepsilon_v^p)}, \tag{5.24.19}$$

with  $\phi_0$  and  $\varepsilon_v^p$  being the initial solid volume fraction and plastic volumetric strain, respectively.

The foam damage model, as presented, provides a phenomenological model with enough flexibility to model the observed deformation and failure of rigid polyurethane foams.

### 5.24.2 Implementation

Like the other foam models, the foam damage model is integrated using an explicit forward Euler scheme. Essentially, this specific form is a combination of a rate-dependent viscoplastic mechanism and a distinct damage element. At the highest level, these two responses are considered independently and sequentially with the viscoplastic behavior being evaluated first. Initially, the damage parameter is set to 0 and is limited to a maximum value of 0.99 to prevent the tensile strength from going to zero or negative due to numerical round-off. Foam material elements that are completely damaged can be removed using element death based approaches in the case of the damage variable reaching a value close to 1, say 0.99. This topic, however, will not be discussed here as the focus is on the constitutive behavior of the foam model.

To ensure integration stability, an allowable strain increment is first calculated so that a critical time step may be found. Essentially, such a maximum is given by the ratio of shear strength to elastic

modulus. If the input timestep is sufficiently small to meet this requirement, the material state at time  $t = t_{n+1}$  is calculated directly. For unsuitably large time steps, a series of subincrements are used such that the integration may proceed in a stable fashion. Specifically, a total timestep of  $\Delta t$  is subdivided into  $N$  subincrements with the  $k^{th}$  such subincrement having a time interval of  $\delta t^k$  so that  $\Delta t = \sum_{k=1}^N \delta t^k$ . In this case, the same forward Euler scheme is used to integrate successively over the subincrements. For temperature dependent properties (e.g. the power law exponent  $n$ ), the value at the start of the subincrement is determined by linearly interpolating over the total time step,

$$n^k = n_n + \frac{\Delta t^k}{\Delta t} (n_{n+1} - n_n), \quad (5.24.20)$$

with  $\Delta t^k$  begin the current subincrement timestep,  $\Delta t^k = \sum_{r=1}^k \delta t^r$ . For simplicity, in the remainder of this section it is assumed that the input time step is acceptable and only a single increment is needed. If additional subincrements are needed, the below steps would be repeated  $N$  times with time intervals of  $\delta t^k$ .

The rate-dependent plastic response is then calculated in a fashion very similar to that of the viscoplastic foam model (Section 5.23.2). The key differences are primarily the additional, and more complex, dependencies of  $v$ ,  $\beta$ ,  $a$ , and  $b$  on the solid volume fraction. As such, first the various material properties and model parameters that are dependent on temperature,  $\theta$ , or solid volume fraction,  $\phi$ , are determined based on the respective values at  $t = t_n$ . The effective plastic strain rate,  $\dot{\varepsilon}^p$ , is readily found as,

$$\dot{\varepsilon}^p = e^{h(\theta_n)} \left\langle \frac{\sigma_n^*}{a(\phi_n)} - 1 \right\rangle^{n(\theta_n)}, \quad (5.24.21)$$

where  $\sigma_n^*$  is given by,

$$\sigma_n^* = \sqrt{\bar{\sigma}_n^2 + \frac{a^2(\phi_n)}{b^2(\phi_n)} p_n^2}, \quad (5.24.22)$$

and  $\langle x \rangle$  are the Macaulay brackets evaluated as,

$$\langle x \rangle = \begin{cases} x, & x \geq 0 \\ 0, & x < 0 \end{cases}. \quad (5.24.23)$$

Knowing the effective plastic strain increment, corresponding stress increments may be determined. Specifically, the rates of change of the deviatoric stress,  $\dot{s}_{ij}$ , and pressure,  $\dot{p}$ , are given for isothermal conditions by

$$\dot{s}_{ij} = 2\mu_n (\hat{d}_{ij} - \hat{d}_{ij}^p), \quad (5.24.24)$$

$$\dot{p} = K_n (d_{kk} - d_{kk}^p), \quad (5.24.25)$$

with  $d_{ij}$  and  $d_{ij}^p$  being the the total and plastic, respectively, rates of deformation, and the symbol “ $\hat{x}_{ij}$ ” denoting the deviatoric part of the tensor  $x_{ij}$ . The plastic strain rate is given by,

$$d_{ij}^p = \dot{\varepsilon}^p g_{ij}^n, \quad (5.24.26)$$

where  $g_{ij}^n$  is evaluated via relation (5.24.10)-(5.24.12) using state variable at time  $t = t_n$  and it is noted that  $\beta = \beta(\phi_n)$ . Elastic constants  $K_n$  and  $\mu_n$  are found through isotropic relations using the values  $E_n$  and  $\nu_n$  so the temperature and solid volume fraction dependencies may be incorporated.

Therefore, after accounting for plastic deformation and any associated temperature changes,

$$\tilde{s}_{ij} = \frac{\mu_{n+1}}{\mu_n} s_{ij}^n + \dot{s}_{ij} \Delta t, \quad (5.24.27)$$

$$\tilde{p}_{ij} = \frac{K_{n+1}}{K_n} p^n + \dot{p} \Delta t, \quad (5.24.28)$$

$$\tilde{T}_{ij} = \tilde{s}_{ij} + \tilde{p} \delta_{ij}, \quad (5.24.29)$$

where the tilde, “ $\tilde{x}$ ”, is used to distinguish the fact that the damage response has not yet been evaluated and these are temporary variables. Updated expressions for the state variables are also given as,

$$\varepsilon_v^{p-n+1} = \varepsilon_v^{p-n} + d_{kk}^p \Delta t, \quad (5.24.30)$$

$$\phi_{n+1} = \max \left[ \frac{\phi_0}{\exp(\varepsilon_v^{p-n+1})}, \phi_n \right]. \quad (5.24.31)$$

With the plastic deformations determined, the damage state of the material is evaluated. As a first step, the eigenvalues,  $\hat{\sigma}^i$ , and vectors,  $\hat{e}_i^k$  (where  $k$  denotes the corresponding eigenvalue) of the stress state,  $\tilde{T}_{ij}$ , and eigenvalues,  $\varepsilon_i$  of the total strain state are determined. Of particular interest is the maximum eigenvalue of the strain tensor,  $\varepsilon_{\max}$ . The damage strain,  $\varepsilon_{\text{dam}}^{n+1}$ , is

$$\varepsilon_{\text{dam}}^{n+1} = \langle a_{\text{dam}} \varepsilon_{\max} + b_{\text{dam}} \varepsilon_v^{p-n+1} \rangle, \quad (5.24.32)$$

with  $\langle \rangle$  being Macauley brackets. This value of the damage strain is then used to evaluate the current value of the damage,  $w^{n+1}$ , and a check is also imposed to insure that the damage does not decrease. An effective tensile strength,  $\sigma^{\text{dam}}$ , may then be calculated as

$$\sigma^{\text{dam}} = c (1 - w^{n+1}), \quad (5.24.33)$$

leading to a damage surface of the form,

$$f_{\text{dam}}^i = \hat{\sigma}^i - \sigma^{\text{dam}}. \quad (5.24.34)$$

The eigenvalues of the updated stress tensor may be written as,

$$\hat{\sigma}_{n+1}^i = \begin{cases} \hat{\sigma}^i, & f_{\text{dam}}^i \leq 0 \\ \sigma^{\text{dam}}, & f_{\text{dam}}^i > 0 \end{cases}, \quad (5.24.35)$$

producing a final updated stress state of the form,

$$T_{ij}^{n+1} = \sum_{k=1}^3 \hat{\sigma}_{n+1}^k \hat{e}_i^k \hat{e}_j^k. \quad (5.24.36)$$

### 5.24.3 Verification

Given the complexity and variety of response and features of the foam damage model, a series of verification analyses are performed. Common material properties and model parameters used for these investigations are given in Table 5.35. For these initial studies, isothermal loadings are considered and the solid volume fraction dependence of the elastic properties is neglected ( $f_E(\phi) = 1$ ,  $f_v(\phi) = 1$ ). Properties used correspond to those of a FR3712 foam from [1]. In the case of the elastic modulus, flow rate, and exponent, the values correspond those at a temperature of 18.30°C.

$E$	9,240 psi	$c$	280 psi
$\nu$	0.25	$a_{\text{dam}}$	1.0
$h$	2.60	$b_{\text{dam}}$	0.55
$n$	14.0	$\phi_0$	0.160

Table 5.35: Common material properties and model parameters for the foam damage model used during verification testing.

The shear strength, hydrostatic strength, and damage function all require user defined functional forms. For purposes of these tests, simple linear forms are considered for use in the analytical evaluations. Using the data same FR3712 data as before, simplified expressions of the form,

$$a(\phi) = 160 + 2400\phi, \quad (5.24.37)$$

$$b(\phi) = 160 + 3266.67\phi, \quad (5.24.38)$$

$$w(\varepsilon_{\text{dam}}) = \frac{10}{3}\varepsilon_{\text{dam}}, \quad (5.24.39)$$

are considered.

#### 5.24.3.1 Uniaxial Compression

First, the behavior of the model subject to a uniaxial compression load is considered. As the loading is purely compressive, no tensile stress is generated and the damage surface is not violated. Therefore, only the rate-dependent plasticity is considered in this section. Given the rate-dependent nature, no analytical solution is readily available and a semi-analytical approach is developed

by specializing the equations to uniaxial compression. Additionally, it is noted that the flow parameter,  $\beta$ , is not specified above and is enabled in this model to be an user-defined function of the solid volume fraction  $\phi$ . Here, to isolate the impact of this parameter, the two extreme cases are considered – fully associated or radial flow with  $\beta = 0, 1$ , respectively.

To induce the uniaxial stress state of interest, a displacement of the form  $u_1 = \lambda_1$  is applied while the remaining degrees of freedom (2 and 3) are left traction free. The applied displacement scales linearly from  $\lambda_1 = 0$  at  $t = 0.0$  to  $\lambda_1 = -0.7$  at  $t = 1.0$ . In this case, the stress state is simply  $\sigma_{ij} = \sigma_{11}\delta_{i1}\delta_{j1}$  leading to an overstress of the form  $\sigma^* = |\sigma_{11}|\sqrt{1 + \frac{a^2}{9b^2}}$ . For both associated and radial flow, the inelastic flow rate simplifies to,

$$D_{ij}^{\text{in}} = e^h \left\langle \frac{|\sigma_{11}|}{3ab} \sqrt{a^2 + 9b^2} - 1 \right\rangle^n g_{ij}, \quad (5.24.40)$$

with  $\langle \cdot \rangle$  being Macauley brackets. The total strains may then be written as,

$$\varepsilon_{11} = \ln(1 + \lambda_1), \quad (5.24.41)$$

$$\varepsilon_{22} = \varepsilon_{33} = -\nu(\ln(1 + \lambda_1) - \varepsilon_{11}^{\text{in}}) + \varepsilon_{22}^{\text{in}}, \quad (5.24.42)$$

where  $\varepsilon_{ij}^{\text{in}} = \int_0^t D_{ij}^{\text{in}} d\tau$ . The associated and radial flow cases are distinguished by the form of  $g_{ij}$ . In the latter case,  $g_{ij}$  reduces simply to  $g_{ij}^r = \delta_{i1}\delta_{j1}$ . The former case, on the other hand, produces a flow direction of the form,

$$\hat{g} = \frac{1}{3\sqrt{\frac{2}{3}(2a^4 + 81b^4)}}, \quad (5.24.43)$$

$$g_{11}^r = \hat{g}^2(a^2 + 9b^2), \quad (5.24.44)$$

$$g_{22}^r = g_{33}^r = \hat{g}(2a^2 - 9b^2). \quad (5.24.45)$$

The stress evolution for both of these flow cases determined numerically (adagio) and semi-analytically is presented in Figure 5.86.

From these results, the impact of the flow direction choice can be observed to have a large impact on the model response. Specifically, in the radial case more substantial hardening is seen throughout the entire plastic domain. As the hardening results from the solid volume fraction (which is a function of volumetric plastic deformation), such a difference may be anticipated. Specifically, given the uniaxial plastic flow in the radial case more pronounced volumetric strains are to be expected. The associated case, on the other hand, has a more deviatoric character leading to lower plastic volume strains. This difference may also be more readily observed in the total strain evolutions of the associated and radial cases in Figures 5.87 and 5.88, respectively.

Specifically, in the radial case, only small off-axis strains are observed while in the associated results much more substantial strains are noted. This difference produces a large impact on the plastic volumetric strain and therefore on the maximum solid volume fraction,  $\phi$ , whose evolution

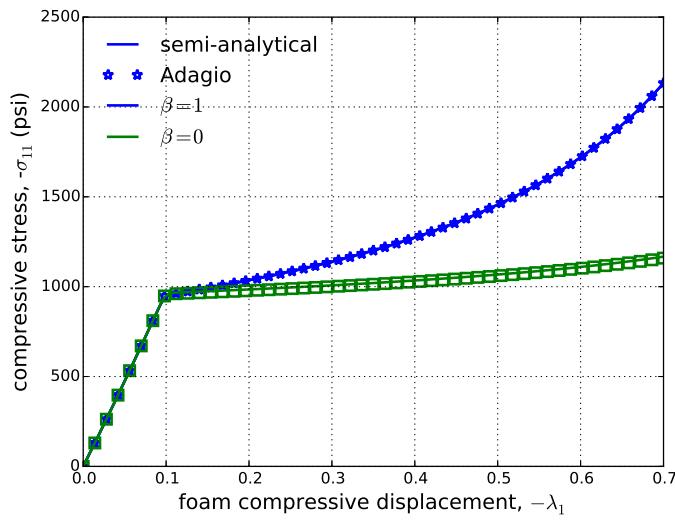


Figure 5.86: Axial stress evolution as a function of applied compressive displacement determined via the foam damage model considering both associated ( $\beta = 0$ ) and radial ( $\beta = 1$ ) flow assumptions as determined semi-analytically and numerically.

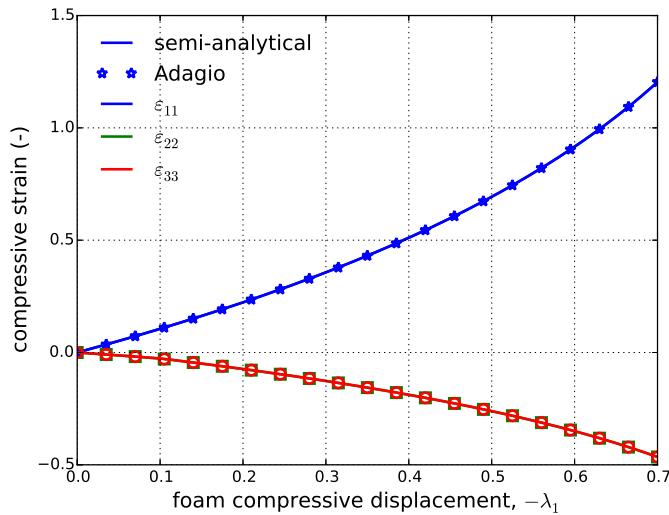


Figure 5.87: Diagonal strain evolution through a uniaxial displacement loading of the foam damage model considering associated ( $\beta = 0$ ) flow determined semi-analytically and numerically.

through loading in both cases is presented in Figure 5.89. To emphasize this point, the radial solid volume fraction is more than double the associated case at the end of loading.

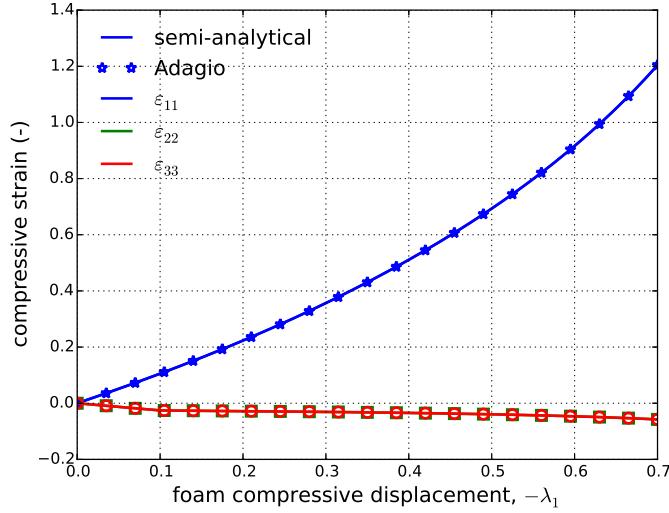


Figure 5.88: Diagonal strain evolution through a uniaxial displacement loading of the foam damage model considering radial ( $\beta = 1$ ) flow determined semi-analytically and numerically.

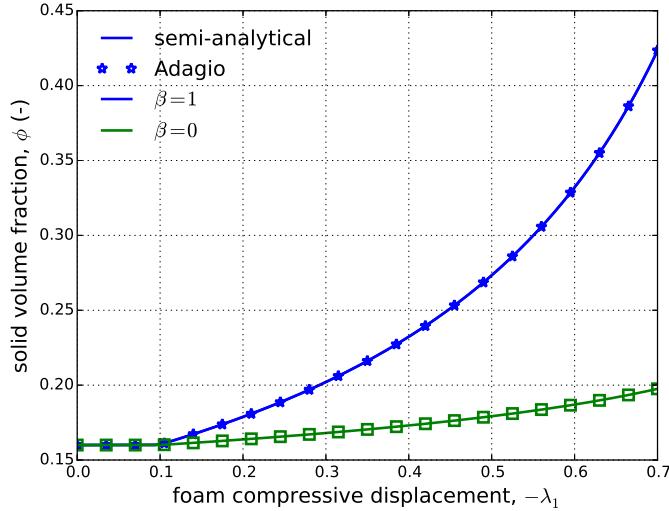


Figure 5.89: Maximum solid volume fraction,  $\phi$ , obtained as a function of applied displacement and determined via the foam damage model considering both associated ( $\beta = 0$ ) and radial ( $\beta = 1$ ) flow determined semi-analytically and numerically.

### 5.24.3.2 Uniaxial Tension

As the compressive and tensile behaviors of the model are different (due to the activation of the damage mechanism), the uniaxial tensile response is also investigated. To this end, a uniaxial displacement is applied,  $u_1 = \lambda_1$ , while the other off-axis components are kept traction free. For

this test, the maximum displacement ( $\lambda_1 = 0.2$ ) is applied linearly from  $t = 0.0$  to  $t = 1.0$ . Use of a displacement condition is essential due to the expected stress degradation. In this case, given the relative values of the strength ( $a(\phi_0)$  versus  $c$ ) it is clear that no plastic deformations will take place and a purely damage driven response is expected. With this simplification, it is also noted that the rate-dependency of the problem is eliminated. As the stress state is uniaxial, it is clear that the only non-zero eigenvalue of the stress tensor is  $\sigma_{11}$  and that  $\varepsilon_{\text{dam}} = a_{\text{dam}}\varepsilon_{11} = a_{\text{dam}} \ln(1 + \lambda_1)$  where the fact that the plastic strain is zero is utilized. Bearing these simplifications in mind, an analytical expression for the stress and strain may be developed. The stress in the axial direction may be written as,

$$\sigma_{11} = \begin{cases} (\mathbb{C}_{1111} - 2\nu\mathbb{C}_{1122}) \ln(1 + \lambda_1), & \lambda_1 < \lambda_{\text{crit}} \\ c \left(1 - \frac{10}{3}a_{\text{dam}} \ln(1 + \lambda_1)\right), & \lambda_1 \geq \lambda_{\text{crit}} \end{cases}, \quad (5.24.46)$$

where

$$\lambda_{\text{crit}} = \exp\left(\frac{c}{\mathbb{C}_{1111} - 2\nu\mathbb{C}_{1122} + \frac{10}{3}a_{\text{dam}}c}\right) - 1. \quad (5.24.47)$$

The analytical results along with numerical simulations from adagio are given below in Figure 5.90.

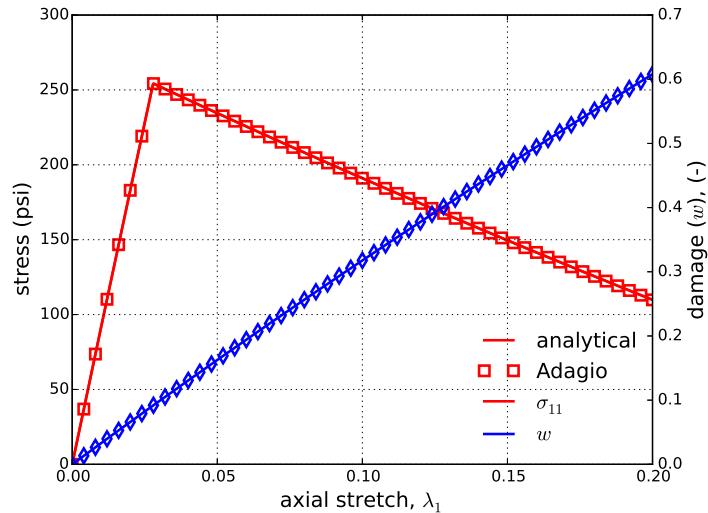


Figure 5.90: Response of the foam damage model through a uniaxial stress, displacement controlled tension simulation. Stress in the loading direction,  $\sigma_{11}$ , and damage measure,  $w$ , against the applied displacement,  $\lambda_1$ , are shown.

### 5.24.3.3 Hydrostatic Compression

To consider the pressure dependence, the response of this model subject to a hydrostatic compression loading is determined. Specifically, a displacement of the form  $u_i = \lambda(t)$  is considered. The

applied displacement scales linearly from  $\lambda = 0$  at  $t = 0.0$  to  $\lambda = -0.7$  at  $t = t_{\max}$ . Two cases are considered to incorporate rate-dependent effects into the analysis. The two tests are denoted “fast” and “slow” and are distinguished via  $t_{\max}$  values of 1.0 and 100.0, respectively. With this displacement field the engineering volume strain,  $\varepsilon_V$ , is simply  $\varepsilon_V = (1 + \lambda)^3 - 1$ . The stress state reduces trivially to  $\sigma_{ij} = -p\delta_{ij}$  and the corresponding (repeated) eigenvalue is compressive. Therefore, damage does not play a role in this analysis.

No direct analytical solution to this problem is readily obtainable. Therefore, a semi-analytical analysis is used. Reducing the foam damage model for the loading described in this section leads to an expression for the overstress of,

$$\sigma^* = \frac{a}{b}|p|, \quad (5.24.48)$$

where the fact that  $s_{ij} = 0$  is leveraged. Additionally, given this stress state,  $\beta$  becomes an unnecessary parameter as,

$$g_{ij} = g_{ij}^a = g_{ij}^r = -\frac{1}{\sqrt{3}}\text{sgn}(p)\delta_{ij}, \quad (5.24.49)$$

with  $\text{sgn}(p)$  being the sign of  $p$ . Both the numerical (adagio) and semi-analytical (evaluted in a forward Euler fashion) results are presented in Figure 5.91.

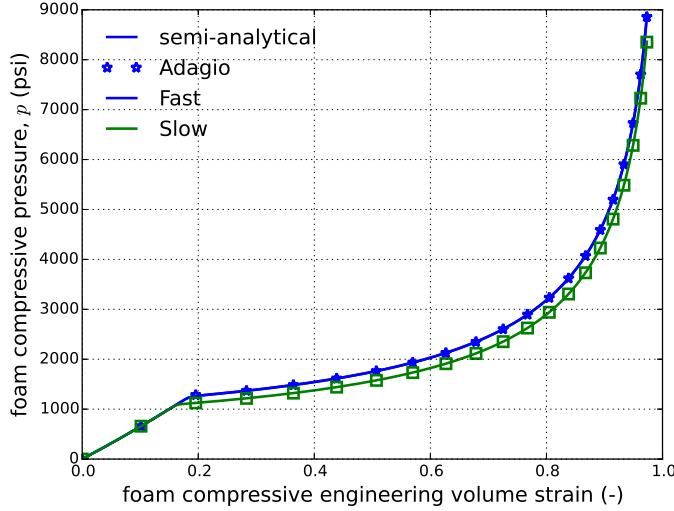


Figure 5.91: Pressure-engineering volume strain results of the foam damage model subjected to a hydrostatic loading at both fast and slow rates determined semi-analytically and numerically.

#### 5.24.3.4 Hydrostatic Tension

A tensile hydrostatic loading provides an interesting possibility for investigating the damage response. Specifically, with the model parameters defined above the damage tensile strength is

always less than the hydrostatic strength -  $c < b(\phi_0)$ . Additionally, given the tensile loading  $\phi(t) = \phi_0$  and no plastic deformation occurs. This also removes the rate-dependency from the model enabling an analytical solution to be obtained.

Through a hydrostatic loading, the only stress eigenvalue is  $-p$  (noting the convention of  $p$  positive in compression) and the corresponding strain eigenvalue is  $\varepsilon_{\max} = \ln(1 + \lambda)$ . As no plastic deformation is occurring, the damage is simply a function of the deformation and is given by,

$$w(\varepsilon_{\text{dam}}) = w(\lambda) = \frac{10}{3}a_{\text{dam}} \ln(1 + \lambda). \quad (5.24.50)$$

The pressure is then simply given as,

$$p = \begin{cases} 3K \ln(1 + \lambda) & \lambda < \lambda_{\text{crit}} \\ c \left(1 - \frac{10}{3}a \ln(1 + \lambda)\right) & \lambda \geq \lambda_{\text{crit}} \end{cases}, \quad (5.24.51)$$

where,

$$\lambda_{\text{crit}} = \exp\left(\frac{3c}{9K + 10c}\right) - 1. \quad (5.24.52)$$

In the preceding relations, the fact that  $\varepsilon_{\text{dam}} = a\varepsilon_{\max}$  is used. The analytical and numerical results are given below for a loading of  $\lambda = 0$  to  $\lambda = 0.2$  through the time period  $t = [0, 1]$  in Figure 5.92.

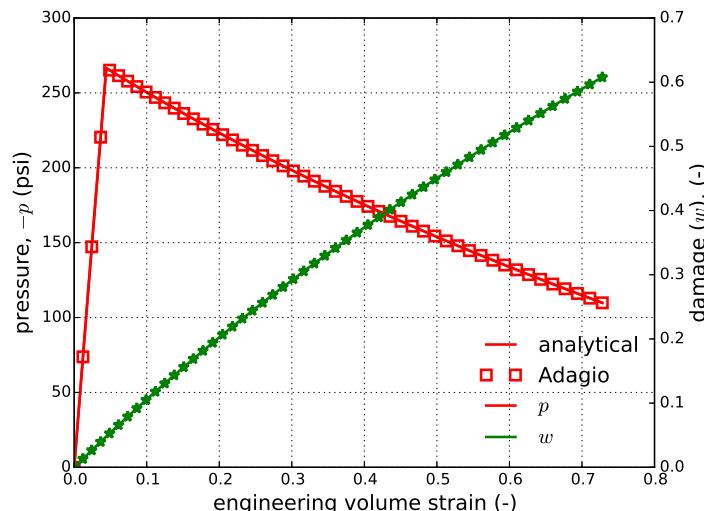


Figure 5.92: Pressure and damage evolutions as function of engineering volume strain results of the foam damage model subject to a tensile hydrostatic loading determined analytically and numerically. Note, conventionally with this model pressure is defined positive in compression.

#### 5.24.4 User Guide

```

BEGIN PARAMETERS FOR MODEL FOAM_DAMAGE
#
# Elastic constants
#
YOUNGS MODULUS = <real> E
POISSONS RATIO = <real> ν
SHEAR MODULUS = <real> G
BULK MODULUS = <real> K
LAMBDA = <real> λ
TWO MU = <real> 2μ
#
# Yield behavior
#
PHI = <real> φ₀
FLOW RATE = <real> h
POWER EXPONENT = <real> n
TENSILE STRENGTH = <real> c
ADAM = <real> adam
BDAM = <real> bdam
#
# Functions
#
YOUNGS FUNCTION = <string> hE(θ)
POISSONS FUNCTION = <string> hν(θ)
RATE FUNCTION = <string> hh(θ)
EXPONENT FUNCTION = <string> hn(θ)
SHEAR HARDENING FUNCTION = <string> a(φ)
HYDRO HARDENING FUNCTION = <string> b(φ)
BETA FUNCTION = <string> β(φ)
YOUNGS PHI FUNCTION = <string> fE(φ)
POISSONS PHI FUNCTION = <string> fν(φ)
DAMAGE FUNCTION = <string> w(εdam)
END [PARAMETERS FOR FOAM_DAMAGE]

```

Output variables available for this model are listed in Table 5.36. For information about the foam damage model, consult [1].

Table 5.36: State Variables for FOAM DAMAGE Model

Name	Variable Description
ITER	number of sub-increments taken in subroutine
EPVOL	plastic volume strain
PHI	maximum volume fraction of solid material
EQPS	equivalent plastic strain
FA	shear strength - $a$
FB	hydrostatic strength - $b$
DAMAGE	damage
EMAX	maximum tensile strain
PWORK	plastic work rate

## References

[1] M. K. Neilsen, W. Y. Lu, W. M. Scherzinger, T. D. Hinnerichs, and C. S. Lo. Unified creep plasticity damage (UCPD) model for rigid polyurethane foams. Technical Report SAND2015-4352, Sandia National Laboratory, Albuquerque, NM, 2015.

## 5.25 Orthotropic Crush Model

### 5.25.1 Theory

The orthotropic crush model in LAMÉ is designed to model the energy absorbing capability of crushable orthotropic materials, e.g. aluminum honeycomb, and is empirically based. The formulation follows that used for metallic honeycomb materials in LS-DYNA [1]. Three response regimes are assumed for this material: (i) orthotropic elastic, (ii) crush, and (iii) complete compaction (fully crushed). During the elastic regime, the model exhibits the response of an elastic, orthotropic material with *all Poisson's ratio equal to zero*. After full compaction, the response is taken to be that of an isotropic, perfectly plastic material and the response between these two stages is tailored to smoothly transition between the two extremes. Crushing, incorporating both nonlinear elastic and plastic-like behaviors, is taken to begin as soon as volumetric contraction is noted ( $J = \det(F_{ij}) < 1$ ). As such, the purely elastic response is primarily seen during cyclic loadings in which the material is unloaded. An internal state variable,  $J_c$ , is introduced to track the crushed state of the material and is defined as the minimum  $J$  over the entire deformation history such that,

$$J_c = \min_{t>0} [J(t)]. \quad (5.25.1)$$

The crushing process manifests through two distinct behaviors: (i) the elastic properties scale linearly with the crush state from the initial orthotropic state to the of the final isotropic completely compacted material; and (ii) a plastic-like response is observed associated with corresponding crush curves (analogous to hardening curves).

Before complete compaction, the incremental constitutive relation may be written in terms of the rate of deformation tensor,  $D_{ij}$ , as,

$$\left\{ \begin{array}{l} \dot{\sigma}_{11} \\ \dot{\sigma}_{22} \\ \dot{\sigma}_{33} \\ \dot{\sigma}_{12} \\ \dot{\sigma}_{23} \\ \dot{\sigma}_{31} \end{array} \right\} = \left[ \begin{array}{cccccc} \hat{E}_{11} & 0 & 0 & 0 & 0 & 0 \\ 0 & \hat{E}_{22} & 0 & 0 & 0 & 0 \\ 0 & 0 & \hat{E}_{33} & 0 & 0 & 0 \\ 0 & 0 & 0 & 2\hat{G}_{12} & 0 & 0 \\ 0 & 0 & 0 & 0 & 2\hat{G}_{23} & 0 \\ 0 & 0 & 0 & 0 & 0 & 2\hat{G}_{31} \end{array} \right] \left\{ \begin{array}{l} D_{11} \\ D_{22} \\ D_{33} \\ D_{12} \\ D_{23} \\ D_{31} \end{array} \right\} \quad (5.25.2)$$

where  $\hat{E}_{11}$ ,  $\hat{E}_{22}$ , and  $\hat{E}_{33}$  are the normal stiffness and  $\hat{G}_{12}$ ,  $\hat{G}_{23}$ , and  $\hat{G}_{31}$  are the shear stiffness. A clear decoupling between the different directional components is evident in (5.25.2). All six stiffness components are assumed to be functions of the current compaction level which may be defined as  $1 - J_c$  and the evolution of these terms is responsible for crushing behavior (i) alluded to previously.

The functional forms of the stiffness are given by,

$$\begin{aligned}\hat{E}_\beta &= E_\beta + \alpha (E - E_\beta) & \beta = 11, 22, 33 \\ \hat{G}_\gamma &= G_\gamma + \alpha (G - G_\gamma) & \gamma = 12, 23, 31,\end{aligned}\quad (5.25.3)$$

where  $E$  and  $G$  are the Young's and shear moduli, respectively, of the fully compacted material while  $E_\beta$  and  $G_\gamma$  are the input orthotropic elastic stiffness components of the virgin, uncompacted material. It is assumed that these stiffness vary linearly between the pre- and post-compacted material such that,

$$\alpha = \frac{(1 - J_c)}{V_{min}}, \quad (5.25.4)$$

with  $V_{min}$  being the minimum relative volume (or maximum compaction).

With respect to the second behavior observed during crushing, a plastic-like response governed by crush curves is observed. Given the decoupling between the different stresses and deformations, a crush curve needs to be defined for each of the six normal and shear stresses. An example of such a curve is presented in Figure 5.93, and three distinct regions are evident. Initially, at low compaction levels, a plateau is observed. This plateau is essentially an initial crush strength and prior to this stress level all nonlinear deformations associated with material compaction manifest through changes in the respective moduli. When the stress reaches the specified levels, however, the curves play a role analogous to the hardening curve and the material stress follows the curve. Physically, the plateau is associated with crushing the internal honeycomb or foam structure of the material. As the material approaches full compaction and microstructural contact effects become important, a sharp rise in the stress is noted (see  $\approx 0.6 \leq 1 - J_c \leq 0.7 = V_{min}$  in Figure 5.93). After complete compaction another plateau corresponding to perfect plasticity is evident.

Above some value of compaction ( $1 - J_c = V_{min}$ ), the material will be fully compacted and behave as an elastic, perfectly plastic material. The fully compacted response is given by the Young's modulus,  $E$ , Poisson's ratio,  $\nu$ , and the yield stress,  $\sigma_y$ . Details of this response may be found in previous sections on the various elastic-plastic models (e.g. Section 5.6.1).

## 5.25.2 Implementation

Implementation of the orthotropic crush model involves addressing two cases: before and after complete compaction. When the material is fully crushed, the model reduces to that of an isotropic perfectly plastic response. As corresponding isotropic elastic-plastic models with various hardenings have been extensively explored in prior sections, this response will not be discussed here and the reader is referred to those sections (e.g. Section 5.6.2). The two cases are distinguished by the previous compaction state variable,  $J_c^n$ , where  $J_c^{n+1} = \min [J_c^n, J^{n+1}]$  with  $J^{n+1} = \det(F_{ij}^{n+1}) = \det(V_{ij}^{n+1})$ . If  $J_c^n > 1 - V_{min}$ , the material has not yet fully crushed and the response is evaluated as discussed in the following.

To determine the material state prior to complete compaction, the current values of orthogonal stiffness must be determined via (5.25.3) noting

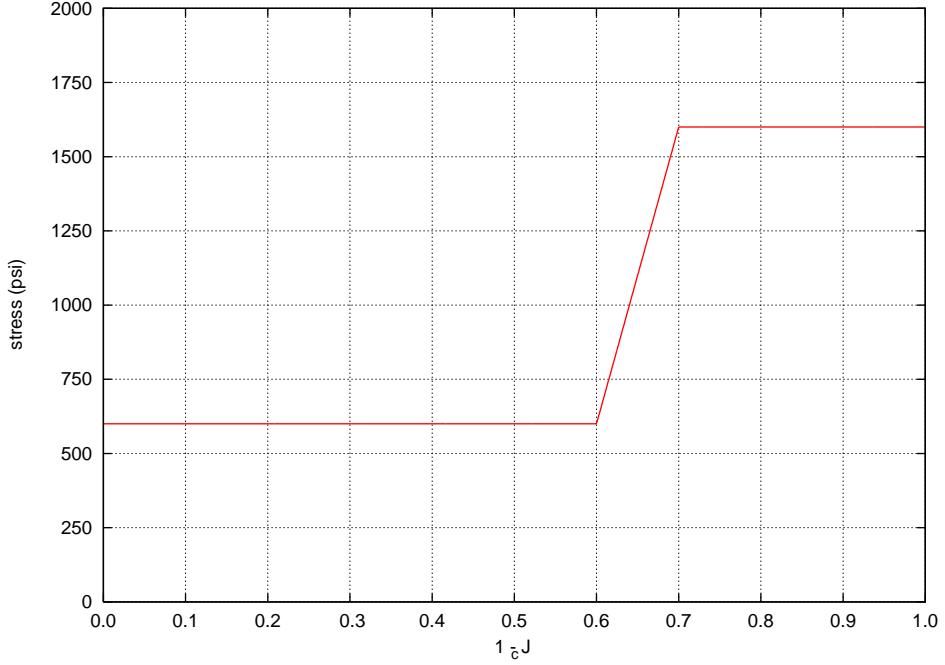


Figure 5.93: An example of an input crush curve for an aluminum honeycomb.

$$\alpha^{n+1} = \frac{1 - J_c^n}{V_{min}}. \quad (5.25.5)$$

By assuming completely elastic deformation, trial stresses may then be computed as,

$$\begin{aligned} \sigma_{11}^{tr} &= \sigma_{11}^n + \Delta t \hat{E}_{11}(\alpha^{n+1}) d_{11}^{n+1}, \\ \sigma_{22}^{tr} &= \sigma_{22}^n + \Delta t \hat{E}_{22}(\alpha^{n+1}) d_{22}^{n+1}, \\ \sigma_{33}^{tr} &= \sigma_{33}^n + \Delta t \hat{E}_{33}(\alpha^{n+1}) d_{33}^{n+1}, \\ \sigma_{12}^{tr} &= \sigma_{12}^n + 2\Delta t \hat{G}_{12}(\alpha^{n+1}) d_{12}^{n+1}, \\ \sigma_{23}^{tr} &= \sigma_{23}^n + 2\Delta t \hat{G}_{23}(\alpha^{n+1}) d_{23}^{n+1}, \\ \sigma_{31}^{tr} &= \sigma_{31}^n + 2\Delta t \hat{G}_{31}(\alpha^{n+1}) d_{31}^{n+1}, \end{aligned} \quad (5.25.6)$$

with  $d_{ij}^{n+1}$  being the un-rotated rate of deformation tensor. Given the decoupling between the different stress components, the various trial stresses are considered individually. Specifically, each trial stress must be compared to the crush stress for the current compaction level. Denoting  $\sigma_{\beta}^{crush} = \hat{\sigma}_{\beta}(1 - J_c^{n+1})$  (with  $\beta = 11, 22, 33, 12, 23$ , or  $31$ ) to be the current crush stress specified by the crush curve, the current stress of interest is,

$$\sigma_{\beta}^{n+1} = \begin{cases} \sigma_{\beta}^{tr}, & |\sigma_{\beta}^{tr}| \leq \sigma_{\beta}^{crush} \\ \text{sgn}(\sigma_{\beta}^{tr}) \sigma_{\beta}^{crush}, & |\sigma_{\beta}^{tr}| > \sigma_{\beta}^{crush}, \end{cases} \quad (5.25.7)$$

where  $\text{sgn}(x)$  returns the sign of the argument and is used as  $\sigma_{\beta}^{\text{crush}}$  is entered as a positive number.

### 5.25.3 Verification

The orthotropic crush model was verified through a series of uniaxial compression tests. Given the lack of coupling between the different directions, such a variety of tests were performed to test each loading component. One set of material properties was used for all tests and they are given in Table 5.37.

$E_{11}$	50.0 ksi	$E$	1000.0 ksi
$E_{22}$	220.0 ksi	$\nu$	0.25
$E_{33}$	10.0 ksi	$\sigma_y$	2.0 ksi
$G_{12}$	110.0 ksi		
$G_{23}$	5.0 ksi	$V_{\min}$	0.7
$G_{31}$	25.0 ksi		

Table 5.37: The material properties for the orthotropic crush model used for the uniaxial crush tests.

The crush curves used as input for these tests are given in Figure 5.94.

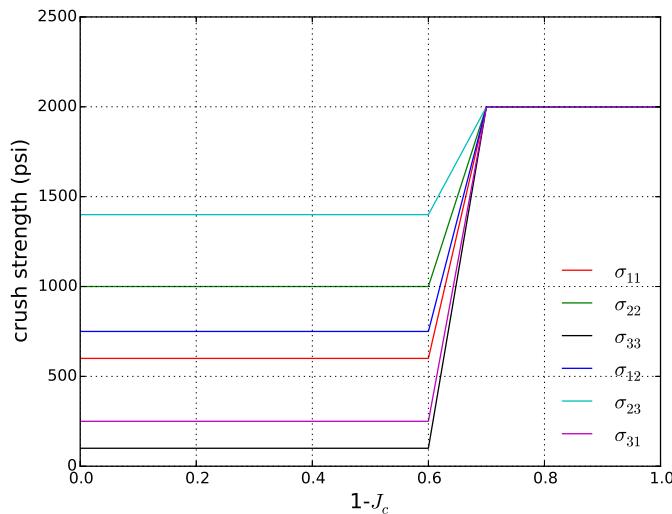


Figure 5.94: Input crush curves used for uniaxial crush analysis.

To test this model, both the anisotropic nature and different deformation regimes need to be tested. Therefore, given the decoupled directional nature prior to complete compaction, each component will be tested. For the diagonal stress components, a simple uniaxial displacement of the form,

$$u_i = -\lambda \delta_{i\beta}, \quad (5.25.8)$$

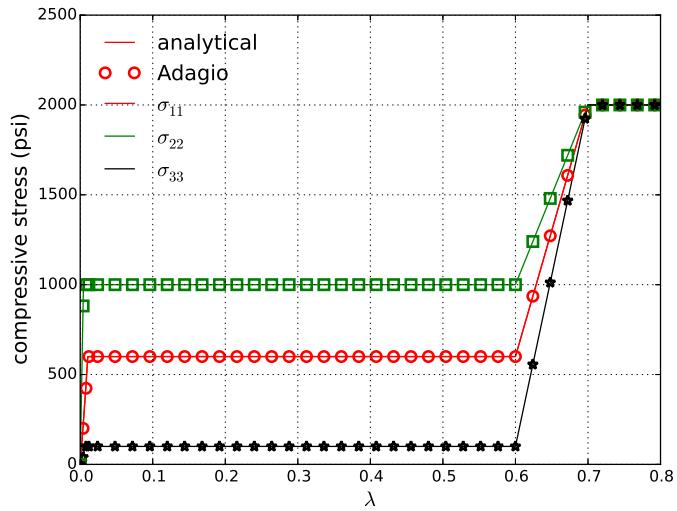


Figure 5.95: Analytical and numerical results for uniaxial crush cases.

where  $\beta = 1, 2$ , or  $3$  corresponding to the directional component being tested is applied. In such cases (with a monotonically increasing  $\lambda$ ),  $J_c = 1 - \lambda$ . The model described in the prior to sections can be easily evaluated analytically under such conditions, and the corresponding analytical and numerical results are presented in Figure 5.95.

#### 5.25.4 User Guide

```

BEGIN PARAMETERS FOR MODEL ORTHOTROPIC_CRUSH
#
# Elastic constants - Post lock-up
YOUNGS MODULUS = <real> E
POISSONS RATIO = <real> ν
SHEAR MODULUS = <real> G
BULK MODULUS = <real> K
LAMBDA = <real> λ
TWO MU = <real> 2μ
#
# Orthotropic Elastic properties - Pre-Crush
#
EX = <real> E11
EY = <real> E22
EZ = <real> E33
GXY = <real> G12
GYZ = <real> G23
GZX = <real> G31
#
# Crush properties
#
CRUSH XX = <string>  $\hat{\sigma}_{11}(J_c)$ 
CRUSH YY = <string>  $\hat{\sigma}_{22}(J_c)$ 
CRUSH ZZ = <string>  $\hat{\sigma}_{33}(J_c)$ 
CRUSH XY = <string>  $\hat{\sigma}_{12}(J_c)$ 
CRUSH YZ = <string>  $\hat{\sigma}_{23}(J_c)$ 
CRUSH ZX = <string>  $\hat{\sigma}_{31}(J_c)$ 
VMIN = <real> Vmin
#
# Post lock-up yield properties
#
YIELD STRESS = <real> σy
#
END [PARAMETERS FOR MODEL ORTHOTROPIC_CRUSH]

```

Output variables available for this model are listed in Table 5.38. For information about the orthotropic crush model, consult [1].

Table 5.38: State Variables for ORTHOTROPIC CRUSH Model

Name	Description
CRUSH	current (unrecoverable) compaction/relative volume

## **References**

[1] R.G. Whirley, B.E. Engelmann, and J.O. Halquist. DYNA3D user's manual, 1991.

## 5.26 Orthotropic Rate Model

### 5.26.1 Theory

The orthotropic rate model is an improved version of the orthotropic crush model [1] that incorporates anisotropic elasticity, strain-rate dependence, and the ability to define the material coordinate system. The specific form of this model is motivated by metallic honeycombs and the material coordinate system is usually given in terms of  $T$ ,  $L$ , and  $W$  directions. These directions correspond to the strong ( $T$ ) and ribbon ( $L$ ) axes depicted in Figure 5.96. The third component of the coordinate system,  $W$ , is the weak direction and is simply the cross-product of the other two directions.

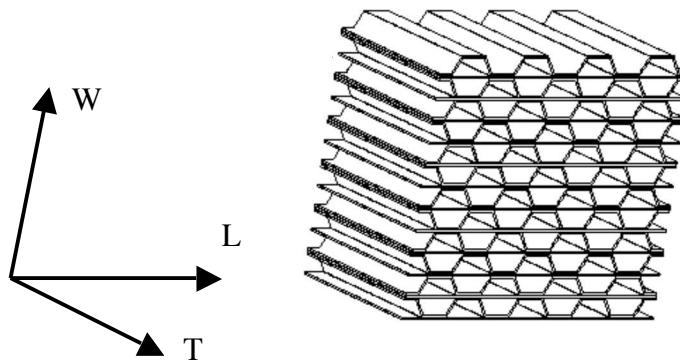


Figure 5.96: Orientation of the  $T$ ,  $L$  and  $W$  vectors for 38 pc aluminum honeycomb.

In terms of expected response, and similar to the orthotropic crush model, the deformation is split into two regimes – uncompacted and compacted. Unlike the crush model, the state of compaction is not determined by the determinant of the deformation gradient but is instead a function of the engineering (not logarithmic) volume strain,  $\varepsilon_V$ . The degree of compaction,  $\alpha$ , is therefore defined as,

$$\alpha = \min_{t>0} \left( \frac{V_0 - V(t)}{V_0} \right) = 1 - \frac{\min_{t>0} V(t)}{V_0} = -\min_{t>0} \varepsilon_V(t), \quad (5.26.1)$$

with  $V(t)$  and  $V_0$  being the current and original volume of the material. Complete compaction occurs at a user specified value,  $\alpha_{\text{comp}}$ .

Prior to complete compaction, the elastic stiffness,  $\mathbb{C}_{ijkl}$ , is taken to exhibit orthotropic symmetry and depends on the compaction state of the material,  $\mathbb{C}_{ijkl} = \mathbb{C}_{ijkl}(\alpha)$ . In the material frame and in Voigt notation, this stiffness is represented as,

$$[\mathbb{C}(\alpha)] = \begin{bmatrix} E_{TTTT}(\alpha) & E_{TTLL}(\alpha) & E_{TTWW}(\alpha) & 0 & 0 & 0 \\ E_{TTLL}(\alpha) & E_{LLLL}(\alpha) & E_{LLWW}(\alpha) & 0 & 0 & 0 \\ E_{TTWW}(\alpha) & E_{LLWW}(\alpha) & E_{WWWW}(\alpha) & 0 & 0 & 0 \\ 0 & 0 & 0 & G_{TLTL}(\alpha) & 0 & 0 \\ 0 & 0 & 0 & 0 & G_{LWLW}(\alpha) & 0 \\ 0 & 0 & 0 & 0 & 0 & G_{WTWT}(\alpha) \end{bmatrix}. \quad (5.26.2)$$

Once the material is completely compacted, the elastic stiffness is taken to be isotropic and the evolution of the initially orthotropic components ( $E_{TTTT}(\alpha = 0) = E_{TTTT}^0$ ) to final isotropic, compacted coefficients ( $E_{TTTT}(\alpha = \alpha_{\text{comp}}) = \lambda + 2\mu$  with  $\lambda$  and  $2\mu$  being Lamé's constant and the shear modulus) is given via a common user-defined scaling function,  $f_E(\alpha)$ . The mechanical stiffness coefficients then scale as,

$$E_{TTTT}(\alpha) = E_{TTTT}^0 + (\lambda + 2\mu - E_{TTTT}^0) f_E(\alpha), \quad (5.26.3)$$

for the volumetric diagonal terms ( $E_{TTTT}$ ,  $E_{LLLL}$ ,  $E_{WWWW}$ ),

$$E_{TTLL}(\alpha) = E_{TTLL}^0 + (\lambda - E_{TTLL}^0) f_E(\alpha), \quad (5.26.4)$$

for the off-diagonal terms ( $E_{TTLL}$ ,  $E_{TTWW}$ ,  $E_{LLWW}$ ) and

$$G_{TLTL}(\alpha) = G_{TLTL}^0 + (2\mu - G_{TLTL}^0) f_E(\alpha) \quad (5.26.5)$$

for the shear terms. From these relations, it is obvious that  $f_E(\alpha)$  should be bounded such that  $0 \leq f_E(\alpha) \leq 1$  with  $f_E(0) = 0$  and  $f_E(\alpha_{\text{comp}}) = 1$ .

As was mentioned earlier, the deformation and model response may be readily split between two regimes – the uncompact and compacted. The behavior during the latter regime is simpler and is assumed to be that of an isotropic elastic-perfectly plastic material characterized by the elastic coefficients ( $\lambda$ ,  $2\mu$ ) and yield stress ( $\sigma_y$ ). During the uncompact regime the deformation is more complex and typical responses may include elastic bending of cell structures, buckling of cell walls, or densification (see the text of Gibson and Ashby [2] for a complete discussion of these and other mechanisms). In this formulation, however, none of these deformation modes are explicitly modeled. Instead, the response is defined via six independent yield functions (one for each stress component in the material coordinate system),  $\phi_{\beta\gamma}$ , that are a function of the corresponding stress, the compaction state, and the current strain rate,  $\dot{\varepsilon} = \sqrt{d_{ij}d_{ij}}$ . Here,  $d_{ij}$  is the unrotated rate of

deformation in the global ( $X, Y, Z$ ) coordinate system and  $\beta$  and  $\gamma$  are being used as subscripts to denote variables in the material coordinate system.

The six yield functions are,

$$\begin{aligned}\phi_{LL} &= \sigma_{LL} - f_{LL}(\alpha) h(\dot{\bar{\varepsilon}}) \\ \phi_{TT} &= \sigma_{TT} - f_{TT}(\alpha) h(\dot{\bar{\varepsilon}}) \\ \phi_{WW} &= \sigma_{WW} - f_{WW}(\alpha) h(\dot{\bar{\varepsilon}}) \\ \phi_{LT} &= \sigma_{LT} - f_{LT}(\alpha) h(\dot{\bar{\varepsilon}}) \\ \phi_{TW} &= \sigma_{TW} - f_{TW}(\alpha) h(\dot{\bar{\varepsilon}}) \\ \phi_{WL} &= \sigma_{WL} - f_{WL}(\alpha) h(\dot{\bar{\varepsilon}})\end{aligned}, \quad (5.26.6)$$

with  $\sigma_{\beta\gamma}$  being the current symmetric Cauchy stresses in the material coordinate system,  $f_{\beta\gamma}$  are user specified hardening functions defining the maximum stress in that direction for a given compaction state and  $h(\dot{\bar{\varepsilon}})$  is the strain rate sensitivity function that is common to all the yield functions. With these forms, it is evident that the definition of the different hardening functions dictates the model response through the uncompact regime. All (or none) of the aforementioned deformation mechanisms may be captured by the appropriate definition of those functions. As such, the response is dictated by the desire of the analyst and appropriate selection of the elastic scaling, hardening, and strain rate sensitivity function –  $f_E(\alpha)$ ,  $f_{\beta\gamma}(\alpha)$ , and  $h(\dot{\bar{\varepsilon}})$ .

### 5.26.2 Implementation

Unlike the orthotropic crush model, the rate variant considered here has couplings between the different directional strains and cannot be evaluate numerically as easily. Therefore, the orthotropic rate model is integrated using a hypoelastic formulation. As was discussed in the preceding section, the model is formulated in the  $T, L, W$  coordinate system and not the unrotated frame. Therefore, the first step before proceeding is to map strain and stress values from the unrotated to the material frame. To this end, an orthogonal rotation tensor  $\tilde{Q}_{ij}$  is constructed from user input vectors  $\hat{l}_i$  and  $\hat{l}_j$  defining the strong and ribbon directions, respectively. In this case, the “~” is used to differentiate this tensor from that mapping between the rotated and unrotated configurations defined in (5.1.1). The stress and deformation rates in the material coordinate system,  $\tilde{\sigma}_{ij}$  and  $\tilde{d}_{ij}$ , are determined via,

$$\tilde{\sigma}_{ij}^n = \tilde{Q}_{ki} T_{kl}^n \tilde{Q}_{lj}, \quad (5.26.7)$$

$$\tilde{d}_{ij}^{n+1} = \tilde{Q}_{ki} d_{kl}^{n+1} \tilde{Q}_{lj}, \quad (5.26.8)$$

where  $T_{ij}^n$  and  $d_{ij}^{n+1}$  are the unrotated stress and deformation rates, respectively. For convenience, the remainder of this discuss will neglect the “~” notation and all operations will be assumed to be in the material coordinate system unless specifically noted. Additionally, after a converged stress is achieved, the inverse mapping of (5.26.7) is used to determine  $T_{ij}^{n+1}$ .

As the strain increment is fixed for a load step, kinematically defined variables such as  $\alpha^{n+1}$  and the strain rate,  $\dot{\varepsilon}^{n+1}$ , may first be determined. The latter term is defined as,

$$\dot{\varepsilon}^{n+1} = \sqrt{d_{ij}^{n+1} d_{ij}^{n+1}}, \quad (5.26.9)$$

with  $d_{ij}^{n+1}$  being the strain rate in the global coordinate system. For the former, it must first be noted that the engineering,  $\varepsilon_V$ , and logarithmic,  $\varepsilon_{kk}$ , volumetric strains are related via  $\varepsilon_V = \exp(\varepsilon_{kk}) - 1$ . The current state of compaction is then given as,

$$\alpha^{n+1} = 1 - \hat{\varepsilon}_V^{n+1}, \quad (5.26.10)$$

where  $\hat{\varepsilon}_V^{n+1} = \min [\hat{\varepsilon}_V^n, \exp(\varepsilon_{kk}^{n+1})]$ .

The material response has two distinct regimes. As discussed in the corresponding theory section, the compacted material behaves as an elastic-plastic material. Such a response and the corresponding numerical analysis has been described in Section 5.6.2. As such, it will not be further presented here and instead the focus is on the behavior during the uncompacted stages.

Earlier, it was mentioned that the response during the compaction process is dictated by three functions – the elastic scaling, hardening, and strain rate sensitivity. These three expressions are dependent on the state of compaction and strain rate. As those kinematic properties have already been calculated, the values of  $f_E^{n+1} = f_E(\alpha^{n+1})$ ,  $f_{ij}^{n+1} = f_{ij}(\alpha^{n+1})$ , and  $h^{n+1} = h(\dot{\varepsilon}^{n+1})$  may easily be calculated. In the remainder of this section, the functional dependencies of these terms will not be explicitly presented for ease and brevity. Similarly, the superscript  $n + 1$  will be dropped and it should be assumed that unless specifically denoted the variable is evaluated at the  $n + 1$  step. With  $f_E$  (and  $f_E^n$ ) defined, the elastic stiffness,  $\mathbb{C}_{ijkl}$  and  $\mathbb{C}_{ijk}^n$ , and compliance,  $\mathbb{S}_{ijkl}$  and  $\mathbb{S}_{ijk}^n$ , tensors may also be calculated.

To determine the updated material state, the change in elastic stiffness (associated with the change in compaction) must be determined. To this end,

$$\hat{\sigma}_{ij}^n = \mathbb{C}_{ijkl} \varepsilon_{kl}^{e-n} \quad (5.26.11)$$

where

$$\varepsilon_{ij}^{e-n} = \mathbb{S}_{ijkl}^n \sigma_{kl}^n. \quad (5.26.12)$$

In the previous two relations, it is noted that the respective mechanical tensors are determined at different load steps thus leading to the altered stress state. The tensor  $\sigma_{ij}^n$  refers to the stress determined and stored from the previous loadstep while  $\hat{\sigma}_{ij}^n$  incorporates the change in mechanical stiffness. A trial stress state may be calculated as,

$$\sigma_{ij}^{tr} = \hat{\sigma}_{ij}^n + \mathbb{C}_{ijkl} d \varepsilon_{kl}^{e-tr}, \quad (5.26.13)$$

with the trial elastic strain increment,  $d \varepsilon_{ij}^{e-tr}$  being that of the total strain increment,  $d_{ij} \Delta t$ . The flow (yield) functions,  $f_{ij}^{tr}$ , are then calculated. If all  $f_{ij}^{tr} < 0$ , the solution is elastic and the trial state

is accepted. On the other hand, if any  $f_{ij}^{tr} > 0$  a correction scheme is needed. This poses a more complex problem than in the orthotropic crush model given the multiple (six) yield surfaces.

To perform the plastic correction, an approach similar in principle to the return-mapping schemes heavily used in metal plasticity (e.g. Section 5.6.2). Here, however, there is no internal state variable and associated evolution equations to evolve the state. Instead, in this case the elastic strain is iterated over until all the yield conditions are satisfied. Specifically, for the  $k$ -th iteration, the stress is calculated as

$$\sigma_{ij}^k = \hat{\sigma}_{ij}^n + \mathbb{C}_{ijkl} d\varepsilon_{kl}^{e-k}. \quad (5.26.14)$$

Updated yield functions,  $f_{ij}^k$ , are then calculated and the active flow directions (those with  $f_{ij} > 0$ ) determined. A tangent modulus is then constructed (essentially by turning off components corresponding to inactive directions) and a plastic flow tensor is determined using the tangent compliance and the value of the yield functions. The updated elastic strain increment,  $d\varepsilon_{ij}^{e-k+1}$ , is then found by removing the calculated strain. This process is repeated until satisfaction of all the yield functions.

### 5.26.3 Verification

To verify the orthotropic crush model, a series of uniaxial compression tests are performed. Given the multiple salient features in this model (e.g. strain rate dependence, user-defined coordinate system), the test sequence is constructed to investigate and probe each of the different features to gain confidence in all of the anticipated capabilities. Additionally, the analyzed loading paths correspond to those in which the kinematics are fully prescribed. This is done so that analytical expressions may be found due to the strong coupling between the kinematics and constitutive response through the compaction state,  $\alpha$ . The common model parameters used for these tests are given in Table 5.39 and the functional forms of the input strength/hardening curves,  $f_{\beta\gamma}$ , are presented in Figure 5.97. It is noted, however, that these properties will take various values during the verification tests to activate and deactivate different responses. Additionally, in Figure 5.97, two sets of curves are given – the full, complex set of six distinct functions (5.97a) and a simpler set (5.97b). In the latter, only one curve common to the three diagonal strengths are shown. The other three strength functions are all set artificially high to enable the study of a simpler case.

#### 5.26.3.1 Uniaxial Strain - Isotropic

First, the response of the model with through a uniaxial strain loading is explored. In this case, the prescribed displacement is  $u_i = \hat{\lambda}\delta_{i1}$ . For this initial study, isotropic elastic constants are assumed leading to  $E_L^0 = E_{LLLL}^0 = E_{TTTT}^0 = E_{WWWW}^0 = 5,384.6$  ksi and  $E_T^0 = E_{TTLL}^0 = E_{TTWW}^0 = E_{LLWW}^0 = 2,307.7$  ksi. These properties are chosen to match the compacted state and  $f_E(\alpha)$  is set to zero. In this way, the elastic properties are constant throughout loading. The shear moduli are scaled accordingly and the remaining properties are left unchanged from Table 5.39. In this case, the model response simplifies to

$$\alpha = -\hat{\lambda}, \quad (5.26.15)$$

$E_{TTTT}^0$	2,322.0 ksi	$E$	4000.0 ksi
$E_{TTLL}^0$	485.8 ksi	$\nu$	0.3
$E_{TTWW}^0$	68.8 ksi	$\sigma_y$	15.0 ksi
$E_{LLLL}^0$	1,348.0 ksi	$\hat{t}_x$	1.0
$E_{LLWW}^0$	121.8 ksi	$\hat{t}_y$	0.0
$E_{WWWW}^0$	85.0 ksi	$\hat{t}_z$	0.0
$G_{TLLT}^0$	1,345.0 ksi	$\hat{l}_x$	0.0
$G_{LWLW}^0$	67.0 ksi	$\hat{l}_y$	1.0
$G_{WTWT}^0$	260.0 ksi	$\hat{l}_z$	0.0
$h(\dot{\varepsilon})$	1.0	$f_E(\alpha)$	$\alpha$

Table 5.39: Material and model parameters for the orthotropic rate model used during verification testing.

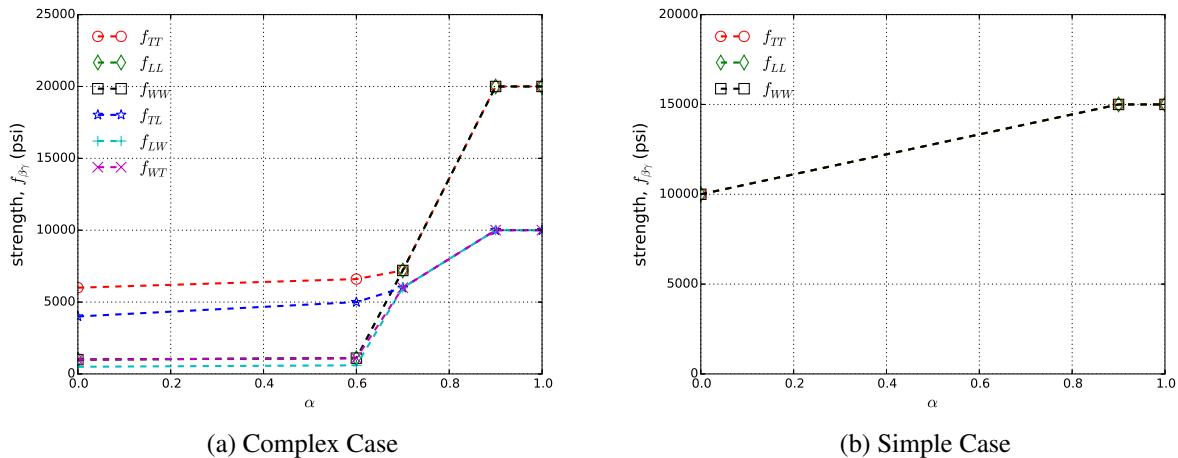


Figure 5.97: Input strength/hardening curves,  $f_{\beta\gamma}$ , for use in verification tests of the orthotropic rate model.

and

$$\sigma_{11} = \begin{cases} \hat{\sigma} & \hat{\sigma} \leq f_{TT}(\alpha) \\ f_{TT} & \hat{\sigma} > f_{TT}(\alpha) \end{cases} \quad (5.26.16)$$

$$\sigma_{22} = \sigma_{33} = \begin{cases} \lambda \ln(1 + \hat{\lambda}) & \hat{\sigma} \leq f_{TT}(\alpha) \\ \frac{\lambda}{\lambda + 2\mu} \sigma_{11} & \hat{\sigma} > f_{TT}(\alpha) \end{cases}, \quad (5.26.17)$$

where

$$\hat{\sigma} = (\lambda + 2\mu) \ln(1 + \hat{\lambda}). \quad (5.26.18)$$

The single linear hardening crush curve given in Figure 5.97b is used for this analysis. The resulting stresses as a function of applied displacement,  $\hat{\lambda}$ , are given in Figure 5.98 and good agreement

is noted.


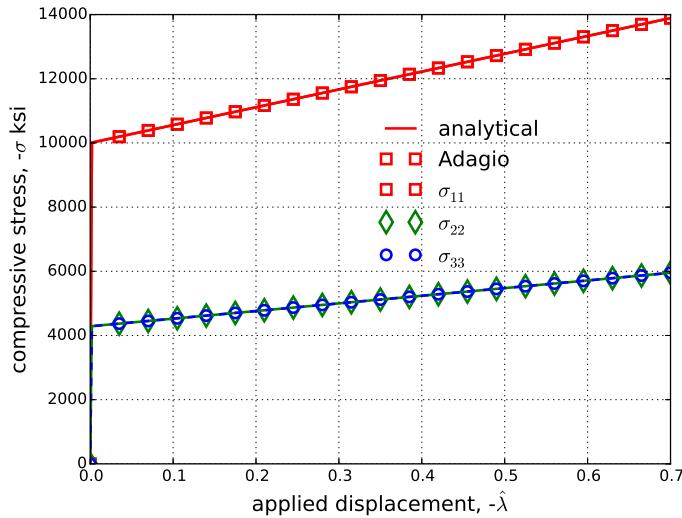



Figure 5.98: Axial and off-axis stresses determined analytically and numerically via the orthotropic rate model with constant, isotropic elastic properties

### 5.26.3.2 Uniaxial Strain - Orthotropic

The uniaxial problem described in the previous section is again studied – although this time using the orthotropic elastic properties listed in Table 5.39. To test the material coordinate system capabilities two cases are considered – essentially with the  $x_1$  axis aligned with the  $T$  and  $L$  axes. The first case corresponds to the definition of the  $\hat{t}_i$  and  $\hat{l}_i$  vectors in Table 5.39. Alternatively, the second case is defined by setting the  $L$  direction aligned with the  $x_1$  axis ( $\hat{l}_x = 1.0$ ,  $\hat{l}_y = 0.0$ ,  $\hat{l}_z = 0.0$  and  $\hat{t}_x = 0.0$ ,  $\hat{t}_y = 0.0$ ,  $\hat{t}_z = 1.0$ ). The stress state evolutions determined via adagio and analytically for the two considered orientations are shown in Figures 5.99a and 5.99b, respectively. The analytical solutions are found in the same fashion as (5.26.16) with the moduli changed for the orthotropic case. Good agreement is observed.

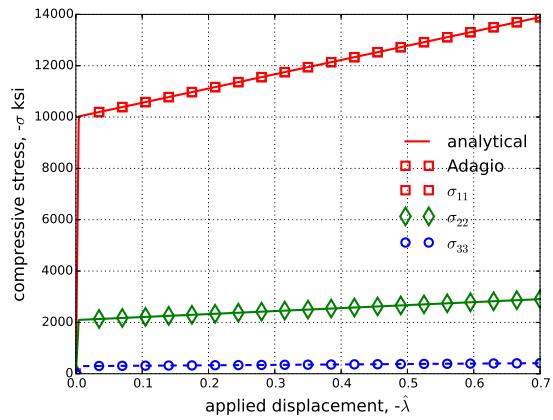

(a) Loading aligned with the  $T$  direction

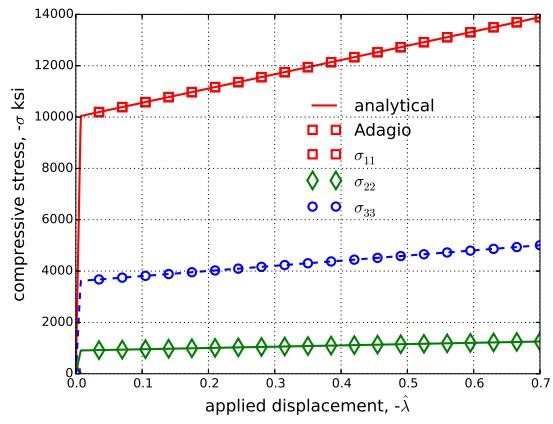

(b) Loading aligned with the  $W$  direction

Figure 5.99: Axial and off-axis stresses determined analytically and numerically via the orthotropic rate model with constant, orthotropic elastic constants. The material coordinate systems is rotated in two different directions with the loading direction always aligned with  $x_1$

#### 5.26.4 User Guide

```

BEGIN PARAMETERS FOR MODEL ORTHOTROPIC_RATE
#
# Elastic constants
#
YOUNGS MODULUS = <real> E
POISSONS RATIO = <real> ν
SHEAR MODULUS = <real> G
BULK MODULUS = <real> K
LAMBDA = <real> λ
TWO MU = <real> 2μ
#
YIELD STRESS = <real> σy
#
MODULUS TTTT = <real> ETTTT0
MODULUS TTLL = <real> ETTLL0
MODULUS TTWW = <real> ETTWW0
MODULUS LLLL = <real> ELLLL0
MODULUS LLWW = <real> ELLWW0
MODULUS WWWW = <real> EWWWW0
MODULUS TLTL = <real> GTLTL0
MODULUS LWLW = <real> GLWLW0
MODULUS WTWT = <real> GWTWT0
#
TX = <real>  $\hat{t}_x$ 
TY = <real>  $\hat{t}_y$ 
TZ = <real>  $\hat{t}_z$ 
LX = <real>  $\hat{l}_x$ 
LY = <real>  $\hat{l}_y$ 
LZ = <real>  $\hat{l}_z$ 
#
MODULUS FUNCTION = <string> fE(α)
RATE FUNCTION = <string> h( $\dot{\varepsilon}$ )
#
T FUNCTION = <string> fTT(α)
L FUNCTION = <string> fLL(α)
W FUNCTION = <string> fWW(α)
TL FUNCTION = <string> fTL(α)
LW FUNCTION = <string> fLW(α)
WT FUNCTION = <string> fWT(α)
END [PARAMETERS FOR MODEL ORTHOTROPIC_RATE]

```

Output variables for this model are listed in Table 5.40.

Table 5.40: State variables for ORTHOTROPIC RATE Model

<b>Index</b>	<b>Name</b>	<b>Variable Description</b>
1	CRUSH	minimum volume ratio, crush is unrecoverable ( $\hat{\epsilon}_V$ )

## References

- [1] S.W. Attaway. Orthotropic crush constitutive relation for PRONTO. Technical Report Memo, Sandia National Laboratories, Albuquerque, NM, September 29, 1992.
- [2] L.J. Gibson and M.F. Ashby. *Cellular Solids: Structure and Properties*. Cambridge Solid State Science Series. Cambridge University Press, Cambridge, UK, second edition, 1997.

## 5.27 Universal Polymer Model (UPM)

### 5.27.1 Theory

The Universal Polymer Model (UPM) is a phenomenological, non-linear viscoelastic (NLVE) model that is, in the literature, named the Simplified Potential Energy Clock (SPEC) [1]. The UPM model is considerably simpler than the parent model, the Potential Energy Clock (PEC) model, labeled the NLVE polymer model in SIERRA, which itself is not phenomenological but requires extensive data and experience to calibrate [2].

The UPM model is suitable for modeling the finite deformation, thermal-mechanical behavior of glassy materials, both organic and inorganic. Successful usage of the model is widespread. Some examples include the modeling of amorphous, thermosetting polymers across and through the glass transition such as epoxies [3]. It is also suitable for modeling thermoplastics from within the melt state and down into the glass transition from polystyrene to polycarbonate. Finally, it has been used to represent inorganic glasses for glass-to-metal seals. The UPM model was developed for production analyses of encapsulated components. It predicts a full range of behavior including yielding, stress relaxation, volume relaxation, and physical aging.

The key physical principal behind the UPM model is that there exists a material time scale (material clock) separate from the laboratory time scale. If the material time scale is fast, such as in the rubbery state of a polymer, then the UPM model responds instantly to changes in temperature and strain such that the user would observe rate-independent behavior. However, if the material clock is slow relative to the laboratory time scale, viscoelastic memory builds with any process, which causes acute history and thermodynamic path dependent behavior.

The model response is derived from a Helmholtz Free Energy density and takes as an input the unrotated rate of deformation,  $d_{ij}$ , the temperature at the start and end of the time step ( $\theta_n$  and  $\theta_{n+1}$ , and the time step,  $\Delta t$ . From these inputs, the hereditary integrals within the model are updated, and the unrotated Cauchy stress tensor is returned.

For the UPM model, the strain measure is approximated from the integrated unrotated rate of deformation tensor, which we label  $\epsilon_{ij}$ ,

$$\epsilon_{ij} = \int_0^\infty (R_{mi} D_{mn} R_{nj}) ds, \quad D_{ij} = \frac{1}{2} (L_{ij} + L_{ji}), \quad F_{ij} = R_{im} U_{mj}. \quad (5.27.1)$$

Here,  $F_{ij}$ ,  $R_{ij}$ ,  $U_{ij}$ ,  $L_{ij}$ , and  $D_{ij}$  are the deformation gradient, rotation, material stretch, velocity gradient, and rate of deformation tensors standard in Lagrangian continuum mechanics.

The UPM model allows the user to initiate an analysis from a stress-free temperature,  $\theta_{sf}$ , that is different from the reference temperature,  $\theta_{ref}$ , at which all material properties are defined. Here we briefly summarize the constitutive equations. The model is derived from a Helmholtz Free Energy, but we begin directly with the (unrotated) Cauchy Stress and refer the reader to reference [1] for more detail:

$$\begin{aligned}
\sigma_{ij} = & (K_G[\theta] - K_\infty[\theta]) \int_0^t ds f_v[t' - s'] \frac{dI_1}{ds} \delta_{ij} \dots \\
& \dots - (K_G[\theta] \delta_G[\theta] - K_\infty[\theta] \delta_\infty[\theta]) \int_0^t ds f_v[t' - s'] \frac{d\theta}{ds} \delta_{ij} \dots \\
& \dots + 2(G_G[\theta] - G_\infty[\theta]) \int_0^t ds f_s[t' - s'] \frac{d(\text{dev}\epsilon_{ij})}{ds} ds \dots \\
& \dots + (K_\infty[\theta] I_1 - K_\infty[\theta] \delta_\infty[\theta] (\theta - \theta_{\text{sf}})) \delta_{ij} + 2G_\infty[\theta] \text{dev}\epsilon_{ij}.
\end{aligned} \tag{5.27.2}$$

The first three lines of terms in Equation 5.27.2 represent the time-dependent and dissipative (non-equilibrium) response of the model to volumetric, thermal, and shear deformation histories. The last collection of terms in 5.27.2 furnish the time-independent rubbery (equilibrium) response. Each term is preceded by material constants with either  $_G$  or  $_\infty$  that represent the glassy and rubbery responses of the model. The variables in equation 5.27.2 are:

$$I_1 = \delta_{ij}\epsilon_{ij} = \text{tr}\epsilon_{ij}, \quad \text{dev}\epsilon_{ij} = \epsilon_{ij} - \frac{I_1}{3}\delta_{ij}, \tag{5.27.3}$$

$$G_G[\theta] = G_G^{\text{ref}} + \frac{dG_G}{d\theta}(\theta - \theta_{\text{ref}}), \quad G_\infty[\theta] = G_\infty^{\text{ref}} + \frac{dG_\infty}{d\theta}(\theta - \theta_{\text{ref}}), \tag{5.27.4}$$

$$K_G[\theta] = K_G^{\text{ref}} + \frac{dK_G}{d\theta}(\theta - \theta_{\text{ref}}), \quad K_\infty[\theta] = K_\infty^{\text{ref}} + \frac{dK_\infty}{d\theta}(\theta - \theta_{\text{ref}}), \tag{5.27.5}$$

$$\delta_G[\theta] = \alpha_G^{\text{ref}} + \frac{d\alpha_G}{d\theta}(\theta - \theta_{\text{ref}}), \quad \delta_\infty[\theta] = \alpha_\infty^{\text{ref}} + \frac{d\alpha_\infty}{d\theta}(\theta - \theta_{\text{ref}}). \tag{5.27.6}$$

The first three terms in Equation 5.27.2 represent the material's viscoelastic response to changes in volume strain, temperature, and shear deformation. Two relaxation functions are used to characterize the thermal/volumetric ( $f_v$ ) and shear ( $f_s$ ) relaxation responses. The model assumes the thermal and volumetric relaxation responses are identical. Otherwise,  $f_v$  and  $f_s$  are typically quite different and are expressed as a Prony series<sup>6</sup>:

$$f_v[x] = \sum_{k=1}^N w^{(k)} \exp\left(-\frac{x}{\tau^{(k)}}\right), \quad f_s[x] = \sum_{l=1}^M w^{(l)} \exp\left(-\frac{x}{\tau^{(l)}}\right). \tag{5.27.7}$$

These relaxation functions describe the material's response to a suddenly applied volumetric/thermal or shear perturbation at the reference temperature where, under certain conditions, the material and laboratory time scales are equivalent. In Equation 5.27.2, the viscous terms (non-rubber) involve hereditary integrals over the difference in material time from  $s = 0$  to  $s = t$ , which is the current laboratory time. An increment in material time,  $dt'$ , and the laboratory time,  $dt$ , are related through the (highly) history dependent shift factor,  $a$ , such that the difference in material time,  $t' - s'$ , is related to the corresponding difference in laboratory time,  $t - s$  through:

$$adt' = dt, \quad t' - s' = \int_{u=s}^{u=t} \frac{du}{a[u]}. \tag{5.27.8}$$

<sup>6</sup>Note: to distinguish between indices used with conventional summation convention and those related to Prony series terms, all Prony series summations shall be explicitly written with the relevant index given parenthetically in a superscript.

If the material time scale is very slow compared to the laboratory time, then  $a \gg 1$ , which is often the case inside and below the glass transition for typically glassy materials.

The shift factor is instantaneously defined through:

$$\log_{10} a = \frac{-C_1 N}{C_2 + N}, \quad (5.27.9)$$

$$\begin{aligned} N[t] &= \theta - \theta_{\text{ref}} - \int_0^t f_v [t' - s'] \frac{d\theta}{ds} ds \dots \\ &\dots + C_3 \left( I_1 - \int_0^t f_v [t' - s'] \frac{dI_1}{ds} ds \right) \dots \\ &\dots + C_4 \int_{u=0}^{u=t} \int_{s=0}^{s=t} \left( f_s [t' - s', t' - u'] \frac{d(\text{dev}\epsilon_{ij})}{ds} \frac{d(\text{dev}\epsilon_{ij})}{du} ds du \right). \end{aligned} \quad (5.27.10)$$

The key physics in the model comes from Equation 5.27.9. Temperature rise (generally) causes  $N$  to increase, and hence the material shift factor shrinks (the material time scale speeds up). Shrinking the volume generally causes the shift factor to increase as if the temperature had been decreased. Mechanistically, this feature is the manifestation of the tradeoff between mobility and free volume available to polymer chains. Finally, shear deformation can greatly speed up the material clock through the last term. This phenomenon is a direct manifestation of “deformation induced mobility”, a key mechanism for glassy materials.

Since the shift factor involves hereditary integrals, even at a constant temperature and state of deformation, the material clock will change over time. Under stress-free conditions, the material will creep and densify if the model is out of equilibrium (when any viscous term is non-zero). These phenomena are the model’s manifestations of physical aging, time-dependent material change without a change in composition or microstructure.  $C_1$ ,  $C_2$ ,  $C_3$ , and  $C_4$  are all material constants. We note that the double relaxation function appearing in the last term takes on a slightly different form from  $f_s$ :

$$f_s [x, y] = \sum_{k=1}^N w^{(k)} \exp \left( -\frac{x}{\tau^{(k)}} \right) \exp \left( -\frac{y}{\tau^{(k)}} \right) \quad (5.27.11)$$

It is desirable to relate a special case of the model to the Williams-Landel-Ferry (WLF) form because of how time-temperature superposition fitting is typically performed. Specifically, one can show that the parameters  $C_1$  and  $C_2$  relate to the WLF coefficients  $\hat{C}_1 = C_1$  and  $\hat{C}_2 = C_2 (1 + C_3 \alpha_{\infty}^{\text{ref}})$ .

For more information about the universal polymer model, consult [1].

## 5.27.2 Implementation

The hereditary integrals in Equation 5.27.2 and 5.27.9 are difficult to evaluate directly. Instead a rate form is pursued than can be integrated straightforwardly over each time step. Consider a typical hereditary integral after the Prony series for its specific relaxation function has been substituted into it. Differentiate the integral with respect to the current time,  $t$ , and use the Leibnitz rule to arrive at:

$$\int_{s=0}^{s=t} f_v [t' - s'] \frac{d\theta}{ds} ds = \sum_{k=0}^N w^{(k)} \int_{s=0}^{s=t} \exp\left(-\frac{t' - s'}{\tau^{(k)}}\right) \frac{d\theta}{ds} ds = \sum_{k=0}^N w^{(k)} J^{(k)} \quad (5.27.12)$$

$$\begin{aligned} \frac{dJ^{(k)}}{dt} &= \int_{s=0}^{s=t} \frac{d}{dt} \left( \exp\left(-\frac{t' - s'}{\tau^{(k)}}\right) \frac{d\theta}{ds} \right) ds + \left( \exp\left(-\frac{t' - s'}{\tau^{(k)}}\right) \frac{d\theta}{ds} \right)_{s=t} \frac{d(t)}{dt} \\ &\dots = \int_{s=0}^{s=t} \exp\left(-\frac{t' - s'}{\tau^{(k)}}\right) \frac{d\theta}{ds} \left( \frac{-1}{\tau^{(k)}} \right) \frac{dt'}{dt} ds + \frac{d\theta}{dt} \\ &\dots = -\frac{1}{a\tau^{(k)}} J^{(k)} + \frac{d\theta}{dt}. \end{aligned} \quad (5.27.13)$$

Notice this rate form involves a memory term which decays as well as input from new history, in this case a change in temperature. To integrate this easily, we approximate this rate as constant over the time step in a constitutive equation update and use the mid-step evaluation to determine the rate. Consider a process in which the temperature changes from  $\theta_n$  at time  $t_n$  to  $\theta_{n+1}$  at  $t_{n+1}$  so that  $\Delta t = t_{n+1} - t_n$ . Then,

$$\begin{aligned} \frac{dJ^{(k)}}{dt} \Big|_{t_{n+1/2}} &\approx \frac{J^{(k)}(t_{n+1}) - J^{(k)}(t_n)}{t_{n+1} - t_n} = -\frac{1}{a_{t_{n+1/2}} \tau^{(k)}} \frac{J^{(k)}|_{n+1} + J^{(k)}|_n}{2} + \frac{\theta_{n+1} - \theta_n}{t_{n+1} - t_n} \\ \dots \rightarrow J^{(k)}|_{n+1} &= \left( \frac{2a_{n+1/2} \tau^{(k)} - \Delta t}{2a_{n+1/2} \tau^{(k)} + \Delta t} \right) J^{(k)}|_n + \left( \frac{2a_{n+1/2} \tau^{(k)}}{2a_{n+1/2} \tau^{(k)} + \Delta t} \right) (\theta_{n+1} - \theta_n). \end{aligned} \quad (5.27.14)$$

Stability of Equation 5.27.14 requires that the first term to remain positive. Hence, the change in time for the purposes of updating these hereditary integrals is:

$$\Delta t = \text{MIN} (t_{n+1} - t_n, 2a_{n+1/2} \tau^{(k)}) \quad (5.27.15)$$

The collection of  $J^{(k)}$  from  $k = 1, N$  are internal state variables associated with this particular hereditary integral. Each Prony term for each distinct hereditary integral must be stored as an internal state variable.

Fortunately, changing from a scalar field to a tensor field ( $\theta$  to  $\epsilon_{ij}$ ) does not alter the above time integration except that for each Prony term, each component of the tensor must be stored and updated as a state variable. For example, the hereditary integrals associated with deviatoric strain history update as follows,

$$\begin{aligned} \text{let } H_{ij} &= \int_0^t ds f_s [t' - s'] \frac{d(\text{dev}\epsilon_{ij})}{ds} ds = \sum_{k=1}^N w^{(k)} H_{ij}^{(k)}, \quad (5.27.16) \\ \frac{dH_{ij}^{(k)}}{dt} \Big|_{t_{n+1/2}} &\approx \frac{H_{ij}^{(k)}(t_{n+1}) - H_{ij}^{(k)}(t_n)}{t_{n+1} - t_n} = -\frac{1}{a_{t_{n+1/2}} \tau^{(k)}} \frac{H_{ij}^{(k)}|_{n+1} + H_{ij}^{(k)}|_n}{2} + \frac{H_{ij}^{n+1} - H_{ij}^n}{t_{n+1} - t_n} \\ \dots \rightarrow H_{ij}^{(k)}|_{n+1} &= \left( \frac{2a_{n+1/2} \tau^{(k)} - \Delta t}{2a_{n+1/2} \tau^{(k)} + \Delta t} \right) H_{ij}^{(k)}|_n + \left( \frac{2a_{n+1/2} \tau^{(k)}}{2a_{n+1/2} \tau^{(k)} + \Delta t} \right) (H_{ij}^{n+1} - H_{ij}^n). \end{aligned}$$

Here,  $H_{ij}^{(k)}$  is a collection of six state variables that compose the  $k^{\text{th}}$  Prony term deviatoric strain history hereditary integral as in Equation 5.27.2. The superscripts refer to the prony term number, and each component of these tensors much be updated and stored.

Because of the double hereditary integral in Equation 5.27.9 associated with shear deformation and shift factor acceleration, a rate form for this kind of term is also needed. Again, differentiate the integral with respect to the current time,  $t$ , and use the Leibnitz rule to arrive at:

$$\begin{aligned} & \int_{u=0}^{u=t} \int_{s=0}^{s=t} \left( f_s [t' - s', t' - u'] \frac{d(\text{dev}\epsilon_{ij})}{ds} \frac{d(\text{dev}\epsilon_{ij})}{du} ds du \right) = \dots \quad (5.27.17) \\ & \sum_{k=1}^N w^{(k)} \int_{u=0}^{u=t} \int_{s=0}^{s=t} \left( \exp \left[ -\frac{t' - s'}{\tau^{(k)}} \right] \exp \left[ -\frac{t' - u'}{\tau^{(k)}} \right] \frac{d(\text{dev}\epsilon_{ij})}{ds} \frac{d(\text{dev}\epsilon_{ij})}{du} ds du \right) = \dots \\ & \quad \sum_{k=0}^N w^{(k)} Q^{(k)}. \\ & \frac{dQ^{(k)}}{dt} = \frac{-2Q^{(k)}}{a\tau^{(k)}} + 2 \frac{d(\text{dev}\epsilon_{ij})}{dt} \int_{s=0}^{s=t} \left( \exp \left[ -\frac{t' - u'}{\tau^{(k)}} \right] \frac{d(\text{dev}\epsilon_{ij})}{du} du \right) = \dots \quad (5.27.18) \\ & \quad \frac{dQ^{(k)}}{dt} = \frac{-2Q^{(k)}}{a\tau^{(k)}} + 2 \frac{d(\text{dev}\epsilon_{ij})}{dt} H_{ij}^{(k)} \end{aligned}$$

The variables  $J^{(k)}$ ,  $Q^{(k)}$ , and all six components of  $H_{ij}^{(k)}$  are state variables that are stored and updated through the midstep algorithm presented above.

The actual update of the constitutive equations involves finding the shift factor at  $t_{n+1/2}$ , which requires Newton's method on Equation 5.27.9. Using the techniques from Equations 5.27.12 through 5.27.17, it is straightforward to chain rule differentiate the term  $N$  in Equation 5.27.9, and that analysis is not reproduced here for brevity.

### 5.27.3 Verification

Verification for the full non-linear viscoelastic features of the universal polymer model is difficult because analytic solutons are not available. Here we verify that two key parts of the model are working correctly, but at this time not all non-linearities in the material clock are verified. First, we verify that the material clock (shift factor) follows the Williams-Landel-Ferry behavior near and above the glass transition (reference temperature). Then, as the material is cooled below the glass transition, we verify that the thermal hereditary integral in the material clock is working properly. Finally, the specimen is reheated through the glass transition, and the shift factor is again compared between the UPM model and a semi-analytic solution.

Second, with the non-linear portions of the clock turned off and the temperature held fixed, an analytic solution to the uniaxial strain boundary value problem is pursued at three different strain rates. This latter verification exercise demonstrates that the hereditary integrals are updated correctly and that the stress response may be calculated using both the shear and bulk relaxation responses simultaneously even when they have different relaxation functions.

### 5.27.3.1 Shift Factor During Traction-Free Cooling and Heating

The WLF equation (considering temperature only) provides a simple means of performing time-temperature superposition. It relates the shift factor,  $a$ , to the current temperature through,

$$\log_{10} a = -\frac{C_1(\theta - \theta_{\text{ref}})}{C_2 + (\theta - \theta_{\text{ref}})}. \quad (5.27.19)$$

Near and above  $\theta_{\text{ref}}$ , the UPM model limits to the WLF model, and below the glass transition, the hereditary integral in the clock “freezes out” further evolution of the shift factor with temperature.


A single element boundary value problem is analyzed in Sierra/SM with the UPM model. A simple temperature sweep is executed under traction free conditions through the glass transition starting from above it at a constant rate of 1°C per minute. The material is then immediately reheated at 1°C per minute to well above the glass transition. The material properties used for this analysis as well as the uniaxial strain problem below are provided in Table 5.41 and reflect a simplified version of the material properties used to represent 828DGEBA / DEA (often called 828DEA) [1].

$\theta_{\text{ref}}$	75°C	$\theta_{\text{sf}}$	125°C
$\hat{C}_1$	16.5	$\hat{C}_2$	54.5°C
$K_G$	4.9 GPa	$K_\infty$	3.2 GPa
$G_G$	0.75 GPa	$G_\infty$	4.5 MPa
$\{f_1\}$	$\{2.99149 \times 10^{-3}, 6.42966 \times 10^{-2}, 6.49783 \times 10^{-1}, 2.82929 \times 10^{-1}\}$		
$\{f_2\}$	$\{1.00305 \times 10^{-2}, 2.11421 \times 10^{-1}, 7.01534 \times 10^{-1}, 7.70145 \times 10^{-2}\}$		
$\{\tau\}$	$\{1.0 \times 10^{-11}, 1.0 \times 10^{-6}, 1.0 \times 10^{-1}, 1.0 \times 10^4\}$ (s)		


Table 5.41: The material and model parameters for the Universal Polymer Model used for verification testing. Parameters are approximately based on a fit for 828DEA in [1], but they represent a linear thermal-viscoelastic representation of the model. Both the shear and volumetric Prony series weights come from fitting these 4 relaxation times to stretched exponential series as discussed in that paper. The thermal relaxation and volumetric relaxation functions are the same in the UPM model. *All other material and model parameters are unused and set to zero.*

For the verification of the time-temperature shift behavior, the model is expected to exactly match the WLF behavior above  $\theta_{\text{ref}}$ , but as the material is cooled below this point, the temperature hereditary integral in the material shift factor definition (Equation 5.27.9) slows further evolution of the shift factor. WLF behavior is observed in the model, which confirms this elementary behavior of the model in Figure 5.100. Then, as the model is further cooled below the glass transition, the UPM model is compared against a custom Newton-Raphson scheme for this boundary value problem (outside Sierra), and agreement is perfect. During reheat, one sees that the shift factor does not retrace the path through temperature space, and a large hysteresis is observed.

Changing the cooling rate changes the temperature at which the UPM model will depart from WLF behavior with the behavior remaining WLF like at colder temperatures for slower cooling rates and departing at warming temperatures for faster cooling rates.

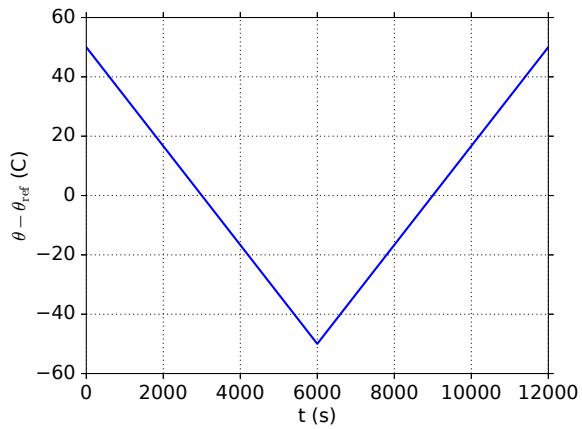

(a) Applied Temperature History

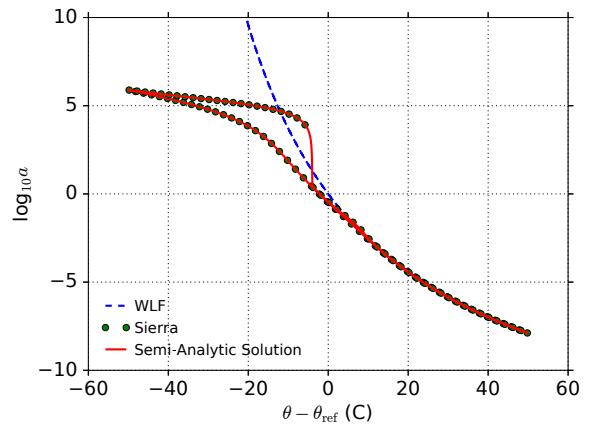

(b) Shift Factor Vs. Temperature

Figure 5.100: Time-temperature dependence of the shift factor,  $a$ , during cooling through the glass transition and then reheating back through it. The cooling/heating rate is  $1^{\circ}\text{C}$  per minute. FEA (circles) show the expected WLF (blue dashed line) behavior for  $\theta - \theta_{\text{ref}} > 0$ . The UPM model departs from WLF behavior below the reference temperature as expected, and continues to agree with an external to Sierra numerical scheme (solid line) to simulate this boundary value problem.

### 5.27.3.2 Uniaxial Strain

The second verification problem considered is uniaxial strain under isothermal conditions wherein the non-linear clock terms are set to zero ( $C_3 = 0$  and  $C_4 = 0$ ). Here, the temperature is set to the reference temperature,  $\theta = \theta_{\text{ref}}$ , and a two stage boundary value problem is simulated. A material point (single 8-node hexahedral element with selective deviatoric spatial integration) is loaded at a constant logarithmic strain rate in uniaxial strain up to a prescribed logarithmic strain (characterized by a loading time,  $t_L$ ). Then, the logarithmic strain rate is fixed to zero. The stress responses in the axial and transverse directions are output over time during this load and hold process. Three logarithmic strain rates are considered: 0.001, 1, and 1000 per second which activate the rubbery, mixed, and glassy responses respectively. For all three cases, the specimen is loaded to 10% axial logarithmic strain, and then the specimen is held for 10 seconds. Uniaxial strain involves finite volume and shape change, and so this boundary value problem tests both relaxation processes simultaneously.

Next we develop the analytic solution for linear thermal-viscoelasticity based on the UPM model. Note that the temperature is fixed to the reference temperature such that the shift factor is 1.0 always. We prescribe the following logarithmic strain rate history on a material point (in a Cartesian frame). Since both the spherical and deviatoric parts of the logarithmic strain history are needed for the model, we derive them too:

$$\text{for } 0 \leq t \leq t_L, \quad \dot{H}_{ij} = \dot{\epsilon} \begin{bmatrix} 1 & 0 & 0 \\ 0 & 0 & 0 \\ 0 & 0 & 0 \end{bmatrix}, \quad \dot{H}_{ij}^{\text{dev}} = \frac{\dot{\epsilon}}{3} \begin{bmatrix} 2 & 0 & 0 \\ 0 & -1 & 0 \\ 0 & 0 & -1 \end{bmatrix}, \quad (5.27.20)$$

$$\text{otherwise} \quad \dot{H}_{ij} = \dot{H}_{ij}^{\text{dev}} = \begin{bmatrix} 0 & 0 & 0 \\ 0 & 0 & 0 \\ 0 & 0 & 0 \end{bmatrix},$$

and the associated strain invariants needed for the model are:

$$I_1, I_2 : \left\{ \begin{array}{l} \text{for } 0 \leq t \leq t_L, \\ \quad I_1 = \delta_{ij} H_{ij} = \dot{\epsilon} t \\ \quad \dot{I}_1 = \dot{\epsilon} \\ \quad I_2 = H_{ij}^{\text{dev}} H_{ij}^{\text{dev}} = \frac{2}{3} \dot{\epsilon}^2 t^2 \\ \quad \dot{I}_2 = \frac{4}{3} \dot{\epsilon}^2 t \\ \\ \text{for } t_L \leq t, \\ \quad I_1 = \dot{\epsilon} t_L \\ \quad \dot{I}_1 = 0 \\ \quad I_2 = \frac{2}{3} \dot{\epsilon}^2 t_L^2 \\ \quad \dot{I}_2 = 0 \end{array} \right. \quad (5.27.21)$$

Now, the motion involves a finite volume change, and the Jacobian of the deformation gradient

will be needed. It is:


$$J = \begin{cases} \text{for } 0 \leq t \leq t_L, \\ \quad \exp(\dot{\epsilon}t) \\ \text{for } t_L \leq t, \\ \quad \exp(\dot{\epsilon}t_L) \end{cases} \quad (5.27.22)$$

The derivation of the linear viscoelastic response proceeds directly with the stress integral from Equation 5.27.2 with equivalent laboratory and material time scales since  $\theta = \theta_{\text{ref}}$ . Using the prescribed strain history from Equation 5.27.21 and the Jacobian of the deformation gradient (Equation 5.27.22), the Cauchy stress response is given below. Again, there are only two non-zero stress components: the axial stress ( $\sigma_{11}$ ) and the transverse stresses ( $\sigma_{22} = \sigma_{33}$ ), which we will label with under score “ $\sigma_A$ ” and “ $\sigma_T$ ” respectively. These are:


$$\text{for } 0 \leq t \leq t_L : \begin{cases} J\sigma_A = \exp(-\dot{\epsilon}t) \dots \\ \dots \left\{ \frac{4(G_g - G_\infty)\dot{\epsilon}}{3} \sum_{k=1}^N w^{(k)} \tau^{(k)} \left( 1 - \exp\left(-\frac{t}{\tau^{(k)}}\right) \right) \right. \\ \dots + (K_g - K_\infty) \dot{\epsilon} \sum_{l=1}^M q^{(l)} \tau^{(l)} \left( 1 - \exp\left(-\frac{t}{\tau^{(l)}}\right) \right) \left. \right\} \dots \\ \dots + (K_\infty + \frac{4}{3}G_\infty) \dot{\epsilon}t, \end{cases} \quad (5.27.23)$$

$$\text{for } t_L \leq t : \begin{cases} J\sigma_A = \exp(-\dot{\epsilon}t_L) \dots \\ \dots \left\{ \frac{4(G_g - G_\infty)\dot{\epsilon}}{3} \sum_{k=1}^N w^{(k)} \tau^{(k)} \left( \exp\left(-\frac{t-t_L}{\tau^{(k)}}\right) - \exp\left(-\frac{t}{\tau^{(k)}}\right) \right) \right. \\ \dots + (K_g - K_\infty) \dot{\epsilon} \sum_{l=1}^M q^{(l)} \tau^{(l)} \left( \exp\left(-\frac{t-t_L}{\tau^{(l)}}\right) - \exp\left(-\frac{t}{\tau^{(l)}}\right) \right) \left. \right\} \dots \\ \dots + (K_\infty + \frac{4}{3}G_\infty) \dot{\epsilon}t_L, \end{cases} \quad (5.27.24)$$


Using the two Prony series in Table 5.41, and the three strain rates (0.1, 1, and 10 per second), the analytic model and UPM are directly compared in Figure 5.101.

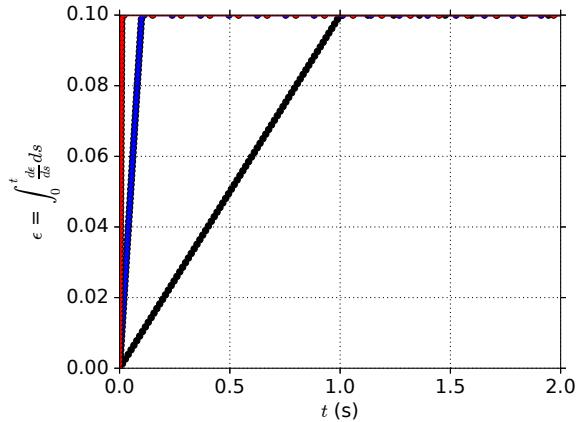

(a) Applied Strain History

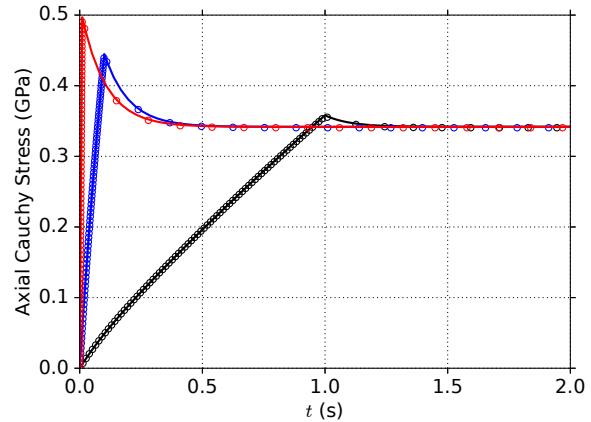

(b) Axial Stress History

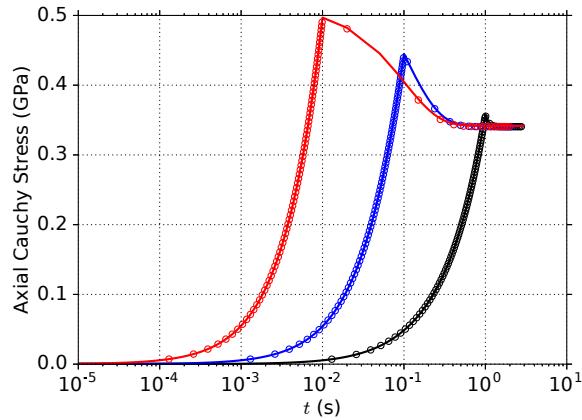

(c) Axial Stress Against Log Time

Figure 5.101: Linear viscoelastic response to a two stage uniaxial strain boundary value problem with material and loading properties specified in Table 5.41. Symbols represent FEA simulations with the UPM model while solid lines are the analytic results. The three logarithmic strain rates of 0.1, 1.0, and 10.0 per second are shown, and all cease at 10% strain, and all cases are isothermal at the reference temperature so that the shift factor is unity.

#### 5.27.4 User Guide

The UPM model is commonly used in one of two ways. The most general use case is portrayed in full in the following syntax in which the user specifies both Prony series explicitly. That is, the user specifies all Prony relaxation times ( $\tau$ ) and weights for both the thermal/volumetric ( $f_v$ ) and shear ( $f_s$ ) relaxation functions. Note that in the UPM model, only a single set of prony relaxation times can be specified and acts as the basis for both relaxation spectra. In other words, a single set of relaxation times is specified, and both functions use their own (distinct) weights.

Default parameters are not set. Any system of units can be used with the model. There are no internal units assumptions.

```
BEGIN PARAMETERS FOR MODEL UNIVERSAL_POLYMER
#
# Elastic constants: These Should be Set to the Glassy Moduli
#                      for robustness considerations
#
SHEAR MODULUS  = <real> G
BULK MODULUS   = <real> K
#
## Reference Temperature and Material CLOCK Parameters
#
REFERENCE TEMPERATURE   = <real> θREF # Temperature
STRESS FREE TEMPERATURE = <real> θSF # Temperature
#
WLF C1   = <real> C1
WLF C2   = <real> C2 # Temperature
CLOCK C3 = <real> C3 # Temperature
CLOCK C4 = <real> C4 # Temperature
#
## Glassy and Rubbery Moduli
# and CTE Definitions at the Reference Temperature
#
BULK GLASSY 0   = <real> KG # Units of Pressure
BULK RUBBERY 0  = <real> K∞ # Units of Pressure
SHEAR GLASSY 0  = <real> GG # Units of Pressure
SHEAR RUBBERY 0 = <real> G∞ # Units of Pressure
VOLCTE glassy 0 = <real> αG # Units of Inverse Temperature
VOLCTE rubbery 0 = <real> α∞ # Units of Inverse Temperature
#
FILLER VOL FRACTION = <real>
#
## Relaxation Time Spectra Definitions
#
WWBETA 1 = <real> β1
WWTAU 1  = <real> τ1 # Units of time
WWBETA 2 = <real> β2
WWTAU 2  = <real> τ2 # Units of time
```

```

#
SPECTRUM START TIME = <real>  # Units of time
SPECTRUM END TIME   = <real>  # Units of time
LOG TIME INCREMENT = <real>  # Units of time
#
## Direct Prony Spectra Inputs
#
RELAX TIME 1 = <real>  # Unit of time
RELAX TIME 2 = <real>
.
RELAX TIME 30 = <real>
#
## Thermal/Volumetric Relaxation Spectrum Prony Weights
#
F1 1 = <real>
F1 2 = <real>
.
F1 30 = <real>
#
## Shear Relaxation Spectrum Prony Weights
#
F2 1 = <real>
F2 2 = <real>
.
F2 30 = <real>
END [PARAMETERS FOR MODEL UNIVERSAL_POLYMER]

```

Not all Prony spectra/weight parameter pairs (1-30) need to be specified. Only those specified will be used, and the ones not specified will be set to zero. Prony weights for each relaxation function should sum to 1.0, or the model will rescale the weights so that they do sum to one. This rescaling will change the underlying relaxation response.

When the model is used with both relaxation functions being specified directly, then the parameters: SPECTRUM START TIME, SPECTRUM END TIME, LOG TIME INCREMENT, WW TAU (1,2), and WW BETA (1,2) must be specified as 0 to avoid errors during the model property check. Note (1) is associated with the thermal/volumetric function, and (2) is associated with the shear relaxation function.

Another common usage of the UPM model is to specify the Williams-Watts (KWW) stretched exponential  $\tau, \beta$  parameters for either or both relaxation functions (1 and/or 2) corresponding to the function  $f = \exp(-(t/\tau)^\beta)$ . That is, a set of Prony weights,  $w_i$  corresponding to a specific set of Prony times,  $\tau_i$ , will be found during the model property check routine. If the other relaxation function is directly specified as above, then the Prony times from the directly specified relaxation spectrum are used. In this case, the Prony weights for the relaxation function being fit to the KWW function are found through a Least-Squared Error minimization routine built into the UPM model over a discretely sampled set of times between the minimum and maximum Prony times.

When neither Prony spectrum is directly specified (both will be fit to KWW functions), then the

Prony times (for both relaxation functions) are determined from an evenly logarithmically spaced set of prony times beginning with the SPECTRUM START TIME and ending with the SPECTRUM END TIME and spaced with the (base 10) LOG TIME INCREMENT. For each relaxation function that is fit with the UPM model to a KWW function, the WW TAU (1,2) and WW BETA (1,2) parametes must be specified. However, if the user specifies both a KWW form and the same Prony series directly, the model will error out during the property check.

There are many useful optional parameters for the UPM model that generally allow for: temperature dependence of moduli, coefficients of thermal expansion, deformation dependence of moduli, and/or alternative material clock parameter specifications. These parameters may optionally be added to the material input block, but are defaulted to 0.0:

```
### OPTIONAL parameters for the universal_polymer model
CLOCK C1      = <real> C1 # CLOCK Coef. 1 instead of "WLF C1"
CLOCK C2      = <real> C2 # CLOCK Coef. 1 instead of "WLF C2"
BULK GLASSY 1 = <real> dKG/dT # Pressure per Temperature
BULK RUBBERY 1 = <real> dK∞/dT # Pressure per Temperature
SHEAR GLASSY 1 = <real> dGG/dT # Pressure per Temperature
SHEAR RUBBERY 1 = <real> dG∞/dT # Pressure per Temperature
VOLCTE GLASSY 1 = <real> dαG/dT # Inverse Temperature Squared
VOLCTE RUBBERY 1 = <real> dα∞/dT # Inverse Temp. Squared
```

Finally, we note that the UPM model may be reduced to a finite deformation, linear thermoviscoelastic model by choosing  $C_3 = 0$  and  $C_4 = 0$ . Under these conditions the material clock is only temperature (history) dependent but involves no deformation dependence. Moreover, if one wants to fix the laboratory and material time scales to be the same, then one should set WLF  $C_1 = 0$ .

Output variables available for this model are listed in Table 5.42. The user should always output the shift factor  $a_{end}$  or  $\log_{10}a$  as this variable is critical for interpreting the material behavior.

Table 5.42: State Variables for Universal Polymer Model

Name	Description
aend	The shift factor relating increments of material to laboratory time, $a dt^* = dt_{\text{lab}}$
loga	$\log_{10}$ of the shift factor, $\log_{10}a$
epsxx	xx component of the integrated unrotated rate of deformation, $\epsilon_{xx}$
epsyy	yy component of the integrated unrotated rate of deformation, $\epsilon_{yy}$
epszz	zz component of the integrated unrotated rate of deformation, $\epsilon_{zz}$
epsxy	xy component of the integrated unrotated rate of deformation, $\epsilon_{xy}$
epsyz	yz component of the integrated unrotated rate of deformation, $\epsilon_{yz}$
epszx	zx component of the integrated unrotated rate of deformation, $\epsilon_{zx}$
effi2	second (non-Cayley Hamilton) invariant of $\epsilon$ providing shear deformation, $I_2$
if1p1-30	volumetric hereditary integrals 1-30
ikat1-30	thermal hereditary integrals 1-30
igxx1-30	xx component shear hereditary integrals 1-30
igyy1-30	yy component shear hereditary integrals 1-30
igzz1-30	zz component shear hereditary integrals 1-30
igxy1-30	xy component shear hereditary integrals 1-30
igyz1-30	yz component shear hereditary integrals 1-30
igzx1-30	zx component shear hereditary integrals 1-30

## References

- [1] D. B. Adolf, R. S. Chambers, and M. A. Neidigk. A simplified potential energy clock model for glassy polymers. *Polymer*, 50:4257–4269, 2009.
- [2] J. M. Caruthers, D. B. Adolf, R. S. Chambers, and P. Shrikhande. A thermodynamically consistent, nonlinear viscoelastic approach for modeling glassy polymers. *Polymer*, 45:4577–4597, 2004.
- [3] D. B. Adolf, R. S. Chambers, and J. M. Caruthers. Extensive validation of a thermodynamically consistent, non-linear viscoelastic model for glassy polymers. *Polymer*, 45:4599–4621, 2004.

## 5.28 Wire Mesh Model

### 5.28.1 Theory

The wire mesh model was developed at Sandia National Laboratories for use with layered sequences of metallic wire meshes and cloth fabric. Model development was based on an extensive series of experiments performed on these materials (see [1]) and used an existing model for rigid polyurethane foams as a starting point [2].

To be able to analyze the response of this material, the Cauchy stress tensor is first decomposed into its principal components,  $\sigma^i$ . Each principal stress is evaluated independently and two behaviors are considered depending on whether or not the material is in tension or compression. Under a tensile load, the material is taken to be perfectly plastic above a yield stress,  $\tau$ . For compressive loads, it is assumed that the material hardens functionally with the volumetric engineering strain,  $\varepsilon_V$ . In this formulation, an arbitrary form of this hardening function,  $\bar{\sigma}(\varepsilon_V)$  is assumed although in the original work [1],

$$\bar{\sigma}(\varepsilon_V) = ae^{-b\varepsilon_V}, \quad (5.28.1)$$

with  $a$  and  $b$  as material constants, was used.

With these assumptions, the yield function of the  $i^{\text{th}}$  principal stress,  $f^i$ , may be written as,

$$f^i = \begin{cases} \sigma^i - \tau, & \sigma^i \geq 0 \\ -\sigma^i - \bar{\sigma}(\varepsilon_V) & \sigma^i < 0 \end{cases}. \quad (5.28.2)$$

where  $\tau$  is the isotropic tensile strength of the material.

Similar to the rigid polyurethane foam model [1], the flow rule is defined as:

$$d_{ij}^p = \dot{\gamma}^1 P_{ijkl}^1 \sigma_{kl} + \dot{\gamma}^2 P_{ijkl}^2 \sigma_{kl} + \dot{\gamma}^3 P_{ijkl}^3 \sigma_{kl} \quad (5.28.3)$$

with  $\dot{\gamma}^i$  being the magnitude of the  $i^{\text{th}}$  plastic strain increment and  $P_{ijkl}^r$  is the fourth-order principal projection operator defined as,

$$P_{ijkl}^r = n_i^r n_j^r n_k^r n_l^r \quad (5.28.4)$$

in which  $n_i^r$  is the corresponding direction vector of principal stress,  $\sigma^r$ . With this definition,

$$\sigma^r = \sigma_{ij} P_{ijkl}^r \sigma_{kl}. \quad (5.28.5)$$

### 5.28.2 Implementation

The wire mesh model is implemented in a hypoelastic fashion similar to the previous elastic-plastic models. First, a trial (unrotated) stress is calculated assuming a purely elastic deformation increment,

$$T_{ij}^{tr} = T_{ij}^n + \Delta t (\lambda \delta_{ij} d_{kk} + 2\mu d_{ij}). \quad (5.28.6)$$

Corresponding principal stresses and their complementary directions are then found using the robust, analytical algorithm put forth in [3]. The principal stresses are denoted  $\sigma^r$  and their eigenvectors are symbolically represented by  $\hat{e}_i^r$ . Here,  $r = 1, 2$ , or  $3$  refer to the respective eigenvalue/vector pair and are not summed unless explicitly indicated. Before evaluating the respective yield functions, the current volumetric engineering strain,  $\varepsilon_V^{n+1}$ , must be determined. To this end, the current strain tensor,  $\varepsilon_{ij}$ , is determined via,

$$\varepsilon_{ij}^{n+1} = \varepsilon_{ij}^n + \Delta t d_{ij}, \quad (5.28.7)$$

and the volumetric engineering strain is,

$$\varepsilon_V^{n+1} = \exp(\varepsilon_{kk}^{n+1}) - 1. \quad (5.28.8)$$

The yield function for each principal stress,  $f^\gamma$ , may then be computed as,

$$f^\gamma = \begin{cases} \sigma^\gamma - \tau, & \sigma^\gamma \geq 0 \\ -\sigma^\gamma - \bar{\sigma}(\varepsilon_V^{n+1}), & \sigma^\gamma < 0 \end{cases}. \quad (5.28.9)$$

Principal stresses at the current load increment,  $\sigma_{n+1}^\gamma$ , are then determined via,

$$\sigma_{n+1}^\gamma = \begin{cases} \sigma^\gamma & f^\gamma < 0 \\ \tau & f^\gamma \geq 0 \end{cases}, \quad (5.28.10)$$

for  $\sigma^\gamma > 0$  and,

$$\sigma_{n+1}^\gamma = \begin{cases} \sigma^\gamma & f^\gamma < 0 \\ -\bar{\sigma}(\varepsilon_V^{n+1}) & f^\gamma \geq 0 \end{cases}, \quad (5.28.11)$$

for compressive principal stresses. The final cartesian stress tensor may be determined via,

$$T_{ij}^{n+1} = \sum_{\gamma=1}^3 \sigma_{n+1}^\gamma \hat{e}_i^\gamma \hat{e}_j^\gamma. \quad (5.28.12)$$

### 5.28.3 Verification

To investigate the performance of the wire mesh model and verify its capabilities, a series analyses are performed considering both the tensile and compressive behavior. The material properties and model parameters come from [1] and are listed in Table 5.43 with one difference. Specifically,  $\nu \neq 0$  to better test the various code interactions. For the numerical simulations the functional hardening form given in (5.28.1) (with  $a$  and  $b$  given in Table 5.43) is discretized and entered as a piecewise linear function.

$E$	100,000 psi	$\nu$	0.3
$a$	120 psi	$b$	8.68
$\tau$	12,000 psi		

Table 5.43: The material properties and model parameters of the wire mesh model used for verification testing

#### 5.28.3.1 Uniaxial Compression

First, the case of uniaxial compression is treated to investigate the hardening behavior. As a uniaxial compressive stress state is being explored, the principal stresses are simply  $\sigma^1 = \sigma^2 = 0$  and  $\sigma^3 = \sigma_{11}$  enabling the development of analytical solutions. To this end,  $u_1 = \lambda_1$  and the remaining surfaces are left traction free. The corresponding strain state is then,

$$\begin{aligned}\varepsilon_{11} &= \ln(1 + \lambda_1), \\ \varepsilon_{22} = \varepsilon_{33} &= -\nu \ln(1 + \lambda_1),\end{aligned}\tag{5.28.13}$$

producing a engineering volume strain of,

$$\varepsilon_V = (1 + \lambda_1)^{(1-2\nu)} - 1.\tag{5.28.14}$$

Noting the elastic uniaxial stress,  $\hat{\sigma}_{11}$ , is simply,

$$\hat{\sigma}_{11} = [\lambda(1 - 2\nu) + 2\mu] \ln(1 + \lambda_1),\tag{5.28.15}$$

the final stress state is simply  $\sigma_{22} = \sigma_{33} = 0$  and,

$$\sigma_{11} = \begin{cases} \hat{\sigma}_{11} & \hat{\sigma}_{11} \leq -ae^{-b\varepsilon_V} \\ -ae^{-b\varepsilon_V} & \hat{\sigma}_{11} > -ae^{-b\varepsilon_V} \end{cases}.\tag{5.28.16}$$

The analytical and numerical solution (from adagio) of this problem are presented in Figure 5.102 with the stress and strains given in Figures 5.102a and 5.102b, respectively. Excellent agreement is observed verifying the compressive hardening performance.

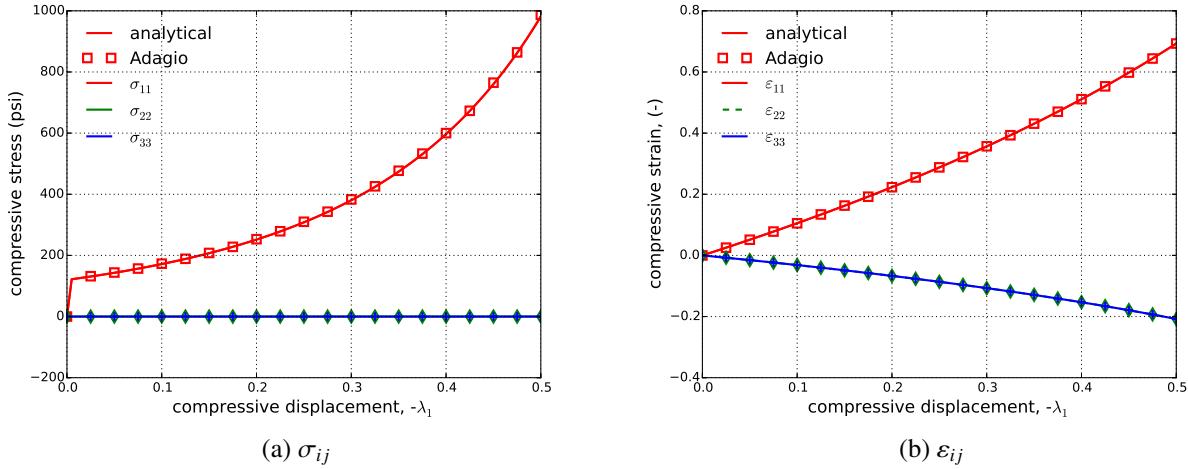


Figure 5.102: Analytical and numerical results of the normal stress and strain components through a compressive uniaxial stress loading path as a function of the applied displacement,  $\lambda_1$ .

### 5.28.3.2 Uniaxial Tension

To consider the tensile behavior, the response of the model under a uniaxial tensile *strain* loading is interrogated. In this case the applied displacement is  $u_i = \lambda_1 \delta_{ii}$  with the remaining displacements fixed such that  $\varepsilon_{22} = \varepsilon_{33} = 0$  and the axial strain is again  $\varepsilon_{11} = \ln(1 + \lambda_1)$ . Given that the model behavior is perfectly plastic after yield, the axial and off-axis responses both reduce to bilinear forms. As such, the applied deformation necessary to induce the perfectly plastic response in the axial direction,  $\lambda_1^{\text{crit}}$ , is simply

$$\lambda_1^{\text{crit}} = e^{\tau/(\lambda+2\mu)} - 1, \quad (5.28.17)$$

leading to an expression for the axial stress as,

$$\sigma_{11} = \begin{cases} (\lambda + 2\mu) \ln(1 + \lambda_1) & \lambda_1 < \lambda_1^{\text{crit}} \\ \tau & \lambda_1 \geq \lambda_1^{\text{crit}} \end{cases}. \quad (5.28.18)$$

For the off-axis behavior, the critical displacement,  $\lambda_1^{\text{off-crit}}$ , is

$$\lambda_1^{\text{off-crit}} = e^{\tau/\lambda} - 1, \quad (5.28.19)$$

producing stresses of the form,

$$\sigma_{22} = \sigma_{33} = \begin{cases} \lambda \ln(1 + \lambda_1) & \lambda_1 < \lambda_1^{\text{off-crit}} \\ \tau & \lambda_1 \geq \lambda_1^{\text{off-crit}} \end{cases}. \quad (5.28.20)$$

The stress and strain responses (both numerical and analytical) are presented below in Figures 5.103a and 5.103b, respectively, and excellent agreement is observed verifying this behavior in this deformation mode.

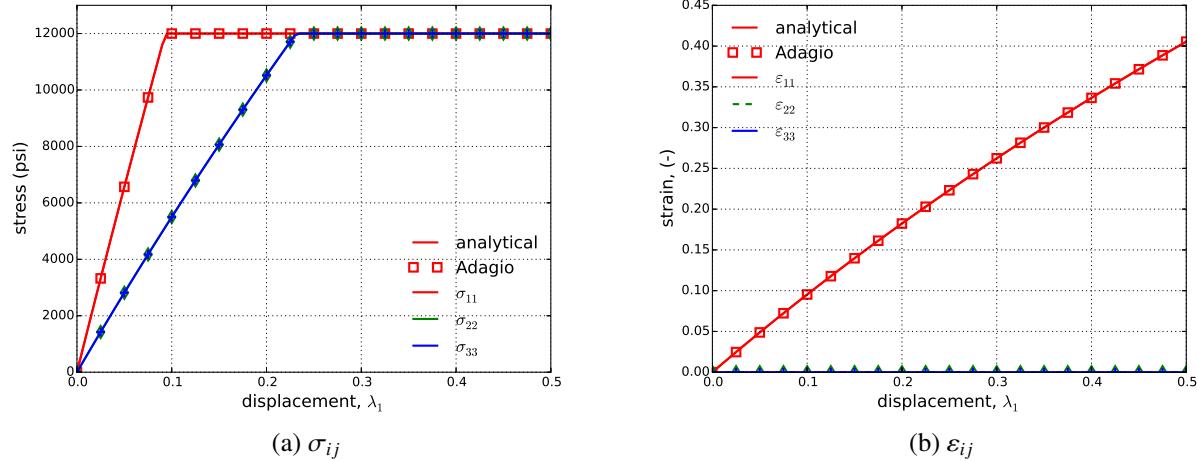


Figure 5.103: Analytical and numerical results of the normal stress and strain components through a tension uniaxial strain loading path as a function of the applied displacement,  $\lambda_1$ .

### 5.28.3.3 Hydrostatic Compression

To further explore the compressive response, the models behavior under a hydrostatic (compressive) loading is investigated. In this instance, the corresponding stress state produces a single, repeated, principal stress associated with the pressure,  $p = -(1/3)\sigma_{kk}$  (here defined positively in compression). Details of this loading may be found in Section A.4, although in this instance it is important to point out that,

$$\varepsilon_V = (1 + \lambda_1)^3 - 1, \quad (5.28.21)$$

and the stress state reduces to,

$$p = -3K \ln(1 + \lambda_1) \quad (5.28.22)$$

in the elastic limit and

$$p = ae^{-b\varepsilon_V}, \quad (5.28.23)$$

during plastic loading. The numerical and analytical results are presented in Figure 5.104 and excellent agreement in noted.

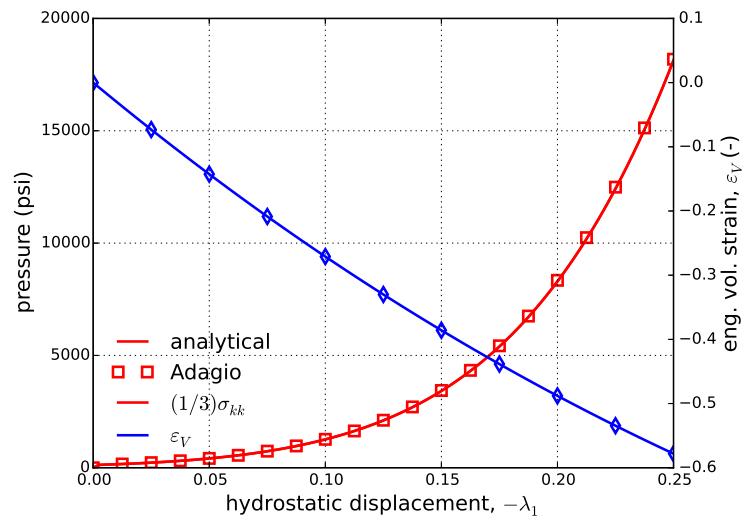


Figure 5.104: Analytical and numerical pressure-volume strain response of the wire mesh model through a hydrostatic compression loading as a function of the applied displacement,  $\lambda_1$ .

#### 5.28.4 User Guide

```
BEGIN PARAMETERS FOR MODEL WIRE_MESH
#
# Elastic constants
#
YOUNGS MODULUS = <real> E
POISSONS RATIO = <real> ν
SHEAR MODULUS = <real> G
BULK MODULUS = <real> K
LAMBDA = <real> λ
TWO MU = <real> 2μ
#
# Yield surface parameters
#
YIELD FUNCTION = <string>  $\bar{\sigma}(\varepsilon_y)$ 
TENSION = <real> τ
END [PARAMETERS FOR MODEL WIRE_MESH]
```

Output variables available for this model are listed in Table 5.44.

More information on the model can be found in the report by Neilsen, et. al. [1].

Table 5.44: State Variables for WIRE MESH Model

Name	Description
EVOL	engineering volumetric strain
YIELD	current yield strength in compression

#### References

- [1] M.K. Neilsen, J.D. Pierce, and R.D. Krieg. A constitutive model for layered wire mesh and aramid cloth fabric. Technical Report SAND91-2850, Sandia National Laboratories, Albuquerque, NM, 1993. [pdf](#).
- [2] M.K. Neilsen, H.S. Morgan, and R.D. Krieg. A phenomenological constitutive model for low density polyurethane foams. Technical Report SAND86-2927, Sandia National Laboratories, Albuquerque, NM, April 1987. [pdf](#).
- [3] W.M. Scherzinger and C.R. Dohrmann. A robust algorithm for finding the eigenvalues and eigenvectors of 3x3 symmetric matrices. *Computer Methods in Applied Mechanics and Engineering*, 197(45-48):4007–4015, 2008.

# Chapter 6

## Implementing a Model

Implementing a model in LAMÉ is simple if one follows a step by step procedure. These steps are applicable independent of the type of constitutive model.

There are two directories in LAMÉ that contain material models that refer to the status of the model. One directory holds what we classify as “development” models while the other directory holds what we classify as “production” models. These directories are

```
include/models/development  
src/models/development
```

and

```
include/models/production  
src/models/production
```

*Models are always implemented in the development directories.* Only after a model has been tested and documented can it be considered for production status.

### 6.1 Header File

The first step is to create a header file that declares what the material class will have in it. The header file will be in the directory

```
include/models/development
```

The header file will give the name of the material model class, which is derived from the **Material** class.

The header file will be named **<MaterialName>.h**. For example, the header file for the elastic-plastic model is **ElasticPlastic.h**.

The header file includes the declaration for the class along with the public methods that define the interface to the material model.

The constructor takes as its argument a pointer to a **MatProps** object. This object has the material properties as read from the input deck. The material properties are copied to a vector of double

```

#ifndef _MATERIAL_MODEL_NAME_H_
#define _MATERIAL_MODEL_NAME_H_

#include <interface/Material.h>
#include <utilities/LameFortran.h>

namespace lame {

    class MaterialModelName : public Material {

    public:

        explicit MaterialModelName( const MatProps & props );
        virtual ~MaterialModelName() {}

        static Material * createMaterial( const MatProps & props );

        int initialize( matParams * p );
        int loadStepInit( matParams * p );
        int getStress( matParams * p );

    private:

        /**
         * private and unimplemented to prevent use
         */

        MaterialModelName( const MaterialModelName & );
        MaterialModelName & operator= ( const MaterialModelName & );

    };

#endif

```

Code 4: A code listing for the header file for a fictitious material model called MATERIAL\_MODEL\_NAME.

precision numbers that is stored by the material model. The constructor for the material model is where input is checked. This is done through a call to a property check routine. The constructor also sets up the number of state variables for the model, which can depend on the input, and it sets up names for the state variables.

The only other method that *must* be defined is the `getStress` method. This method takes its input through a pointer to the `matParams` struct. This struct contains the old state information, e.g. the stress and state variables, and the rate of deformation. These are used by the constitutive model to update the state information, most importantly the stress, and return that information to the host code.

The `initialize` method is most commonly used to assign preliminary values to state variables prior to any load steps. For instance, initial back stresses can be prescribed in such a fashion. Material properties that are not themselves input, but instead derived quantities are also calculated in this routine. A common example of such properties are thermoelastic or yield constants that are defined in a material coordinate system. Checks are also performed on input properties to ensure validity that will result in errors. This method takes as input a pointer to the `matParams` data structure.

The `loadStepInit` is similar to the `initialize` method but is more infrequently used.

Whereas the `initialize` is performed once prior to any calculation, the `loadStepInit` method is performed prior to every load step. Its intended use is to calculate material or model parameters that depend on specified field data – most notably temperature – that is not determined as a part of the constitutive routine. In this way, such variables are calculated only once per load step rather than during every iteration thereby saving on cost. To perform this function, a pointer to the `matParams` data structure is input and the properties being determined are stored as state variables.

## 6.2 Implementation File

The implementation file contains the implementation of the interface to the constitutive model. The implementation file will be in the directory

**`src/models/development`**

The implementation file generally has the following form and contains definitions for all the methods declared in the header file. As such, only the constructor and `getStress` methods have to be declared.

The required methods utilized and specific forms will vary depending on the needs and complexity of the model. Nonetheless, some common objectives exist for the various models.

With respect to the material constructor, the objective is to initialize and organize input properties into the `props` array. For models with internal state variables, the second object is to declare this variables and establish the various aliases needed for output.

For the other methods, notably `getStress`, the purpose is to invoke the associated routine of the model file and pass the relevant data. These specific argument lists will vary depending on the model formulation. For instance, a hyperelastic model will not need the rate of deformation tensor that is essential to a hypoelastic implementation. Typically, these passed parameters are elements of the `matParams` structure and `props` array. Given the variety of models currently implemented in LAMÉ, the specific combinations of data members utilized is quite varied and a number of options are available.

```

#include <models/development/MaterialModelName.h>

namespace lame {

    Material * MaterialModelName::createMaterial( const MatProps & props ) {
        return new MaterialModelName( props );
    }

    MaterialModelName::MaterialModelName( const MatProps & props ) :
        Material( props ) {
    }

    int MaterialModelName::initialize( matParams * p ) {
        return 0;
    }

    int MaterialModelName::loadStepInit( matParams * p ) {
        return 0;
    }

    int MaterialModelName::getStress( matParams * p ) {
        MaterialModelNameGetStress( props );
        return 0;
    }
}

```

Code 5: A code listing for the implementation file for a fictitious material model called MATERIAL\_MODEL\_NAME.

### 6.3 Model File

The model file itself is created by the constitutive model developer. In general there are not many restrictions that are placed on this code. The quality and robustness of this code is the responsibility of the constitutive model developer.

For models that are incorporated into the core LAMÉ library, however, some code standards are required - including testing and documentation.

### 6.4 Material Creator File

The file **src/models/MaterialCreator.C** provides the means for creating an instance of a material model and returning a pointer to that object to the host code. The pattern is based on the factory method. When a material model is ready to be used, it is added to the **src/models/MaterialCreator.C** file. Only after it has been added to this file is the model available to any application using LAMÉ .

### 6.5 Sierra/SM Files

In the previous four sections, the necessary source code additions to execute the constitutive routine in the LAMÉ library were all detailed. For a developer or user to actually use the model, two other changes need to be made. These changes pertain to parsing data from an input deck and transferring that information to the relevant data structures used by the host code. The first modification

includes adding parser definition to translate information from an input deck. Specifically, the file `../apublic/parser/parser/Smod_Material_Model_Name.xml` needs to be added with syntax delineating input commands and variables which need to be prescribed. This input would also include information on allowable data types and bounds. With the input nomenclature defined through such a file, the parser definition of the material must be registered in `../apublic/src/MaterialInputStructural.C`.



## Appendix A

# Common Boundary Value Problems

Throughout this effort, a wide variety of boundary value problems have been used to verify the various model responses investigated. Although some of these are specially tailored to a model, many of the loading paths and problems are common. As such, these repeated tests are presented and discussed here in this appendix. Emphasis is placed on the boundary conditions and kinematic descriptions that do not depend on the constitutive behavior and are therefore similar for all models. Details on how to produce these paths in a finite element problem are also discussed. For details on the various problems considered, the reader is referred to various texts ([1, 2]) on the subject.

### A.1 Uniaxial Stress - Displacement Controlled

In all likelihood, the most common test (experimentally or numerically) is that of uniaxial stress. Such a state may be produced via either stress or displacement control. Here, the latter case is discussed as displacement control can be essential when considering model responses that soften through damage or other mechanisms. To produce the uniaxial stress of interest, a displacement of the form  $u_1 = \lambda(t)$  is applied along the  $x_1$  edge. In three dimensional finite element cases, it is also essential to leave the  $x_2$  and  $x_3$  surfaces with a traction free condition. With elastically isotropic materials, this produces a strain field of the form,

$$\varepsilon_{ij} = [\delta_{i1}\delta_{j1} - \nu(\delta_{i2}\delta_{j2} + \delta_{i3}\delta_{j3})] \ln(1 + \lambda), \quad (\text{A.1.1})$$

which produces  $\sigma_{11}$  as the only non-zero stress.

### A.2 Simple Shear

An alternative, and often simpler to implement, shear problem is that of simple shear. With such a deformation field, only one shear stress component is non-zero (like the pure shear case). The difference arises in that given a simple shear loading the diagonal stresses are not necessarily zero. This state may be produced by a motion,  $\chi(X_i, t)$  of the form  $\chi(X_i, t) = X_i + \gamma(t)X_2\delta_{i1}$ . The resultant deformation gradient,  $F_{ij}$ , takes the form,

$$F_{ij} = \delta_{ij} + \gamma(t)\delta_{i1}\delta_{j2} \quad (\text{A.2.1})$$

and it is noted that this deformation is volume preserving ( $J = \det F_{ij} = 1$ ). Numerically, such a

deformation field results from applying a displacement in the  $x$  direction along the  $y$  surface.

### A.3 Pure Shear

To consider shear-based responses and behaviors of a model, uniaxial loadings are often insufficient. One problem, however, that does investigate shear deformations is that of a pure shear problem. In such problems, only a single shear strain and stress component are non-zero. Such a material state results from a deformation gradient of the form,

$$F_{ij} = \frac{1}{2} (\lambda + \lambda^{-1}) (\delta_{i1}\delta_{j1} + \delta_{i2}\delta_{j2}) + \frac{1}{2} (\lambda - \lambda^{-1}) (\delta_{i1}\delta_{j2} + \delta_{i2}\delta_{j1}) + \delta_{i3}\delta_{j3}, \quad (\text{A.3.1})$$

where the shear loading is relative to the  $x_1 - x_2$  axis. The logarithmic strain tensor is then simply  $\varepsilon_{ij} = \ln \lambda (\delta_{i1}\delta_{j2} + \delta_{i2}\delta_{j1})$ . With such a strain tensor, it is trivial to note that  $\sigma_{12}$  is the only non-zero stress.

### A.4 Hydrostatic Compression

In many cases, it is preferable to interrogate the pressure-dependent response of various models independently of any deviatoric deformations. To consider such purely volumetric loadings, hydrostatic (almost always compression) problems are invoked. Such loadings are often also referred to as uniform dilation as the volumetric change is the same in all three directions. Specifically, in these cases a purely volumetric response is investigated by applying a deformation of the form  $u_i = \lambda(t)$ . In a finite element problem, such a deformation field is reproduced by applying the displacement components onto the corresponding edges. With such applied displacement fields, the resulting logarithmic strain tensor is simply,

$$\varepsilon_{ij} = \ln (1 + \lambda(t)) \delta_{ij}, \quad (\text{A.4.1})$$

and the corresponding (elastic) stress field is simply  $\sigma_{ij} = -p\delta_{ij}$  where,

$$p = -3K \ln (1 + \lambda). \quad (\text{A.4.2})$$

Note, in the preceding relation  $p$  is defined as positive in compression.

## References

- [1] G. A. Holzapfel. *Nonlinear Solid Mechanics: A Continuum Approach For Engineering*. John Wiley & Sons, Ltd, 2000.
- [2] W.M. Lai, D. Rubin, and E. Krempl. *Introduction to Continuum Mechanics*. Pergamon Press, 3rd edition, 1993.

Distribution

1 0899 Technical Library, 9536 (1 electronic)







**Sandia National Laboratories**